

Where Used: Part Number 0329972

Model Name	Diagram
BE10FDLECM 1998	FUEL PUMP
BE10FDLEDR 1996	FUEL PUMP
BE10FDLEUA 1997	FUEL PUMP
BE10FPXEDC 1996	FUEL PUMP
BE10FPXEUR 1997	FUEL PUMP
BE10FREldr 1996	FUEL PUMP
BE10FRElua 1997	FUEL PUMP
BE15FAEDR 1996	FUEL PUMP
BE15FAEUA 1997	FUEL PUMP
BE15FDLECM 1998	FUEL PUMP
BE15FDLEDR 1996	FUEL PUMP
BE15FDLEUA 1997	FUEL PUMP
BE15FKEDR 1996	FUEL PUMP
BE15FKEUA 1997	FUEL PUMP
BE15FREDR 1996	FUEL PUMP
BE15FREldr 1996	FUEL PUMP
BE15FRElua 1997	FUEL PUMP
BE15FREUA 1997	FUEL PUMP
BE15FWECA 1998	FUEL PUMP
BE15FWEDC 1996	FUEL PUMP
BE15FWEUR 1997	FUEL PUMP
BE15FWLECA 1998	FUEL PUMP
BE15FWLEDC 1996	FUEL PUMP
BE15FWLEUR 1997	FUEL PUMP
BE4RDHEDS 1996	FUEL PUMP
BE4RDHLEDs 1996	FUEL PUMP
BE5DREDS 1996	FUEL PUMP
BE5DREUC 1997	FUEL PUMP
BE5DRLEDs 1996	FUEL PUMP
BE5DRLEUC 1997	FUEL PUMP
BE6DRECR 1998	FUEL PUMP
BE6DREDS 1996	FUEL PUMP
BE6DREUC 1997	FUEL PUMP

BE6DRLECR 1998	FUEL PUMP
BE6DRLEDS 1996	FUEL PUMP
BE6DRLEUC 1997	FUEL PUMP
BE6REDS 1996	FUEL PUMP
BE6RLEDS 1996	FUEL PUMP
BE8RCB 1997	FUEL PUMP
BE8RCH 1996	FUEL PUMP
BE8RCLB 1997	FUEL PUMP
BE8RCLH 1996	FUEL PUMP
BE8RCLT 1998	FUEL PUMP
BE8RCT 1998	FUEL PUMP
BE8REDS 1996	FUEL PUMP
BE8RLEDS 1996	FUEL PUMP
BE8SRLEDS 1996	FUEL PUMP
BJ10FDLECM 1998	FUEL PUMP
BJ10FDLEDR 1996	FUEL PUMP
BJ10FDLEUA 1997	FUEL PUMP
BJ10FPXEDC 1996	FUEL PUMP
BJ10FPXEUR 1997	FUEL PUMP
BJ10FREldr 1996	FUEL PUMP
BJ10FRELUa 1997	FUEL PUMP
BJ15FAEDR 1996	FUEL PUMP
BJ15FAEUA 1997	FUEL PUMP
BJ15FDLECM 1998	FUEL PUMP
BJ15FDLEDR 1996	FUEL PUMP
BJ15FDLEUA 1997	FUEL PUMP
BJ15FKEDR 1996	FUEL PUMP
BJ15FKEUA 1997	FUEL PUMP
BJ15FREDR 1996	FUEL PUMP
BJ15FREldr 1996	FUEL PUMP
BJ15FRELUa 1997	FUEL PUMP
BJ15FREUA 1997	FUEL PUMP
BJ15FWECA 1998	FUEL PUMP
BJ15FWEDC 1996	FUEL PUMP
BJ15FWEUR 1997	FUEL PUMP

BJ15FWLECA 1998	FUEL PUMP
BJ15FWLEDC 1996	FUEL PUMP
BJ15FWLEUR 1997	FUEL PUMP
BJ4RDHEDS 1996	FUEL PUMP
BJ4RDHLEDS 1996	FUEL PUMP
BJ5DREDS 1996	FUEL PUMP
BJ5DREUC 1997	FUEL PUMP
BJ5DRLEDS 1996	FUEL PUMP
BJ5DRLEUC 1997	FUEL PUMP
BJ6DRECR 1998	FUEL PUMP
BJ6DREDS 1996	FUEL PUMP
BJ6DREUC 1997	FUEL PUMP
BJ6DRLECR 1998	FUEL PUMP
BJ6DRLEDS 1996	FUEL PUMP
BJ6DRLEUC 1997	FUEL PUMP
BJ6REDS 1996	FUEL PUMP
BJ6RLEDS 1996	FUEL PUMP
BJ8RCB 1997	FUEL PUMP
BJ8RCH 1996	FUEL PUMP
BJ8RCLB 1997	FUEL PUMP
BJ8RCLH 1996	FUEL PUMP
BJ8RCLT 1998	FUEL PUMP
BJ8RCT 1998	FUEL PUMP
BJ8REDS 1996	FUEL PUMP
BJ8RLEDS 1996	FUEL PUMP
BJ8SRLEDS 1996	FUEL PUMP
E10EBL4EEB 1999	FUEL PUMP
E10ECCD 1988	FUEL PUMP - ROPE START MODELS
E10ECDB 1986	FUEL PUMP
E10ECES 1989	FUEL PUMP - ROPE START MODELS
E10ECOM 1985	FUEL PUMP
E10ECUE 1987	FUEL PUMP - EARLY PRODUCTION
E10EEIR 1991	FUEL PUMP - ROPE START MODELS
E10EENA 1992	FUEL PUMP - ROPE START MODELS
E10EESC 1990	FUEL PUMP - ROPE START MODELS

E10EL4EEB 1999	FUEL PUMP
E10EL4SID 4-stroke, elec start, remote, 20 in shaft 2001	FUEL PUMP
E10EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	FUEL PUMP
E10ELCCD 1988	FUEL PUMP - ROPE START MODELS
E10ELCDB 1986	FUEL PUMP
E10ELCES 1989	FUEL PUMP - ROPE START MODELS
E10ELCOM 1985	FUEL PUMP
E10ELCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10ELEIR 1991	FUEL PUMP - ROPE START MODELS
E10ELENA 1992	FUEL PUMP - ROPE START MODELS
E10ELESC 1990	FUEL PUMP - ROPE START MODELS
E10EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	FUEL PUMP
E10EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	FUEL PUMP
E10FEXECM 1998	FUEL PUMP
E10FEXEDR 1996	FUEL PUMP
E10FEXEO 1995	FUEL PUMP
E10FEXEUA 1997	FUEL PUMP
E10FRECM 1998	FUEL PUMP
E10FREDR 1996	FUEL PUMP
E10FRELECM 1998	FUEL PUMP
E10FRELEDR 1996	FUEL PUMP
E10FRELEOC 1995	FUEL PUMP
E10FRELEUA 1997	FUEL PUMP
E10FREOC 1995	FUEL PUMP
E10FREUA 1997	FUEL PUMP
E10FRLECM 1998	FUEL PUMP
E10FRLEDR 1996	FUEL PUMP
E10FRLEO 1995	FUEL PUMP
E10FRLEUA 1997	FUEL PUMP
E10R4EEB 1999	FUEL PUMP
E10R4SID 4-stroke, rope start, tiller, 15 in shaft 2001	FUEL PUMP
E10R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	FUEL PUMP
E10RCCD 1988	FUEL PUMP - ROPE START MODELS
E10RCDB 1986	FUEL PUMP
E10RCES 1989	FUEL PUMP - ROPE START MODELS

E10RCOM 1985	FUEL PUMP
E10RCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10REIR 1991	FUEL PUMP - ROPE START MODELS
E10RELEIR 1991	FUEL PUMP - ROPE START MODELS
E10RELENA 1992	FUEL PUMP - ROPE START MODELS
E10RELESC 1990	FUEL PUMP - ROPE START MODELS
E10RENA 1992	FUEL PUMP - ROPE START MODELS
E10RESC 1990	FUEL PUMP - ROPE START MODELS
E10RL4EEB 1999	FUEL PUMP
E10RL4SID 4-stroke, rope start, tiller, 20 in shaft 2001	FUEL PUMP
E10RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	FUEL PUMP
E10RLCCD 1988	FUEL PUMP - ROPE START MODELS
E10RLCDB 1986	FUEL PUMP
E10RLCES 1989	FUEL PUMP - ROPE START MODELS
E10RLCOM 1985	FUEL PUMP
E10RLCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10RLEIR 1991	FUEL PUMP - ROPE START MODELS
E10RLENA 1992	FUEL PUMP - ROPE START MODELS
E10RLESC 1990	FUEL PUMP - ROPE START MODELS
E10RV4SIC 4-stroke, rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
E10RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	FUEL PUMP
E10RVL4SIC 4-stroke, rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
E10RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	FUEL PUMP
E10SELCCD 1988	FUEL PUMP - ROPE START MODELS
E10SELCDB 1986	FUEL PUMP
E10SELCES 1989	FUEL PUMP - ROPE START MODELS
E10SELCOM 1985	FUEL PUMP
E10SELCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10SELEIR 1991	FUEL PUMP - ROPE START MODELS
E10SELENA 1992	FUEL PUMP - ROPE START MODELS
E10SELESC 1990	FUEL PUMP - ROPE START MODELS
E10TEX4EEB 1999	FUEL PUMP
E10TEX4SID 4-stroke, elec start, tiller, 25 in shaft 2001	FUEL PUMP
E10TEX4SSE 4-Stroke, Elec. Start, Tiller, 25 IN shaft 2000	FUEL PUMP
E10TVX4SIC 4-stroke, elec start, tiller, 25 in shaft, wht 2001	FUEL PUMP

E10TVX4SSS 4-Stroke, Elec. Start, Tiller, 25 IN shaft, wht 2000	FUEL PUMP
E15DLEOC 1995	FUEL PUMP
E15EBL4EEB 1999	FUEL PUMP
E15ECCS 1988	FUEL PUMP - ROPE START MODELS
E15ECDE 1986	FUEL PUMP
E15ECEC 1989	FUEL PUMP - ROPE START MODELS
E15ECOB 1985	FUEL PUMP
E15ECUD 1987	FUEL PUMP - EARLY PRODUCTION
E15EEIA 1991	FUEL PUMP - ROPE START MODELS
E15EENM 1992	FUEL PUMP - ROPE START MODELS
E15EESR 1990	FUEL PUMP - ROPE START MODELS
E15EL4EEB 1999	FUEL PUMP
E15EL4SID 4-stroke, elec start, 20 in shaft 2001	FUEL PUMP
E15EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	FUEL PUMP
E15ELCCS 1988	FUEL PUMP - ROPE START MODELS
E15ELCDE 1986	FUEL PUMP
E15ELCEC 1989	FUEL PUMP - ROPE START MODELS
E15ELCOB 1985	FUEL PUMP
E15ELCUD 1987	FUEL PUMP - EARLY PRODUCTION
E15ELEIA 1991	FUEL PUMP - ROPE START MODELS
E15ELENM 1992	FUEL PUMP - ROPE START MODELS
E15ELESR 1990	FUEL PUMP - ROPE START MODELS
E15EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	FUEL PUMP
E15EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	FUEL PUMP
E15FKEDR 1996	FUEL PUMP
E15FKEUA 1997	FUEL PUMP
E15FRECM 1998	FUEL PUMP
E15FREDR 1996	FUEL PUMP
E15FRELECM 1998	FUEL PUMP
E15FRELEDR 1996	FUEL PUMP
E15FRELEUA 1997	FUEL PUMP
E15FREOC 1995	FUEL PUMP
E15FREUA 1997	FUEL PUMP
E15FRLECM 1998	FUEL PUMP
E15FRLEDR 1996	FUEL PUMP

E15FRLEOC 1995	FUEL PUMP
E15FRLEUA 1997	FUEL PUMP
E15KEOC 1995	FUEL PUMP
E15R4EEB 1999	FUEL PUMP
E15R4SID 4-stroke, rope start, 15 in shaft 2001	FUEL PUMP
E15R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	FUEL PUMP
E15RB4EEB 1999	FUEL PUMP
E15RBL4EEB 1999	FUEL PUMP
E15RCCS 1988	FUEL PUMP - ROPE START MODELS
E15RCDE 1986	FUEL PUMP
E15RCEC 1989	FUEL PUMP - ROPE START MODELS
E15RCOB 1985	FUEL PUMP
E15RCUD 1987	FUEL PUMP - EARLY PRODUCTION
E15REIA 1991	FUEL PUMP - ROPE START MODELS
E15RELEIA 1991	FUEL PUMP - ROPE START MODELS
E15RELENM 1992	FUEL PUMP - ROPE START MODELS
E15RELESR 1990	FUEL PUMP - ROPE START MODELS
E15RENM 1992	FUEL PUMP - ROPE START MODELS
E15RESR 1990	FUEL PUMP - ROPE START MODELS
E15RL4EEB 1999	FUEL PUMP
E15RL4SID 4-stroke, rope start, 20 in shaft 2001	FUEL PUMP
E15RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	FUEL PUMP
E15RLCCS 1988	FUEL PUMP - ROPE START MODELS
E15RLCDE 1986	FUEL PUMP
E15RLCEC 1989	FUEL PUMP - ROPE START MODELS
E15RLCOB 1985	FUEL PUMP
E15RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E15RLEIA 1991	FUEL PUMP - ROPE START MODELS
E15RLENM 1992	FUEL PUMP - ROPE START MODELS
E15RLESR 1990	FUEL PUMP - ROPE START MODELS
E15RV4SIC 4-stroke,rope start, 15 in shaft, wht 2001	FUEL PUMP
E15RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	FUEL PUMP
E15RVL4SIC 4-stroke, elec start, 15 in shaft, wht 2001	FUEL PUMP
E15RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	FUEL PUMP
E3BRCEC 1989	FUEL PUMP

E3BRESR 1990	FUEL PUMP
E3RCCM 1988	FUEL PUMP
E3RCUA 1987	FUEL PUMP
E4BRHCCS 1988	FUEL PUMP
E4BRHCDE 1986	FUEL PUMP - BRH MODELS ONLY
E4BRHCOB 1985	FUEL PUMP - BRH MODELS ONLY
E4BRHCUD 1987	FUEL PUMP - BRH MODELS ONLY
E4BRHLCCS 1988	FUEL PUMP
E4BRHLCDE 1986	FUEL PUMP - BRH MODELS ONLY
E4BRHLCOB 1985	FUEL PUMP - BRH MODELS ONLY
E4BRHLCUD 1987	FUEL PUMP - BRH MODELS ONLY
E4RCCS 1988	FUEL PUMP
E4RCUD 1987	FUEL PUMP
E4RDHCCS 1988	FUEL PUMP
E4RDHCDE 1986	FUEL PUMP
E4RDHCEC 1989	FUEL PUMP
E4RDHCUD 1987	FUEL PUMP
E4RDHEIA 1991	FUEL PUMP
E4RDHENM 1992	FUEL PUMP
E4RDHEOD 1995	FUEL PUMP
E4RDHERE 1994	FUEL PUMP
E4RDHESR 1990	FUEL PUMP
E4RDHETB 1993	FUEL PUMP
E4RDHLCCS 1988	FUEL PUMP
E4RDHLCEC 1989	FUEL PUMP
E4RDHLCUD 1987	FUEL PUMP
E4RDHLEIA 1991	FUEL PUMP
E4RDHLENM 1992	FUEL PUMP
E4RDHLEOD 1995	FUEL PUMP
E4RDHLERE 1994	FUEL PUMP
E4RDHLESR 1990	FUEL PUMP
E4RDHLETB 1993	FUEL PUMP
E4RLCCS 1988	FUEL PUMP
E4RLCUD 1987	FUEL PUMP
E5DRECR 1998	FUEL PUMP

E5DRLECR 1998	FUEL PUMP
E6RCCS 1988	FUEL PUMP
E6RCDE 1986	FUEL PUMP
E6RCEC 1989	FUEL PUMP
E6RCOB 1985	FUEL PUMP
E6RCUD 1987	FUEL PUMP - EARLY PRODUCTION
E6RECR 1998	FUEL PUMP
E6REDS 1996	FUEL PUMP
E6REIA 1991	FUEL PUMP
E6RENM 1992	FUEL PUMP
E6REOD 1995	FUEL PUMP
E6RERE 1994	FUEL PUMP
E6RESR 1990	FUEL PUMP
E6RETB 1993	FUEL PUMP
E6REUC 1997	FUEL PUMP
E6RLCCS 1988	FUEL PUMP
E6RLCDE 1986	FUEL PUMP
E6RLCEC 1989	FUEL PUMP
E6RLCOB 1985	FUEL PUMP
E6RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E6RLECR 1998	FUEL PUMP
E6RLEDS 1996	FUEL PUMP
E6RLEIA 1991	FUEL PUMP
E6RLENM 1992	FUEL PUMP
E6RLEOD 1995	FUEL PUMP
E6RLERE 1994	FUEL PUMP
E6RLESR 1990	FUEL PUMP
E6RLETB 1993	FUEL PUMP
E6RLEUC 1997	FUEL PUMP
E6SLCCS 1988	FUEL PUMP
E6SLCDE 1986	FUEL PUMP
E6SLCEC 1989	FUEL PUMP
E6SLCOB 1985	FUEL PUMP
E6SLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E6SLEDS 1996	FUEL PUMP

E6SLEIA 1991	FUEL PUMP
E6SLENM 1992	FUEL PUMP
E6SLEOD 1995	FUEL PUMP
E6SLERE 1994	FUEL PUMP
E6SLESR 1990	FUEL PUMP
E6SLETB 1993	FUEL PUMP
E8DREEA 1999	FUEL PUMP
E8DRSSM Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	FUEL PUMP
E8RCCS 1988	FUEL PUMP
E8RCDE 1986	FUEL PUMP
E8RCEC 1989	FUEL PUMP
E8RCOB 1985	FUEL PUMP
E8RCUD 1987	FUEL PUMP - EARLY PRODUCTION
E8RECR 1998	FUEL PUMP
E8REDS 1996	FUEL PUMP
E8REIA 1991	FUEL PUMP
E8RENM 1992	FUEL PUMP
E8REOD 1995	FUEL PUMP
E8RERE 1994	FUEL PUMP
E8RESR 1990	FUEL PUMP
E8RETB 1993	FUEL PUMP
E8REUC 1997	FUEL PUMP
E8RLCCS 1988	FUEL PUMP
E8RLCDE 1986	FUEL PUMP
E8RLCEC 1989	FUEL PUMP
E8RLCOB 1985	FUEL PUMP
E8RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E8RLECR 1998	FUEL PUMP
E8RLEDS 1996	FUEL PUMP
E8RLEIA 1991	FUEL PUMP
E8RLENM 1992	FUEL PUMP
E8RLEOD 1995	FUEL PUMP
E8RLERE 1994	FUEL PUMP
E8RLESR 1990	FUEL PUMP
E8RLETB 1993	FUEL PUMP

E8RLEUC 1997	FUEL PUMP
E8SRLCCS 1988	FUEL PUMP
E8SRLCDE 1986	FUEL PUMP
E8SRLCEC 1989	FUEL PUMP
E8SRLECOB 1985	FUEL PUMP
E8SRLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E8SRLECA 1998	FUEL PUMP
E8SRLEDS 1996	FUEL PUMP
E8SRLEIA 1991	FUEL PUMP
E8SRLENM 1992	FUEL PUMP
E8SRLEOD 1995	FUEL PUMP
E8SRLERE 1994	FUEL PUMP
E8SRLESR 1990	FUEL PUMP
E8SRLETB 1993	FUEL PUMP
E8SRLEUC 1997	FUEL PUMP
E8WREES 1999	FUEL PUMP
E8WRLEES 1999	FUEL PUMP
E8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
E8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP
E8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
FUEL SYSTEMS 1985	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1985	FUEL PUMP KIT 4 MODEL 4BR MODELS ONLY
FUEL SYSTEMS 1986	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1986	FUEL PUMP KIT 4 MODEL 4BR MODELS ONLY
FUEL SYSTEMS 1987	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1987	FUEL PUMP KIT 4 MODEL 4BR MODELS ONLY
FUEL SYSTEMS 1988	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1988	FUEL PUMP KIT - 4 BR MODELS ONLY
FUEL SYSTEMS 1989	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1989	FUEL PUMP KIT - 4 BR MODELS ONLY
FUEL SYSTEMS 1990	FUEL PUMP KIT - 4 BR MODELS ONLY
HE15KCF 1997	FUEL PUMP - 15KC MODELS ONLY

HE15KCLF 1997	FUEL PUMP - 15KC MODELS ONLY
HE15KCLN 1996	FUEL PUMP - 15KC MODELS ONLY
HE15KCLO 1998	FUEL PUMP -- 15KC MODELS ONLY
HE15KCN 1996	FUEL PUMP - 15KC MODELS ONLY
HE15KCO 1998	FUEL PUMP -- 15KC MODELS ONLY
HE15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
HE15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCF 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLF 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLN 1996	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLO 1998	FUEL PUMP -- 15KC MODELS ONLY
HJ15KCN 1996	FUEL PUMP - 15KC MODELS ONLY
HJ15KCO 1998	FUEL PUMP -- 15KC MODELS ONLY
HJ15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
J10ECCD 1988	FUEL PUMP - ROPE START MODELS
J10ECDB 1986	FUEL PUMP
J10ECES 1989	FUEL PUMP - ROPE START MODELS
J10ECOM 1985	FUEL PUMP
J10ECUE 1987	FUEL PUMP - EARLY PRODUCTION
J10EEIR 1991	FUEL PUMP - ROPE START MODELS
J10EENA 1992	FUEL PUMP - ROPE START MODELS
J10EESC 1990	FUEL PUMP - ROPE START MODELS
J10ELCCD 1988	FUEL PUMP - ROPE START MODELS
J10ELCDB 1986	FUEL PUMP
J10ELCES 1989	FUEL PUMP - ROPE START MODELS
J10ELCOM 1985	FUEL PUMP
J10ELCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10ELEIR 1991	FUEL PUMP - ROPE START MODELS
J10ELENA 1992	FUEL PUMP - ROPE START MODELS
J10ELESC 1990	FUEL PUMP - ROPE START MODELS
J10FEXECM 1998	FUEL PUMP
J10FEXEDR 1996	FUEL PUMP
J10FEXEO 1995	FUEL PUMP
J10FEXEUA 1997	FUEL PUMP

J10FRECM 1998	FUEL PUMP
J10FREDR 1996	FUEL PUMP
J10FRELECM 1998	FUEL PUMP
J10FRELEDR 1996	FUEL PUMP
J10FRELEOC 1995	FUEL PUMP
J10FRELEUA 1997	FUEL PUMP
J10FREOC 1995	FUEL PUMP
J10FREUA 1997	FUEL PUMP
J10FRLECM 1998	FUEL PUMP
J10FRLEDR 1996	FUEL PUMP
J10FRLEO 1995	FUEL PUMP
J10FRLEUA 1997	FUEL PUMP
J10RCCD 1988	FUEL PUMP - ROPE START MODELS
J10RCDB 1986	FUEL PUMP
J10RCES 1989	FUEL PUMP - ROPE START MODELS
J10RCOM 1985	FUEL PUMP
J10RCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10REIR 1991	FUEL PUMP - ROPE START MODELS
J10RELEIR 1991	FUEL PUMP - ROPE START MODELS
J10RELENA 1992	FUEL PUMP - ROPE START MODELS
J10RELESC 1990	FUEL PUMP - ROPE START MODELS
J10RENA 1992	FUEL PUMP - ROPE START MODELS
J10RESC 1990	FUEL PUMP - ROPE START MODELS
J10RLCCD 1988	FUEL PUMP - ROPE START MODELS
J10RLCDB 1986	FUEL PUMP
J10RLCES 1989	FUEL PUMP - ROPE START MODELS
J10RLCOM 1985	FUEL PUMP
J10RLCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10RLEIR 1991	FUEL PUMP - ROPE START MODELS
J10RLENA 1992	FUEL PUMP - ROPE START MODELS
J10RLESC 1990	FUEL PUMP - ROPE START MODELS
J10SELCCD 1988	FUEL PUMP - ROPE START MODELS
J10SELCDB 1986	FUEL PUMP
J10SELCES 1989	FUEL PUMP - ROPE START MODELS
J10SELCOM 1985	FUEL PUMP

J10SELCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10SELEIR 1991	FUEL PUMP - ROPE START MODELS
J10SELENA 1992	FUEL PUMP - ROPE START MODELS
J10SELESC 1990	FUEL PUMP - ROPE START MODELS
J15DLEOC 1995	FUEL PUMP
J15ECCS 1988	FUEL PUMP - ROPE START MODELS
J15ECDE 1986	FUEL PUMP
J15ECEC 1989	FUEL PUMP - ROPE START MODELS
J15ECOB 1985	FUEL PUMP
J15ECUD 1987	FUEL PUMP - EARLY PRODUCTION
J15EEIA 1991	FUEL PUMP - ROPE START MODELS
J15EENM 1992	FUEL PUMP - ROPE START MODELS
J15EESR 1990	FUEL PUMP - ROPE START MODELS
J15ELCCS 1988	FUEL PUMP - ROPE START MODELS
J15ELCDE 1986	FUEL PUMP
J15ELCEC 1989	FUEL PUMP - ROPE START MODELS
J15ELCOB 1985	FUEL PUMP
J15ELCUD 1987	FUEL PUMP - EARLY PRODUCTION
J15ELEIA 1991	FUEL PUMP - ROPE START MODELS
J15ELENM 1992	FUEL PUMP - ROPE START MODELS
J15ELESR 1990	FUEL PUMP - ROPE START MODELS
J15FKEDR 1996	FUEL PUMP
J15FKEUA 1997	FUEL PUMP
J15FRECM 1998	FUEL PUMP
J15FREDR 1996	FUEL PUMP
J15FRELECM 1998	FUEL PUMP
J15FRELEDR 1996	FUEL PUMP
J15FRELEUA 1997	FUEL PUMP
J15FREOC 1995	FUEL PUMP
J15FREUA 1997	FUEL PUMP
J15FRLECM 1998	FUEL PUMP
J15FRLEDR 1996	FUEL PUMP
J15FRLEOC 1995	FUEL PUMP
J15FRLEUA 1997	FUEL PUMP
J15KEOC 1995	FUEL PUMP

J15RCCS 1988	FUEL PUMP - ROPE START MODELS
J15RCDE 1986	FUEL PUMP
J15RCEC 1989	FUEL PUMP - ROPE START MODELS
J15RCOB 1985	FUEL PUMP
J15RCUD 1987	FUEL PUMP - EARLY PRODUCTION
J15REIA 1991	FUEL PUMP - ROPE START MODELS
J15RELEIA 1991	FUEL PUMP - ROPE START MODELS
J15RELENM 1992	FUEL PUMP - ROPE START MODELS
J15RELESR 1990	FUEL PUMP - ROPE START MODELS
J15RENM 1992	FUEL PUMP - ROPE START MODELS
J15RESR 1990	FUEL PUMP - ROPE START MODELS
J15RLCCS 1988	FUEL PUMP - ROPE START MODELS
J15RLCDE 1986	FUEL PUMP
J15RLCEC 1989	FUEL PUMP - ROPE START MODELS
J15RLCOB 1985	FUEL PUMP
J15RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J15RLEIA 1991	FUEL PUMP - ROPE START MODELS
J15RLENM 1992	FUEL PUMP - ROPE START MODELS
J15RLESR 1990	FUEL PUMP - ROPE START MODELS
J3BRCEC 1989	FUEL PUMP
J3BRESR 1990	FUEL PUMP
J3RCCM 1988	FUEL PUMP
J3RCUA 1987	FUEL PUMP
J4BRHCCS 1988	FUEL PUMP
J4BRHCDE 1986	FUEL PUMP - BRH MODELS ONLY
J4BRHCOB 1985	FUEL PUMP - BRH MODELS ONLY
J4BRHCUD 1987	FUEL PUMP - BRH MODELS ONLY
J4BRHLCCS 1988	FUEL PUMP
J4BRHLCDE 1986	FUEL PUMP - BRH MODELS ONLY
J4BRHLCOB 1985	FUEL PUMP - BRH MODELS ONLY
J4BRHLCUD 1987	FUEL PUMP - BRH MODELS ONLY
J4RCCS 1988	FUEL PUMP
J4RCUD 1987	FUEL PUMP
J4RDHCCS 1988	FUEL PUMP
J4RDHCDE 1986	FUEL PUMP

J4RDHCEC 1989	FUEL PUMP
J4RDHCUD 1987	FUEL PUMP
J4RDHEIA 1991	FUEL PUMP
J4RDHENM 1992	FUEL PUMP
J4RDHEOD 1995	FUEL PUMP
J4RDHERE 1994	FUEL PUMP
J4RDHESR 1990	FUEL PUMP
J4RDHETB 1993	FUEL PUMP
J4RDHLCCS 1988	FUEL PUMP
J4RDHLCEC 1989	FUEL PUMP
J4RDHLCUD 1987	FUEL PUMP
J4RDHLEIA 1991	FUEL PUMP
J4RDHLENM 1992	FUEL PUMP
J4RDHLEOD 1995	FUEL PUMP
J4RDHLERE 1994	FUEL PUMP
J4RDHLESR 1990	FUEL PUMP
J4RDHLETB 1993	FUEL PUMP
J4RLCCS 1988	FUEL PUMP
J4RLCUD 1987	FUEL PUMP
J5DRECR 1998	FUEL PUMP
J5DRLECR 1998	FUEL PUMP
J6RCCS 1988	FUEL PUMP
J6RCDE 1986	FUEL PUMP
J6RCEC 1989	FUEL PUMP
J6RCOB 1985	FUEL PUMP
J6RCUD 1987	FUEL PUMP - EARLY PRODUCTION
J6RECR 1998	FUEL PUMP
J6REDS 1996	FUEL PUMP
J6REEA 1999	FUEL PUMP
J6REIA 1991	FUEL PUMP
J6RENM 1992	FUEL PUMP
J6REOD 1995	FUEL PUMP
J6RERE 1994	FUEL PUMP
J6RESR 1990	FUEL PUMP
J6RETB 1993	FUEL PUMP

J6REUC 1997	FUEL PUMP
J6RLCCS 1988	FUEL PUMP
J6RLCDE 1986	FUEL PUMP
J6RLCEC 1989	FUEL PUMP
J6RLCOB 1985	FUEL PUMP
J6RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J6RLECR 1998	FUEL PUMP
J6RLEDS 1996	FUEL PUMP
J6RLEEA 1999	FUEL PUMP
J6RLEIA 1991	FUEL PUMP
J6RLENM 1992	FUEL PUMP
J6RLEOD 1995	FUEL PUMP
J6RLERE 1994	FUEL PUMP
J6RLESR 1990	FUEL PUMP
J6RLETB 1993	FUEL PUMP
J6RLEUC 1997	FUEL PUMP
J6RLSIB rope start, tiller, 20 in shaft 2001	FUEL PUMP
J6RLSOC	FUEL PUMP
J6RLSOC - FR	23-2_POMPE À CARBURANT
J6RLSRS	FUEL PUMP
J6RLSRS - FR	23-2_POMPE À CARBURANT
J6RLSSM Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J6RLSTD	FUEL PUMP
J6RLSTD - FR	23-2_POMPE À CARBURANT
J6RLVSIB rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J6RSIB rope start, tiller, 15 in shaft 2001	FUEL PUMP
J6RSOC	FUEL PUMP
J6RSOC - FR	23-2_POMPE À CARBURANT
J6RSRS	FUEL PUMP
J6RSRS - FR	23-2_POMPE À CARBURANT
J6RSSM Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J6RSTD	FUEL PUMP
J6RSTD - FR	23-2_POMPE À CARBURANT
J6RVSIB rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
J6SLCCS 1988	FUEL PUMP

J6SLCDE 1986	FUEL PUMP
J6SLCEC 1989	FUEL PUMP
J6SLCOB 1985	FUEL PUMP
J6SLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J6SLEDs 1996	FUEL PUMP
J6SLEIA 1991	FUEL PUMP
J6SLENM 1992	FUEL PUMP
J6SLEOD 1995	FUEL PUMP
J6SLERE 1994	FUEL PUMP
J6SLESR 1990	FUEL PUMP
J6SLETB 1993	FUEL PUMP
J8DREEA 1999	FUEL PUMP
J8RCCS 1988	FUEL PUMP
J8RCDE 1986	FUEL PUMP
J8RCEC 1989	FUEL PUMP
J8RCOB 1985	FUEL PUMP
J8RCUD 1987	FUEL PUMP - EARLY PRODUCTION
J8RECR 1998	FUEL PUMP
J8REDS 1996	FUEL PUMP
J8REEM 1999	FUEL PUMP
J8REIA 1991	FUEL PUMP
J8RENM 1992	FUEL PUMP
J8REOD 1995	FUEL PUMP
J8RERE 1994	FUEL PUMP
J8RESR 1990	FUEL PUMP
J8RETB 1993	FUEL PUMP
J8REUC 1997	FUEL PUMP
J8RLCCS 1988	FUEL PUMP
J8RLCDE 1986	FUEL PUMP
J8RLCEC 1989	FUEL PUMP
J8RLCOB 1985	FUEL PUMP
J8RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J8RLECR 1998	FUEL PUMP
J8RLEDs 1996	FUEL PUMP
J8RLEEM 1999	FUEL PUMP

J8RLEIA 1991	FUEL PUMP
J8RLENM 1992	FUEL PUMP
J8RLEOD 1995	FUEL PUMP
J8RLERE 1994	FUEL PUMP
J8RLESR 1990	FUEL PUMP
J8RLETB 1993	FUEL PUMP
J8RLEUC 1997	FUEL PUMP
J8RLSIE rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8RLSOR	FUEL PUMP
J8RLSOR - FR	23-2_POMPE À CARBURANT
J8RLSRC	FUEL PUMP
J8RLSRC - FR	23-2_POMPE À CARBURANT
J8RLSSB Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8RLSTS	FUEL PUMP
J8RLSTS - FR	23-2_POMPE À CARBURANT
J8RLVSIE rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J8RLXSIE rope start, tiller, 25 in shaft, wht 2001	FUEL PUMP
J8RSIE rope start, tiller, 15 in shaft 2001	FUEL PUMP
J8RSOR	FUEL PUMP
J8RSOR - FR	23-2_POMPE À CARBURANT
J8RSRC	FUEL PUMP
J8RSRC - FR	23-2_POMPE À CARBURANT
J8RSSB Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J8RSTD	FUEL PUMP
J8RSTD - FR	23-2_POMPE À CARBURANT
J8RVSIE rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
J8RXEEM 1999	FUEL PUMP
J8RXSIE rope start, tiller, 25 in shaft 2001	FUEL PUMP
J8RXSSB Rope Start, Tiller, 25 IN. shaft 2000	FUEL PUMP
J8SRLCCS 1988	FUEL PUMP
J8SRLCDE 1986	FUEL PUMP
J8SRLCEC 1989	FUEL PUMP
J8SRLCOB 1985	FUEL PUMP
J8SRLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J8SRLECA 1998	FUEL PUMP

J8SRLEDS 1996	FUEL PUMP
J8SRLEIA 1991	FUEL PUMP
J8SRLENM 1992	FUEL PUMP
J8SRLEOD 1995	FUEL PUMP
J8SRLERE 1994	FUEL PUMP
J8SRLESR 1990	FUEL PUMP
J8SRLETB 1993	FUEL PUMP
J8SRLEUC 1997	FUEL PUMP
J8WREES 1999	FUEL PUMP
J8WRLEES 1999	FUEL PUMP
J8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP
J8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
L10FRELECM 1998	FUEL PUMP
L10FRELEDR 1996	FUEL PUMP
L10FRELEUA 1997	FUEL PUMP
SE10RPB 1996	FUEL PUMP - 15KC MODELS ONLY
SE10RPLB 1996	FUEL PUMP - 15KC MODELS ONLY
SE10RPLT 1997	FUEL PUMP - 15KC MODELS ONLY
SE10RPLY 1998	FUEL PUMP -- 15KC MODELS ONLY
SE10RPT 1997	FUEL PUMP - 15KC MODELS ONLY
SE10RPY 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPC 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPG 1996	FUEL PUMP - 15KC MODELS ONLY
SE15RPLC 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPLG 1996	FUEL PUMP - 15KC MODELS ONLY
SE15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
SE15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPB 1996	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLB 1996	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLT 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLY 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ10RPT 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPY 1998	FUEL PUMP -- 15KC MODELS ONLY

SJ15RPC 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPG 1996	FUEL PUMP - 15KC MODELS ONLY
SJ15RPLC 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPLG 1996	FUEL PUMP - 15KC MODELS ONLY
SJ15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ6REDS 1996	FUEL PUMP
SJ6RLEDS 1996	FUEL PUMP
SJ8REDS 1996	FUEL PUMP
SJ8RLEDS 1996	FUEL PUMP
TE10ELCES 1989	FUEL PUMP - ROPE START MODELS
TE10ELESC 1990	FUEL PUMP - ROPE START MODELS
TE10RELEIR 1991	FUEL PUMP - ROPE START MODELS
TE10RELENA 1992	FUEL PUMP - ROPE START MODELS
TE10RELESC 1990	FUEL PUMP - ROPE START MODELS
TE10RLCES 1989	FUEL PUMP - ROPE START MODELS
TE10RLESC 1990	FUEL PUMP - ROPE START MODELS
TE15RLCEC 1989	FUEL PUMP - ROPE START MODELS
TE8RCEC 1989	FUEL PUMP
TE8RLCEC 1989	FUEL PUMP
TE8RLESCF 1990	FUEL PUMP
TJ10ELCES 1989	FUEL PUMP - ROPE START MODELS
TJ10ELESC 1990	FUEL PUMP - ROPE START MODELS
TJ10RELEIR 1991	FUEL PUMP - ROPE START MODELS
TJ10RELENA 1992	FUEL PUMP - ROPE START MODELS
TJ10RELESC 1990	FUEL PUMP - ROPE START MODELS
TJ10RLCES 1989	FUEL PUMP - ROPE START MODELS
TJ10RLESC 1990	FUEL PUMP - ROPE START MODELS
TJ15RLCEC 1989	FUEL PUMP - ROPE START MODELS
TJ8RCEC 1989	FUEL PUMP
TJ8RLCEC 1989	FUEL PUMP
VE14RCCS 1988	FUEL PUMP
VE14RCEC 1989	FUEL PUMP
VJ14RCCS 1988	FUEL PUMP
VJ14RCEC 1989	FUEL PUMP

