

Where Used: Part Number 0305762

Model Name	Diagram
50302R 1973	GEARCASE MANUAL START
50302R 1973	GEARCASE ELECTRIC START
50303R 1973	GEARCASE MANUAL START
50303R 1973	GEARCASE ELECTRIC START
50372R 1973	GEARCASE MANUAL START
50372R 1973	GEARCASE ELECTRIC START
50373R 1973	GEARCASE MANUAL START
50373R 1973	GEARCASE ELECTRIC START
50442M 1974	GEARCASE
50443M 1974	GEARCASE
50472M 1974	GEARCASE
50473M 1974	GEARCASE
50542B 1975	GEARCASE
50543B 1975	GEARCASE
50572B 1975	GEARCASE
50573B 1975	GEARCASE
50902C 1979	GEARCASE ROPE START
50902C 1979	GEARCASE, ELECTRIC START
50903C 1979	GEARCASE ROPE START
50903C 1979	GEARCASE, ELECTRIC START
50ES73R 1973	GEARCASE MANUAL START
50ES73R 1973	GEARCASE ELECTRIC START
50ES74M 1974	GEARCASE
50ES75B 1975	GEARCASE
50ESL73R 1973	GEARCASE MANUAL START
50ESL73R 1973	GEARCASE ELECTRIC START
50ESL74M 1974	GEARCASE
50ESL75B 1975	GEARCASE
50R73R 1973	GEARCASE MANUAL START
50R73R 1973	GEARCASE ELECTRIC START
50R79C 1979	GEARCASE, ELECTRIC START
50R79C 1979	GEARCASE, ROPE START
50RL73R 1973	GEARCASE MANUAL START

50RL73R 1973	GEARCASE ELECTRIC START
50RL79C 1979	GEARCASE, ELECTRIC START
50RL79C 1979	GEARCASE, ROPE START
55642E 1976	GEARCASE
55643E 1976	GEARCASE
55672E 1976	GEARCASE
55673E 1976	GEARCASE
55772D 1977	GEARCASE
55773D 1977	GEARCASE
55874S 1978	GEARCASE
55875S 1978	GEARCASE
55972A 1969	GEARCASE GROUP
55972C 1969	GEARCASE GROUP
55973A 1969	GEARCASE GROUP
55973C 1969	GEARCASE GROUP
55974C 1979	GEARCASE ROPE START
55974C 1979	GEARCASE, ELECTRIC START
55975C 1979	GEARCASE ROPE START
55975C 1979	GEARCASE, ELECTRIC START
55E76E 1976	GEARCASE
55E77D 1977	GEARCASE
55E78S 1978	GEARCASE
55E79C 1979	GEARCASE, ELECTRIC START
55E79C 1979	GEARCASE, ROPE START
55EL76E 1976	GEARCASE
55EL77D 1977	GEARCASE
55EL78S 1978	GEARCASE
55EL79C 1979	GEARCASE, ELECTRIC START
55EL79C 1979	GEARCASE, ROPE START
55ES69A 1969	GEARCASE GROUP
55ES69C 1969	GEARCASE GROUP
55ESL69A 1969	GEARCASE GROUP
55ESL69C 1969	GEARCASE GROUP
60072B 1970	GEARCASE GROUP
60072D 1970	GEARCASE GROUP

60073B 1970	GEARCASE GROUP
60073D 1970	GEARCASE GROUP
60172C 1971	GEARCASE
60172E 1971	GEARCASE
60173C 1971	GEARCASE
60173E 1971	GEARCASE
60ES70B 1970	GEARCASE GROUP
60ES70D 1970	GEARCASE GROUP
60ES71C 1971	GEARCASE
60ES71E 1971	GEARCASE
60ESL70B 1970	GEARCASE GROUP
60ESL70D 1970	GEARCASE GROUP
60ESL71C 1971	GEARCASE
60ESL71E 1971	GEARCASE
65372R 1973	GEARCASE
65373R 1973	GEARCASE
65832B 1968	GEARCASE GROUP - HEAVY DUTY
65832B 1968	GEARCASE GROUP - STANDARD
65833B 1968	GEARCASE GROUP - HEAVY DUTY
65833B 1968	GEARCASE GROUP - STANDARD
65852B 1968	GEARCASE GROUP - HEAVY DUTY
65852B 1968	GEARCASE GROUP - STANDARD
65853B 1968	GEARCASE GROUP - HEAVY DUTY
65853B 1968	GEARCASE GROUP - STANDARD
65ES72S 1972	GEARCASE
65ES73R 1973	GEARCASE
65ESL72S 1972	GEARCASE
65ESL73R 1973	GEARCASE
70442M 1974	GEARCASE
70443M 1974	GEARCASE
70472M 1974	GEARCASE
70473M 1974	GEARCASE
70572B 1975	GEARCASE FOR MODELS 70572B,70573B
70572B 1975	GEARCASE FOR MODELS 70572E,70573E
70572E 1975	GEARCASE FOR MODELS 70572B,70573B

70572E 1975	GEARCASE FOR MODELS 70572E,70573E
70573B 1975	GEARCASE FOR MODELS 70572B,70573B
70573B 1975	GEARCASE FOR MODELS 70572E,70573E
70573E 1975	GEARCASE FOR MODELS 70572B,70573B
70573E 1975	GEARCASE FOR MODELS 70572E,70573E
70773S 1977	GEARCASE-15" TRANSOM
70873C 1978	GEARCASE-15" TRANSOM
70973R 1979	GEARCASE-15" TRANSOM
70EL77S 1977	GEARCASE-15"TRANSOM
70EL78C 1978	GEARCASE-15 INCH TRANSOM
70EL79R 1979	GEARCASE-15"TRANSOM
70ES74M 1974	GEARCASE
70ES75B 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ES75B 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ES75E 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ES75E 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ESL74M 1974	GEARCASE
70ESL75B 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ESL75B 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ESL75E 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ESL75E 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ESLR74M 1974	GEARCASE
75542B 1975	GEARCASE - 15" TRANSOM
75543B 1975	GEARCASE - 15" TRANSOM
75642D 1976	GEARCASE-15" TRANSOM
75643D 1976	GEARCASE-15" TRANSOM
75742S 1977	GEARCASE-15" TRANSOM
75743S 1977	GEARCASE-15" TRANSOM
75842C 1978	GEARCASE-15" TRANSOM
75843C 1978	GEARCASE-15" TRANSOM
75942R 1979	GEARCASE-15" TRANSOM
75943R 1979	GEARCASE-15" TRANSOM
75ELR76D 1976	GEARCASE-15" TRANSCOM
75ELR77S 1977	GEARCASE-15"TRANSOM
75ELR78C 1978	GEARCASE-15 INCH TRANSOM

75ELR79R 1979	GEARCASE-15"TRANSOM
75ER76D 1976	GEARCASE-15" TRANSCOM
75ER77S 1977	GEARCASE-15"TRANSOM
75ER78C 1978	GEARCASE-15 INCH TRANSOM
75ER79R 1979	GEARCASE-15"TRANSOM
75ESLR75B 1975	GEARCASE-15"TRANSOM
75ESR75B 1975	GEARCASE-15"TRANSOM
85852A 1968	GEARCASE GROUP
85853A 1968	GEARCASE GROUP
85892A 1968	GEARCASE GROUP ELECTRIC SHIFT
85893A 1968	GEARCASE GROUP ELECTRIC SHIFT
AM55RSLD 1999	GEARCASE
E35AELCDE 1986	GEARCASE
E35AELCUD 1987	GEARCASE
E35ARLCDE 1986	GEARCASE
E35ARLCUD 1987	GEARCASE
E40AELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ARLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ATLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ECDE 1986	GEARCASE
E40ECOB 1985	GEARCASE
E40ECRM 1984	GEARCASE
E40ECUD 1987	GEARCASE
E40ELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ELCDE 1986	GEARCASE
E40ELCOB 1985	GEARCASE
E40ELCRM 1984	GEARCASE
E40ELCUD 1987	GEARCASE
E40RCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40RCDE 1986	GEARCASE
E40RCOB 1985	GEARCASE
E40RCRM 1984	GEARCASE
E40RCUD 1987	GEARCASE
E40RLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT

E40RLCDE 1986	GEARCASE
E40RLCOB 1985	GEARCASE
E40RLCRM 1984	GEARCASE
E40RLCUD 1987	GEARCASE
E40TECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TECDE 1986	GEARCASE
E40TECOB 1985	GEARCASE
E40TECRM 1984	GEARCASE
E40TECUD 1987	GEARCASE
E40TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TELCDE 1986	GEARCASE
E40TELCOB 1985	GEARCASE
E40TELCRM 1984	GEARCASE
E40TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TLCDE 1986	GEARCASE
E40TLCUD 1987	GEARCASE
E40TTLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40WREES 1999	GEARCASE
E40WRLEES 1999	GEARCASE
E40WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
E40WRLSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E40WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
E40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E40WRYEES 1999	GEARCASE
E40WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
E40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
E45RCCDS 1986	GEARCASE
E45RCCUC 1987	GEARCASE
E45RCE 1989	GEARCASE
E45RCEIA 1991	GEARCASE
E45RCENM 1992	GEARCASE
E45RCEOD 1995	GEARCASE
E45RCERE 1994	GEARCASE
E45RCESR 1990	GEARCASE
E45RCETB 1993	GEARCASE

E45RCLCDS 1986	GEARCASE
E45RCLCUC 1987	GEARCASE
E45RCLE 1989	GEARCASE
E45RCLEDS 1996	GEARCASE
E45RCLEIA 1991	GEARCASE
E45RCLENM 1992	GEARCASE
E45RCLEOD 1995	GEARCASE
E45RCLERE 1994	GEARCASE
E45RCLESR 1990	GEARCASE
E45RCLETB 1993	GEARCASE
E45RCLEUC 1997	GEARCASE
E45WMLE 1989	GEARCASE
E45WMLEIA 1991	GEARCASE
E45WMLENM 1992	GEARCASE
E45WMLESR 1990	GEARCASE
E50BECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50BECDE 1986	GEARCASE
E50BECIC 1981	GEARCASE, ELECTRIC START
E50BECIC 1981	GEARCASE, ROPE START
E50BECNR 1982	GEARCASE
E50BECOB 1985	GEARCASE
E50BECRM 1984	GEARCASE
E50BECTA 1983	GEARCASE
E50BECUD 1987	GEARCASE
E50BELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50BELCDE 1986	GEARCASE
E50BELCIC 1981	GEARCASE, ELECTRIC START
E50BELCIC 1981	GEARCASE, ROPE START
E50BELCNR 1982	GEARCASE
E50BELCOB 1985	GEARCASE
E50BELCRM 1984	GEARCASE
E50BELCTA 1983	GEARCASE
E50BELCUD 1987	GEARCASE
E50ECSR 1980	GEARCASE
E50ELCSR 1980	GEARCASE

E50TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50TELCDE 1986	GEARCASE
E50TELCOB 1985	GEARCASE
E50TELCRM 1984	GEARCASE
E50TELCCTA 1983	GEARCASE
E50TELCUD 1987	GEARCASE
E50TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50TLCDE 1986	GEARCASE
E50TLCOB 1985	GEARCASE
E50TLCRM 1984	GEARCASE
E50TLCUD 1987	GEARCASE
E55RCIM 1981	GEARCASE, ELECTRIC START
E55RCIM 1981	GEARCASE, ROPE START
E55RLCSA 1980	GEARCASE, ELECTRIC START
E55RLCSA 1980	GEARCASE, ROPE START
E55RSLC 1997	GEARCASE
E55RSLG 1995	GEARCASE
E55RSLN 1983	GEARCASE
E55RSLN-2 1983	GEARCASE
E55RSLW 1996	GEARCASE
E55RSN 1983	GEARCASE
E55RSN-2 1983	GEARCASE
E55RSYN 1983	GEARCASE
E55RSYN-2 1983	GEARCASE
E55RWLCDC 1986	GEARCASE
E55RWLCOS 1985	GEARCASE
E55RWLCRD 1984	GEARCASE
E55RWLCUC 1987	GEARCASE
E55RWLE 1989	GEARCASE
E55RWLEIA 1991	GEARCASE
E55RWLENM 1992	GEARCASE
E55RWLERE 1994	GEARCASE
E55RWLESR 1990	GEARCASE
E55RWLETB 1993	GEARCASE
E55TLCIM 1981	GEARCASE, ELECTRIC START

E55TLCIM 1981	GEARCASE, ROPE START
E55WREES 1999	GEARCASE
E55WRLEES 1999	GEARCASE
E55WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
E55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
E55WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
E55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E55WRYEES 1999	GEARCASE
E55WRY SIR commercial, rope start, 25 in shaft 2001	GEARCASE
E55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
E60ECIA 1981	GEARCASE, ELECTRIC START
E60ECIA 1981	GEARCASE, ROPE START
E60ECIH 1981	GEARCASE, ELECTRIC START
E60ECIH 1981	GEARCASE, ROPE START
E60ECNM 1982	GEARCASE
E60ECSR 1980	GEARCASE, ELECTRIC START
E60ECSR 1980	GEARCASE, ROPE START
E60ECTB 1983	GEARCASE
E60ELCDS 1986	GEARCASE - 15" TRANSOM
E60ELCIA 1981	GEARCASE, ELECTRIC START
E60ELCIA 1981	GEARCASE, ROPE START
E60ELCIH 1981	GEARCASE, ELECTRIC START
E60ELCIH 1981	GEARCASE, ROPE START
E60ELCNM 1982	GEARCASE
E60ELCOD 1985	GEARCASE
E60ELCRE 1984	GEARCASE
E60ELCSR 1980	GEARCASE, ELECTRIC START
E60ELCSR 1980	GEARCASE, ROPE START
E60ELCTB 1983	GEARCASE
E60ELCUC 1987	GEARCASE - 15" TRANSOM
E60TLCDS 1986	GEARCASE - 15" TRANSOM
E60TLCIA 1981	GEARCASE, ELECTRIC START
E60TLCIA 1981	GEARCASE, ROPE START
E60TLCIH 1981	GEARCASE, ELECTRIC START
E60TLCIH 1981	GEARCASE, ROPE START

E60TLCNM 1982	GEARCASE
E60TLCOD 1985	GEARCASE
E60TLCRE 1984	GEARCASE
E60TLCTB 1983	GEARCASE
E60TLCUC 1987	GEARCASE - 15" TRANSOM
E70ELCIH 1981	GEARCASE-15" TRANSOM
E70ELCIM 1981	GEARCASE-15" TRANSOM
E70ELCNB 1982	GEARCASE - 15" TRANSOM
E70ELCOS 1985	GEARCASE - 15" TRANSOM
E70ELCRD 1984	GEARCASE - 15" TRANSOM
E70ELCSA 1980	GEARCASE-15" TRANSOM
E70ELCTE 1983	GEARCASE-15" TRANSOM
E70TLCIM 1981	GEARCASE-15" TRANSOM
E70TLCNB 1982	GEARCASE - 15" TRANSOM
E70TLCOS 1985	GEARCASE - 15" TRANSOM
E70TLCRD 1984	GEARCASE - 15" TRANSOM
E70TLCTE 1983	GEARCASE-15" TRANSOM
E75ECCA 1988	GEARCASE
E75ECDC 1986	GEARCASE - 15" TRANSOM
E75ECOS 1985	GEARCASE - 15" TRANSOM
E75ECDR 1984	GEARCASE - 15" TRANSOM
E75ECUR 1987	GEARCASE - 15" TRANSOM
E75ELCRD 1984	GEARCASE - 15" TRANSOM
E75ERICIH 1981	GEARCASE-15" TRANSOM
E75ERICIM 1981	GEARCASE-15" TRANSOM
E75ERCNB 1982	GEARCASE - 15" TRANSOM
E75ERCSA 1980	GEARCASE-15" TRANSOM
E75ERCTE 1983	GEARCASE-15" TRANSOM
E75ERLCIH 1981	GEARCASE-15" TRANSOM
E75ERLCIM 1981	GEARCASE-15" TRANSOM
E75ERLCNB 1982	GEARCASE - 15" TRANSOM
E75ERLCSA 1980	GEARCASE-15" TRANSOM
E75ERLCTE 1983	GEARCASE-15" TRANSOM
E75TLCRD 1984	GEARCASE - 15" TRANSOM
E75TRLCIH 1981	GEARCASE-15" TRANSOM

E75TRLCIM 1981	GEARCASE-15" TRANSOM
E75TRLCNB 1982	GEARCASE - 15" TRANSOM
E75TRLCSA 1980	GEARCASE-15" TRANSOM
E75TRLCTE 1983	GEARCASE-15" TRANSOM
HE45RCLEDS 1996	GEARCASE
HE45RCLEUC 1997	GEARCASE
HE55RSLC 1997	GEARCASE
HE55RSLW 1996	GEARCASE
HJ45RCLEDS 1996	GEARCASE
HJ45RCLEUC 1997	GEARCASE
HJ55RSLC 1997	GEARCASE
HJ55RSLW 1996	GEARCASE
J35AELCDE 1986	GEARCASE
J35AELCUD 1987	GEARCASE
J35ARLCDE 1986	GEARCASE
J35ARLCUD 1987	GEARCASE
J40AELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ARLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ATLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ECDE 1986	GEARCASE
J40ECOB 1985	GEARCASE
J40ECRM 1984	GEARCASE
J40ECUD 1987	GEARCASE
J40ELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ELCDE 1986	GEARCASE
J40ELCOB 1985	GEARCASE
J40ELCRM 1984	GEARCASE
J40ELCUD 1987	GEARCASE
J40RCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40RCDE 1986	GEARCASE
J40RCOB 1985	GEARCASE
J40RCRM 1984	GEARCASE
J40RCUD 1987	GEARCASE
J40RLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT

J40RLCDE 1986	GEARCASE
J40RLCOB 1985	GEARCASE
J40RLCRM 1984	GEARCASE
J40RLCUD 1987	GEARCASE
J40TECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TECDE 1986	GEARCASE
J40TECOB 1985	GEARCASE
J40TECRM 1984	GEARCASE
J40TECUD 1987	GEARCASE
J40TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TELCDE 1986	GEARCASE
J40TELCOB 1985	GEARCASE
J40TELCRM 1984	GEARCASE
J40TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TLCDE 1986	GEARCASE
J40TLCUD 1987	GEARCASE
J40TTLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40WREES 1999	GEARCASE
J40WRLEES 1999	GEARCASE
J40WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
J40WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J40WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
J40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J40WRYEES 1999	GEARCASE
J40WRY SIR commercial, rope start, 25 in shaft 2001	GEARCASE
J40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
J45RCCDS 1986	GEARCASE
J45RCCUC 1987	GEARCASE
J45RCE 1989	GEARCASE
J45RCEIA 1991	GEARCASE
J45RCENM 1992	GEARCASE
J45RCEOD 1995	GEARCASE
J45RCERE 1994	GEARCASE
J45RCESR 1990	GEARCASE
J45RCETB 1993	GEARCASE

J45RCLCDS 1986	GEARCASE
J45RCLCUC 1987	GEARCASE
J45RCLE 1989	GEARCASE
J45RCLEDS 1996	GEARCASE
J45RCLEIA 1991	GEARCASE
J45RCLENM 1992	GEARCASE
J45RCLEOD 1995	GEARCASE
J45RCLERE 1994	GEARCASE
J45RCLESR 1990	GEARCASE
J45RCLETB 1993	GEARCASE
J45RCLEUC 1997	GEARCASE
J45WMLE 1989	GEARCASE
J45WMLEIA 1991	GEARCASE
J45WMLENM 1992	GEARCASE
J45WMLESR 1990	GEARCASE
J50BECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50BECDE 1986	GEARCASE
J50BECIC 1981	GEARCASE, ELECTRIC START
J50BECIC 1981	GEARCASE, ROPE START
J50BECNR 1982	GEARCASE
J50BECOB 1985	GEARCASE
J50BECRM 1984	GEARCASE
J50BECTA 1983	GEARCASE
J50BECUD 1987	GEARCASE
J50BELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50BELCDE 1986	GEARCASE
J50BELCIC 1981	GEARCASE, ELECTRIC START
J50BELCIC 1981	GEARCASE, ROPE START
J50BELCNR 1982	GEARCASE
J50BELCOB 1985	GEARCASE
J50BELCRM 1984	GEARCASE
J50BELCTA 1983	GEARCASE
J50BELCUD 1987	GEARCASE
J50ECSR 1980	GEARCASE
J50ELCSR 1980	GEARCASE

J50TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50TELCDE 1986	GEARCASE
J50TELCOB 1985	GEARCASE
J50TELCRM 1984	GEARCASE
J50TELCTA 1983	GEARCASE
J50TELCUD 1987	GEARCASE
J50TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50TLCDE 1986	GEARCASE
J50TLCOB 1985	GEARCASE
J50TLCRM 1984	GEARCASE
J50TLCUD 1987	GEARCASE
J55RCIM 1981	GEARCASE, ELECTRIC START
J55RCIM 1981	GEARCASE, ROPE START
J55RLCIM 1981	GEARCASE, ELECTRIC START
J55RLCIM 1981	GEARCASE, ROPE START
J55RLCSA 1980	GEARCASE,ELECTRIC START
J55RLCSA 1980	GEARCASE,ROPE START
J55RSLC 1997	GEARCASE
J55RSLG 1995	GEARCASE
J55RSLN 1983	GEARCASE
J55RSLN-2 1983	GEARCASE
J55RSLW 1996	GEARCASE
J55RSN 1983	GEARCASE
J55RSN-2 1983	GEARCASE
J55RSYN 1983	GEARCASE
J55RSYN-2 1983	GEARCASE
J55RWLCDC 1986	GEARCASE
J55RWLCOS 1985	GEARCASE
J55RWLCRD 1984	GEARCASE
J55RWLCUC 1987	GEARCASE
J55RWLE 1989	GEARCASE
J55RWLEIA 1991	GEARCASE
J55RWLENM 1992	GEARCASE
J55RWLERE 1994	GEARCASE
J55RWLESR 1990	GEARCASE

J55RWLETB 1993	GEARCASE
J55WREES 1999	GEARCASE
J55WRLEES 1999	GEARCASE
J55WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
J55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J55WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
J55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J55WRYEES 1999	GEARCASE
J55WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
J55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
J60ECIA 1981	GEARCASE, ELECTRIC START
J60ECIA 1981	GEARCASE, ROPE START
J60ECIH 1981	GEARCASE, ELECTRIC START
J60ECIH 1981	GEARCASE, ROPE START
J60ECNM 1982	GEARCASE
J60ECSR 1980	GEARCASE,ELECTRIC START
J60ECSR 1980	GEARCASE,ROPE START
J60ECTB 1983	GEARCASE
J60ELCDS 1986	GEARCASE - 15" TRANSOM
J60ELCIA 1981	GEARCASE, ELECTRIC START
J60ELCIA 1981	GEARCASE, ROPE START
J60ELCIH 1981	GEARCASE, ELECTRIC START
J60ELCIH 1981	GEARCASE, ROPE START
J60ELCNM 1982	GEARCASE
J60ELCOD 1985	GEARCASE
J60ELCRE 1984	GEARCASE
J60ELCSR 1980	GEARCASE,ELECTRIC START
J60ELCSR 1980	GEARCASE,ROPE START
J60ELCTB 1983	GEARCASE
J60ELCUC 1987	GEARCASE - 15" TRANSOM
J60TLCDS 1986	GEARCASE - 15" TRANSOM
J60TLCIA 1981	GEARCASE, ELECTRIC START
J60TLCIA 1981	GEARCASE, ROPE START
J60TLCIH 1981	GEARCASE, ELECTRIC START
J60TLCIH 1981	GEARCASE, ROPE START

J60TLCNM 1982	GEARCASE
J60TLCOD 1985	GEARCASE
J60TLCRE 1984	GEARCASE
J60TLCTB 1983	GEARCASE
J60TLCUC 1987	GEARCASE - 15" TRANSOM
J70ELCIH 1981	GEARCASE-15" TRANSOM
J70ELCIM 1981	GEARCASE-15" TRANSOM
J70ELCNB 1982	GEARCASE - 15" TRANSOM
J70ELCOS 1985	GEARCASE - 15" TRANSOM
J70ELCRD 1984	GEARCASE - 15" TRANSOM
J70ELCSA 1980	GEARCASE-15" TRANSOM
J70ELCTE 1983	GEARCASE-15" TRANSOM
J70TLCIM 1981	GEARCASE-15" TRANSOM
J70TLCNB 1982	GEARCASE - 15" TRANSOM
J70TLCOS 1985	GEARCASE - 15" TRANSOM
J70TLCRD 1984	GEARCASE - 15" TRANSOM
J70TLCTE 1983	GEARCASE-15" TRANSOM
J75ECCA 1988	GEARCASE
J75ECDC 1986	GEARCASE - 15" TRANSOM
J75ECNB 1982	GEARCASE - 15" TRANSOM
J75ECOS 1985	GEARCASE - 15" TRANSOM
J75ECDR 1984	GEARCASE - 15" TRANSOM
J75ECTE 1983	GEARCASE-15" TRANSOM
J75ECUR 1987	GEARCASE - 15" TRANSOM
J75ELCNB 1982	GEARCASE - 15" TRANSOM
J75ELCRD 1984	GEARCASE - 15" TRANSOM
J75ELCTE 1983	GEARCASE-15" TRANSOM
J75ERCIH 1981	GEARCASE-15" TRANSOM
J75ERCIM 1981	GEARCASE-15" TRANSOM
J75ERCSA 1980	GEARCASE-15" TRANSOM
J75ERLCIH 1981	GEARCASE-15" TRANSOM
J75ERLCIM 1981	GEARCASE-15" TRANSOM
J75ERLCSA 1980	GEARCASE-15" TRANSOM
J75TELCIM 1981	GEARCASE-15" TRANSOM
J75TLCNB 1982	GEARCASE - 15" TRANSOM

J75TLCRD 1984	GEARCASE - 15" TRANSOM
J75TLCTE 1983	GEARCASE-15" TRANSOM
J75TRLCIH 1981	GEARCASE-15" TRANSOM
J75TRLCSA 1980	GEARCASE-15" TRANSOM
M55RWLR 1988	GEARCASE
MISCELLANEOUS 1972	CHROME PUMP KITS 65 HP
MISCELLANEOUS 1973	CHROME PUMP KITS 65 HP
R45RCLR 1988	GEARCASE
R45RCR 1988	GEARCASE
R55RWLR 1988	GEARCASE
S45RCLR 1988	GEARCASE
S45RCR 1988	GEARCASE
SE40RPB 1997	GEARCASE
SE40RPH 1996	GEARCASE
SE40RPLB 1997	GEARCASE
SE40RPLH 1996	GEARCASE
SE40RPLT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPLT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE40RPT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE40RPYB 1997	GEARCASE
SE40RPYH 1996	GEARCASE
SE40RPYT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPYT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE45RSLB 1997	GEARCASE
SE45RSLH 1996	GEARCASE
SE55RSC 1997	GEARCASE
SE55RSLC 1997	GEARCASE
SE55RSLM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSLM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSLW 1996	GEARCASE
SE55RSM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSW 1996	GEARCASE
SE55RSYC 1997	GEARCASE

SE55RSYM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSYM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSYW 1996	GEARCASE
SJ40RPB 1997	GEARCASE
SJ40RPH 1996	GEARCASE
SJ40RPLB 1997	GEARCASE
SJ40RPLH 1996	GEARCASE
SJ40RPLT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPLT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ40RPT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ40RPYB 1997	GEARCASE
SJ40RPYH 1996	GEARCASE
SJ40RPYT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPYT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ45RSLB 1997	GEARCASE
SJ45RSLH 1996	GEARCASE
SJ55RSC 1997	GEARCASE
SJ55RSLC 1997	GEARCASE
SJ55RSLM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSLM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSLW 1996	GEARCASE
SJ55RSM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSW 1996	GEARCASE
SJ55RSYC 1997	GEARCASE
SJ55RSYM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSYM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSYW 1996	GEARCASE
V4A-20A 1968	GEARCASE GROUP ELECTRIC SHIFT
V4AL-20A 1968	GEARCASE GROUP ELECTRIC SHIFT
V4S-20A 1968	GEARCASE GROUP
V4SL-20A 1968	GEARCASE GROUP
VX-14B 1968	GEARCASE GROUP-HEAVY DUTY
VX-14B 1968	GEARCASE GROUP-STANDARD

VXH-14B 1968

GEARCASE GROUP-HEAVY DUTY

VXH-14B 1968

GEARCASE GROUP-STANDARD

VXHL-14B 1968

GEARCASE GROUP-HEAVY DUTY

VXHL-14B 1968

GEARCASE GROUP-STANDARD

VXL-14B 1968

GEARCASE GROUP-HEAVY DUTY

VXL-14B 1968

GEARCASE GROUP-STANDARD