

Where Used: Part Number 0307608

Model Name	Diagram
33002M 1970	POWER HEAD GROUP ELECTRIC START
33002M 1970	POWER HEAD GROUP MANUAL START
33003M 1970	POWER HEAD GROUP ELECTRIC START
33003M 1970	POWER HEAD GROUP MANUAL START
33052M 1970	POWER HEAD GROUP ELECTRIC START
33052M 1970	POWER HEAD GROUP MANUAL START
33053M 1970	POWER HEAD GROUP ELECTRIC START
33053M 1970	POWER HEAD GROUP MANUAL START
33802M 1968	POWER HEAD GROUP ELECTRIC START
33802M 1968	POWER HEAD GROUP MANUAL START
33802R 1968	POWER HEAD GROUP ELECTRIC START
33802R 1968	POWER HEAD GROUP MANUAL START
33803M 1968	POWER HEAD GROUP ELECTRIC START
33803M 1968	POWER HEAD GROUP MANUAL START
33803R 1968	POWER HEAD GROUP ELECTRIC START
33803R 1968	POWER HEAD GROUP MANUAL START
33852M 1968	POWER HEAD GROUP ELECTRIC START
33852M 1968	POWER HEAD GROUP MANUAL START
33852R 1968	POWER HEAD GROUP ELECTRIC START
33852R 1968	POWER HEAD GROUP MANUAL START
33853M 1968	POWER HEAD GROUP ELECTRIC START
33853M 1968	POWER HEAD GROUP MANUAL START
33853R 1968	POWER HEAD GROUP ELECTRIC START
33853R 1968	POWER HEAD GROUP MANUAL START
33902A 1969	POWERHEAD GROUP ELECTRIC START
33902A 1969	POWERHEAD GROUP MANUAL START
33903A 1969	POWERHEAD GROUP ELECTRIC START
33903A 1969	POWERHEAD GROUP MANUAL START
33952A 1969	POWERHEAD GROUP ELECTRIC START
33952A 1969	POWERHEAD GROUP MANUAL START
33953A 1969	POWERHEAD GROUP ELECTRIC START
33953A 1969	POWERHEAD GROUP MANUAL START
33E69A 1969	POWER HEAD GROUP ELECTRIC START

33E69A 1969	POWER HEAD GROUP MANUAL START
33E70M 1970	POWER HEAD GROUP ELECTRIC START
33E70M 1970	POWER HEAD GROUP MANUAL START
33EL69A 1969	POWER HEAD GROUP ELECTRIC START
33EL69A 1969	POWER HEAD GROUP MANUAL START
33EL70M 1970	POWER HEAD GROUP ELECTRIC START
33EL70M 1970	POWER HEAD GROUP MANUAL START
33R69A 1969	POWER HEAD GROUP ELECTRIC START
33R69A 1969	POWER HEAD GROUP MANUAL START
33R70M 1970	POWER HEAD GROUP ELECTRIC START
33R70M 1970	POWER HEAD GROUP MANUAL START
33RL69A 1969	POWER HEAD GROUP ELECTRIC START
33RL69A 1969	POWER HEAD GROUP MANUAL START
33RL70M 1970	POWER HEAD GROUP ELECTRIC START
33RL70M 1970	POWER HEAD GROUP MANUAL START
40002A 1970	POWERHEAD GROUP
40003A 1970	POWERHEAD GROUP
40052A 1970	POWERHEAD GROUP
40053A 1970	POWERHEAD GROUP
40072A 1970	POWERHEAD GROUP ELECTRIC SHIFT
40073A 1970	POWERHEAD GROUP ELECTRIC SHIFT
40102B 1971	CYLINDER & CRANKCASE
40102G 1971	CYLINDER & CRANKCASE
40103B 1971	CYLINDER & CRANKCASE
40103G 1971	CYLINDER & CRANKCASE
40152B 1971	CYLINDER & CRANKCASE
40152G 1971	CYLINDER & CRANKCASE
40153B 1971	CYLINDER & CRANKCASE
40153G 1971	CYLINDER & CRANKCASE
40202E 1972	CYLINDER & CRANKCASE
40203E 1972	CYLINDER & CRANKCASE
40252E 1972	CYLINDER & CRANKCASE
40253E 1972	CYLINDER & CRANKCASE
40304D 1973	CYLINDER & CRANKCASE
40305D 1973	CYLINDER & CRANKCASE

40354D 1973	CYLINDER & CRANKCASE
40355D 1973	CYLINDER & CRANKCASE
40404S 1974	CYLINDER AND CRANKCASE
40405S 1974	CYLINDER AND CRANKCASE
40454S 1974	CYLINDER AND CRANKCASE
40455S 1974	CYLINDER AND CRANKCASE
40504C 1975	CYLINDER & CRANKCASE
40505C 1975	CYLINDER & CRANKCASE
40554C 1975	CYLINDER & CRANKCASE
40555C 1975	CYLINDER & CRANKCASE
40802A 1968	POWERHEAD GROUP
40802D 1968	POWERHEAD GROUP
40802S 1968	POWERHEAD GROUP
40803A 1968	POWERHEAD GROUP
40803D 1968	POWERHEAD GROUP
40803S 1968	POWERHEAD GROUP
40852A 1968	POWERHEAD GROUP ELECTRIC START
40852C 1968	POWERHEAD GROUP ELECTRIC START
40852D 1968	POWERHEAD GROUP ELECTRIC START
40852S 1968	POWERHEAD GROUP ELECTRIC START
40853A 1968	POWERHEAD GROUP ELECTRIC START
40853C 1968	POWERHEAD GROUP ELECTRIC START
40853D 1968	POWERHEAD GROUP ELECTRIC START
40853S 1968	POWERHEAD GROUP ELECTRIC START
40872A 1968	POWERHEAD GROUP ELECTRIC SHIFT
40872C 1968	POWERHEAD GROUP ELECTRIC SHIFT
40872D 1968	POWERHEAD GROUP ELECTRIC SHIFT
40873A 1968	POWERHEAD GROUP ELECTRIC SHIFT
40873C 1968	POWERHEAD GROUP ELECTRIC SHIFT
40873D 1968	POWERHEAD GROUP ELECTRIC SHIFT
40902R 1969	POWERHEAD GROUP
40903R 1969	POWERHEAD GROUP
40952R 1969	POWERHEAD GROUP
40953R 1969	POWERHEAD GROUP
40972R 1969	POWERHEAD GROUP ELECTRIC SHIFT

40973R 1969	POWERHEAD GROUP ELECTRIC SHIFT
40E69R 1969	POWERHEAD GROUP ELECTRIC START
40E70A 1970	POWERHEAD GROUP
40E71B 1971	CYLINDER & CRANKCASE
40E71G 1971	CYLINDER & CRANKCASE
40E72E 1972	CYLINDER & CRANKCASE
40E73D 1973	CYLINDER & CRANKCASE
40E74S 1974	CYLINDER AND CRANKCASE
40E75C 1975	CYLINDER & CRANKCASE
40EL69R 1969	POWERHEAD GROUP ELECTRIC START
40EL70A 1970	POWERHEAD GROUP
40EL71B 1971	CYLINDER & CRANKCASE
40EL71G 1971	CYLINDER & CRANKCASE
40EL72E 1972	CYLINDER & CRANKCASE
40EL73D 1973	CYLINDER & CRANKCASE
40EL74S 1974	CYLINDER AND CRANKCASE
40EL75C 1975	CYLINDER & CRANKCASE
40ES69R 1969	POWERHEAD GROUP ELECTRIC SHIFT
40ES70A 1970	POWERHEAD GROUP ELECTRIC SHIFT
40ESL69R 1969	POWERHEAD GROUP ELECTRIC SHIFT
40ESL70A 1970	POWERHEAD GROUP ELECTRIC SHIFT
40R69R 1969	POWERHEAD GROUP
40R70A 1970	POWERHEAD GROUP
40R71B 1971	CYLINDER & CRANKCASE
40R71G 1971	CYLINDER & CRANKCASE
40R72E 1972	CYLINDER & CRANKCASE
40R73D 1973	CYLINDER & CRANKCASE
40R74S 1974	CYLINDER AND CRANKCASE
40R75C 1975	CYLINDER & CRANKCASE
40RL69R 1969	POWERHEAD GROUP
40RL70A 1970	POWERHEAD GROUP
40RL71B 1971	CYLINDER & CRANKCASE
40RL71G 1971	CYLINDER & CRANKCASE
40RL72E 1972	CYLINDER & CRANKCASE
40RL73D 1973	CYLINDER & CRANKCASE

40RL74S 1974	CYLINDER AND CRANKCASE
40RL75C 1975	CYLINDER & CRANKCASE
55872A 1968	POWERHEAD GROUP
55872R 1968	POWERHEAD GROUP
55872S 1968	POWERHEAD GROUP
55873A 1968	POWERHEAD GROUP
55873R 1968	POWERHEAD GROUP
55873S 1968	POWERHEAD GROUP
55972A 1969	POWERHEAD GROUP
55972C 1969	POWERHEAD GROUP
55973A 1969	POWERHEAD GROUP
55973C 1969	POWERHEAD GROUP
55ES69A 1969	POWERHEAD GROUP
55ES69C 1969	POWERHEAD GROUP
55ESL69A 1969	POWERHEAD GROUP
55ESL69C 1969	POWERHEAD GROUP
60072B 1970	POWERHEAD GROUP
60072D 1970	POWERHEAD GROUP
60073B 1970	POWERHEAD GROUP
60073D 1970	POWERHEAD GROUP
60172C 1971	CYLINDER & CRANKCASE
60172E 1971	CYLINDER & CRANKCASE
60173C 1971	CYLINDER & CRANKCASE
60173E 1971	CYLINDER & CRANKCASE
60ES70B 1970	POWERHEAD GROUP
60ES70D 1970	POWERHEAD GROUP
60ES71C 1971	CYLINDER & CRANKCASE
60ES71E 1971	CYLINDER & CRANKCASE
60ESL70B 1970	POWERHEAD GROUP
60ESL70D 1970	POWERHEAD GROUP
60ESL71C 1971	CYLINDER & CRANKCASE
60ESL71E 1971	CYLINDER & CRANKCASE
DU-15S 1968	INTERMEDIATE HOUSING GROUP
DUE-15F 1968	INTERMEDIATE HOUSING GROUP
DUE-15S 1968	INTERMEDIATE HOUSING GROUP

E3BRCEC 1989	CYLINDER & CRANKCASE
E3BRCEC 1989	ENGINE COVER
E3BRESR 1990	CYLINDER & CRANKCASE
E3BRESR 1990	ENGINE COVER
E4BRCICI 1981	MOTOR COVER
E4BRHCCS 1988	ENGINE COVER
E4BRHCDE 1986	ENGINE COVER
E4BRHCNR 1982	MOTOR COVER
E4BRHCOB 1985	ENGINE COVER
E4BRHCRM 1984	ENGINE COVER
E4BRHCTA 1983	ENGINE COVER
E4BRHCUD 1987	ENGINE COVER
E4BRHLCCS 1988	ENGINE COVER
E4BRHLCDE 1986	ENGINE COVER
E4BRHLCNR 1982	MOTOR COVER
E4BRHLCOB 1985	ENGINE COVER
E4BRHLCRM 1984	ENGINE COVER
E4BRHLCTA 1983	ENGINE COVER
E4BRHLCUD 1987	ENGINE COVER
E4BRLCIC 1981	MOTOR COVER
E4WCIC 1981	MOTOR COVER
E4WCNR 1982	MOTOR COVER
E5RCIC 1981	EXHAUST HOUSING
E5RCSS 1980	EXHAUST HOUSING
E5RHIC 1981	EXHAUST HOUSING
E5RHCNR 1982	EXHAUST HOUSING
E5RHCSS 1980	EXHAUST HOUSING
E5RHCTA 1983	EXHAUST HOUSING
E5RHLCIC 1981	EXHAUST HOUSING
E5RHLCNR 1982	EXHAUST HOUSING
E5RHLCSS 1980	EXHAUST HOUSING
E5RHLCTA 1983	EXHAUST HOUSING
E5RLCIC 1981	EXHAUST HOUSING
E5RLCSS 1980	EXHAUST HOUSING
E6RCDE 1986	MIDSECTION

E6RCOB 1985	MIDSECTION
E6RCRM 1984	MIDSECTION
E6RLCDE 1986	MIDSECTION
E6RLCOB 1985	MIDSECTION
E6RLCRM 1984	MIDSECTION
E6SLCDE 1986	MIDSECTION
E6SLCOB 1985	MIDSECTION
E6SLCRM 1984	MIDSECTION
E70ELCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
E70ELCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
E70TLCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
E70TLCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
E75ERCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
E75ERCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
E75ERLCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
E75ERLCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
E75TRLCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
E75TRLCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
E8RCDE 1986	MIDSECTION
E8RCIC 1981	EXHAUST HOUSING
E8RCNR 1982	EXHAUST HOUSING
E8RCOB 1985	MIDSECTION
E8RCRM 1984	MIDSECTION
E8RCSS 1980	EXHAUST HOUSING
E8RCTA 1983	EXHAUST HOUSING
E8RLCDE 1986	MIDSECTION
E8RLCIC 1981	EXHAUST HOUSING
E8RLCNR 1982	EXHAUST HOUSING
E8RLCOB 1985	MIDSECTION
E8RLCRM 1984	MIDSECTION
E8RLCSS 1980	EXHAUST HOUSING
E8RLCTA 1983	EXHAUST HOUSING
E8SRLCDE 1986	MIDSECTION
E8SRLCNR 1982	EXHAUST HOUSING
E8SRLCOB 1985	MIDSECTION

E8SRLCRM 1984	MIDSECTION
E8SRLCTA 1983	EXHAUST HOUSING
J3BRCEC 1989	CYLINDER & CRANKCASE
J3BRCEC 1989	ENGINE COVER
J3BRESR 1990	CYLINDER & CRANKCASE
J3BRESR 1990	ENGINE COVER
J4BRCIC 1981	MOTOR COVER
J4BRHCCS 1988	ENGINE COVER
J4BRHCDE 1986	ENGINE COVER
J4BRHCNR 1982	MOTOR COVER
J4BRHCOB 1985	ENGINE COVER
J4BRHCRM 1984	ENGINE COVER
J4BRHCTA 1983	ENGINE COVER
J4BRHCUD 1987	ENGINE COVER
J4BRHLCCS 1988	ENGINE COVER
J4BRHLCDE 1986	ENGINE COVER
J4BRHLCNR 1982	MOTOR COVER
J4BRHLCOB 1985	ENGINE COVER
J4BRHLCRM 1984	ENGINE COVER
J4BRHLCTA 1983	ENGINE COVER
J4BRHLCUD 1987	ENGINE COVER
J4BRLCIC 1981	MOTOR COVER
J4WCIC 1981	MOTOR COVER
J4WCNR 1982	MOTOR COVER
J5RCIC 1981	EXHAUST HOUSING
J5RCSS 1980	EXHAUST HOUSING
J5RHIC 1981	EXHAUST HOUSING
J5RHICNR 1982	EXHAUST HOUSING
J5RHICSS 1980	EXHAUST HOUSING
J5RHCTA 1983	EXHAUST HOUSING
J5RHLCIC 1981	EXHAUST HOUSING
J5RHLCNR 1982	EXHAUST HOUSING
J5RHLCSS 1980	EXHAUST HOUSING
J5RHLCCTA 1983	EXHAUST HOUSING
J5RLCIC 1981	EXHAUST HOUSING

J5RLCSS 1980	EXHAUST HOUSING
J6RCDE 1986	MIDSECTION
J6RCOB 1985	MIDSECTION
J6RCRM 1984	MIDSECTION
J6RLCDE 1986	MIDSECTION
J6RLCOB 1985	MIDSECTION
J6RLCRM 1984	MIDSECTION
J6SLCDE 1986	MIDSECTION
J6SLCOB 1985	MIDSECTION
J6SLCRM 1984	MIDSECTION
J70ELCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
J70ELCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
J70TLCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
J70TLCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
J75ECNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
J75ECTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
J75ELCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
J75ELCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
J75TLCNB 1982	ELECTRIC STARTER & SOLENOID PRESTOLITE MODELS MGD-4115&POA-4
J75TLCTE 1983	ELECTRIC STARTER AMERICAN BOSCH 17996-29-M030MS
J8RCDE 1986	MIDSECTION
J8RCIC 1981	EXHAUST HOUSING
J8RCNR 1982	EXHAUST HOUSING
J8RCOB 1985	MIDSECTION
J8RCRM 1984	MIDSECTION
J8RCSS 1980	EXHAUST HOUSING
J8RCTA 1983	EXHAUST HOUSING
J8RLCDE 1986	MIDSECTION
J8RLCIC 1981	EXHAUST HOUSING
J8RLCNR 1982	EXHAUST HOUSING
J8RLCOB 1985	MIDSECTION
J8RLCRM 1984	MIDSECTION
J8RLCSS 1980	EXHAUST HOUSING
J8RLCTA 1983	EXHAUST HOUSING
J8SRLCDE 1986	MIDSECTION

J8SRLCNR 1982	EXHAUST HOUSING
J8SRLEOB 1985	MIDSECTION
J8SRLCRM 1984	MIDSECTION
J8SRLCTA 1983	EXHAUST HOUSING
RD-30A 1968	POWERHEAD GROUP MANUAL START
RD-30D 1968	POWERHEAD GROUP MANUAL START
RD-30S 1968	POWERHEAD GROUP MANUAL START
RDL-30A 1968	POWERHEAD GROUP MANUAL START
RDL-30D 1968	POWERHEAD GROUP MANUAL START
RDL-30S 1968	POWERHEAD GROUP MANUAL START
RDS-30A 1968	POWERHEAD GROUP
RDS-30C 1968	POWERHEAD GROUP
RDS-30D 1968	POWERHEAD GROUP
RDS-30S 1968	POWERHEAD GROUP
RDSL-30A 1968	POWERHEAD GROUP
RDSL-30C 1968	POWERHEAD GROUP
RDSL-30D 1968	POWERHEAD GROUP
RDSL-30S 1968	POWERHEAD GROUP
RK-30A 1968	POWERHEAD GROUP ELECTRIC SHIFT
RK-30C 1968	POWERHEAD GROUP ELECTRIC SHIFT
RK-30D 1968	POWERHEAD GROUP ELECTRIC SHIFT
RKL-30A 1968	POWERHEAD GROUP ELECTRIC SHIFT
RKL-30C 1968	POWERHEAD GROUP ELECTRIC SHIFT
RKL-30D 1968	POWERHEAD GROUP ELECTRIC SHIFT
RX-16M 1968	POWER HEAD GROUP ELECTRIC START
RX-16M 1968	POWER HEAD GROUP MANUAL START
RX-16R 1968	POWER HEAD GROUP ELECTRIC START
RX-16R 1968	POWER HEAD GROUP MANUAL START
RXE-16M 1968	POWER HEAD GROUP ELECTRIC START
RXE-16M 1968	POWER HEAD GROUP MANUAL START
RXE-16R 1968	POWER HEAD GROUP ELECTRIC START
RXE-16R 1968	POWER HEAD GROUP MANUAL START
RXEL-16M 1968	POWER HEAD GROUP ELECTRIC START
RXEL-16M 1968	POWER HEAD GROUP MANUAL START
RXEL-16R 1968	POWER HEAD GROUP ELECTRIC START

RXEL-16R 1968	POWER HEAD GROUP MANUAL START
RXL-16M 1968	POWER HEAD GROUP ELECTRIC START
RXL-16M 1968	POWER HEAD GROUP MANUAL START
RXL-16R 1968	POWER HEAD GROUP ELECTRIC START
RXL-16R 1968	POWER HEAD GROUP MANUAL START
TR-10R 1968	POWERHEAD GROUP
TR-10S 1968	POWERHEAD GROUP
TRL-10R 1968	POWERHEAD GROUP
TRL-10S 1968	POWERHEAD GROUP