

Where Used: Part Number 0309545

Model Name	Diagram
10724A 1977	MAGNETO
10725A 1977	MAGNETO
10754A 1977	MAGNETO
10755A 1977	MAGNETO
10824M 1978	MAGNETO
10825M 1978	MAGNETO
10835M 1978	MAGNETO
10854M 1978	MAGNETO
10855M 1978	MAGNETO
10924B 1979	MAGNETO
10925B 1979	MAGNETO
10935B 1979	MAGNETO
10955B 1979	MAGNETO
10E77A 1977	MAGNETO
10E78M 1978	MAGNETO
10EL77A 1977	MAGNETO
10EL78M 1978	MAGNETO
10EL79B 1979	MAGNETO
10R77A 1977	MAGNETO
10R78M 1978	MAGNETO
10R79B 1979	MAGNETO
10RL77A 1977	MAGNETO
10RL78M 1978	MAGNETO
10RL79B 1979	MAGNETO
10SEL78M 1978	MAGNETO
10SEL79B 1979	MAGNETO
15704M 1977	MAGNETO
15705M 1977	MAGNETO
15754M 1977	MAGNETO
15804B 1978	MAGNETO
15805B 1978	MAGNETO
15854B 1978	MAGNETO
15855B 1978	MAGNETO

15904E 1979	MAGNETO
15905E 1979	MAGNETO
15954E 1979	MAGNETO
15955E 1979	MAGNETO
15E77M 1977	MAGNETO
15E78B 1978	MAGNETO
15E79E 1979	MAGNETO
15EL77M 1977	MAGNETO
15EL78B 1978	MAGNETO
15EL79E 1979	MAGNETO
15R77M 1977	MAGNETO
15R78B 1978	MAGNETO
15R79E 1979	MAGNETO
15RL77M 1977	MAGNETO
15RL78B 1978	MAGNETO
15RL79E 1979	MAGNETO
20/35HP	BATTERY CHARGING KIT
25702H 1977	MAGNETO
25702S 1977	MAGNETO
25703H 1977	MAGNETO
25703S 1977	MAGNETO
25752H 1977	MAGNETO
25752S 1977	MAGNETO
25753H 1977	MAGNETO
25753S 1977	MAGNETO
25802C 1978	MAGNETO
25803C 1978	MAGNETO
25852C 1978	MAGNETO
25853C 1978	MAGNETO
25904R 1979	MAGNETO
25905R 1979	MAGNETO
25952R 1979	MAGNETO
25953R 1979	MAGNETO
25E77S 1977	MAGNETO
25E78C 1978	MAGNETO

25E79R 1979	MAGNETO
25EL77H 1977	MAGNETO
25EL77S 1977	MAGNETO
25EL78C 1978	MAGNETO
25EL79R 1979	MAGNETO
25R77H 1977	MAGNETO
25R77S 1977	MAGNETO
25R78C 1978	MAGNETO
25R79R 1979	MAGNETO
25RL77H 1977	MAGNETO
25RL77S 1977	MAGNETO
25RL78C 1978	MAGNETO
25RL79R 1979	MAGNETO
35702C 1977	MAGNETO
35702H 1977	MAGNETO
35703C 1977	MAGNETO
35703H 1977	MAGNETO
35752C 1977	MAGNETO
35752H 1977	MAGNETO
35753C 1977	MAGNETO
35753H 1977	MAGNETO
35802R 1978	MAGNETO
35803R 1978	MAGNETO
35852R 1978	MAGNETO
35853R 1978	MAGNETO
35902A 1979	MAGNETO
35903A 1979	MAGNETO
35952A 1979	MAGNETO
35953A 1979	MAGNETO
35E77C 1977	MAGNETO
35E77H 1977	MAGNETO
35E78R 1978	MAGNETO
35E79A 1979	MAGNETO
35EL77C 1977	MAGNETO
35EL77H 1977	MAGNETO

35EL78R 1978	MAGNETO
35EL79A 1979	MAGNETO
35R77C 1977	MAGNETO
35R77H 1977	MAGNETO
35R78R 1978	MAGNETO
35R79A 1979	MAGNETO
35RL77C 1977	MAGNETO
35RL77H 1977	MAGNETO
35RL78R 1978	MAGNETO
35RL79A 1979	MAGNETO
40HP Rope 45-55HP Comm (2 Stroke) 1992-2001	TILLER ELECTRIC START KIT - 40, 55
4706B 1977	MAGNETO
4736B 1977	MAGNETO
4806E 1978	MAGNETO
4836E 1978	MAGNETO
4837E 1978	MAGNETO
4904D 1979	MAGNETO
4932D 1979	MAGNETO
4933D 1979	MAGNETO
4R77B 1977	MAGNETO
4R78E 1978	MAGNETO
4R79D 1979	MAGNETO
4RL78E 1978	MAGNETO
4RL79D 1979	MAGNETO
4W77B 1977	MAGNETO
4W78E 1978	MAGNETO
4W79D 1979	MAGNETO
50902C 1979	IGNITION SYSTEM
50903C 1979	IGNITION SYSTEM
50R79C 1979	IGNITION SYSTEM
50RL79C 1979	IGNITION SYSTEM
55974C 1979	IGNITION SYSTEM
55975C 1979	IGNITION SYSTEM
55E79C 1979	IGNITION SYSTEM
55EL79C 1979	IGNITION SYSTEM

6704M 1977	MAGNETO
6705M 1977	MAGNETO
6804B 1978	MAGNETO
6805B 1978	MAGNETO
6904E 1979	MAGNETO
6905E 1979	MAGNETO
6R77M 1977	MAGNETO
6R78B 1978	MAGNETO
6R79E 1979	MAGNETO
6RL77M 1977	MAGNETO
6RL78B 1978	MAGNETO
6RL79E 1979	MAGNETO
D25RWA 1988	MAGNETO
D25RWLA 1988	MAGNETO
E10ECCD 1988	IGNITION
E10ECDB 1986	IGNITION
E10ECES 1989	IGNITION
E10ECOM 1985	IGNITION
E10ECSE 1980	MAGNETO
E10ECUE 1987	IGNITION
E10EESC 1990	IGNITION
E10ELCCD 1988	IGNITION
E10ELCDB 1986	IGNITION
E10ELCES 1989	IGNITION
E10ELCOM 1985	IGNITION
E10ELCRA 1984	MAGNETO
E10ELCSE 1980	MAGNETO
E10ELCTC 1983	MAGNETO
E10ELCUE 1987	IGNITION
E10ELESC 1990	IGNITION
E10RCCD 1988	IGNITION
E10RCDB 1986	IGNITION
E10RCES 1989	IGNITION
E10RCOM 1985	IGNITION
E10RCRA 1984	MAGNETO

E10RCSE 1980	MAGNETO
E10RCTC 1983	MAGNETO
E10RCTR 1983	MAGNETO
E10RCUE 1987	IGNITION
E10RELESC 1990	IGNITION
E10RESC 1990	IGNITION
E10RLCCD 1988	IGNITION
E10RLCDB 1986	IGNITION
E10RLCES 1989	IGNITION
E10RLCOM 1985	IGNITION
E10RLCRA 1984	MAGNETO
E10RLCSE 1980	MAGNETO
E10RLCTC 1983	MAGNETO
E10RLCUE 1987	IGNITION
E10RLESC 1990	IGNITION
E10SELCCD 1988	IGNITION
E10SELCDB 1986	IGNITION
E10SELCES 1989	IGNITION
E10SELCOM 1985	IGNITION
E10SELCRA 1984	MAGNETO
E10SELCSE 1980	MAGNETO
E10SELCTC 1983	MAGNETO
E10SELCUE 1987	IGNITION
E10SELESC 1990	IGNITION
E15ECCS 1988	IGNITION
E15ECDE 1986	IGNITION
E15ECEC 1989	IGNITION
E15ECOB 1985	IGNITION
E15ECRM 1984	MAGNETO
E15ECSD 1980	MAGNETO
E15ECTR 1983	MAGNETO
E15ECUD 1987	IGNITION
E15EESR 1990	IGNITION
E15ELCCS 1988	IGNITION
E15ELCDE 1986	IGNITION

E15ELCEC 1989	IGNITION
E15ELCOB 1985	IGNITION
E15ELCRM 1984	MAGNETO
E15ELCSD 1980	MAGNETO
E15ELCTR 1983	MAGNETO
E15ELCUD 1987	IGNITION
E15ELESR 1990	IGNITION
E15RCCS 1988	IGNITION
E15RCDE 1986	IGNITION
E15RCEC 1989	IGNITION
E15RCOB 1985	IGNITION
E15RCRM 1984	MAGNETO
E15RCSD 1980	MAGNETO
E15RCTA 1983	MAGNETO
E15RCTR 1983	MAGNETO
E15RCUD 1987	IGNITION
E15RELESR 1990	IGNITION
E15RESR 1990	IGNITION
E15RLCCS 1988	IGNITION
E15RLCDE 1986	IGNITION
E15RLCEC 1989	IGNITION
E15RLCOB 1985	IGNITION
E15RLCRM 1984	MAGNETO
E15RLCSD 1980	MAGNETO
E15RLCTA 1983	MAGNETO
E15RLCTR 1983	MAGNETO
E15RLCUD 1987	IGNITION
E15RLESR 1990	IGNITION
E20CRCCA 1988	IGNITION
E20CRCDC 1986	IGNITION
E20CRCEM 1989	IGNITION
E20CRCOS 1985	IGNITION
E20CRCUR 1987	IGNITION
E20CRESB 1990	IGNITION
E20CRLCCA 1988	IGNITION

E20CRLCDC 1986	IGNITION
E20CRLCEM 1989	IGNITION
E20CRLCOS 1985	IGNITION
E20CRLCUR 1987	IGNITION
E20CRLESB 1990	IGNITION
E20ECCA 1988	IGNITION
E20ECDC 1986	IGNITION
E20ECEM 1989	IGNITION
E20ECOS 1985	IGNITION
E20ECUR 1987	IGNITION
E20EESB 1990	IGNITION
E20ELCCA 1988	IGNITION
E20ELCDC 1986	IGNITION
E20ELCEM 1989	IGNITION
E20ELCOS 1985	IGNITION
E20ELCUR 1987	IGNITION
E20ELESB 1990	IGNITION
E20TECDC 1986	IGNITION
E25ECCM 1988	IGNITION
E25ECDR 1986	IGNITION
E25ECEB 1989	IGNITION
E25ECOC 1985	IGNITION
E25ECRS 1984	IGNITION
E25ECTD 1983	MAGNETO
E25ECUA 1987	IGNITION
E25EESE 1990	IGNITION
E25ELCCM 1988	IGNITION
E25ELCDR 1986	IGNITION
E25ELCEB 1989	IGNITION
E25ELCOC 1985	IGNITION
E25ELCRS 1984	IGNITION
E25ELCTD 1983	MAGNETO
E25ELCUA 1987	IGNITION
E25ELESE 1990	IGNITION
E25RCCA 1988	IGNITION

E25RCDC 1986	IGNITION
E25RCEM 1989	IGNITION
E25RCOS 1985	IGNITION
E25RCRD 1984	IGNITION
E25RCSA 1980	MAGNETO
E25RCTE 1983	MAGNETO
E25RCUR 1987	IGNITION
E25RESB 1990	IGNITION
E25RLCCA 1988	IGNITION
E25RLCDC 1986	IGNITION
E25RLCEM 1989	IGNITION
E25RLCOS 1985	IGNITION
E25RLCRD 1984	IGNITION
E25RLCSA 1980	MAGNETO
E25RLCTE 1983	MAGNETO
E25RLCUR 1987	IGNITION
E25RLESB 1990	IGNITION
E25RSA 1981	MAGNETO
E25RSLA 1981	MAGNETO
E25RSLS 1983	MAGNETO
E25RSS 1983	MAGNETO
E25RWDC 1986	MAGNETO
E25RWCIM 1981	MAGNETO
E25RWCOS 1985	MAGNETO
E25RWCRD 1984	MAGNETO
E25RWCTE 1983	MAGNETO
E25RWCUR 1987	MAGNETO
E25RWESA 1990	IGNITION
E25RWK 1989	IGNITION
E25RWLCDC 1986	MAGNETO
E25RWLCIM 1981	MAGNETO
E25RWLCOS 1985	MAGNETO
E25RWLCRD 1984	MAGNETO
E25RWLCTE 1983	MAGNETO
E25RWLCUR 1987	MAGNETO

E25RWLESA 1990	IGNITION
E25RWLK 1989	IGNITION
E25TECCA 1988	IGNITION
E25TECDC 1986	IGNITION
E25TECEM 1989	IGNITION
E25TECOS 1985	IGNITION
E25TECRD 1984	IGNITION
E25TECSA 1980	MAGNETO
E25TECTE 1983	MAGNETO
E25TECUR 1987	IGNITION
E25TEESB 1990	IGNITION
E25TELCCA 1988	IGNITION
E25TELCDC 1986	IGNITION
E25TELCEM 1989	IGNITION
E25TELCOS 1985	IGNITION
E25TELCRD 1984	IGNITION
E25TELCSA 1980	MAGNETO
E25TELCTE 1983	MAGNETO
E25TELCUR 1987	IGNITION
E25TELESB 1990	IGNITION
E28ELCDS 1986	MAGNETO
E28ESLCCR 1988	IGNITION
E28ESLCEA 1989	IGNITION
E28ESLCUC 1987	MAGNETO
E28ESLESM 1990	IGNITION
E30ECCE 1988	IGNITION
E30ECDM 1986	IGNITION
E30ECED 1989	IGNITION
E30ECOA 1985	IGNITION
E30ECRR 1984	IGNITION
E30ECUB 1987	IGNITION
E30EESS 1990	IGNITION
E30ELCCE 1988	IGNITION
E30ELCDM 1986	IGNITION
E30ELCED 1989	IGNITION

E30ELCOA 1985	IGNITION
E30ELCRR 1984	IGNITION
E30ELCUB 1987	IGNITION
E30ELESS 1990	IGNITION
E30RCCE 1988	IGNITION
E30RCDM 1986	IGNITION
E30RCED 1989	IGNITION
E30RCOA 1985	IGNITION
E30RCUB 1987	IGNITION
E30RESS 1990	IGNITION
E30RLCCE 1988	IGNITION
E30RLCDM 1986	IGNITION
E30RLCED 1989	IGNITION
E30RLCOA 1985	IGNITION
E30RLCUB 1987	IGNITION
E30RLESS 1990	IGNITION
E30TECCE 1988	IGNITION
E30TECDM 1986	IGNITION
E30TECED 1989	IGNITION
E30TECOA 1985	IGNITION
E30TECUB 1987	IGNITION
E30TEESS 1990	IGNITION
E30TELCCE 1988	IGNITION
E30TELCDM 1986	IGNITION
E30TELCED 1989	IGNITION
E30TELCOA 1985	IGNITION
E30TELCUB 1987	IGNITION
E30TELESS 1990	IGNITION
E35AELCDE 1986	IGNITION SYSTEM
E35AELCUD 1987	IGNITION SYSTEM
E35ARLCDE 1986	IGNITION SYSTEM
E35ARLCUD 1987	IGNITION SYSTEM
E35ECND 1982	MAGNETO
E35ECRR 1984	IGNITION
E35ECSM 1980	MAGNETO

E35ECTS 1983	MAGNETO
E35ELCND 1982	MAGNETO
E35ELCRR 1984	IGNITION
E35ELCSM 1980	MAGNETO
E35ELCTS 1983	MAGNETO
E35RCCE 1988	IGNITION
E35RCDM 1986	IGNITION
E35RCED 1989	IGNITION
E35RCND 1982	MAGNETO
E35RCRR 1984	IGNITION
E35RCTS 1983	MAGNETO
E35RCUB 1987	IGNITION
E35RESS 1990	IGNITION
E35RLCCE 1988	IGNITION
E35RLCDM 1986	IGNITION
E35RLCED 1989	IGNITION
E35RLCND 1982	MAGNETO
E35RLCRR 1984	IGNITION
E35RLCTS 1983	MAGNETO
E35RLCUB 1987	IGNITION
E35RLESS 1990	IGNITION
E35TCSM 1980	MAGNETO
E35TELCNB 1982	MAGNETO
E35TELCRR 1984	IGNITION
E35TELCTS 1983	MAGNETO
E35TLESM 1980	MAGNETO
E40AELCCS 1988	IGNITION SYSTEM
E40ARLCCS 1988	IGNITION SYSTEM
E40ATLCCS 1988	IGNITION SYSTEM
E40ECCS 1988	IGNITION SYSTEM
E40ECDE 1986	IGNITION SYSTEM
E40ECEC 1989	IGNITION SYSTEM - ROPE START
E40ECEC 1989	IGNITION SYSTEM - ELECTRIC START
E40ECEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E40ECEC 1989	IGNITION SYSTEM - ROPE START (Continued)

E40ECOB 1985	IGNITION SYSTEM
E40ECRM 1984	IGNITION SYSTEM
E40ECUD 1987	IGNITION SYSTEM
E40EESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40EESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E40EESR 1990	IGNITION SYSTEM - ROPE START
E40ELCCS 1988	IGNITION SYSTEM
E40ELCDE 1986	IGNITION SYSTEM
E40ELCEC 1989	IGNITION SYSTEM - ROPE START
E40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START
E40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E40ELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E40ELCOB 1985	IGNITION SYSTEM
E40ELCRM 1984	IGNITION SYSTEM
E40ELCUD 1987	IGNITION SYSTEM
E40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E40ELESR 1990	IGNITION SYSTEM - ROPE START
E40RCCS 1988	IGNITION SYSTEM
E40RCDE 1986	IGNITION SYSTEM
E40RCEC 1989	IGNITION SYSTEM - ROPE START
E40RCEC 1989	IGNITION SYSTEM - ELECTRIC START
E40RCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E40RCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E40RCOB 1985	IGNITION SYSTEM
E40RCRM 1984	IGNITION SYSTEM
E40RCUD 1987	IGNITION SYSTEM
E40RESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40RESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E40RESR 1990	IGNITION SYSTEM - ROPE START
E40RLCCS 1988	IGNITION SYSTEM
E40RLCDE 1986	IGNITION SYSTEM
E40RLCEC 1989	IGNITION SYSTEM - ROPE START
E40RLCEC 1989	IGNITION SYSTEM - ELECTRIC START
E40RLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)

E40RLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E40RLCOB 1985	IGNITION SYSTEM
E40RLCRM 1984	IGNITION SYSTEM
E40RLCUD 1987	IGNITION SYSTEM
E40RLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40RLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E40RLESR 1990	IGNITION SYSTEM - ROPE START
E40RWADB 1986	IGNITION
E40RWCOM 1985	IGNITION
E40RWCRA 1984	IGNITION
E40RWLCDB 1986	IGNITION
E40RWLCOM 1985	IGNITION
E40RWLCRA 1984	IGNITION
E40TECCS 1988	IGNITION SYSTEM
E40TECDE 1986	IGNITION SYSTEM
E40TECEC 1989	IGNITION SYSTEM - ROPE START
E40TECEC 1989	IGNITION SYSTEM - ELECTRIC START
E40TECEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E40TECEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E40TECOB 1985	IGNITION SYSTEM
E40TECRM 1984	IGNITION SYSTEM
E40TECUD 1987	IGNITION SYSTEM
E40TEESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40TEESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E40TEESR 1990	IGNITION SYSTEM - ROPE START
E40TELCCS 1988	IGNITION SYSTEM
E40TELCDE 1986	IGNITION SYSTEM
E40TELCEC 1989	IGNITION SYSTEM - ROPE START
E40TELCEC 1989	IGNITION SYSTEM - ELECTRIC START
E40TELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E40TELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E40TELCOB 1985	IGNITION SYSTEM
E40TELCRM 1984	IGNITION SYSTEM
E40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS

E40TELESR 1990	IGNITION SYSTEM - ROPE START
E40TLCCS 1988	IGNITION SYSTEM
E40TLCDE 1986	IGNITION SYSTEM
E40TLCEC 1989	IGNITION SYSTEM - ROPE START
E40TLCEC 1989	IGNITION SYSTEM - ELECTRIC START
E40TLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E40TLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E40TLCUD 1987	IGNITION SYSTEM
E40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E40TLESR 1990	IGNITION SYSTEM - ROPE START
E40TTLCCS 1988	IGNITION SYSTEM
E40TTLCEC 1989	IGNITION SYSTEM - ROPE START
E40TTLCEC 1989	IGNITION SYSTEM - ELECTRIC START
E40TTLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E40TTLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E40TTLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E40TTLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E40TTLESR 1990	IGNITION SYSTEM - ROPE START
E45RCCDS 1986	IGNITION SYSTEM
E45RCCUC 1987	IGNITION SYSTEM
E45RCE 1989	IGNITION
E45RCEIA 1991	IGNITION SYSTEM
E45RCESR 1990	IGNITION
E45RCLCDS 1986	IGNITION SYSTEM
E45RCLCUC 1987	IGNITION SYSTEM
E45RCLE 1989	IGNITION
E45RCLEIA 1991	IGNITION SYSTEM
E45RCLESR 1990	IGNITION
E45WMLE 1989	IGNITION
E45WMLEIA 1991	IGNITION SYSTEM
E45WMLESR 1990	IGNITION
E48ESLCCC 1988	IGNITION SYSTEM
E48ESLCER 1989	IGNITION SYSTEM (CONTINUED)
E48ESLCUS 1987	IGNITION SYSTEM

E48ESLESA 1990	IGNITION SYSTEM
E4RDHCCS 1988	MAGNETO
E4RDHCDE 1986	MAGNETO
E4RDHCEC 1989	IGNITION
E4RDHCUD 1987	MAGNETO
E4RDHESR 1990	IGNITION
E4RDHLCCS 1988	MAGNETO
E4RDHLCEC 1989	IGNITION
E4RDHLCUD 1987	MAGNETO
E4RDHLESR 1990	IGNITION
E4RLCSS 1980	MAGNETO
E4WCSS 1980	MAGNETO
E50BECCS 1988	IGNITION SYSTEM
E50BECDE 1986	IGNITION SYSTEM
E50BECEC 1989	IGNITION SYSTEM - ROPE START
E50BECEC 1989	IGNITION SYSTEM - ELECTRIC START
E50BECEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E50BECEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E50BECIC 1981	IGNITION SYSTEM
E50BECOB 1985	IGNITION SYSTEM
E50BECRM 1984	IGNITION SYSTEM
E50BECUD 1987	IGNITION SYSTEM
E50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E50BEESR 1990	IGNITION SYSTEM - ROPE START
E50BELCCS 1988	IGNITION SYSTEM
E50BELCDE 1986	IGNITION SYSTEM
E50BELCEC 1989	IGNITION SYSTEM - ROPE START
E50BELCEC 1989	IGNITION SYSTEM - ELECTRIC START
E50BELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E50BELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E50BELCIC 1981	IGNITION SYSTEM
E50BELCOB 1985	IGNITION SYSTEM
E50BELCRM 1984	IGNITION SYSTEM
E50BELCUD 1987	IGNITION SYSTEM

E50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E50BELESR 1990	IGNITION SYSTEM - ROPE START
E50RNLIA 1990	IGNITION SYSTEM
E50TELCCS 1988	IGNITION SYSTEM
E50TELCDE 1986	IGNITION SYSTEM
E50TELCEC 1989	IGNITION SYSTEM - ROPE START
E50TELCEC 1989	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E50TELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E50TELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E50TELCOB 1985	IGNITION SYSTEM
E50TELCRM 1984	IGNITION SYSTEM
E50TELCUD 1987	IGNITION SYSTEM
E50TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E50TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E50TELESR 1990	IGNITION SYSTEM - ROPE START
E50TLCCS 1988	IGNITION SYSTEM
E50TLCDE 1986	IGNITION SYSTEM
E50TLCEC 1989	IGNITION SYSTEM - ROPE START
E50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START
E50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
E50TLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
E50TLCOB 1985	IGNITION SYSTEM
E50TLCRM 1984	IGNITION SYSTEM
E50TLCUD 1987	IGNITION SYSTEM
E50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
E50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
E50TLESR 1990	IGNITION SYSTEM - ROPE START
E55RCIM 1981	IGNITION SYSTEM
E55RLCSA 1980	IGNITION SYSTEM
E55RSLN 1983	IGNITION SYSTEM
E55RSLN-2 1983	IGNITION SYSTEM
E55RSN 1983	IGNITION SYSTEM
E55RSN-2 1983	IGNITION SYSTEM
E55RSYN 1983	IGNITION SYSTEM

E55RSYN-2 1983	IGNITION SYSTEM
E55RWLCDC 1986	IGNITION SYSTEM
E55RWLCOS 1985	IGNITION SYSTEM
E55RWLCRD 1984	IGNITION SYSTEM
E55RWLCUC 1987	IGNITION SYSTEM
E55RWLE 1989	IGNITION
E55RWLEIA 1991	IGNITION SYSTEM
E55RWLESR 1990	IGNITION
E55TLCIM 1981	IGNITION SYSTEM
E5RCSS 1980	MAGNETO - 7.5
E5RCSS 1980	MAGNETO-4.5
E5RHCNR 1982	MAGNETO - 4.5
E5RHCNR 1982	MAGNETO - 7.5
E5RHCSS 1980	MAGNETO - 7.5
E5RHCSS 1980	MAGNETO-4.5
E5RHCTA 1983	MAGNETO-4.5
E5RHCTA 1983	MAGNETO-7.5
E5RHLCNR 1982	MAGNETO - 4.5
E5RHLCNR 1982	MAGNETO - 7.5
E5RHLCSS 1980	MAGNETO - 7.5
E5RHLCSS 1980	MAGNETO-4.5
E5RHLCTA 1983	MAGNETO-4.5
E5RHLCTA 1983	MAGNETO-7.5
E5RLCSS 1980	MAGNETO - 7.5
E5RLCSS 1980	MAGNETO-4.5
E60ECIA 1981	IGNITION SYSTEM
E60ECIH 1981	IGNITION SYSTEM
E60ECSR 1980	IGNITION SYSTEM
E60ELCIA 1981	IGNITION SYSTEM
E60ELCIH 1981	IGNITION SYSTEM
E60ELCOD 1985	IGNITION SYSTEM
E60ELCRE 1984	IGNITION SYSTEM
E60ELCSR 1980	IGNITION SYSTEM
E60TLCIA 1981	IGNITION SYSTEM
E60TLCIH 1981	IGNITION SYSTEM

E60TLCOD 1985	IGNITION SYSTEM
E60TLCRE 1984	IGNITION SYSTEM
E6RCCS 1988	IGNITION
E6RCDE 1986	MAGNETO
E6RCEC 1989	IGNITION
E6RCOB 1985	MAGNETO
E6RCRM 1984	MAGNETO - 6/8
E6RCUD 1987	IGNITION
E6RESR 1990	IGNITION
E6RLCCS 1988	IGNITION
E6RLCDE 1986	MAGNETO
E6RLCEC 1989	IGNITION
E6RLCOB 1985	MAGNETO
E6RLCRM 1984	MAGNETO - 6/8
E6RLCUD 1987	IGNITION
E6RLESR 1990	IGNITION
E6SLCCS 1988	IGNITION
E6SLCDE 1986	MAGNETO
E6SLCEC 1989	IGNITION
E6SLCOB 1985	MAGNETO
E6SLCRM 1984	MAGNETO - 6/8
E6SLCUD 1987	IGNITION
E6SLESR 1990	IGNITION
E8RCCS 1988	IGNITION
E8RCDE 1986	MAGNETO
E8RCEC 1989	IGNITION
E8RCNR 1982	MAGNETO - 4.5
E8RCNR 1982	MAGNETO - 7.5
E8RCOB 1985	MAGNETO
E8RCRM 1984	MAGNETO - 6/8
E8RCSS 1980	MAGNETO - 7.5
E8RCSS 1980	MAGNETO-4.5
E8RCTA 1983	MAGNETO-4.5
E8RCTA 1983	MAGNETO-7.5
E8RCUD 1987	IGNITION

E8RESR 1990	IGNITION
E8RLCCS 1988	IGNITION
E8RLCDE 1986	MAGNETO
E8RLCEC 1989	IGNITION
E8RLCNR 1982	MAGNETO - 4.5
E8RLCNR 1982	MAGNETO - 7.5
E8RLCOB 1985	MAGNETO
E8RLCRM 1984	MAGNETO - 6/8
E8RLCSS 1980	MAGNETO - 7.5
E8RLCSS 1980	MAGNETO-4.5
E8RLCTA 1983	MAGNETO-4.5
E8RLCTA 1983	MAGNETO-7.5
E8RLCUD 1987	IGNITION
E8RLESR 1990	IGNITION
E8SRLCCS 1988	IGNITION
E8SRLCDE 1986	MAGNETO
E8SRLCEC 1989	IGNITION
E8SRLCNR 1982	MAGNETO - 4.5
E8SRLCNR 1982	MAGNETO - 7.5
E8SRLCOB 1985	MAGNETO
E8SRLCRM 1984	MAGNETO - 6/8
E8SRLCTA 1983	MAGNETO-4.5
E8SRLCTA 1983	MAGNETO-7.5
E8SRLCUD 1987	IGNITION
E8SRLESR 1990	IGNITION
ELECTRICAL	BATTERY CHARGING KIT - 25,30 HP (2-Stroke)
ELECTRICAL 1983	BATTERY CHARGING KIT 4.5,7.5
ELECTRICAL 1983	BATTERY CHARGING KIT 9.9,15,25,35
ELECTRICAL 1983	ELECTRIC START KIT 55
ELECTRICAL 1984	BATTERY CHARGING KIT 4 DELUXE, 4.5, 5, 6 & 8
ELECTRICAL 1984	BATTERY CHARGING KIT 9.9, 15, 25, 30 & 35
ELECTRICAL 1984	ELECTRIC STARTING KIT 40, 55
ELECTRICAL 1985	BATTERY CHARGING KIT 4 DELUXE, 4.5, 5, 6 & 8
ELECTRICAL 1985	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1985	ELECTRIC STARTING KIT 40,45,55

ELECTRICAL 1986	BATTERY CHARGING KIT 4 DELUXE, 4.5, 5, 6 & 8
ELECTRICAL 1986	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1986	ELECTRIC STARTING KIT 40,45,55
ELECTRICAL 1987	BATTERY CHARGING KIT 4 DELUXE, 4.5, 5, 6 & 8
ELECTRICAL 1987	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1987	ELECTRIC STARTING KIT 40,45,55
ELECTRICAL 1988	AC LIGHTING KIT 4.5 - 40 ROPE START COMMERCIAL
ELECTRICAL 1988	AC LIGHTING KIT 35 - 55 ROPE START COMMERCIAL
ELECTRICAL 1988	BATTERY CHARGING KIT 4 DELUXE, 4.5, 5, 6 & 8
ELECTRICAL 1988	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1988	ELECTRIC STARTING KIT 40,45,55
ELECTRICAL 1989	AC LIGHTING KIT - 4 DELUXE THRU 35
ELECTRICAL 1989	AC LIGHTING KIT 40 THRU 45 ROPE START COMMERCIALS
ELECTRICAL 1989	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1989	BATTERY CHARGING KIT - 4 DELUXE, 6 & 8
ELECTRICAL 1989	ELECTRIC STARTING KIT 40
ELECTRICAL 1989	ELECTRIC STARTING KIT 45, 55 COMMERCIALS
ELECTRICAL 1990	AC LIGHTING KIT 4 DELUXE THRU 55 ROPE START COMMERCIALS
ELECTRICAL 1990	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1990	BATTERY CHARGING KIT - 4 DELUXE, 6 & 8
ELECTRICAL 1990	ELECTRIC STARTING KIT 40
ELECTRICAL 1990	ELECTRIC STARTING KIT 45, 55 COMMERCIALS
ELECTRICAL 1991	AC LIGHTING KIT 4 DELUXE THRU 55 ROPE START COMMERCIALS
ELECTRICAL 1991	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1991	BATTERY CHARGING KIT - 4 DELUXE, 6 & 8
ELECTRICAL 1991	ELECTRIC STARTING KIT 40
ELECTRICAL 1991	ELECTRIC STARTING KIT 45, 55 COMMERCIALS
ELECTRICAL 1992	AC LIGHTING KIT - 4 DELUXE THRU 40 ROPE START RECREATIONAL
ELECTRICAL 1992	AC LIGHTING KIT - 6.5, 10 & 25 ROPE START COMMERCIALS
ELECTRICAL 1992	AC LIGHTING KIT 45 & 55 ROPE START COMMERCIALS
ELECTRICAL 1992	BATTERY CHARGING KIT 9.9, 15, 20, 25, 30, 35
ELECTRICAL 1992	BATTERY CHARGING KIT - 6.5 COMMERCIAL
ELECTRICAL 1992	BATTERY CHARGING KIT - 10 & 25 COMMERCIAL
ELECTRICAL 1992	BATTERY CHARGING KIT - 4 DELUXE, 6 & 8

ELECTRICAL 1992	ELECTRIC STARTING KIT 40,45,55
ELECTRICAL 1993	AC LIGHTING KIT - 4 DELUXE & 5 THRU 55
ELECTRICAL 1993	BATTERY CHARGING KIT - 20, 25, 30
ELECTRICAL 1993	BATTERY CHARGING KIT - 4 DELUXE
ELECTRICAL 1993	BATTERY CHARGING KIT - 5, 6, 6.5, 8
ELECTRICAL 1993	ELECTRIC STARTING KIT - 45/55
ELECTRICAL 1994	AC LIGHTING KIT - 4 DELUXE & 5 THRU 55
ELECTRICAL 1994	BATTERY CHARGING KIT - 20, 25, 30
ELECTRICAL 1994	BATTERY CHARGING KIT - 4 DELUXE, 5, 6, & 8
ELECTRICAL 1994	ELECTRIC STARTING KIT - 45/55
ELECTRICAL 1995	AC LIGHTING KIT - 4 DELUXE & 5 THRU 55
ELECTRICAL 1995	BATTERY CHARGING KIT - 20, 25, 30 (2-CYLINDER)
ELECTRICAL 1995	BATTERY CHARGING KIT - 4 DELUXE, 5, 6, & 8
ELECTRICAL 1995	TILLER ELECTRIC STARTING KIT - 45/55
ELECTRICAL 1996	AC LIGHTING KIT - 4 DELUXE & 5 THRU 55
ELECTRICAL 1996	BATTERY CHARGING KIT - 20, 25, 30 (2-CYLINDER)
ELECTRICAL 1996	BATTERY CHARGING KIT - 4 DELUXE, 5, 6, & 8
ELECTRICAL 1996	TILLER ELECTRIC STARTING KIT - 45, 55
ELECTRICAL 1997	AC LIGHTING KIT - 5 THRU 55
ELECTRICAL 1997	BATTERY CHARGING KIT - 20, 25, 30 (2-CYLINDER)
ELECTRICAL 1997	BATTERY CHARGING KIT - 5, 6, 8
ELECTRICAL 1997	TILLER ELECTRIC STARTING KIT - 45, 55
ELECTRICAL 1998	BATTERY CHARGING KIT -- 20, 25, 30 (2-CYLINDER)
ELECTRICAL 1998	TILLER ELECTRIC STARTING KIT -- 45, 55
ELECTRICAL 1999	BATTERY CHARGING KIT -- 20, 25, 30 (2-CYLINDER)
ELECTRICAL 1999	TILLER ELECTRIC STARTING KIT -- 40, 55
ELECTRICAL 2000	BATTERY CHARGING KIT - 20, 25, 30 (2-CYLINDER)
ELECTRICAL 2000	TILLER ELECTRIC STARTING KIT - 40, 55
J10ECCD 1988	IGNITION
J10ECDB 1986	IGNITION
J10ECES 1989	IGNITION
J10ECOM 1985	IGNITION
J10ECSE 1980	MAGNETO
J10ECUE 1987	IGNITION
J10EESC 1990	IGNITION

J10ELCCD 1988	IGNITION
J10ELCDB 1986	IGNITION
J10ELCES 1989	IGNITION
J10ELCOM 1985	IGNITION
J10ELCRA 1984	MAGNETO
J10ELCSE 1980	MAGNETO
J10ELCTC 1983	MAGNETO
J10ELCUE 1987	IGNITION
J10ELESC 1990	IGNITION
J10RCCD 1988	IGNITION
J10RCDB 1986	IGNITION
J10RCES 1989	IGNITION
J10RCOM 1985	IGNITION
J10RCRA 1984	MAGNETO
J10RCSE 1980	MAGNETO
J10RCTC 1983	MAGNETO
J10RCTR 1983	MAGNETO
J10RCUE 1987	IGNITION
J10RELESC 1990	IGNITION
J10RESC 1990	IGNITION
J10RLCCD 1988	IGNITION
J10RLCDB 1986	IGNITION
J10RLCES 1989	IGNITION
J10RLCOM 1985	IGNITION
J10RLCRA 1984	MAGNETO
J10RLCSE 1980	MAGNETO
J10RLCTC 1983	MAGNETO
J10RLCTR 1983	MAGNETO
J10RLCUE 1987	IGNITION
J10RLESC 1990	IGNITION
J10SELCCD 1988	IGNITION
J10SELCDB 1986	IGNITION
J10SELCES 1989	IGNITION
J10SELCOM 1985	IGNITION
J10SELCRA 1984	MAGNETO

J10SELCSE 1980	MAGNETO
J10SELCTC 1983	MAGNETO
J10SELCUE 1987	IGNITION
J10SELESC 1990	IGNITION
J15ECCS 1988	IGNITION
J15ECDE 1986	IGNITION
J15ECEC 1989	IGNITION
J15ECOB 1985	IGNITION
J15ECRM 1984	MAGNETO
J15ECSD 1980	MAGNETO
J15ECTR 1983	MAGNETO
J15ECUD 1987	IGNITION
J15EESR 1990	IGNITION
J15ELCCS 1988	IGNITION
J15ELCDE 1986	IGNITION
J15ELCEC 1989	IGNITION
J15ELCOB 1985	IGNITION
J15ELCRM 1984	MAGNETO
J15ELCSD 1980	MAGNETO
J15ELCTR 1983	MAGNETO
J15ELCUD 1987	IGNITION
J15ELESR 1990	IGNITION
J15RCCS 1988	IGNITION
J15RCDE 1986	IGNITION
J15RCEC 1989	IGNITION
J15RCOB 1985	IGNITION
J15RCRM 1984	MAGNETO
J15RCSD 1980	MAGNETO
J15RCTA 1983	MAGNETO
J15RCTR 1983	MAGNETO
J15RCUD 1987	IGNITION
J15RELESR 1990	IGNITION
J15RESR 1990	IGNITION
J15RLCCS 1988	IGNITION
J15RLCDE 1986	IGNITION

J15RLCEC 1989	IGNITION
J15RLCOB 1985	IGNITION
J15RLCRM 1984	MAGNETO
J15RLCSD 1980	MAGNETO
J15RLCTA 1983	MAGNETO
J15RLCTR 1983	MAGNETO
J15RLCUD 1987	IGNITION
J15RLESR 1990	IGNITION
J20CRCCA 1988	IGNITION
J20CRCDC 1986	IGNITION
J20CRCEM 1989	IGNITION
J20CRCOS 1985	IGNITION
J20CRCUR 1987	IGNITION
J20CRESB 1990	IGNITION
J20CRLCCA 1988	IGNITION
J20CRLCDC 1986	IGNITION
J20CRLCEM 1989	IGNITION
J20CRLCOS 1985	IGNITION
J20CRLCUR 1987	IGNITION
J20CRLESB 1990	IGNITION
J20ECCA 1988	IGNITION
J20ECDC 1986	IGNITION
J20ECEM 1989	IGNITION
J20ECOS 1985	IGNITION
J20ECUR 1987	IGNITION
J20EESB 1990	IGNITION
J20ELCCA 1988	IGNITION
J20ELCDC 1986	IGNITION
J20ELCEM 1989	IGNITION
J20ELCOS 1985	IGNITION
J20ELCUR 1987	IGNITION
J20ELESB 1990	IGNITION
J20TECDC 1986	IGNITION
J25ECCM 1988	IGNITION
J25ECDR 1986	IGNITION

J25ECEB 1989	IGNITION
J25ECOC 1985	IGNITION
J25ECRS 1984	IGNITION
J25ECTD 1983	MAGNETO
J25ECUA 1987	IGNITION
J25EESE 1990	IGNITION
J25ELCCM 1988	IGNITION
J25ELCDR 1986	IGNITION
J25ELCEB 1989	IGNITION
J25ELCOC 1985	IGNITION
J25ELCRS 1984	IGNITION
J25ELCTD 1983	MAGNETO
J25ELCUA 1987	IGNITION
J25ELESE 1990	IGNITION
J25RCCA 1988	IGNITION
J25RCDC 1986	IGNITION
J25RCEM 1989	IGNITION
J25RCOS 1985	IGNITION
J25RCRD 1984	IGNITION
J25RCSA 1980	MAGNETO
J25RCTE 1983	MAGNETO
J25RCUR 1987	IGNITION
J25RESB 1990	IGNITION
J25RLCCA 1988	IGNITION
J25RLCDC 1986	IGNITION
J25RLCEM 1989	IGNITION
J25RLCOS 1985	IGNITION
J25RLCRD 1984	IGNITION
J25RLCSA 1980	MAGNETO
J25RLCTE 1983	MAGNETO
J25RLCUR 1987	IGNITION
J25RLESB 1990	IGNITION
J25RSA 1981	MAGNETO
J25RSLA 1981	MAGNETO
J25RSLS 1983	MAGNETO

J25RSS 1983	MAGNETO
J25RWCDC 1986	MAGNETO
J25RWCIM 1981	MAGNETO
J25RWCOS 1985	MAGNETO
J25RWCRD 1984	MAGNETO
J25RWCTE 1983	MAGNETO
J25RWCUR 1987	MAGNETO
J25RWESA 1990	IGNITION
J25RWK 1989	IGNITION
J25RWLCDC 1986	MAGNETO
J25RWLCIM 1981	MAGNETO
J25RWLCOS 1985	MAGNETO
J25RWLCRD 1984	MAGNETO
J25RWLCTE 1983	MAGNETO
J25RWLCUR 1987	MAGNETO
J25RWLESA 1990	IGNITION
J25RWLK 1989	IGNITION
J25TECCA 1988	IGNITION
J25TECDC 1986	IGNITION
J25TECEM 1989	IGNITION
J25TECOS 1985	IGNITION
J25TECRD 1984	IGNITION
J25TECSA 1980	MAGNETO
J25TECTE 1983	MAGNETO
J25TECUR 1987	IGNITION
J25TEESB 1990	IGNITION
J25TELCCA 1988	IGNITION
J25TELCDC 1986	IGNITION
J25TELCEM 1989	IGNITION
J25TELCOS 1985	IGNITION
J25TELCRD 1984	IGNITION
J25TELCSA 1980	MAGNETO
J25TELCTE 1983	MAGNETO
J25TELCUR 1987	IGNITION
J25TELESB 1990	IGNITION

J28ELCDS 1986	MAGNETO
J28ESLCCR 1988	IGNITION
J28ESLCEA 1989	IGNITION
J28ESLCUC 1987	MAGNETO
J28ESLESM 1990	IGNITION
J30ECCE 1988	IGNITION
J30ECDM 1986	IGNITION
J30ECED 1989	IGNITION
J30ECOA 1985	IGNITION
J30ECRR 1984	IGNITION
J30ECUB 1987	IGNITION
J30EESS 1990	IGNITION
J30ELCCE 1988	IGNITION
J30ELCDM 1986	IGNITION
J30ELCED 1989	IGNITION
J30ELCOA 1985	IGNITION
J30ELCRR 1984	IGNITION
J30ELCUB 1987	IGNITION
J30ELESS 1990	IGNITION
J30RCCE 1988	IGNITION
J30RCDM 1986	IGNITION
J30RCED 1989	IGNITION
J30RCOA 1985	IGNITION
J30RCUB 1987	IGNITION
J30RESS 1990	IGNITION
J30RLCCE 1988	IGNITION
J30RLCDM 1986	IGNITION
J30RLCED 1989	IGNITION
J30RLCOA 1985	IGNITION
J30RLCUB 1987	IGNITION
J30RLESS 1990	IGNITION
J30TECCE 1988	IGNITION
J30TECDM 1986	IGNITION
J30TECED 1989	IGNITION
J30TECOA 1985	IGNITION

J30TECUB 1987	IGNITION
J30TEESS 1990	IGNITION
J30TELCCE 1988	IGNITION
J30TELCDM 1986	IGNITION
J30TELCED 1989	IGNITION
J30TELCOA 1985	IGNITION
J30TELCUB 1987	IGNITION
J30TELESS 1990	IGNITION
J35AELCDE 1986	IGNITION SYSTEM
J35AELCUD 1987	IGNITION SYSTEM
J35ARLCDE 1986	IGNITION SYSTEM
J35ARLCUD 1987	IGNITION SYSTEM
J35ECND 1982	MAGNETO
J35ECRR 1984	IGNITION
J35ECSM 1980	MAGNETO
J35ECTS 1983	MAGNETO
J35ELCND 1982	MAGNETO
J35ELCRR 1984	IGNITION
J35ELCSM 1980	MAGNETO
J35ELCTS 1983	MAGNETO
J35RCCE 1988	IGNITION
J35RCDM 1986	IGNITION
J35RCED 1989	IGNITION
J35RCND 1982	MAGNETO
J35RCRR 1984	IGNITION
J35RCSM 1980	MAGNETO
J35RCTS 1983	MAGNETO
J35RCUB 1987	IGNITION
J35RESS 1990	IGNITION
J35RLCCE 1988	IGNITION
J35RLCDM 1986	IGNITION
J35RLCED 1989	IGNITION
J35RLCND 1982	MAGNETO
J35RLCRR 1984	IGNITION
J35RLCSM 1980	MAGNETO

J35RLCTS 1983	MAGNETO
J35RLCUB 1987	IGNITION
J35RLESS 1990	IGNITION
J35TELCNB 1982	MAGNETO
J35TELCRR 1984	IGNITION
J35TELCTS 1983	MAGNETO
J40AELCCS 1988	IGNITION SYSTEM
J40ARLCCS 1988	IGNITION SYSTEM
J40ATLCCS 1988	IGNITION SYSTEM
J40ECCS 1988	IGNITION SYSTEM
J40ECDE 1986	IGNITION SYSTEM
J40ECEC 1989	IGNITION SYSTEM - ROPE START
J40ECEC 1989	IGNITION SYSTEM - ELECTRIC START
J40ECEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40ECEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40ECOB 1985	IGNITION SYSTEM
J40ECRM 1984	IGNITION SYSTEM
J40ECUD 1987	IGNITION SYSTEM
J40EESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40EESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40EESR 1990	IGNITION SYSTEM - ROPE START
J40ELCCS 1988	IGNITION SYSTEM
J40ELCDE 1986	IGNITION SYSTEM
J40ELCEC 1989	IGNITION SYSTEM - ROPE START
J40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START
J40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40ELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40ELCOB 1985	IGNITION SYSTEM
J40ELCRM 1984	IGNITION SYSTEM
J40ELCUD 1987	IGNITION SYSTEM
J40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40ELESR 1990	IGNITION SYSTEM - ROPE START
J40RCCS 1988	IGNITION SYSTEM
J40RCDE 1986	IGNITION SYSTEM

J40RCEC 1989	IGNITION SYSTEM - ROPE START
J40RCEC 1989	IGNITION SYSTEM - ELECTRIC START
J40RCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40RCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40RCOB 1985	IGNITION SYSTEM
J40RCRM 1984	IGNITION SYSTEM
J40RCUD 1987	IGNITION SYSTEM
J40RESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40RESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40RESR 1990	IGNITION SYSTEM - ROPE START
J40RLCCS 1988	IGNITION SYSTEM
J40RLCDE 1986	IGNITION SYSTEM
J40RLCEC 1989	IGNITION SYSTEM - ROPE START
J40RLCEC 1989	IGNITION SYSTEM - ELECTRIC START
J40RLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40RLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40RLCOB 1985	IGNITION SYSTEM
J40RLCRM 1984	IGNITION SYSTEM
J40RLCUD 1987	IGNITION SYSTEM
J40RLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40RLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40RLESR 1990	IGNITION SYSTEM - ROPE START
J40RWADB 1986	IGNITION
J40RWCOM 1985	IGNITION
J40RWCRA 1984	IGNITION
J40RWLCDB 1986	IGNITION
J40RWLCOM 1985	IGNITION
J40RWLCRA 1984	IGNITION
J40TECCS 1988	IGNITION SYSTEM
J40TECDE 1986	IGNITION SYSTEM
J40TECEC 1989	IGNITION SYSTEM - ROPE START
J40TECEC 1989	IGNITION SYSTEM - ELECTRIC START
J40TECEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40TECEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40TECOB 1985	IGNITION SYSTEM

J40TECRM 1984	IGNITION SYSTEM
J40TECUD 1987	IGNITION SYSTEM
J40TEESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40TEESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40TEESR 1990	IGNITION SYSTEM - ROPE START
J40TELCCS 1988	IGNITION SYSTEM
J40TELCDE 1986	IGNITION SYSTEM
J40TELCEC 1989	IGNITION SYSTEM - ROPE START
J40TELCEC 1989	IGNITION SYSTEM - ELECTRIC START
J40TELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40TELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40TELCOB 1985	IGNITION SYSTEM
J40TELCRM 1984	IGNITION SYSTEM
J40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40TELESR 1990	IGNITION SYSTEM - ROPE START
J40TLCCS 1988	IGNITION SYSTEM
J40TLCDE 1986	IGNITION SYSTEM
J40TLCEC 1989	IGNITION SYSTEM - ROPE START
J40TLCEC 1989	IGNITION SYSTEM - ELECTRIC START
J40TLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40TLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40TLCUD 1987	IGNITION SYSTEM
J40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40TLESR 1990	IGNITION SYSTEM - ROPE START
J40TTLCCS 1988	IGNITION SYSTEM
J40TTLCEC 1989	IGNITION SYSTEM - ROPE START
J40TTLCEC 1989	IGNITION SYSTEM - ELECTRIC START
J40TTLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J40TTLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J40TTLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J40TTLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J40TTLESR 1990	IGNITION SYSTEM - ROPE START
J45RCCDS 1986	IGNITION SYSTEM

J45RCCUC 1987	IGNITION SYSTEM
J45RCE 1989	IGNITION
J45RCEIA 1991	IGNITION SYSTEM
J45RCESR 1990	IGNITION
J45RCLCDS 1986	IGNITION SYSTEM
J45RCLCUC 1987	IGNITION SYSTEM
J45RCLE 1989	IGNITION
J45RCLEIA 1991	IGNITION SYSTEM
J45RCLESR 1990	IGNITION
J45WMLE 1989	IGNITION
J45WMLEIA 1991	IGNITION SYSTEM
J45WMLESR 1990	IGNITION
J48ESLCCC 1988	IGNITION SYSTEM
J48ESLCER 1989	IGNITION SYSTEM (CONTINUED)
J48ESLCUS 1987	IGNITION SYSTEM
J48ESLESA 1990	IGNITION SYSTEM
J4RDHCCS 1988	MAGNETO
J4RDHCDE 1986	MAGNETO
J4RDHCEC 1989	IGNITION
J4RDHCUD 1987	MAGNETO
J4RDHESR 1990	IGNITION
J4RDHLCCS 1988	MAGNETO
J4RDHLCEC 1989	IGNITION
J4RDHLCUD 1987	MAGNETO
J4RDHLESR 1990	IGNITION
J4RLCSS 1980	MAGNETO
J4WCSS 1980	MAGNETO
J50BECCS 1988	IGNITION SYSTEM
J50BECDE 1986	IGNITION SYSTEM
J50BECEC 1989	IGNITION SYSTEM - ROPE START
J50BECEC 1989	IGNITION SYSTEM - ELECTRIC START
J50BECEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J50BECEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J50BECIC 1981	IGNITION SYSTEM
J50BECOB 1985	IGNITION SYSTEM

J50BECRM 1984	IGNITION SYSTEM
J50BECUD 1987	IGNITION SYSTEM
J50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J50BEESR 1990	IGNITION SYSTEM - ROPE START
J50BELCCS 1988	IGNITION SYSTEM
J50BELCDE 1986	IGNITION SYSTEM
J50BELCEC 1989	IGNITION SYSTEM - ROPE START
J50BELCEC 1989	IGNITION SYSTEM - ELECTRIC START
J50BELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J50BELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J50BELCIC 1981	IGNITION SYSTEM
J50BELCOB 1985	IGNITION SYSTEM
J50BELCRM 1984	IGNITION SYSTEM
J50BELCUD 1987	IGNITION SYSTEM
J50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J50BELESR 1990	IGNITION SYSTEM - ROPE START
J50TELCCS 1988	IGNITION SYSTEM
J50TELCDE 1986	IGNITION SYSTEM
J50TELCEC 1989	IGNITION SYSTEM - ROPE START
J50TELCEC 1989	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J50TELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
J50TELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J50TELCOB 1985	IGNITION SYSTEM
J50TELCRM 1984	IGNITION SYSTEM
J50TELCUD 1987	IGNITION SYSTEM
J50TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J50TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J50TELESR 1990	IGNITION SYSTEM - ROPE START
J50TLCCS 1988	IGNITION SYSTEM
J50TLCDE 1986	IGNITION SYSTEM
J50TLCEC 1989	IGNITION SYSTEM - ROPE START
J50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START
J50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)

J50TLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
J50TLCOB 1985	IGNITION SYSTEM
J50TLCRM 1984	IGNITION SYSTEM
J50TLCUD 1987	IGNITION SYSTEM
J50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
J50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
J50TLESR 1990	IGNITION SYSTEM - ROPE START
J55RCIM 1981	IGNITION SYSTEM
J55RLCIM 1981	IGNITION SYSTEM
J55RLCSA 1980	IGNITION SYSTEM
J55RSLN 1983	IGNITION SYSTEM
J55RSLN-2 1983	IGNITION SYSTEM
J55RSN 1983	IGNITION SYSTEM
J55RSN-2 1983	IGNITION SYSTEM
J55RSYN 1983	IGNITION SYSTEM
J55RSYN-2 1983	IGNITION SYSTEM
J55RWLCDC 1986	IGNITION SYSTEM
J55RWLCOS 1985	IGNITION SYSTEM
J55RWLCRD 1984	IGNITION SYSTEM
J55RWLCUC 1987	IGNITION SYSTEM
J55RWLE 1989	IGNITION
J55RWLEIA 1991	IGNITION SYSTEM
J55RWLESR 1990	IGNITION
J5RCSS 1980	MAGNETO - 7.5
J5RCSS 1980	MAGNETO-4.5
J5RHCNR 1982	MAGNETO - 4.5
J5RHCNR 1982	MAGNETO - 7.5
J5RHCSS 1980	MAGNETO - 7.5
J5RHCSS 1980	MAGNETO-4.5
J5RHCTA 1983	MAGNETO-4.5
J5RHCTA 1983	MAGNETO-7.5
J5RHLCNR 1982	MAGNETO - 4.5
J5RHLCNR 1982	MAGNETO - 7.5
J5RHLCSS 1980	MAGNETO - 7.5
J5RHLCSS 1980	MAGNETO-4.5

J5RHLCTA 1983	MAGNETO-4.5
J5RHLCTA 1983	MAGNETO-7.5
J5RLCSS 1980	MAGNETO - 7.5
J5RLCSS 1980	MAGNETO-4.5
J60ECIA 1981	IGNITION SYSTEM
J60ECIH 1981	IGNITION SYSTEM
J60ECSR 1980	IGNITION SYSTEM
J60ELCIA 1981	IGNITION SYSTEM
J60ELCIH 1981	IGNITION SYSTEM
J60ELCOD 1985	IGNITION SYSTEM
J60ELCRE 1984	IGNITION SYSTEM
J60ELCSR 1980	IGNITION SYSTEM
J60TLCIA 1981	IGNITION SYSTEM
J60TLCIH 1981	IGNITION SYSTEM
J60TLCOD 1985	IGNITION SYSTEM
J60TLCRE 1984	IGNITION SYSTEM
J6RCCS 1988	IGNITION
J6RCDE 1986	MAGNETO
J6RCEC 1989	IGNITION
J6RCOB 1985	MAGNETO
J6RCRM 1984	MAGNETO - 6/8
J6RCUD 1987	IGNITION
J6RESR 1990	IGNITION
J6RLCCS 1988	IGNITION
J6RLCDE 1986	MAGNETO
J6RLCEC 1989	IGNITION
J6RLCOB 1985	MAGNETO
J6RLCRM 1984	MAGNETO - 6/8
J6RLCUD 1987	IGNITION
J6RLESR 1990	IGNITION
J6SLCCS 1988	IGNITION
J6SLCDE 1986	MAGNETO
J6SLCEC 1989	IGNITION
J6SLCOB 1985	MAGNETO
J6SLCRM 1984	MAGNETO - 6/8

J6SLCUD 1987	IGNITION
J6SLESR 1990	IGNITION
J8RCCS 1988	IGNITION
J8RCDE 1986	MAGNETO
J8RCEC 1989	IGNITION
J8RCNR 1982	MAGNETO - 4.5
J8RCNR 1982	MAGNETO - 7.5
J8RCOB 1985	MAGNETO
J8RCRM 1984	MAGNETO - 6/8
J8RCSS 1980	MAGNETO - 7.5
J8RCSS 1980	MAGNETO-4.5
J8RCTA 1983	MAGNETO-4.5
J8RCTA 1983	MAGNETO-7.5
J8RCUD 1987	IGNITION
J8RESR 1990	IGNITION
J8RLCCS 1988	IGNITION
J8RLCDE 1986	MAGNETO
J8RLCEC 1989	IGNITION
J8RLCNR 1982	MAGNETO - 4.5
J8RLCNR 1982	MAGNETO - 7.5
J8RLCOB 1985	MAGNETO
J8RLCRM 1984	MAGNETO - 6/8
J8RLCSS 1980	MAGNETO - 7.5
J8RLCSS 1980	MAGNETO-4.5
J8RLCTA 1983	MAGNETO-4.5
J8RLCTA 1983	MAGNETO-7.5
J8RLCUD 1987	IGNITION
J8RLESR 1990	IGNITION
J8SRLCCS 1988	IGNITION
J8SRLCDE 1986	MAGNETO
J8SRLCEC 1989	IGNITION
J8SRLCNR 1982	MAGNETO - 4.5
J8SRLCNR 1982	MAGNETO - 7.5
J8SRLCOB 1985	MAGNETO
J8SRLCRM 1984	MAGNETO - 6/8

J8SRLCTA 1983	MAGNETO-4.5
J8SRLCTA 1983	MAGNETO-7.5
J8SRLCUD 1987	IGNITION
J8SRLESR 1990	IGNITION
M55RWLR 1988	IGNITION SYSTEM
R45RCLR 1988	IGNITION SYSTEM
R45RCR 1988	IGNITION SYSTEM
R55RWLR 1988	IGNITION SYSTEM
S45RCLR 1988	IGNITION SYSTEM
S45RCR 1988	IGNITION SYSTEM
TE10ELCES 1989	IGNITION
TE10ELESC 1990	IGNITION
TE10RELESC 1990	IGNITION
TE10RLCES 1989	IGNITION
TE10RELESC 1990	IGNITION
TE15RLCEC 1989	IGNITION
TE20CRCEM 1989	IGNITION
TE20CRESB 1990	IGNITION
TE20CRLCEM 1989	IGNITION
TE20CRLESB 1990	IGNITION
TE20CRLESF 1989	IGNITION
TE25ELCEB 1989	IGNITION
TE25ELESE 1990	IGNITION
TE25ELESF 1989	IGNITION
TE30ELCED 1989	IGNITION
TE30ELESF 1989	IGNITION
TE30ELESS 1990	IGNITION
TE40ELCEC 1989	IGNITION SYSTEM - ROPE START
TE40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START
TE40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
TE40ELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
TE40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TE40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TE40ELESR 1990	IGNITION SYSTEM - ROPE START
TE40TELESF 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS

TE40TELESF 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TE40TELESF 1990	IGNITION SYSTEM - ROPE START
TE40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TE40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TE40TELESR 1990	IGNITION SYSTEM - ROPE START
TE50TLCEC 1989	IGNITION SYSTEM - ROPE START
TE50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START
TE50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
TE50TLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
TE50TLESF 1989	IGNITION SYSTEM - ROPE START
TE50TLESF 1989	IGNITION SYSTEM - ELECTRIC START
TE50TLESF 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
TE50TLESF 1989	IGNITION SYSTEM - ROPE START (Continued)
TE50TLESF 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TE50TLESF 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TE50TLESF 1990	IGNITION SYSTEM - ROPE START
TE50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TE50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TE50TLESR 1990	IGNITION SYSTEM - ROPE START
TE8RCEC 1989	IGNITION
TE8RLCEC 1989	IGNITION
TE8RLESCF 1990	IGNITION
TJ10ELCES 1989	IGNITION
TJ10ELESC 1990	IGNITION
TJ10RELESC 1990	IGNITION
TJ10RLCES 1989	IGNITION
TJ10RLESC 1990	IGNITION
TJ15RLCEC 1989	IGNITION
TJ20CRCEM 1989	IGNITION
TJ20CRESB 1990	IGNITION
TJ20CRLCEM 1989	IGNITION
TJ20CRLESB 1990	IGNITION
TJ20CRLESF 1989	IGNITION
TJ25ELCEB 1989	IGNITION
TJ25ELESE 1990	IGNITION

TJ25ELESF 1989	IGNITION
TJ30ELCED 1989	IGNITION
TJ30ELESF 1989	IGNITION
TJ30ELESS 1990	IGNITION
TJ40ELCEC 1989	IGNITION SYSTEM - ROPE START
TJ40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START
TJ40ELCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
TJ40ELCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
TJ40ELESF 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TJ40ELESF 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TJ40ELESF 1990	IGNITION SYSTEM - ROPE START
TJ40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TJ40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TJ40ELESR 1990	IGNITION SYSTEM - ROPE START
TJ40TELESF 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TJ40TELESF 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TJ40TELESF 1990	IGNITION SYSTEM - ROPE START
TJ40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TJ40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TJ40TELESR 1990	IGNITION SYSTEM - ROPE START
TJ50TLCEC 1989	IGNITION SYSTEM - ROPE START
TJ50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START
TJ50TLCEC 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
TJ50TLCEC 1989	IGNITION SYSTEM - ROPE START (Continued)
TJ50TLESF 1989	IGNITION SYSTEM - ROPE START
TJ50TLESF 1989	IGNITION SYSTEM - ELECTRIC START
TJ50TLESF 1989	IGNITION SYSTEM - ELECTRIC START (Continued)
TJ50TLESF 1989	IGNITION SYSTEM - ROPE START (Continued)
TJ50TLESF 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TJ50TLESF 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TJ50TLESF 1990	IGNITION SYSTEM - ROPE START
TJ50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
TJ50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
TJ50TLESR 1990	IGNITION SYSTEM - ROPE START
TJ8RCEC 1989	IGNITION

TJ8RLCEC 1989	IGNITION
U25RWA 1988	MAGNETO
U25RWLA 1988	MAGNETO
VE14RCCS 1988	MAGNETO
VE14RCEC 1989	IGNITION
VE25ELESE 1990	IGNITION
VE25RESB 1990	IGNITION
VE28ESLCCR 1988	IGNITION
VE28ESLCEA 1989	IGNITION
VE28ESLESM 1990	IGNITION
VE30EESS 1990	IGNITION
VE30ELESS 1990	IGNITION
VE40EESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VE40EESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VE40EESR 1990	IGNITION SYSTEM - ROPE START
VE40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VE40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VE40ELESR 1990	IGNITION SYSTEM - ROPE START
VE40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VE40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VE40TELESR 1990	IGNITION SYSTEM - ROPE START
VE40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VE40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VE40TLESR 1990	IGNITION SYSTEM - ROPE START
VE48ESLCCC 1988	IGNITION SYSTEM
VE48ESLCER 1989	IGNITION SYSTEM (CONTINUED)
VE48ESLESA 1990	IGNITION SYSTEM
VE50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VE50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VE50BEESR 1990	IGNITION SYSTEM - ROPE START
VE50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VE50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VE50BELESR 1990	IGNITION SYSTEM - ROPE START
VE50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VE50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS

VE50TLESR 1990	IGNITION SYSTEM - ROPE START
VJ14RCCS 1988	MAGNETO
VJ14RCEC 1989	IGNITION
VJ25ELESE 1990	IGNITION
VJ25RESB 1990	IGNITION
VJ28ESLCCR 1988	IGNITION
VJ28ESLCEA 1989	IGNITION
VJ28ESLESM 1990	IGNITION
VJ30EESS 1990	IGNITION
VJ30ELESS 1990	IGNITION
VJ40EESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VJ40EESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VJ40EESR 1990	IGNITION SYSTEM - ROPE START
VJ40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VJ40ELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VJ40ELESR 1990	IGNITION SYSTEM - ROPE START
VJ40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VJ40TELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VJ40TELESR 1990	IGNITION SYSTEM - ROPE START
VJ40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VJ40TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VJ40TLESR 1990	IGNITION SYSTEM - ROPE START
VJ48ESLCCC 1988	IGNITION SYSTEM
VJ48ESLCER 1989	IGNITION SYSTEM (CONTINUED)
VJ48ESLESA 1990	IGNITION SYSTEM
VJ50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VJ50BEESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VJ50BEESR 1990	IGNITION SYSTEM - ROPE START
VJ50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VJ50BELESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VJ50BELESR 1990	IGNITION SYSTEM - ROPE START
VJ50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TL MODELS
VJ50TLESR 1990	IGNITION SYSTEM - ELECTRIC START TE-TTL MODELS
VJ50TLESR 1990	IGNITION SYSTEM - ROPE START