

Where Used: Part Number 0312633

Model Name	Diagram
10424G 1974	FUEL PUMP
10424S 1974	FUEL PUMP
10425G 1974	FUEL PUMP
10425S 1974	FUEL PUMP
10454G 1974	FUEL PUMP
10454S 1974	FUEL PUMP
10455G 1974	FUEL PUMP
10455S 1974	FUEL PUMP
10524C 1975	FUEL PUMP
10525C 1975	FUEL PUMP
10554C 1975	FUEL PUMP
10555C 1975	FUEL PUMP
10624G 1976	FUEL PUMP
10624H 1976	FUEL PUMP
10624R 1976	FUEL PUMP
10625G 1976	FUEL PUMP
10625H 1976	FUEL PUMP
10625R 1976	FUEL PUMP
10654G 1976	FUEL PUMP
10654H 1976	FUEL PUMP
10654R 1976	FUEL PUMP
10655G 1976	FUEL PUMP
10655H 1976	FUEL PUMP
10655R 1976	FUEL PUMP
10724A 1977	FUEL PUMP
10725A 1977	FUEL PUMP
10754A 1977	FUEL PUMP
10755A 1977	FUEL PUMP
10824M 1978	FUEL PUMP
10825M 1978	FUEL PUMP
10835M 1978	FUEL PUMP
10854M 1978	FUEL PUMP
10855M 1978	FUEL PUMP

10924B 1979	FUEL PUMP
10925B 1979	FUEL PUMP
10935B 1979	FUEL PUMP
10955B 1979	FUEL PUMP
10E74G 1974	FUEL PUMP
10E74S 1974	FUEL PUMP
10E75C 1975	FUEL PUMP
10E76G 1976	FUEL PUMP
10E76H 1976	FUEL PUMP
10E76R 1976	FUEL PUMP
10E77A 1977	FUEL PUMP
10E78M 1978	FUEL PUMP
10EL74G 1974	FUEL PUMP
10EL75C 1975	FUEL PUMP
10EL76G 1976	FUEL PUMP
10EL76H 1976	FUEL PUMP
10EL76R 1976	FUEL PUMP
10EL77A 1977	FUEL PUMP
10EL78M 1978	FUEL PUMP
10EL79B 1979	FUEL PUMP
10ELT4S 1974	FUEL PUMP
10R74G 1974	FUEL PUMP
10R74S 1974	FUEL PUMP
10R75C 1975	FUEL PUMP
10R76G 1976	FUEL PUMP
10R76H 1976	FUEL PUMP
10R76R 1976	FUEL PUMP
10R77A 1977	FUEL PUMP
10R78M 1978	FUEL PUMP
10R79B 1979	FUEL PUMP
10RL74G 1974	FUEL PUMP
10RL74S 1974	FUEL PUMP
10RL75C 1975	FUEL PUMP
10RL76G 1976	FUEL PUMP
10RL76H 1976	FUEL PUMP

10RL76R 1976	FUEL PUMP
10RL77A 1977	FUEL PUMP
10RL78M 1978	FUEL PUMP
10RL79B 1979	FUEL PUMP
10SEL78M 1978	FUEL PUMP
10SEL79B 1979	FUEL PUMP
15404G 1974	FUEL PUMP
15404S 1974	FUEL PUMP
15405G 1974	FUEL PUMP
15405S 1974	FUEL PUMP
15454G 1974	FUEL PUMP
15454S 1974	FUEL PUMP
15455G 1974	FUEL PUMP
15455S 1974	FUEL PUMP
15504C 1975	FUEL PUMP
15505C 1975	FUEL PUMP
15554C 1975	FUEL PUMP
15555C 1975	FUEL PUMP
15604A 1976	FUEL PUMP
15604R 1976	FUEL PUMP
15605A 1976	FUEL PUMP
15605R 1976	FUEL PUMP
15654A 1976	FUEL PUMP
15654R 1976	FUEL PUMP
15655A 1976	FUEL PUMP
15655R 1976	FUEL PUMP
15704M 1977	FUEL PUMP
15705M 1977	FUEL PUMP
15754M 1977	FUEL PUMP
15804B 1978	FUEL PUMP
15805B 1978	FUEL PUMP
15854B 1978	FUEL PUMP
15855B 1978	FUEL PUMP
15904E 1979	FUEL PUMP
15905E 1979	FUEL PUMP

15954E 1979	FUEL PUMP
15955E 1979	FUEL PUMP
15E74G 1974	FUEL PUMP
15E74S 1974	FUEL PUMP
15E75C 1975	FUEL PUMP
15E76A 1976	FUEL PUMP
15E76R 1976	FUEL PUMP
15E77M 1977	FUEL PUMP
15E78B 1978	FUEL PUMP
15E79E 1979	FUEL PUMP
15EL74G 1974	FUEL PUMP
15EL74S 1974	FUEL PUMP
15EL75C 1975	FUEL PUMP
15EL76A 1976	FUEL PUMP
15EL76R 1976	FUEL PUMP
15EL77M 1977	FUEL PUMP
15EL78B 1978	FUEL PUMP
15EL79E 1979	FUEL PUMP
15R74G 1974	FUEL PUMP
15R74S 1974	FUEL PUMP
15R75C 1975	FUEL PUMP
15R76A 1976	FUEL PUMP
15R76R 1976	FUEL PUMP
15R77M 1977	FUEL PUMP
15R78B 1978	FUEL PUMP
15R79E 1979	FUEL PUMP
15RL74G 1974	FUEL PUMP
15RL74S 1974	FUEL PUMP
15RL75C 1975	FUEL PUMP
15RL76A 1976	FUEL PUMP
15RL76R 1976	FUEL PUMP
15RL77M 1977	FUEL PUMP
15RL78B 1978	FUEL PUMP
15RL79E 1979	FUEL PUMP
18102S 1971	FUEL PUMP

18103S 1971	FUEL PUMP
18202R 1972	FUEL PUMP
18203R 1972	FUEL PUMP
18304A 1973	FUEL PUMP
18305A 1973	FUEL PUMP
18802A 1968	POWERHEAD GROUP
18802E 1968	POWERHEAD GROUP
18802M 1968	POWERHEAD GROUP
18803A 1968	POWERHEAD GROUP
18803E 1968	POWERHEAD GROUP
18803M 1968	POWERHEAD GROUP
18902B 1969	POWERHEAD GROUP
18902D 1969	POWERHEAD GROUP
18903B 1969	POWERHEAD GROUP
18903D 1969	POWERHEAD GROUP
20R69B 1969	POWERHEAD GROUP
20R69D 1969	POWERHEAD GROUP
20R70C 1970	POWERHEAD GROUP
20R70E 1970	POWERHEAD GROUP
20R71S 1971	FUEL PUMP
20R72R 1972	FUEL PUMP
20R73A 1973	FUEL PUMP
20RL69B 1969	POWERHEAD GROUP
20RL69D 1969	POWERHEAD GROUP
20RL70C 1970	POWERHEAD GROUP
20RL70E 1970	POWERHEAD GROUP
20RL71S 1971	FUEL PUMP
20RL72R 1972	FUEL PUMP
20RL73A 1973	FUEL PUMP
25002C 1970	POWERHEAD GROUP
25002E 1970	POWERHEAD GROUP
25003C 1970	POWERHEAD GROUP
25003E 1970	POWERHEAD GROUP
25102S 1971	FUEL PUMP
25103S 1971	FUEL PUMP

25202R 1972	FUEL PUMP
25203R 1972	FUEL PUMP
25252R 1972	FUEL PUMP
25253R 1972	FUEL PUMP
25302A 1973	FUEL PUMP
25303A 1973	FUEL PUMP
25352A 1973	FUEL PUMP
25353A 1973	FUEL PUMP
25402M 1974	FUEL PUMP
25403M 1974	FUEL PUMP
25452M 1974	FUEL PUMP
25453M 1974	FUEL PUMP
25502B 1975	FUEL PUMP
25503B 1975	FUEL PUMP
25552B 1975	FUEL PUMP
25553B 1975	FUEL PUMP
25602E 1976	FUEL PUMP
25603E 1976	FUEL PUMP
25652E 1976	FUEL PUMP
25653E 1976	FUEL PUMP
25902B 1969	POWERHEAD GROUP
25902D 1969	POWERHEAD GROUP
25903B 1969	POWERHEAD GROUP
25903D 1969	POWERHEAD GROUP
25E72R 1972	FUEL PUMP
25E73A 1973	FUEL PUMP
25E74M 1974	FUEL PUMP
25E75B 1975	FUEL PUMP
25E76E 1976	FUEL PUMP
25EL72R 1972	FUEL PUMP
25EL73A 1973	FUEL PUMP
25EL74M 1974	FUEL PUMP
25EL75B 1975	FUEL PUMP
25EL76E 1976	FUEL PUMP
25R69B 1969	POWERHEAD GROUP

25R69D 1969	POWERHEAD GROUP
25R70C 1970	POWERHEAD GROUP
25R70E 1970	POWERHEAD GROUP
25R71S 1971	FUEL PUMP
25R72R 1972	FUEL PUMP
25R73A 1973	FUEL PUMP
25R74M 1974	FUEL PUMP
25R75B 1975	FUEL PUMP
25R76E 1976	FUEL PUMP
25RL69B 1969	POWERHEAD GROUP
25RL69D 1969	POWERHEAD GROUP
25RL70C 1970	POWERHEAD GROUP
25RL70E 1970	POWERHEAD GROUP
25RL71S 1971	FUEL PUMP
25RL72R 1972	FUEL PUMP
25RL73A 1973	FUEL PUMP
25RL74M 1974	FUEL PUMP
25RL75B 1975	FUEL PUMP
25RL76E 1976	FUEL PUMP
3802A 1968	POWERHEAD GROUP
3802M 1968	POWERHEAD GROUP
3803A 1968	POWERHEAD GROUP
3803M 1968	POWERHEAD GROUP
3806A 1968	POWERHEAD GROUP
3806M 1968	POWERHEAD GROUP
3807A 1968	POWERHEAD GROUP
3807M 1968	POWERHEAD GROUP
3832A 1968	POWERHEAD GROUP
3832M 1968	POWERHEAD GROUP
3833A 1968	POWERHEAD GROUP
3833M 1968	POWERHEAD GROUP
3836A 1968	POWERHEAD GROUP
3836M 1968	POWERHEAD GROUP
3837A 1968	POWERHEAD GROUP
3837M 1968	POWERHEAD GROUP

4006E 1970	POWERHEAD GROUP
4007E 1970	POWERHEAD GROUP
4036E 1970	POWERHEAD GROUP
4037E 1970	POWERHEAD GROUP
4106D 1971	FUEL PUMP
4107D 1971	FUEL PUMP
4136D 1971	FUEL PUMP
4137D 1971	FUEL PUMP
4206S 1972	FUEL PUMP
4236S 1972	FUEL PUMP
4306C 1973	FUEL PUMP
4336C 1973	FUEL PUMP
4406R 1974	FUEL PUMP
4436R 1974	FUEL PUMP
4506A 1975	FUEL PUMP
4536A 1975	FUEL PUMP
4606M 1976	FUEL PUMP
4636M 1976	FUEL PUMP
4706B 1977	FUEL PUMP
4736B 1977	FUEL PUMP
4806E 1978	FUEL PUMP
4836E 1978	FUEL PUMP
4837E 1978	FUEL PUMP
4902B 1969	POWERHEAD GROUP
4906B 1969	POWERHEAD GROUP
4936B 1969	POWERHEAD GROUP
4R69B 1969	POWERHEAD GROUP
4R70E 1970	POWERHEAD GROUP
4R71D 1971	FUEL PUMP
4R72S 1972	FUEL PUMP
4R73C 1973	FUEL PUMP
4R74R 1974	FUEL PUMP
4R75A 1975	FUEL PUMP
4R76M 1976	FUEL PUMP
4R77B 1977	FUEL PUMP

4R78E 1978	FUEL PUMP
4RL70E 1970	POWERHEAD GROUP
4RL71D 1971	FUEL PUMP
4RL78E 1978	FUEL PUMP
4W69B 1969	POWERHEAD GROUP
4W70E 1970	POWERHEAD GROUP
4W71D 1971	FUEL PUMP
4W72S 1972	FUEL PUMP
4W73C 1973	FUEL PUMP
4W74R 1974	FUEL PUMP
4W75A 1975	FUEL PUMP
4W76M 1976	FUEL PUMP
4W77B 1977	FUEL PUMP
4W78E 1978	FUEL PUMP
4WF69B 1969	POWERHEAD GROUP
4WL70E 1970	POWERHEAD GROUP
4WL71D 1971	FUEL PUMP
5802B 1968	POWERHEAD GROUP
5802E 1968	POWERHEAD GROUP
5802M 1968	POWERHEAD GROUP
5803B 1968	POWERHEAD GROUP
5803E 1968	POWERHEAD GROUP
5803M 1968	POWERHEAD GROUP
6002B 1970	POWERHEAD GROUP
6003B 1970	POWERHEAD GROUP
6102E 1971	FUEL PUMP
6102G 1971	FUEL PUMP
6103E 1971	FUEL PUMP
6103G 1971	FUEL PUMP
6202D 1972	FUEL PUMP
6203D 1972	FUEL PUMP
6302S 1973	FUEL PUMP
6303S 1973	FUEL PUMP
6402C 1974	FUEL PUMP
6403C 1974	FUEL PUMP

6504R 1975	FUEL PUMP
6505R 1975	FUEL PUMP
6604A 1976	FUEL PUMP
6605A 1976	FUEL PUMP
6704M 1977	FUEL PUMP
6705M 1977	FUEL PUMP
6802A 1968	POWERHEAD GROUP
6802C 1968	POWERHEAD GROUP
6802R 1968	POWERHEAD GROUP
6803A 1968	POWERHEAD GROUP
6803C 1968	POWERHEAD GROUP
6803R 1968	POWERHEAD GROUP
6804B 1978	FUEL PUMP
6805B 1978	FUEL PUMP
6902M 1969	POWERHEAD GROUP
6903M 1969	POWERHEAD GROUP
6904E 1979	FUEL PUMP
6905E 1979	FUEL PUMP
6R69M 1969	POWERHEAD GROUP
6R70B 1970	POWERHEAD GROUP
6R71E 1971	FUEL PUMP
6R71G 1971	FUEL PUMP
6R72D 1972	FUEL PUMP
6R73S 1973	FUEL PUMP
6R74C 1974	FUEL PUMP
6R75R 1975	FUEL PUMP
6R76A 1976	FUEL PUMP
6R77M 1977	FUEL PUMP
6R78B 1978	FUEL PUMP
6R79E 1979	FUEL PUMP
6RL69M 1969	POWERHEAD GROUP
6RL70B 1970	POWERHEAD GROUP
6RL71E 1971	FUEL PUMP
6RL71G 1971	FUEL PUMP
6RL72 1972	FUEL PUMP

6RL73S 1973	FUEL PUMP
6RL74C 1974	FUEL PUMP
6RL75R 1975	FUEL PUMP
6RL76A 1976	FUEL PUMP
6RL77M 1977	FUEL PUMP
6RL78B 1978	FUEL PUMP
6RL79E 1979	FUEL PUMP
9022A 1970	CARBURETOR GROUP
9022C 1970	CARBURETOR GROUP
9023A 1970	CARBURETOR GROUP
9023C 1970	CARBURETOR GROUP
9122R 1971	FUEL PUMP
9123R 1971	FUEL PUMP
9222M 1972	FUEL PUMP
9223M 1972	FUEL PUMP
9322B 1973	FUEL PUMP
9323B 1973	FUEL PUMP
9822D 1968	CARBURETOR GROUP
9822E 1968	CARBURETOR GROUP
9823D 1968	CARBURETOR GROUP
9823E 1968	CARBURETOR GROUP
9922S 1969	CARBURETOR GROUP
9923S 1969	CARBURETOR GROUP
9R69S 1969	CARBURETOR GROUP
9R70A 1970	CARBURETOR GROUP
9R70C 1970	CARBURETOR GROUP
9R71R 1971	FUEL PUMP
9R72M 1972	FUEL PUMP
9R73B 1973	FUEL PUMP
9RL69S 1969	CARBURETOR GROUP
9RL70A 1970	CARBURETOR GROUP
9RL70C 1970	CARBURETOR GROUP
9RL71R 1971	FUEL PUMP
9RL72M 1972	FUEL PUMP
9RL73B 1973	FUEL PUMP

BE10FDLECM 1998	FUEL PUMP
BE10FDLEDR 1996	FUEL PUMP
BE10FDLEUA 1997	FUEL PUMP
BE10FPXEDC 1996	FUEL PUMP
BE10FPXEUR 1997	FUEL PUMP
BE10FREldr 1996	FUEL PUMP
BE10FRElua 1997	FUEL PUMP
BE15FAEDR 1996	FUEL PUMP
BE15FAEUA 1997	FUEL PUMP
BE15FDLECM 1998	FUEL PUMP
BE15FDLEDR 1996	FUEL PUMP
BE15FDLEUA 1997	FUEL PUMP
BE15FKEDR 1996	FUEL PUMP
BE15FKEUA 1997	FUEL PUMP
BE15FREDR 1996	FUEL PUMP
BE15FREldr 1996	FUEL PUMP
BE15FRElua 1997	FUEL PUMP
BE15FREUA 1997	FUEL PUMP
BE15FWECA 1998	FUEL PUMP
BE15FWEDC 1996	FUEL PUMP
BE15FWEUR 1997	FUEL PUMP
BE15FWLECA 1998	FUEL PUMP
BE15FWLEDC 1996	FUEL PUMP
BE15FWLEUR 1997	FUEL PUMP
BE3REDS 1996	FUEL PUMP
BE4BREDS 1996	FUEL PUMP
BE4BREUC 1997	FUEL PUMP
BE4BRLEDS 1996	FUEL PUMP
BE4BRLEUC 1997	FUEL PUMP
BE4RDHEDS 1996	FUEL PUMP
BE4RDHLEDS 1996	FUEL PUMP
BE4REDS 1996	FUEL PUMP
BE4RLEDS 1996	FUEL PUMP
BE5DREDS 1996	FUEL PUMP
BE5DREUC 1997	FUEL PUMP

BE5DRLEDS 1996	FUEL PUMP
BE5DRLEUC 1997	FUEL PUMP
BE6DRECR 1998	FUEL PUMP
BE6DREDS 1996	FUEL PUMP
BE6DREUC 1997	FUEL PUMP
BE6DRLECR 1998	FUEL PUMP
BE6DRLEDS 1996	FUEL PUMP
BE6DRLEUC 1997	FUEL PUMP
BE6REDS 1996	FUEL PUMP
BE6RLEDS 1996	FUEL PUMP
BE8RCB 1997	FUEL PUMP
BE8RCH 1996	FUEL PUMP
BE8RCLB 1997	FUEL PUMP
BE8RCLH 1996	FUEL PUMP
BE8RCLT 1998	FUEL PUMP
BE8RCT 1998	FUEL PUMP
BE8REDS 1996	FUEL PUMP
BE8RLEDS 1996	FUEL PUMP
BE8SRLEDS 1996	FUEL PUMP
BJ10FDLECM 1998	FUEL PUMP
BJ10FDLEDR 1996	FUEL PUMP
BJ10FDLEUA 1997	FUEL PUMP
BJ10FPXEDC 1996	FUEL PUMP
BJ10FPXEUR 1997	FUEL PUMP
BJ10FREldr 1996	FUEL PUMP
BJ10FRELUa 1997	FUEL PUMP
BJ15FAEDR 1996	FUEL PUMP
BJ15FAEUA 1997	FUEL PUMP
BJ15FDLECM 1998	FUEL PUMP
BJ15FDLEDR 1996	FUEL PUMP
BJ15FDLEUA 1997	FUEL PUMP
BJ15FKEDR 1996	FUEL PUMP
BJ15FKEUA 1997	FUEL PUMP
BJ15FREDR 1996	FUEL PUMP
BJ15FRELEDR 1996	FUEL PUMP

BJ15FRELUA 1997	FUEL PUMP
BJ15FREUA 1997	FUEL PUMP
BJ15FWECA 1998	FUEL PUMP
BJ15FWEDC 1996	FUEL PUMP
BJ15FWEUR 1997	FUEL PUMP
BJ15FWLECA 1998	FUEL PUMP
BJ15FWLEDC 1996	FUEL PUMP
BJ15FWLEUR 1997	FUEL PUMP
BJ3REDS 1996	FUEL PUMP
BJ4BREDS 1996	FUEL PUMP
BJ4BREUC 1997	FUEL PUMP
BJ4BRLEDS 1996	FUEL PUMP
BJ4BRLEUC 1997	FUEL PUMP
BJ4RDHEDS 1996	FUEL PUMP
BJ4RDHLEDS 1996	FUEL PUMP
BJ4REDS 1996	FUEL PUMP
BJ4RLEDS 1996	FUEL PUMP
BJ5DREDS 1996	FUEL PUMP
BJ5DREUC 1997	FUEL PUMP
BJ5DRLEDS 1996	FUEL PUMP
BJ5DRLEUC 1997	FUEL PUMP
BJ6DRECR 1998	FUEL PUMP
BJ6DREDS 1996	FUEL PUMP
BJ6DREUC 1997	FUEL PUMP
BJ6DRLECR 1998	FUEL PUMP
BJ6DRLEDS 1996	FUEL PUMP
BJ6DRLEUC 1997	FUEL PUMP
BJ6REDS 1996	FUEL PUMP
BJ6RLEDS 1996	FUEL PUMP
BJ8RCB 1997	FUEL PUMP
BJ8RCH 1996	FUEL PUMP
BJ8RCLB 1997	FUEL PUMP
BJ8RCLH 1996	FUEL PUMP
BJ8RCLT 1998	FUEL PUMP
BJ8RCT 1998	FUEL PUMP

BJ8REDS 1996	FUEL PUMP
BJ8RLEDS 1996	FUEL PUMP
BJ8SRLEDS 1996	FUEL PUMP
CD-25A 1968	POWERHEAD GROUP
CD-25C 1968	POWERHEAD GROUP
CD-25R 1968	POWERHEAD GROUP
CDL-25A 1968	POWERHEAD GROUP
CDL-25C 1968	POWERHEAD GROUP
CDL-25R 1968	POWERHEAD GROUP
E10EBL4EEB 1999	FUEL PUMP
E10ECCD 1988	FUEL PUMP - ROPE START MODELS
E10ECDB 1986	FUEL PUMP
E10ECES 1989	FUEL PUMP - ROPE START MODELS
E10ECOM 1985	FUEL PUMP
E10ECSE 1980	FUEL PUMP
E10ECUE 1987	FUEL PUMP - EARLY PRODUCTION
E10EEIR 1991	FUEL PUMP - ROPE START MODELS
E10EENA 1992	FUEL PUMP - ROPE START MODELS
E10EESC 1990	FUEL PUMP - ROPE START MODELS
E10EL4EEB 1999	FUEL PUMP
E10EL4SID 4-stroke, elec start, remote, 20 in shaft 2001	FUEL PUMP
E10EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	FUEL PUMP
E10ELCCD 1988	FUEL PUMP - ROPE START MODELS
E10ELCDB 1986	FUEL PUMP
E10ELCES 1989	FUEL PUMP - ROPE START MODELS
E10ELCID 1981	FUEL PUMP
E10ELCNS 1982	FUEL PUMP
E10ELCOM 1985	FUEL PUMP
E10ELCRA 1984	FUEL PUMP
E10ELCSE 1980	FUEL PUMP
E10ELCTC 1983	FUEL PUMP
E10ELCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10ELEIR 1991	FUEL PUMP - ROPE START MODELS
E10ELENA 1992	FUEL PUMP - ROPE START MODELS
E10ELESC 1990	FUEL PUMP - ROPE START MODELS

E10EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	FUEL PUMP
E10EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	FUEL PUMP
E10FEXECM 1998	FUEL PUMP
E10FEXEDR 1996	FUEL PUMP
E10FEXEO 1995	FUEL PUMP
E10FEXEUA 1997	FUEL PUMP
E10FRECM 1998	FUEL PUMP
E10FREDR 1996	FUEL PUMP
E10FRELECM 1998	FUEL PUMP
E10FRELEDR 1996	FUEL PUMP
E10FRELEOC 1995	FUEL PUMP
E10FRELEUA 1997	FUEL PUMP
E10FREOC 1995	FUEL PUMP
E10FREUA 1997	FUEL PUMP
E10FRLECM 1998	FUEL PUMP
E10FRLEDR 1996	FUEL PUMP
E10FRLEO 1995	FUEL PUMP
E10FRLEUA 1997	FUEL PUMP
E10R4EEB 1999	FUEL PUMP
E10R4SID 4-stroke, rope start, tiller, 15 in shaft 2001	FUEL PUMP
E10R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	FUEL PUMP
E10RCCD 1988	FUEL PUMP - ROPE START MODELS
E10RCDB 1986	FUEL PUMP
E10RCES 1989	FUEL PUMP - ROPE START MODELS
E10RCID 1981	FUEL PUMP
E10RCNS 1982	FUEL PUMP
E10RCOM 1985	FUEL PUMP
E10RCRA 1984	FUEL PUMP
E10RCSE 1980	FUEL PUMP
E10RCTC 1983	FUEL PUMP
E10RCTR 1983	FUEL PUMP
E10RCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10REIR 1991	FUEL PUMP - ROPE START MODELS
E10RELEIR 1991	FUEL PUMP - ROPE START MODELS
E10RELENA 1992	FUEL PUMP - ROPE START MODELS

E10RELESC 1990	FUEL PUMP - ROPE START MODELS
E10RENA 1992	FUEL PUMP - ROPE START MODELS
E10RESC 1990	FUEL PUMP - ROPE START MODELS
E10RL4EEB 1999	FUEL PUMP
E10RL4SID 4-stroke, rope start, tiller, 20 in shaft 2001	FUEL PUMP
E10RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	FUEL PUMP
E10RLCCD 1988	FUEL PUMP - ROPE START MODELS
E10RLCDB 1986	FUEL PUMP
E10RLCES 1989	FUEL PUMP - ROPE START MODELS
E10RLCID 1981	FUEL PUMP
E10RLCNS 1982	FUEL PUMP
E10RLCOM 1985	FUEL PUMP
E10RLCRA 1984	FUEL PUMP
E10RLCSE 1980	FUEL PUMP
E10RLCTC 1983	FUEL PUMP
E10RLCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10RLEIR 1991	FUEL PUMP - ROPE START MODELS
E10RLENA 1992	FUEL PUMP - ROPE START MODELS
E10RELESC 1990	FUEL PUMP - ROPE START MODELS
E10RV4SIC 4-stroke, rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
E10RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	FUEL PUMP
E10RVL4SIC 4-stroke, rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
E10RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	FUEL PUMP
E10SELCCD 1988	FUEL PUMP - ROPE START MODELS
E10SELCDB 1986	FUEL PUMP
E10SELCES 1989	FUEL PUMP - ROPE START MODELS
E10SELCID 1981	FUEL PUMP
E10SELCNS 1982	FUEL PUMP
E10SELCOM 1985	FUEL PUMP
E10SELCRA 1984	FUEL PUMP
E10SELCSE 1980	FUEL PUMP
E10SELCTC 1983	FUEL PUMP
E10SELCUE 1987	FUEL PUMP - EARLY PRODUCTION
E10SELEIR 1991	FUEL PUMP - ROPE START MODELS
E10SELENA 1992	FUEL PUMP - ROPE START MODELS

E10SELESC 1990	FUEL PUMP - ROPE START MODELS
E10TEX4EEB 1999	FUEL PUMP
E10TEX4SID 4-stroke, elec start, tiller, 25 in shaft 2001	FUEL PUMP
E10TEX4SSE 4-Stroke, Elec. Start, Tiller, 25 IN shaft 2000	FUEL PUMP
E10TVX4SIC 4-stroke, elec start, tiller, 25 in shaft, wht 2001	FUEL PUMP
E10TVX4SSS 4-Stroke, Elec. Start, Tiller, 25 IN shaft, wht 2000	FUEL PUMP
E15DLEOC 1995	FUEL PUMP
E15EBL4EEB 1999	FUEL PUMP
E15ECCS 1988	FUEL PUMP - ROPE START MODELS
E15ECDE 1986	FUEL PUMP
E15ECEC 1989	FUEL PUMP - ROPE START MODELS
E15ECIS 1981	FUEL PUMP
E15ECNC 1982	FUEL PUMP
E15ECOB 1985	FUEL PUMP
E15ECRM 1984	FUEL PUMP
E15ECSD 1980	FUEL PUMP
E15ECTR 1983	FUEL PUMP
E15ECUD 1987	FUEL PUMP - EARLY PRODUCTION
E15EEIA 1991	FUEL PUMP - ROPE START MODELS
E15EENM 1992	FUEL PUMP - ROPE START MODELS
E15EESR 1990	FUEL PUMP - ROPE START MODELS
E15EL4EEB 1999	FUEL PUMP
E15EL4SID 4-stroke, elec start, 20 in shaft 2001	FUEL PUMP
E15EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	FUEL PUMP
E15ELCCS 1988	FUEL PUMP - ROPE START MODELS
E15ELCDE 1986	FUEL PUMP
E15ELCEC 1989	FUEL PUMP - ROPE START MODELS
E15ELCOB 1985	FUEL PUMP
E15ELCRM 1984	FUEL PUMP
E15ELCSD 1980	FUEL PUMP
E15ELCTR 1983	FUEL PUMP
E15ELCUD 1987	FUEL PUMP - EARLY PRODUCTION
E15ELEIA 1991	FUEL PUMP - ROPE START MODELS
E15ELENM 1992	FUEL PUMP - ROPE START MODELS
E15ELESR 1990	FUEL PUMP - ROPE START MODELS

E15EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	FUEL PUMP
E15EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	FUEL PUMP
E15FKEDR 1996	FUEL PUMP
E15FKEUA 1997	FUEL PUMP
E15FRECM 1998	FUEL PUMP
E15FREDR 1996	FUEL PUMP
E15FRELECM 1998	FUEL PUMP
E15FRELEDR 1996	FUEL PUMP
E15FRELEUA 1997	FUEL PUMP
E15FREOC 1995	FUEL PUMP
E15FREUA 1997	FUEL PUMP
E15FRLECM 1998	FUEL PUMP
E15FRLEDR 1996	FUEL PUMP
E15FRLEOC 1995	FUEL PUMP
E15FRLEUA 1997	FUEL PUMP
E15KEOC 1995	FUEL PUMP
E15R4EEB 1999	FUEL PUMP
E15R4SID 4-stroke, rope start, 15 in shaft 2001	FUEL PUMP
E15R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	FUEL PUMP
E15RB4EEB 1999	FUEL PUMP
E15RBL4EEB 1999	FUEL PUMP
E15RCCS 1988	FUEL PUMP - ROPE START MODELS
E15RCDE 1986	FUEL PUMP
E15RCEC 1989	FUEL PUMP - ROPE START MODELS
E15RCIS 1981	FUEL PUMP
E15RCNC 1982	FUEL PUMP
E15RCOB 1985	FUEL PUMP
E15RCRM 1984	FUEL PUMP
E15RCSD 1980	FUEL PUMP
E15RCTA 1983	FUEL PUMP
E15RCTR 1983	FUEL PUMP
E15RCUD 1987	FUEL PUMP - EARLY PRODUCTION
E15REIA 1991	FUEL PUMP - ROPE START MODELS
E15RELEIA 1991	FUEL PUMP - ROPE START MODELS
E15RELENM 1992	FUEL PUMP - ROPE START MODELS

E15RELSR 1990	FUEL PUMP - ROPE START MODELS
E15RENM 1992	FUEL PUMP - ROPE START MODELS
E15RESR 1990	FUEL PUMP - ROPE START MODELS
E15RL4EEB 1999	FUEL PUMP
E15RL4SID 4-stroke, rope start, 20 in shaft 2001	FUEL PUMP
E15RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	FUEL PUMP
E15RLCCS 1988	FUEL PUMP - ROPE START MODELS
E15RLCDE 1986	FUEL PUMP
E15RLCEC 1989	FUEL PUMP - ROPE START MODELS
E15RLCIS 1981	FUEL PUMP
E15RLCNC 1982	FUEL PUMP
E15RLCOB 1985	FUEL PUMP
E15RLCRM 1984	FUEL PUMP
E15RLCSD 1980	FUEL PUMP
E15RLCTA 1983	FUEL PUMP
E15RLCTR 1983	FUEL PUMP
E15RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E15RLEIA 1991	FUEL PUMP - ROPE START MODELS
E15RENM 1992	FUEL PUMP - ROPE START MODELS
E15RLESR 1990	FUEL PUMP - ROPE START MODELS
E15RV4SIC 4-stroke,rope start, 15 in shaft, wht 2001	FUEL PUMP
E15RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	FUEL PUMP
E15RVL4SIC 4-stroke, elec start, 15 in shaft, wht 2001	FUEL PUMP
E15RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	FUEL PUMP
E3BRCEC 1989	FUEL PUMP
E3BRESR 1990	FUEL PUMP
E3RCCM 1988	FUEL PUMP
E3RCUA 1987	FUEL PUMP
E3REIA 1991	FUEL PUMP
E3RENM 1992	FUEL PUMP
E3REOD 1995	FUEL PUMP
E3RERE 1994	FUEL PUMP
E3RETB 1993	FUEL PUMP
E3REUC 1997	FUEL PUMP
E4BRCICI 1981	FUEL PUMP

E4BRECRJ 1998	FUEL PUMP
E4BRHCCS 1988	FUEL PUMP
E4BRHCDE 1986	FUEL PUMP - BRH MODELS ONLY
E4BRHCNR 1982	FUEL PUMP BRH MODELS ONLY
E4BRHCOB 1985	FUEL PUMP - BRH MODELS ONLY
E4BRHCRM 1984	FUEL PUMP - BRH MODELS ONLY
E4BRHCTA 1983	FUEL PUMP BRH MODELS ONLY
E4BRHCUD 1987	FUEL PUMP - BRH MODELS ONLY
E4BRHLCCS 1988	FUEL PUMP
E4BRHLCDE 1986	FUEL PUMP - BRH MODELS ONLY
E4BRHLCNR 1982	FUEL PUMP BRH MODELS ONLY
E4BRHLCOB 1985	FUEL PUMP - BRH MODELS ONLY
E4BRHLCRM 1984	FUEL PUMP - BRH MODELS ONLY
E4BRHLCTA 1983	FUEL PUMP BRH MODELS ONLY
E4BRHLCUD 1987	FUEL PUMP - BRH MODELS ONLY
E4BRLCIC 1981	FUEL PUMP
E4BRLECRJ 1998	FUEL PUMP
E4RCCS 1988	FUEL PUMP
E4RCEC 1989	FUEL PUMP
E4RCUD 1987	FUEL PUMP
E4RDHCCS 1988	FUEL PUMP
E4RDHCDE 1986	FUEL PUMP
E4RDHCEC 1989	FUEL PUMP
E4RDHCUD 1987	FUEL PUMP
E4RDHEIA 1991	FUEL PUMP
E4RDHENM 1992	FUEL PUMP
E4RDHEOD 1995	FUEL PUMP
E4RDHERE 1994	FUEL PUMP
E4RDHESR 1990	FUEL PUMP
E4RDHETB 1993	FUEL PUMP
E4RDHLCCS 1988	FUEL PUMP
E4RDHLCEC 1989	FUEL PUMP
E4RDHLCUD 1987	FUEL PUMP
E4RDHLEIA 1991	FUEL PUMP
E4RDHLENM 1992	FUEL PUMP

E4RDHLEOD 1995	FUEL PUMP
E4RDHLERE 1994	FUEL PUMP
E4RDHLESR 1990	FUEL PUMP
E4RDHLETB 1993	FUEL PUMP
E4REDS 1996	FUEL PUMP
E4REIA 1991	FUEL PUMP
E4RENM 1992	FUEL PUMP
E4REOD 1995	FUEL PUMP
E4RERE 1994	FUEL PUMP
E4RESR 1990	FUEL PUMP
E4RETB 1993	FUEL PUMP
E4REUC 1997	FUEL PUMP
E4RLCCS 1988	FUEL PUMP
E4RLCEC 1989	FUEL PUMP
E4RLCUD 1987	FUEL PUMP
E4RLEDs 1996	FUEL PUMP
E4RLEIA 1991	FUEL PUMP
E4RLENM 1992	FUEL PUMP
E4RLEOD 1995	FUEL PUMP
E4RLERE 1994	FUEL PUMP
E4RLESR 1990	FUEL PUMP
E4RLETB 1993	FUEL PUMP
E4RLEUC 1997	FUEL PUMP
E4WCNR 1982	FUEL PUMP
E5DRECR 1998	FUEL PUMP
E5DRLECR 1998	FUEL PUMP
E5RCIC 1981	FUEL PUMP
E5RCSS 1980	FUEL PUMP
E5RHCIC 1981	FUEL PUMP
E5RHCNR 1982	FUEL PUMP
E5RHCSS 1980	FUEL PUMP
E5RHCTA 1983	FUEL PUMP
E5RHLCIC 1981	FUEL PUMP
E5RHLCNR 1982	FUEL PUMP
E5RHLCSS 1980	FUEL PUMP

E5RHLCTA 1983	FUEL PUMP
E5RLCIC 1981	FUEL PUMP
E5RLCSS 1980	FUEL PUMP
E6RCCS 1988	FUEL PUMP
E6RCDE 1986	FUEL PUMP
E6RCEC 1989	FUEL PUMP
E6RCOB 1985	FUEL PUMP
E6RCRM 1984	FUEL PUMP
E6RCUD 1987	FUEL PUMP - EARLY PRODUCTION
E6RECR 1998	FUEL PUMP
E6REDS 1996	FUEL PUMP
E6REIA 1991	FUEL PUMP
E6RENM 1992	FUEL PUMP
E6REOD 1995	FUEL PUMP
E6RERE 1994	FUEL PUMP
E6RESR 1990	FUEL PUMP
E6RETB 1993	FUEL PUMP
E6REUC 1997	FUEL PUMP
E6RLCCS 1988	FUEL PUMP
E6RLCDE 1986	FUEL PUMP
E6RLCEC 1989	FUEL PUMP
E6RLCOB 1985	FUEL PUMP
E6RLCRM 1984	FUEL PUMP
E6RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E6RLECR 1998	FUEL PUMP
E6RLEDS 1996	FUEL PUMP
E6RLEIA 1991	FUEL PUMP
E6RLENM 1992	FUEL PUMP
E6RLEOD 1995	FUEL PUMP
E6RLERE 1994	FUEL PUMP
E6RLESR 1990	FUEL PUMP
E6RLETB 1993	FUEL PUMP
E6RLEUC 1997	FUEL PUMP
E6SLCCS 1988	FUEL PUMP
E6SLCDE 1986	FUEL PUMP

E6SLCEC 1989	FUEL PUMP
E6SLCOB 1985	FUEL PUMP
E6SLCRM 1984	FUEL PUMP
E6SLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E6SLEDS 1996	FUEL PUMP
E6SLEIA 1991	FUEL PUMP
E6SLENM 1992	FUEL PUMP
E6SLEOD 1995	FUEL PUMP
E6SLERE 1994	FUEL PUMP
E6SLESR 1990	FUEL PUMP
E6SLETB 1993	FUEL PUMP
E8DREEA 1999	FUEL PUMP
E8DRSSM Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	FUEL PUMP
E8RCCS 1988	FUEL PUMP
E8RCDE 1986	FUEL PUMP
E8RCEC 1989	FUEL PUMP
E8RCIC 1981	FUEL PUMP
E8RCNR 1982	FUEL PUMP
E8RCOB 1985	FUEL PUMP
E8RCRM 1984	FUEL PUMP
E8RCSS 1980	FUEL PUMP
E8RCTA 1983	FUEL PUMP
E8RCUD 1987	FUEL PUMP - EARLY PRODUCTION
E8RECR 1998	FUEL PUMP
E8REDS 1996	FUEL PUMP
E8REIA 1991	FUEL PUMP
E8RENM 1992	FUEL PUMP
E8REOD 1995	FUEL PUMP
E8RERE 1994	FUEL PUMP
E8RESR 1990	FUEL PUMP
E8RETB 1993	FUEL PUMP
E8REUC 1997	FUEL PUMP
E8RLCCS 1988	FUEL PUMP
E8RLCDE 1986	FUEL PUMP
E8RLCEC 1989	FUEL PUMP

E8RLCIC 1981	FUEL PUMP
E8RLCNR 1982	FUEL PUMP
E8RLCOB 1985	FUEL PUMP
E8RLCRM 1984	FUEL PUMP
E8RLCSS 1980	FUEL PUMP
E8RLCTA 1983	FUEL PUMP
E8RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E8RLECR 1998	FUEL PUMP
E8RLEDS 1996	FUEL PUMP
E8RLEIA 1991	FUEL PUMP
E8RLENM 1992	FUEL PUMP
E8RLEOD 1995	FUEL PUMP
E8RLERE 1994	FUEL PUMP
E8RLESR 1990	FUEL PUMP
E8RLETB 1993	FUEL PUMP
E8RLEUC 1997	FUEL PUMP
E8SRLCCS 1988	FUEL PUMP
E8SRLCDE 1986	FUEL PUMP
E8SRLCEC 1989	FUEL PUMP
E8SRLCNR 1982	FUEL PUMP
E8SRLCOB 1985	FUEL PUMP
E8SRLCRM 1984	FUEL PUMP
E8SRLCTA 1983	FUEL PUMP
E8SRLCUD 1987	FUEL PUMP - EARLY PRODUCTION
E8SRLECA 1998	FUEL PUMP
E8SRLEDS 1996	FUEL PUMP
E8SRLEIA 1991	FUEL PUMP
E8SRLENM 1992	FUEL PUMP
E8SRLEOD 1995	FUEL PUMP
E8SRLERE 1994	FUEL PUMP
E8SRLESR 1990	FUEL PUMP
E8SRLETB 1993	FUEL PUMP
E8SRLEUC 1997	FUEL PUMP
E8WREES 1999	FUEL PUMP
E8WRLEES 1999	FUEL PUMP

E8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
E8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP
E8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
FD-22A 1968	POWERHEAD GROUP
FD-22E 1968	POWERHEAD GROUP
FD-22M 1968	POWERHEAD GROUP
FDL-22A 1968	POWERHEAD GROUP
FDL-22E 1968	POWERHEAD GROUP
FDL-22M 1968	POWERHEAD GROUP
FUEL SYSTEM 1979	ADAPTER KIT, REMOTE FUEL TANK 4.5 MODEL
FUEL SYSTEM 1979	FUEL PUMP KIT 4 HP
FUEL SYSTEM 1980	ADAPTER KIT, REMOTE FUEL TANK
FUEL SYSTEM 1980	FUEL PUMP KIT 4 HP
FUEL SYSTEM 1981	ADAPTER KIT, REMOTE FUEL TANK
FUEL SYSTEM 1981	FUEL PUMP KIT 4 MODEL
FUEL SYSTEM 1981	FUEL PUMP KIT AND TANK
FUEL SYSTEM 1982	ADAPTER KIT, REMOTE FUEL TANK 4.5 MODEL
FUEL SYSTEM 1983	ADAPTER KIT, REMOTE FUEL TANK 4.5 MODEL
FUEL SYSTEM 1995	FUEL PUMP KIT - 3 & 4 MODELS ONLY
FUEL SYSTEM 1996	FUEL PUMP KIT - 3 & 4 MODELS ONLY
FUEL SYSTEM 1997	FUEL PUMP KIT - 3 & 4 MODELS ONLY
FUEL SYSTEMS 1984	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1984	FUEL PUMP KIT 4 MODEL 4BR MODELS ONLY
FUEL SYSTEMS 1985	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1985	FUEL PUMP KIT 4 MODEL 4BR MODELS ONLY
FUEL SYSTEMS 1986	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1986	FUEL PUMP KIT 4 MODEL 4BR MODELS ONLY
FUEL SYSTEMS 1987	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1987	FUEL PUMP KIT 4 MODEL 4BR MODELS ONLY
FUEL SYSTEMS 1988	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS
FUEL SYSTEMS 1988	FUEL PUMP KIT - 4 BR MODELS ONLY
FUEL SYSTEMS 1989	ADAPTER KIT, REMOTE FUEL TANK 4RD & 4.5 MODELS

FUEL SYSTEMS 1989	FUEL PUMP KIT - 4 BR MODELS ONLY
FUEL SYSTEMS 1990	FUEL PUMP KIT - 4 BR MODELS ONLY
FUEL SYSTEMS 1991	FUEL PUMP KIT - 3 & 4 MODELS ONLY
FUEL SYSTEMS 1992	FUEL PUMP KIT - 3 & 4 MODELS ONLY
FUEL SYSTEMS 1993	FUEL PUMP KIT - 3 & 4 MODELS ONLY
FUEL SYSTEMS 1994	FUEL PUMP KIT - 3 & 4 MODELS ONLY
HE15KCF 1997	FUEL PUMP - 15KC MODELS ONLY
HE15KCLF 1997	FUEL PUMP - 15KC MODELS ONLY
HE15KCLN 1996	FUEL PUMP - 15KC MODELS ONLY
HE15KCLO 1998	FUEL PUMP -- 15KC MODELS ONLY
HE15KCN 1996	FUEL PUMP - 15KC MODELS ONLY
HE15KCO 1998	FUEL PUMP -- 15KC MODELS ONLY
HE15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
HE15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCF 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLF 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLN 1996	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLO 1998	FUEL PUMP -- 15KC MODELS ONLY
HJ15KCN 1996	FUEL PUMP - 15KC MODELS ONLY
HJ15KCO 1998	FUEL PUMP -- 15KC MODELS ONLY
HJ15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
J10ECCD 1988	FUEL PUMP - ROPE START MODELS
J10ECDB 1986	FUEL PUMP
J10ECES 1989	FUEL PUMP - ROPE START MODELS
J10ECOM 1985	FUEL PUMP
J10ECSE 1980	FUEL PUMP
J10ECUE 1987	FUEL PUMP - EARLY PRODUCTION
J10EEIR 1991	FUEL PUMP - ROPE START MODELS
J10EENA 1992	FUEL PUMP - ROPE START MODELS
J10EESC 1990	FUEL PUMP - ROPE START MODELS
J10ELCCD 1988	FUEL PUMP - ROPE START MODELS
J10ELCDB 1986	FUEL PUMP
J10ELCES 1989	FUEL PUMP - ROPE START MODELS
J10ELCID 1981	FUEL PUMP

J10ELCNS 1982	FUEL PUMP
J10ELCOM 1985	FUEL PUMP
J10ELCRA 1984	FUEL PUMP
J10ELCSE 1980	FUEL PUMP
J10ELCTC 1983	FUEL PUMP
J10ELCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10ELEIR 1991	FUEL PUMP - ROPE START MODELS
J10ELENA 1992	FUEL PUMP - ROPE START MODELS
J10ELESC 1990	FUEL PUMP - ROPE START MODELS
J10FEXECM 1998	FUEL PUMP
J10FEXEDR 1996	FUEL PUMP
J10FEXEO 1995	FUEL PUMP
J10FEXEUA 1997	FUEL PUMP
J10FRECM 1998	FUEL PUMP
J10FREDR 1996	FUEL PUMP
J10FRELECM 1998	FUEL PUMP
J10FRELEDR 1996	FUEL PUMP
J10FRELEOC 1995	FUEL PUMP
J10FRELEUA 1997	FUEL PUMP
J10FREOC 1995	FUEL PUMP
J10FREUA 1997	FUEL PUMP
J10FRLECM 1998	FUEL PUMP
J10FRLEDR 1996	FUEL PUMP
J10FRLEO 1995	FUEL PUMP
J10FRLEUA 1997	FUEL PUMP
J10RCCD 1988	FUEL PUMP - ROPE START MODELS
J10RCDB 1986	FUEL PUMP
J10RCES 1989	FUEL PUMP - ROPE START MODELS
J10RCID 1981	FUEL PUMP
J10RCNS 1982	FUEL PUMP
J10RCOM 1985	FUEL PUMP
J10RCRA 1984	FUEL PUMP
J10RCSE 1980	FUEL PUMP
J10RCTC 1983	FUEL PUMP
J10RCTR 1983	FUEL PUMP

J10RCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10REIR 1991	FUEL PUMP - ROPE START MODELS
J10RELEIR 1991	FUEL PUMP - ROPE START MODELS
J10RELENA 1992	FUEL PUMP - ROPE START MODELS
J10RELESC 1990	FUEL PUMP - ROPE START MODELS
J10RENA 1992	FUEL PUMP - ROPE START MODELS
J10RESC 1990	FUEL PUMP - ROPE START MODELS
J10RLCCD 1988	FUEL PUMP - ROPE START MODELS
J10RLCDB 1986	FUEL PUMP
J10RLCES 1989	FUEL PUMP - ROPE START MODELS
J10RLCID 1981	FUEL PUMP
J10RLCNS 1982	FUEL PUMP
J10RLCOM 1985	FUEL PUMP
J10RLCRA 1984	FUEL PUMP
J10RLCSE 1980	FUEL PUMP
J10RLCTC 1983	FUEL PUMP
J10RLCTR 1983	FUEL PUMP
J10RLCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10RLEIR 1991	FUEL PUMP - ROPE START MODELS
J10RLENA 1992	FUEL PUMP - ROPE START MODELS
J10RLESC 1990	FUEL PUMP - ROPE START MODELS
J10SELCCD 1988	FUEL PUMP - ROPE START MODELS
J10SELCDB 1986	FUEL PUMP
J10SELCES 1989	FUEL PUMP - ROPE START MODELS
J10SELCID 1981	FUEL PUMP
J10SELCNS 1982	FUEL PUMP
J10SELCOM 1985	FUEL PUMP
J10SELCRA 1984	FUEL PUMP
J10SELCSE 1980	FUEL PUMP
J10SELCTC 1983	FUEL PUMP
J10SELCUE 1987	FUEL PUMP - EARLY PRODUCTION
J10SELEIR 1991	FUEL PUMP - ROPE START MODELS
J10SELENA 1992	FUEL PUMP - ROPE START MODELS
J10SELESC 1990	FUEL PUMP - ROPE START MODELS
J15DLEOC 1995	FUEL PUMP

J15ECCS 1988	FUEL PUMP - ROPE START MODELS
J15ECDE 1986	FUEL PUMP
J15ECEC 1989	FUEL PUMP - ROPE START MODELS
J15ECIS 1981	FUEL PUMP
J15ECNC 1982	FUEL PUMP
J15ECOB 1985	FUEL PUMP
J15ECRM 1984	FUEL PUMP
J15ECSD 1980	FUEL PUMP
J15ECTR 1983	FUEL PUMP
J15ECUD 1987	FUEL PUMP - EARLY PRODUCTION
J15EEIA 1991	FUEL PUMP - ROPE START MODELS
J15EENM 1992	FUEL PUMP - ROPE START MODELS
J15EESR 1990	FUEL PUMP - ROPE START MODELS
J15ELCCS 1988	FUEL PUMP - ROPE START MODELS
J15ELCDE 1986	FUEL PUMP
J15ELCEC 1989	FUEL PUMP - ROPE START MODELS
J15ELCOB 1985	FUEL PUMP
J15ELCRM 1984	FUEL PUMP
J15ELCSD 1980	FUEL PUMP
J15ELCTR 1983	FUEL PUMP
J15ELCUD 1987	FUEL PUMP - EARLY PRODUCTION
J15ELEIA 1991	FUEL PUMP - ROPE START MODELS
J15ELENM 1992	FUEL PUMP - ROPE START MODELS
J15ELESR 1990	FUEL PUMP - ROPE START MODELS
J15FKEDR 1996	FUEL PUMP
J15FKEUA 1997	FUEL PUMP
J15FRECM 1998	FUEL PUMP
J15FREDR 1996	FUEL PUMP
J15FRELECM 1998	FUEL PUMP
J15FRELEDR 1996	FUEL PUMP
J15FRELEUA 1997	FUEL PUMP
J15FREOC 1995	FUEL PUMP
J15FREUA 1997	FUEL PUMP
J15FRLECM 1998	FUEL PUMP
J15FRLEDR 1996	FUEL PUMP

J15FRLEOC 1995	FUEL PUMP
J15FRLEUA 1997	FUEL PUMP
J15KEOC 1995	FUEL PUMP
J15RCCS 1988	FUEL PUMP - ROPE START MODELS
J15RCDE 1986	FUEL PUMP
J15RCEC 1989	FUEL PUMP - ROPE START MODELS
J15RCIS 1981	FUEL PUMP
J15RCNC 1982	FUEL PUMP
J15RCOB 1985	FUEL PUMP
J15RCRM 1984	FUEL PUMP
J15RCSD 1980	FUEL PUMP
J15RCTA 1983	FUEL PUMP
J15RCTR 1983	FUEL PUMP
J15RCUD 1987	FUEL PUMP - EARLY PRODUCTION
J15REIA 1991	FUEL PUMP - ROPE START MODELS
J15RELEIA 1991	FUEL PUMP - ROPE START MODELS
J15RELENM 1992	FUEL PUMP - ROPE START MODELS
J15RELESR 1990	FUEL PUMP - ROPE START MODELS
J15RENM 1992	FUEL PUMP - ROPE START MODELS
J15RESR 1990	FUEL PUMP - ROPE START MODELS
J15RLCCS 1988	FUEL PUMP - ROPE START MODELS
J15RLCDE 1986	FUEL PUMP
J15RLCEC 1989	FUEL PUMP - ROPE START MODELS
J15RLCIS 1981	FUEL PUMP
J15RLCNC 1982	FUEL PUMP
J15RLCOB 1985	FUEL PUMP
J15RLCRM 1984	FUEL PUMP
J15RLCSD 1980	FUEL PUMP
J15RLCTA 1983	FUEL PUMP
J15RLCTR 1983	FUEL PUMP
J15RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J15RLEIA 1991	FUEL PUMP - ROPE START MODELS
J15RLENM 1992	FUEL PUMP - ROPE START MODELS
J15RLESR 1990	FUEL PUMP - ROPE START MODELS
J3BRCEC 1989	FUEL PUMP

J3BRESR 1990	FUEL PUMP
J3RCCM 1988	FUEL PUMP
J3RCUA 1987	FUEL PUMP
J3REIA 1991	FUEL PUMP
J3RENM 1992	FUEL PUMP
J3REOD 1995	FUEL PUMP
J3RERE 1994	FUEL PUMP
J3RETB 1993	FUEL PUMP
J3REUC 1997	FUEL PUMP
J4BRCIC 1981	FUEL PUMP
J4BRECRJ 1998	FUEL PUMP
J4BRHCCS 1988	FUEL PUMP
J4BRHCDE 1986	FUEL PUMP - BRH MODELS ONLY
J4BRHCNR 1982	FUEL PUMP BRH MODELS ONLY
J4BRHCOB 1985	FUEL PUMP - BRH MODELS ONLY
J4BRHCRM 1984	FUEL PUMP - BRH MODELS ONLY
J4BRHCTA 1983	FUEL PUMP BRH MODELS ONLY
J4BRHCUD 1987	FUEL PUMP - BRH MODELS ONLY
J4BRHLCCS 1988	FUEL PUMP
J4BRHLCDE 1986	FUEL PUMP - BRH MODELS ONLY
J4BRHLCNR 1982	FUEL PUMP BRH MODELS ONLY
J4BRHLCOB 1985	FUEL PUMP - BRH MODELS ONLY
J4BRHLCRM 1984	FUEL PUMP - BRH MODELS ONLY
J4BRHLCTA 1983	FUEL PUMP BRH MODELS ONLY
J4BRHLCUD 1987	FUEL PUMP - BRH MODELS ONLY
J4BRLCIC 1981	FUEL PUMP
J4BRLECRJ 1998	FUEL PUMP
J4RCCS 1988	FUEL PUMP
J4RCEC 1989	FUEL PUMP
J4RCUD 1987	FUEL PUMP
J4RDHCCS 1988	FUEL PUMP
J4RDHCDE 1986	FUEL PUMP
J4RDHCEC 1989	FUEL PUMP
J4RDHCUD 1987	FUEL PUMP
J4RDHEIA 1991	FUEL PUMP

J4RDHENM 1992	FUEL PUMP
J4RDHEOD 1995	FUEL PUMP
J4RDHERE 1994	FUEL PUMP
J4RDHESR 1990	FUEL PUMP
J4RDHETB 1993	FUEL PUMP
J4RDHLCCS 1988	FUEL PUMP
J4RDHLCEC 1989	FUEL PUMP
J4RDHLCUD 1987	FUEL PUMP
J4RDHLEIA 1991	FUEL PUMP
J4RDHLENM 1992	FUEL PUMP
J4RDHLEOD 1995	FUEL PUMP
J4RDHLERE 1994	FUEL PUMP
J4RDHLESR 1990	FUEL PUMP
J4RDHLETB 1993	FUEL PUMP
J4REDS 1996	FUEL PUMP
J4REEA 1999	FUEL PUMP
J4REIA 1991	FUEL PUMP
J4RENM 1992	FUEL PUMP
J4REOD 1995	FUEL PUMP
J4RERE 1994	FUEL PUMP
J4RESR 1990	FUEL PUMP
J4RETB 1993	FUEL PUMP
J4REUC 1997	FUEL PUMP
J4RLCCS 1988	FUEL PUMP
J4RLCEC 1989	FUEL PUMP
J4RLCUD 1987	FUEL PUMP
J4RLEDs 1996	FUEL PUMP
J4RLEEA 1999	FUEL PUMP
J4RLEIA 1991	FUEL PUMP
J4RLENM 1992	FUEL PUMP
J4RLEOD 1995	FUEL PUMP
J4RLERE 1994	FUEL PUMP
J4RLESR 1990	FUEL PUMP
J4RLETB 1993	FUEL PUMP
J4RLEUC 1997	FUEL PUMP

J4RLSIB Rope Start, Tiller, 20 IN. shaft 2001	FUEL PUMP
J4RLSSM Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J4RSIB Rope Start, Tiller, 15 IN. shaft 2001	FUEL PUMP
J4RSSM Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J4WCNR 1982	FUEL PUMP
J5DRECR 1998	FUEL PUMP
J5DRLECR 1998	FUEL PUMP
J5RCIC 1981	FUEL PUMP
J5RCSS 1980	FUEL PUMP
J5RHCIC 1981	FUEL PUMP
J5RHCNR 1982	FUEL PUMP
J5RHCSS 1980	FUEL PUMP
J5RHCTA 1983	FUEL PUMP
J5RHLCIC 1981	FUEL PUMP
J5RHLCNR 1982	FUEL PUMP
J5RHLCSS 1980	FUEL PUMP
J5RHLCTA 1983	FUEL PUMP
J5RLCIC 1981	FUEL PUMP
J5RLCSS 1980	FUEL PUMP
J6RCCS 1988	FUEL PUMP
J6RCDE 1986	FUEL PUMP
J6RCEC 1989	FUEL PUMP
J6RCOB 1985	FUEL PUMP
J6RCRM 1984	FUEL PUMP
J6RCUD 1987	FUEL PUMP - EARLY PRODUCTION
J6RECR 1998	FUEL PUMP
J6REDS 1996	FUEL PUMP
J6REEA 1999	FUEL PUMP
J6REIA 1991	FUEL PUMP
J6RENM 1992	FUEL PUMP
J6REOD 1995	FUEL PUMP
J6RERE 1994	FUEL PUMP
J6RESR 1990	FUEL PUMP
J6RETB 1993	FUEL PUMP
J6REUC 1997	FUEL PUMP

J6RLCCS 1988	FUEL PUMP
J6RLCDE 1986	FUEL PUMP
J6RLCEC 1989	FUEL PUMP
J6RLCOB 1985	FUEL PUMP
J6RLCRM 1984	FUEL PUMP
J6RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J6RLECR 1998	FUEL PUMP
J6RLEDS 1996	FUEL PUMP
J6RLEEA 1999	FUEL PUMP
J6RLEIA 1991	FUEL PUMP
J6RLENM 1992	FUEL PUMP
J6RLEOD 1995	FUEL PUMP
J6RLERE 1994	FUEL PUMP
J6RLESR 1990	FUEL PUMP
J6RLETB 1993	FUEL PUMP
J6RLEUC 1997	FUEL PUMP
J6RLSIB rope start, tiller, 20 in shaft 2001	FUEL PUMP
J6RLSOC	FUEL PUMP
J6RLSOC - FR	23-2_POMPE À CARBURANT
J6RLSRS	FUEL PUMP
J6RLSRS - FR	23-2_POMPE À CARBURANT
J6RLSSM Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J6RLSTD	FUEL PUMP
J6RLSTD - FR	23-2_POMPE À CARBURANT
J6RLVSIB rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J6RSIB rope start, tiller, 15 in shaft 2001	FUEL PUMP
J6RSOC	FUEL PUMP
J6RSOC - FR	23-2_POMPE À CARBURANT
J6RSRS	FUEL PUMP
J6RSRS - FR	23-2_POMPE À CARBURANT
J6RSSM Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J6RSTD	FUEL PUMP
J6RSTD - FR	23-2_POMPE À CARBURANT
J6RVSIB rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
J6SLCCS 1988	FUEL PUMP

J6SLCDE 1986	FUEL PUMP
J6SLCEC 1989	FUEL PUMP
J6SLCOB 1985	FUEL PUMP
J6SLCRM 1984	FUEL PUMP
J6SLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J6SLEDs 1996	FUEL PUMP
J6SLEIA 1991	FUEL PUMP
J6SLENM 1992	FUEL PUMP
J6SLEOD 1995	FUEL PUMP
J6SLERE 1994	FUEL PUMP
J6SLESR 1990	FUEL PUMP
J6SLETB 1993	FUEL PUMP
J8DREEA 1999	FUEL PUMP
J8RCCS 1988	FUEL PUMP
J8RCDE 1986	FUEL PUMP
J8RCEC 1989	FUEL PUMP
J8RCIC 1981	FUEL PUMP
J8RCNR 1982	FUEL PUMP
J8RCOB 1985	FUEL PUMP
J8RCRM 1984	FUEL PUMP
J8RCSS 1980	FUEL PUMP
J8RCTA 1983	FUEL PUMP
J8RCUD 1987	FUEL PUMP - EARLY PRODUCTION
J8RECR 1998	FUEL PUMP
J8REDS 1996	FUEL PUMP
J8REEM 1999	FUEL PUMP
J8REIA 1991	FUEL PUMP
J8RENM 1992	FUEL PUMP
J8REOD 1995	FUEL PUMP
J8RERE 1994	FUEL PUMP
J8RESR 1990	FUEL PUMP
J8RETB 1993	FUEL PUMP
J8REUC 1997	FUEL PUMP
J8RLCCS 1988	FUEL PUMP
J8RLCDE 1986	FUEL PUMP

J8RLCEC 1989	FUEL PUMP
J8RLCIC 1981	FUEL PUMP
J8RLCNR 1982	FUEL PUMP
J8RLCOB 1985	FUEL PUMP
J8RLCRM 1984	FUEL PUMP
J8RLCSS 1980	FUEL PUMP
J8RLCTA 1983	FUEL PUMP
J8RLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J8RLECR 1998	FUEL PUMP
J8RLEDS 1996	FUEL PUMP
J8RLEEM 1999	FUEL PUMP
J8RLEIA 1991	FUEL PUMP
J8RLENM 1992	FUEL PUMP
J8RLEOD 1995	FUEL PUMP
J8RLERE 1994	FUEL PUMP
J8RLESR 1990	FUEL PUMP
J8RLETB 1993	FUEL PUMP
J8RLEUC 1997	FUEL PUMP
J8RLSIE rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8RLSOR	FUEL PUMP
J8RLSOR - FR	23-2_POMPE À CARBURANT
J8RLSRC	FUEL PUMP
J8RLSRC - FR	23-2_POMPE À CARBURANT
J8RLSSB Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8RLSTS	FUEL PUMP
J8RLSTS - FR	23-2_POMPE À CARBURANT
J8RLVSIE rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J8RLXSIE rope start, tiller, 25 in shaft, wht 2001	FUEL PUMP
J8RSIE rope start, tiller, 15 in shaft 2001	FUEL PUMP
J8RSOR	FUEL PUMP
J8RSOR - FR	23-2_POMPE À CARBURANT
J8RSRC	FUEL PUMP
J8RSRC - FR	23-2_POMPE À CARBURANT
J8RSSB Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J8RSTD	FUEL PUMP

J8RSTD - FR	23-2_POMPE À CARBURANT
J8RVSIE rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
J8RXEEM 1999	FUEL PUMP
J8RXSIE rope start, tiller, 25 in shaft 2001	FUEL PUMP
J8RXSSB Rope Start, Tiller, 25 IN. shaft 2000	FUEL PUMP
J8SRLCCS 1988	FUEL PUMP
J8SRLCDE 1986	FUEL PUMP
J8SRLCEC 1989	FUEL PUMP
J8SRLCNR 1982	FUEL PUMP
J8SRLCOB 1985	FUEL PUMP
J8SRLCRM 1984	FUEL PUMP
J8SRLCTA 1983	FUEL PUMP
J8SRLCUD 1987	FUEL PUMP - EARLY PRODUCTION
J8SRLECA 1998	FUEL PUMP
J8SRLEDS 1996	FUEL PUMP
J8SRLEIA 1991	FUEL PUMP
J8SRLENM 1992	FUEL PUMP
J8SRLEOD 1995	FUEL PUMP
J8SRLERE 1994	FUEL PUMP
J8SRLESR 1990	FUEL PUMP
J8SRLETB 1993	FUEL PUMP
J8SRLEUC 1997	FUEL PUMP
J8WREES 1999	FUEL PUMP
J8WRLEES 1999	FUEL PUMP
J8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP
J8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
JH-23A 1968	POWERHEAD GROUP
JH-23M 1968	POWERHEAD GROUP
JHF-23A 1968	POWERHEAD GROUP
JHF-23M 1968	POWERHEAD GROUP
JHFL-23A 1968	POWERHEAD GROUP
JHFL-23M 1968	POWERHEAD GROUP
JHL-23A 1968	POWERHEAD GROUP

JHL-23M 1968	POWERHEAD GROUP
JW-23A 1968	POWERHEAD GROUP
JW-23M 1968	POWERHEAD GROUP
JWF-23A 1968	POWERHEAD GROUP
JWF-23M 1968	POWERHEAD GROUP
JWFL-23A 1968	POWERHEAD GROUP
JWFL-23M 1968	POWERHEAD GROUP
JWL-23A 1968	POWERHEAD GROUP
JWL-23M 1968	POWERHEAD GROUP
L10FRELECM 1998	FUEL PUMP
L10FRELEDR 1996	FUEL PUMP
L10FRELEUA 1997	FUEL PUMP
LD-13B 1968	POWERHEAD GROUP
LD-13E 1968	POWERHEAD GROUP
LD-13M 1968	POWERHEAD GROUP
LDL-13B 1968	POWERHEAD GROUP
LDL-13E 1968	POWERHEAD GROUP
LDL-13M 1968	POWERHEAD GROUP
MQ-14D 1968	CARBURETOR GROUP
MQ-14E 1968	CARBURETOR GROUP
MQL-14D 1968	CARBURETOR GROUP
MQL-14E 1968	CARBURETOR GROUP
SE10RPB 1996	FUEL PUMP - 15KC MODELS ONLY
SE10RPLB 1996	FUEL PUMP - 15KC MODELS ONLY
SE10RPLT 1997	FUEL PUMP - 15KC MODELS ONLY
SE10RPLY 1998	FUEL PUMP -- 15KC MODELS ONLY
SE10RPT 1997	FUEL PUMP - 15KC MODELS ONLY
SE10RPY 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPC 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPG 1996	FUEL PUMP - 15KC MODELS ONLY
SE15RPLC 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPLG 1996	FUEL PUMP - 15KC MODELS ONLY
SE15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
SE15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPB 1996	FUEL PUMP - 15KC MODELS ONLY

SJ10RPLB 1996	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLT 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLY 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ10RPT 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPY 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPC 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPG 1996	FUEL PUMP - 15KC MODELS ONLY
SJ15RPLC 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPLG 1996	FUEL PUMP - 15KC MODELS ONLY
SJ15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ3REDS 1996	FUEL PUMP
SJ4REDS 1996	FUEL PUMP
SJ4RLEDS 1996	FUEL PUMP
SJ6REDS 1996	FUEL PUMP
SJ6RLEDS 1996	FUEL PUMP
SJ8REDS 1996	FUEL PUMP
SJ8RLEDS 1996	FUEL PUMP
TE10ELCES 1989	FUEL PUMP - ROPE START MODELS
TE10ELESC 1990	FUEL PUMP - ROPE START MODELS
TE10RELEIR 1991	FUEL PUMP - ROPE START MODELS
TE10RELENA 1992	FUEL PUMP - ROPE START MODELS
TE10RELESC 1990	FUEL PUMP - ROPE START MODELS
TE10RLCES 1989	FUEL PUMP - ROPE START MODELS
TE10RLESC 1990	FUEL PUMP - ROPE START MODELS
TE15RLCEC 1989	FUEL PUMP - ROPE START MODELS
TE8RCEC 1989	FUEL PUMP
TE8RLCEC 1989	FUEL PUMP
TE8RLESCF 1990	FUEL PUMP
TJ10ELCES 1989	FUEL PUMP - ROPE START MODELS
TJ10ELESC 1990	FUEL PUMP - ROPE START MODELS
TJ10RELEIR 1991	FUEL PUMP - ROPE START MODELS
TJ10RELENA 1992	FUEL PUMP - ROPE START MODELS
TJ10RELESC 1990	FUEL PUMP - ROPE START MODELS
TJ10RLCES 1989	FUEL PUMP - ROPE START MODELS

TJ10RLESC 1990	FUEL PUMP - ROPE START MODELS
TJ15RLCEC 1989	FUEL PUMP - ROPE START MODELS
TJ8RCEC 1989	FUEL PUMP
TJ8RLCEC 1989	FUEL PUMP
VE14RCCS 1988	FUEL PUMP
VE14RCEC 1989	FUEL PUMP
VJ14RCCS 1988	FUEL PUMP
VJ14RCEC 1989	FUEL PUMP