

Where Used: Part Number 0313446

| Model Name | Diagram |
|-----------------|----------------|
| 100193A 1971 | GEARCASE |
| 100193C 1971 | GEARCASE |
| 100293R 1972 | GEARCASE |
| 100990S 1979 | GEARCASE |
| 100993S 1979 | GEARCASE |
| 100999S 1979 | GEARCASE |
| 100ESL71A 1971 | GEARCASE |
| 100ESL71C 1971 | GEARCASE |
| 100ESL72R 1972 | GEARCASE |
| 100ML79S 1979 | GEARCASE |
| 100TLR79S 1979 | GEARCASE |
| 100TXLR79S 1979 | GEARCASE |
| 115083D 1970 | GEARCASE GROUP |
| 115393M 1973 | GEARCASE |
| 115493B 1974 | GEARCASE GROUP |
| 115593 1975 | GEARCASE |
| 115693D 1976 | GEARCASE |
| 115693G 1976 | GEARCASE |
| 115699D 1976 | GEARCASE |
| 115699G 1976 | GEARCASE |
| 115790S 1977 | GEARCASE |
| 115793S 1977 | GEARCASE |
| 115799S 1977 | GEARCASE |
| 115890C 1978 | GEARCASE |
| 115893C 1978 | GEARCASE |
| 115899C 1978 | GEARCASE |
| 115983E 1969 | GEARCASE GROUP |
| 115983S 1969 | GEARCASE GROUP |
| 115990R 1979 | GEARCASE |
| 115993R 1979 | GEARCASE |
| 115999R 1979 | GEARCASE |
| 115EL77S 1977 | GEARCASE |
| 115ESL69E 1969 | GEARCASE GROUP |

| | |
|-----------------|---|
| 115ESL69S 1969 | GEARCASE GROUP |
| 115ESL70D 1970 | GEARCASE GROUP |
| 115ESL73M 1973 | GEARCASE |
| 115ESL74B 1974 | GEARCASE |
| 115ESL75E 1975 | GEARCASE |
| 115ETL74B 1974 | GEARCASE |
| 115ETL75E 1975 | GEARCASE |
| 115ETL77 1977 | GEARCASE |
| 115ETZ78C 1978 | GEARCASE |
| 115ML78C 1978 | GEARCASE |
| 115ML79R 1979 | GEARCASE |
| 115TL79R 1979 | GEARCASE |
| 115TXL77S 1977 | GEARCASE |
| 115TXL78C 1978 | GEARCASE |
| 115TXL79R 1979 | GEARCASE |
| 120FTHRCIF 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 120FTHRCIS 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 125183C 1971 | GEARCASE |
| 125283R 1972 | GEARCASE |
| 125ESL71C 1971 | GEARCASE |
| 125ESL72R 1972 | GEARCASE |
| 135383M 1973 | GEARCASE |
| 135443B 1974 | GEARCASE |
| 135483B 1974 | GEARCASE |
| 135489B 1974 | GEARCASE |
| 135543E 1975 | GEARCASE |
| 135583E 1975 | GEARCASE |
| 135589E 1975 | GEARCASE |
| 135643D 1976 | GEARCASE |
| 135643G 1976 | GEARCASE |
| 135683D 1976 | GEARCASE |
| 135683G 1976 | GEARCASE |
| 135ESL73M 1973 | GEARCASE |
| 135ESL74B 1974 | GEARCASE |
| 135ESL75E 1975 | GEARCASE |

| | |
|-----------------|---|
| 135ETL74B 1974 | GEARCASE |
| 135ETL75E 1975 | GEARCASE |
| 140740S 1977 | GEARCASE |
| 140743S 1977 | GEARCASE |
| 140783S 1977 | GEARCASE |
| 140840C 1978 | GEARCASE |
| 140843C 1978 | GEARCASE |
| 140883C 1978 | GEARCASE |
| 140940R 1979 | GEARCASE |
| 140943R 1979 | GEARCASE |
| 140983R 1979 | GEARCASE |
| 140FTHRCIF 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 140FTHRCIS 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 140ML77S 1977 | GEARCASE |
| 140ML78C 1978 | GEARCASE |
| 140ML79R 1979 | GEARCASE |
| 140SPHRCIF 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 140SPHRCIS 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 140STHRCIF 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 140STHRCIS 1981 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 140TL77S 1977 | GEARCASE |
| 140TL78C 1978 | GEARCASE |
| 140TL79R 1979 | GEARCASE |
| 140TX78C 1978 | GEARCASE |
| 140TXL77S 1977 | GEARCASE |
| 140TXL79R 1979 | GEARCASE |
| 232AMFTC 1987 | LOWER GEARCASE |
| 232AMRGDE 1988 | LOWER GEARCASE |
| 232AMRGDP 1988 | LOWER GEARCASE |
| 232APFTC 1987 | LOWER GEARCASE |
| 232APRGDE 1988 | LOWER GEARCASE |
| 232APRGDP 1988 | LOWER GEARCASE |
| 232APSRC 1987 | LOWER GEARCASE |
| 232BMRMED 1989 | LOWER GEARCASE |
| 232BMRMEF 1989 | LOWER GEARCASE |

| | |
|-----------------|----------------------|
| 232BMRPWS 1990 | LOWER GEARCASE |
| 232BPRMED 1989 | LOWER GEARCASE |
| 232BPRMEF 1989 | LOWER GEARCASE |
| 232BPRPWS 1990 | LOWER GEARCASE |
| 252AMKWB 1986 | LOWER GEARCASE |
| 252APKWB 1986 | LOWER GEARCASE |
| 252FTHRCNC 1982 | LOWER GEARCASE GROUP |
| 252FTHRCNG 1982 | LOWER GEARCASE GROUP |
| 252FTHRCOM 1985 | LOWER GEARCASE GROUP |
| 252FTHRCRA 1984 | LOWER GEARCASE GROUP |
| 252FTHRCTR 1983 | LOWER GEARCASE GROUP |
| 252STHRCNC 1982 | LOWER GEARCASE GROUP |
| 252STHRCOM 1985 | LOWER GEARCASE GROUP |
| 252STHRCRA 1984 | LOWER GEARCASE GROUP |
| 252STHRCTR 1983 | LOWER GEARCASE GROUP |
| 302AMARJ 1987 | LOWER GEARCASE |
| 302AMARY 1987 | LOWER GEARCASE |
| 302AMFTC 1987 | LOWER GEARCASE |
| 302AMKWB 1986 | LOWER GEARCASE |
| 302AMRGDP 1988 | LOWER GEARCASE |
| 302AMRMED 1989 | LOWER GEARCASE |
| 302APARY 1987 | LOWER GEARCASE |
| 302APFTC 1987 | LOWER GEARCASE |
| 302APKWB 1986 | LOWER GEARCASE |
| 302APRGDP 1988 | LOWER GEARCASE |
| 302APRMED 1989 | LOWER GEARCASE |
| 302APSRC 1987 | LOWER GEARCASE |
| 302ARSRY 1987 | LOWER GEARCASE |
| 302FPHRCNC 1982 | LOWER GEARCASE GROUP |
| 302FPHRCNG 1982 | LOWER GEARCASE GROUP |
| 302FPHRCTR 1983 | LOWER GEARCASE GROUP |
| 302FTHRCNC 1982 | LOWER GEARCASE GROUP |
| 302FTHRCNG 1982 | LOWER GEARCASE GROUP |
| 302FTHRCOM 1985 | LOWER GEARCASE GROUP |
| 302FTHRCRA 1984 | LOWER GEARCASE GROUP |

| | |
|-----------------|-----------------------------|
| 302FTHRCTR 1983 | LOWER GEARCASE GROUP |
| 302SPHRCNC 1982 | LOWER GEARCASE GROUP |
| 302SPHRCNG 1982 | LOWER GEARCASE GROUP |
| 302SPHRCOM 1985 | LOWER GEARCASE GROUP |
| 302SPHRCRA 1984 | LOWER GEARCASE GROUP |
| 302SPHRCTR 1983 | LOWER GEARCASE GROUP |
| 302STHRCNC 1982 | LOWER GEARCASE GROUP |
| 302STHRCNG 1982 | LOWER GEARCASE GROUP |
| 302STHRCOM 1985 | LOWER GEARCASE GROUP |
| 302STHRCRA 1984 | LOWER GEARCASE GROUP |
| 302STHRCTR 1983 | LOWER GEARCASE GROUP |
| 50172S 1971 | GEARCASE |
| 50173S 1971 | GEARCASE |
| 50202C 1972 | GEARCASE 50 HP MANUAL START |
| 50202C 1972 | GEARCASE ELECTRIC START |
| 50203C 1972 | GEARCASE 50 HP MANUAL START |
| 50203C 1972 | GEARCASE ELECTRIC START |
| 50272C 1972 | GEARCASE 50 HP MANUAL START |
| 50272C 1972 | GEARCASE ELECTRIC START |
| 50273C 1972 | GEARCASE 50 HP MANUAL START |
| 50273C 1972 | GEARCASE ELECTRIC START |
| 50302R 1973 | GEARCASE MANUAL START |
| 50302R 1973 | GEARCASE ELECTRIC START |
| 50303R 1973 | GEARCASE MANUAL START |
| 50303R 1973 | GEARCASE ELECTRIC START |
| 50372R 1973 | GEARCASE MANUAL START |
| 50372R 1973 | GEARCASE ELECTRIC START |
| 50373R 1973 | GEARCASE MANUAL START |
| 50373R 1973 | GEARCASE ELECTRIC START |
| 50442M 1974 | GEARCASE |
| 50443M 1974 | GEARCASE |
| 50472M 1974 | GEARCASE |
| 50473M 1974 | GEARCASE |
| 50902C 1979 | GEARCASE ROPE START |
| 50903C 1979 | GEARCASE ROPE START |

| | |
|---------------|-----------------------------|
| 50ES71S 1971 | GEARCASE |
| 50ES72C 1972 | GEARCASE 50 HP MANUAL START |
| 50ES72C 1972 | GEARCASE ELECTRIC START |
| 50ES73R 1973 | GEARCASE MANUAL START |
| 50ES73R 1973 | GEARCASE ELECTRIC START |
| 50ES74M 1974 | GEARCASE |
| 50ESL71S 1971 | GEARCASE |
| 50ESL72C 1972 | GEARCASE 50 HP MANUAL START |
| 50ESL72C 1972 | GEARCASE ELECTRIC START |
| 50ESL73R 1973 | GEARCASE MANUAL START |
| 50ESL73R 1973 | GEARCASE ELECTRIC START |
| 50ESL74M 1974 | GEARCASE |
| 50R72C 1972 | GEARCASE 50 HP MANUAL START |
| 50R72C 1972 | GEARCASE ELECTRIC START |
| 50R73R 1973 | GEARCASE MANUAL START |
| 50R73R 1973 | GEARCASE ELECTRIC START |
| 50R79C 1979 | GEARCASE, ROPE START |
| 50RL72C 1972 | GEARCASE 50 HP MANUAL START |
| 50RL72C 1972 | GEARCASE ELECTRIC START |
| 50RL73R 1973 | GEARCASE MANUAL START |
| 50RL73R 1973 | GEARCASE ELECTRIC START |
| 50RL79C 1979 | GEARCASE, ROPE START |
| 55872A 1968 | GEARCASE GROUP |
| 55872R 1968 | GEARCASE GROUP |
| 55872S 1968 | GEARCASE GROUP |
| 55873A 1968 | GEARCASE GROUP |
| 55873R 1968 | GEARCASE GROUP |
| 55873S 1968 | GEARCASE GROUP |
| 55972A 1969 | GEARCASE GROUP |
| 55972C 1969 | GEARCASE GROUP |
| 55973A 1969 | GEARCASE GROUP |
| 55973C 1969 | GEARCASE GROUP |
| 55974C 1979 | GEARCASE ROPE START |
| 55975C 1979 | GEARCASE ROPE START |
| 55E79C 1979 | GEARCASE, ROPE START |

| | |
|---------------|-----------------------------------|
| 55EL79C 1979 | GEARCASE, ROPE START |
| 55ES69A 1969 | GEARCASE GROUP |
| 55ES69C 1969 | GEARCASE GROUP |
| 55ESL69A 1969 | GEARCASE GROUP |
| 55ESL69C 1969 | GEARCASE GROUP |
| 60072B 1970 | GEARCASE GROUP |
| 60072D 1970 | GEARCASE GROUP |
| 60073B 1970 | GEARCASE GROUP |
| 60073D 1970 | GEARCASE GROUP |
| 60172C 1971 | GEARCASE |
| 60172E 1971 | GEARCASE |
| 60173C 1971 | GEARCASE |
| 60173E 1971 | GEARCASE |
| 60ES70B 1970 | GEARCASE GROUP |
| 60ES70D 1970 | GEARCASE GROUP |
| 60ES71C 1971 | GEARCASE |
| 60ES71E 1971 | GEARCASE |
| 60ESL70B 1970 | GEARCASE GROUP |
| 60ESL70D 1970 | GEARCASE GROUP |
| 60ESL71C 1971 | GEARCASE |
| 60ESL71E 1971 | GEARCASE |
| 65272S 1972 | GEARCASE |
| 65273S 1972 | GEARCASE |
| 65372R 1973 | GEARCASE |
| 65373R 1973 | GEARCASE |
| 65ES72S 1972 | GEARCASE |
| 65ES73R 1973 | GEARCASE |
| 65ESL72S 1972 | GEARCASE |
| 65ESL73R 1973 | GEARCASE |
| 70442M 1974 | GEARCASE |
| 70443M 1974 | GEARCASE |
| 70472M 1974 | GEARCASE |
| 70473M 1974 | GEARCASE |
| 70572B 1975 | GEARCASE FOR MODELS 70572B,70573B |
| 70572B 1975 | GEARCASE FOR MODELS 70572E,70573E |

| | |
|----------------|--------------------------------------|
| 70572E 1975 | GEARCASE FOR MODELS 70572B,70573B |
| 70572E 1975 | GEARCASE FOR MODELS 70572E,70573E |
| 70573B 1975 | GEARCASE FOR MODELS 70572B,70573B |
| 70573B 1975 | GEARCASE FOR MODELS 70572E,70573E |
| 70573E 1975 | GEARCASE FOR MODELS 70572B,70573B |
| 70573E 1975 | GEARCASE FOR MODELS 70572E,70573E |
| 70673D 1976 | GEARCASE |
| 70773S 1977 | GEARCASE-20"TRANSOM |
| 70873C 1978 | GEARCASE - 20" TRANSOM |
| 70973R 1979 | GEARCASE-20" TRANSOM |
| 70EL76D 1976 | GEARCASE |
| 70EL77S 1977 | GEARCASE-20"TRANSOM |
| 70EL78C 1978 | GEARCASE-20 INCH TRANSOM |
| 70EL79R 1979 | GEARCASE-20" TRANSOM |
| 70ES74M 1974 | GEARCASE |
| 70ES75B 1975 | GEARCASE FOR MODELS 70ES75B,70ESL75B |
| 70ES75B 1975 | GEARCASE FOR MODELS 70ES75E,70ESL75E |
| 70ES75E 1975 | GEARCASE FOR MODELS 70ES75B,70ESL75B |
| 70ES75E 1975 | GEARCASE FOR MODELS 70ES75E,70ESL75E |
| 70ESL74M 1974 | GEARCASE |
| 70ESL75B 1975 | GEARCASE FOR MODELS 70ES75B,70ESL75B |
| 70ESL75B 1975 | GEARCASE FOR MODELS 70ES75E,70ESL75E |
| 70ESL75E 1975 | GEARCASE FOR MODELS 70ES75B,70ESL75B |
| 70ESL75E 1975 | GEARCASE FOR MODELS 70ES75E,70ESL75E |
| 70ESLR74M 1974 | GEARCASE |
| 75542B 1975 | GEARCASE - 20" TRANSOM |
| 75543B 1975 | GEARCASE - 20" TRANSOM |
| 75642D 1976 | GEARCASE-20" TRANSOM |
| 75643D 1976 | GEARCASE-20" TRANSOM |
| 75742S 1977 | GEARCASE-20"TRANSOM |
| 75743S 1977 | GEARCASE-20"TRANSOM |
| 75842C 1978 | GEARCASE - 20" TRANSOM |
| 75843C 1978 | GEARCASE - 20" TRANSOM |
| 75942R 1979 | GEARCASE-20" TRANSOM |
| 75943R 1979 | GEARCASE-20" TRANSOM |

| | |
|----------------|--------------------------|
| 75ELR76D 1976 | GEARCASE-20" TRANSOM |
| 75ELR77S 1977 | GEARCASE-20"TRANSOM |
| 75ELR78C 1978 | GEARCASE-20 INCH TRANSOM |
| 75ELR79R 1979 | GEARCASE-20" TRANSOM |
| 75ER76D 1976 | GEARCASE-20" TRANSOM |
| 75ER77S 1977 | GEARCASE-20"TRANSOM |
| 75ER78C 1978 | GEARCASE-20 INCH TRANSOM |
| 75ER79R 1979 | GEARCASE-20" TRANSOM |
| 75ESLR75B 1975 | GEARCASE-20" TRANSOM |
| 75ESR75B 1975 | GEARCASE-20" TRANSOM |
| 85093B 1970 | GEARCASE GROUP |
| 85093D 1970 | GEARCASE GROUP |
| 85193A 1971 | GEARCASE |
| 85193H 1971 | GEARCASE |
| 85293R 1972 | GEARCASE |
| 85393M 1973 | GEARCASE |
| 85493B 1974 | GEARCASE |
| 85593E 1975 | GEARCASE |
| 85693D 1976 | GEARCASE |
| 85693G 1976 | GEARCASE |
| 85699G 1976 | GEARCASE |
| 85790S 1977 | GEARCASE |
| 85793S 1977 | GEARCASE |
| 85799S 1977 | GEARCASE |
| 85890C 1978 | GEARCASE |
| 85895C 1978 | GEARCASE |
| 85899C 1978 | GEARCASE |
| 85990R 1979 | GEARCASE |
| 85993E 1969 | GEARCASE GROUP |
| 85993M 1969 | GEARCASE GROUP |
| 85993S 1969 | GEARCASE GROUP |
| 85995R 1979 | GEARCASE |
| 85999R 1979 | GEARCASE |
| 85EL76D 1976 | GEARCASE |
| 85EL76G 1976 | GEARCASE |

| | |
|----------------|---|
| 85EL77S 1977 | GEARCASE |
| 85ESL69E 1969 | GEARCASE GROUP |
| 85ESL69M 1969 | GEARCASE GROUP |
| 85ESL69S 1969 | GEARCASE GROUP |
| 85ESL70B 1970 | GEARCASE GROUP |
| 85ESL70D 1970 | GEARCASE GROUP |
| 85ESL71A 1971 | GEARCASE |
| 85ESL71H 1971 | GEARCASE |
| 85ESL72R 1972 | GEARCASE |
| 85ESL73M 1973 | GEARCASE |
| 85ESL74B 1974 | GEARCASE |
| 85ESL75E 1975 | GEARCASE |
| 85ETLR76D 1976 | GEARCASE |
| 85ETLR76G 1976 | GEARCASE |
| 85ETLR77S 1977 | GEARCASE |
| 85ETLR78C 1978 | GEARCASE |
| 85ML78C 1978 | GEARCASE |
| 85ML79R 1979 | GEARCASE |
| 85TL79R 1979 | GEARCASE |
| 85TXL79R 1979 | GEARCASE |
| 85TXLR77S 1977 | GEARCASE |
| 85TXLR78C 1978 | GEARCASE |
| 990242C 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990242C1 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990242D 1978 | LOWER GEARCASE |
| 990242H 1978 | LOWER GEARCASE |
| 990242H1 1978 | LOWER GEARCASE |
| 990242S 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |
| 990242S1 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |
| 990243C 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990243C1 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990243D 1978 | LOWER GEARCASE |
| 990243H 1978 | LOWER GEARCASE |
| 990243H1 1978 | LOWER GEARCASE |
| 990243S 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |

| | |
|-----------------|---|
| 990243S1 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |
| 990244C 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990244C1 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990244D 1978 | LOWER GEARCASE |
| 990244H 1978 | LOWER GEARCASE |
| 990244H1 1978 | LOWER GEARCASE |
| 990244P 1978 | LOWER GEARCASE |
| 990244S 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |
| 990244S1 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |
| 990245C 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990245C1 1980 | LOWER GEARCASE 120,140 MODELS STERN DRIVE |
| 990245D 1978 | LOWER GEARCASE |
| 990245H 1978 | LOWER GEARCASE |
| 990245H1 1978 | LOWER GEARCASE |
| 990245S 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |
| 990245S1 1979 | LOWER GEARCASE 120 & 140 MODELS STERN DRIVE |
| A115DGLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115DSLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115GHlafH | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115GHlafI | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115GHlafK | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115GHlafL | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115SHlafH | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115SHlafI | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115SHlafK | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| A115SHlafL | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| AM55RSLD 1999 | GEARCASE |
| BE115ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| BE115ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| BE115ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| BE115GLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| BE115GLEDR 1996 | GEARCASE - 20 IN. MODELS |
| BE115GLEUA 1997 | GEARCASE - 20 IN. MODELS |
| BE115GLEUC 1997 | GEARCASE - 20 IN. MODELS |
| BE115SXECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |

| | |
|-----------------|--|
| BE115SXEDR 1996 | GEARCASE - 20 IN. MODELS |
| BE115SXEUA 1997 | GEARCASE - 20 IN. MODELS |
| BE115SXEUC 1997 | GEARCASE - 20 IN. MODELS |
| BE115TLEDA 1996 | GEARCASE |
| BE50DTLEDC 1996 | GEARCASE |
| BE50DTLEUR 1997 | GEARCASE |
| BE60ELEDR 1996 | GEARCASE |
| BE60ELEUA 1997 | GEARCASE |
| BE60TLECM 1998 | GEARCASE |
| BE60TLEDR 1996 | GEARCASE |
| BE60TLEUA 1997 | GEARCASE |
| BE70ELECB 1998 | GEARCASE |
| BE70ELEDA 1996 | GEARCASE |
| BE70ELEUM 1997 | GEARCASE |
| BE70TLECB 1998 | GEARCASE |
| BE70TLEDA 1996 | GEARCASE |
| BE70TLEUM 1997 | GEARCASE |
| BE90ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| BE90ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| BE90ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| BE90SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| BE90SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| BE90SLEUA 1997 | GEARCASE - 20 IN. MODELS |
| BE90SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| BE90SXECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| BE90SXEUA 1997 | GEARCASE - 20 IN. MODELS |
| BE90SXEUC 1997 | GEARCASE - 20 IN. MODELS |
| BE90TLEDA 1996 | GEARCASE |
| BJ115ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| BJ115ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| BJ115ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| BJ115GLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| BJ115GLEDR 1996 | GEARCASE - 20 IN. MODELS |
| BJ115GLEUA 1997 | GEARCASE - 20 IN. MODELS |
| BJ115GLEUC 1997 | GEARCASE - 20 IN. MODELS |

| | |
|--|---|
| BJ115PLEEM 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| BJ115PLSIE elec start, TNT, 20 in shaft, n/a usa 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| BJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ115PXEEEM 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| BJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ115SXECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| BJ115SXEDR 1996 | GEARCASE - 20 IN. MODELS |
| BJ115SXEU A 1997 | GEARCASE - 20 IN. MODELS |
| BJ115SXEU C 1997 | GEARCASE - 20 IN. MODELS |
| BJ115TLEDA 1996 | GEARCASE |
| BJ115VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| BJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ50DTLEDC 1996 | GEARCASE |
| BJ50DTLEUR 1997 | GEARCASE |
| BJ60ELEDR 1996 | GEARCASE |
| BJ60ELEUA 1997 | GEARCASE |
| BJ60TLECM 1998 | GEARCASE |
| BJ60TLEDR 1996 | GEARCASE |
| BJ60TLEUA 1997 | GEARCASE |
| BJ70ELECB 1998 | GEARCASE |
| BJ70ELEDA 1996 | GEARCASE |
| BJ70ELEUM 1997 | GEARCASE |
| BJ70PLEEE 1999 | GEARCASE |
| BJ70PLSIS elec start, TNT, 20 in shaft, n/a usa 2001 | GEARCASE |
| BJ70PLSSD Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| BJ70TLECB 1998 | GEARCASE |
| BJ70TLEDA 1996 | GEARCASE |
| BJ70TLEUM 1997 | GEARCASE |
| BJ90ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| BJ90ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| BJ90ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| BJ90PLEEB 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| BJ90PLSID elec start, TNT, 20 in shaft, n/a usa 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| BJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ90PXEEB 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |

| | |
|---|--|
| BJ90PXSE Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ90SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| BJ90SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| BJ90SLEUA 1997 | GEARCASE - 20 IN. MODELS |
| BJ90SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| BJ90SXECCM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| BJ90SXEUA 1997 | GEARCASE - 20 IN. MODELS |
| BJ90SXEUC 1997 | GEARCASE - 20 IN. MODELS |
| BJ90TLEDA 1996 | GEARCASE |
| BJ90VLSIC elec start, TNT, 20 in shaft, wht, n/a usa 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| BJ90VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| BJ90VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| E100FPLSOC | GEARCASE - FPL, FSL MODELS |
| E100FPLSOC - FR | 07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES |
| E100FPLSRS | GEARCASE - FPL, FSL MODELS |
| E100FPLSRS - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL |
| E100FSLSOC | GEARCASE - FPL, FSL MODELS |
| E100FSLSOC - FR | 07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES |
| E100FSLSRS | GEARCASE - FPL, FSL MODELS |
| E100FSLSRS - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL |
| E100MLCSC 1980 | GEARCASE |
| E100STLCCA 1988 | GEARCASE |
| E100STLCEM 1989 | GEARCASE |
| E100STLEIE 1991 | GEARCASE |
| E100STLEND 1992 | GEARCASE |
| E100STLERC 1994 | GEARCASE |
| E100STLESB 1990 | GEARCASE |
| E100STLETS 1993 | GEARCASE |
| E100TLCSC 1980 | GEARCASE |
| E100TXCSC 1980 | GEARCASE |
| E100WQLECS 1998 | GEARCASE -- 100WQL MODELS |
| E100WQXECS 1998 | GEARCASE -- 100WQL MODELS |
| E110MLCCA 1988 | GEARCASE |
| E110MLCDC 1986 | GEARCASE |
| E110MLCEM 1989 | GEARCASE |

| | |
|-----------------|---------------------------------------|
| E110MLCUR 1987 | GEARCASE |
| E110TLCCA 1988 | GEARCASE |
| E110TLCDC 1986 | GEARCASE |
| E110TLCDF 1986 | GEARCASE |
| E110TLCEM 1989 | GEARCASE |
| E110TLCUR 1987 | GEARCASE |
| E110TXCCA 1988 | GEARCASE |
| E110TXCEM 1989 | GEARCASE |
| E110TXCUR 1987 | GEARCASE |
| E112TSLEDR 1996 | GEARCASE |
| E112TSLEOC 1995 | GEARCASE |
| E112TSLERS 1994 | GEARCASE |
| E112TSXEDR 1996 | GEARCASE |
| E112TSXEOC 1995 | GEARCASE |
| E112TSXERS 1994 | GEARCASE |
| E115DGLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DGLAFF | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DGLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DGLAFH | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DGLAFI | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DGLAFK | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DGLAFL | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DHAAAA | 07-1_GEARCASE, S2-Type |
| E115DHAAAB | 07-1_GEARCASE, S2-Type |
| E115DHABAA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115DHAAFA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115DHAAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DHAIIR | GEARCASE, S2-Type |
| E115DHAIIR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DHLINA | GEARCASE, S2-Type |
| E115DHLINA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DHLISC | GEARCASE |
| E115DHLISC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DHLISF | GEARCASE |
| E115DHLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |

| | |
|------------------|---------------------------------------|
| E115DHLSSES | GEARCASE |
| E115DHLSSES - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DPLAAA | 07-1_GEARCASE, S2-Type |
| E115DPLAAB | 07-1_GEARCASE, S2-Type |
| E115DPLABA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115DPLAFA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115DPLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DPLIIB | GEARCASE, S2-Type |
| E115DPLIIB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DPLINE | GEARCASE, S2-Type |
| E115DPLINE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DPLISF | GEARCASE |
| E115DPLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DPLISM | GEARCASE |
| E115DPLISM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DPLSCR | GEARCASE |
| E115DPLSCR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DPLSEF | GEARCASE |
| E115DPLSEF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DPLSUC | GEARCASE |
| E115DPLSUC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E115DSLAAA | 07-1_GEARCASE, S2-Type |
| E115DSLAAAB | 07-1_GEARCASE, S2-Type |
| E115DSLABA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115DSLAFABA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115DSLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DSLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DSLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DSLAFH | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DSLAFI | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DSLAFK | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DSLAFL | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115DSLIIIB | GEARCASE, S2-Type |
| E115DSLIIIB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DSLIIINE | GEARCASE, S2-Type |

| | |
|---|--|
| E115DSLNE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DSLISF | GEARCASE |
| E115DSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DSLISM | GEARCASE |
| E115DSLISM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DSLSCR | GEARCASE |
| E115DSLSCR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DSLSEF | GEARCASE |
| E115DSLSEF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115DLSUC | GEARCASE |
| E115DLSUC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E115ELECTM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| E115ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| E115ELEOC 1995 | GEARCASE - 20 IN. MODELS |
| E115ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| E115ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| E115FPLEEC 1999 | GEARCASE -- FPL, FSL MODELS |
| E115FPLEEN 1999 | GEARCASE -- FPL, FSL MODELS |
| E115FPLSDS | GEARCASE - PL, SL MODELS |
| E115FPLSDS - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL |
| E115FPLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| E115FPLSNF - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL |
| E115FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002 | GEARCASE - FPL, MODELS |
| E115FPLSOD | GEARCASE - FPL, FSL MODELS |
| E115FPLSOD - FR | 07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES |
| E115FPLSRE | GEARCASE - FPL, FSL MODELS |
| E115FPLSRE - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL |
| E115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E115FPLSTB | GEARCASE - FPL, FSL MODELS |
| E115FPLSTB - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL |
| E115FPXEEC 1999 | GEARCASE -- FPL, FSL MODELS |
| E115FPXEEN 1999 | GEARCASE -- FPL, FSL MODELS |
| E115FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |

| | |
|--|--|
| E115FPXSNF - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL |
| E115FPXSNF Ficht Fuel Injection, 25 in., White, Remote, Elec, TNT 2002 | GEARCASE - FPL, MODELS |
| E115FPXSSH FFI, Elec Start, TNT, 25 IN.shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E115FPXSSR FFI, Elec Start, TNT, 25 IN.shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E115FPXSTB | GEARCASE - FPL, FSL MODELS |
| E115FPXSTB - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL |
| E115FSLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| E115FSLEEC 1999 | GEARCASE -- FPL, FSL MODELS |
| E115FSLEEN 1999 | GEARCASE -- FPL, FSL MODELS |
| E115FSLSDS | GEARCASE - PL, SL MODELS |
| E115FSLSDS - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL |
| E115FSLSIF FFI, elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| E115FSLSOD | GEARCASE - FPL, FSL MODELS |
| E115FSLSOD - FR | 07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES |
| E115FSLSRE | GEARCASE - FPL, FSL MODELS |
| E115FSLSRE - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL |
| E115FSLSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E115FSLSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E115FSLSTB | GEARCASE - FPL, FSL MODELS |
| E115FSLSTB - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL |
| E115FSXECS 1998 | GEARCASE -- FSL, FTL MODELS |
| E115FTLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| E115GLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| E115GLEDR 1996 | GEARCASE - 20 IN. MODELS |
| E115GLEOC 1995 | GEARCASE - 20 IN. MODELS |
| E115GLEUA 1997 | GEARCASE - 20 IN. MODELS |
| E115GLEUC 1997 | GEARCASE - 20 IN. MODELS |
| E115GNLAFL | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115HGLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115HGLAFF | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115HSLAAA | 07-1_GEARCASE, S2-Type |
| E115HSLAAB | 07-1_GEARCASE, S2-Type |
| E115HSLABA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115HSLAFA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |

| | |
|-----------------|--|
| E115HSLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115HSLAFF | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E115HSLIIR | GEARCASE, S2-Type |
| E115HSLIIR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115HSLINA | GEARCASE, S2-Type |
| E115HSLINA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115HSLISC | GEARCASE |
| E115HSLISC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115HSLISF | GEARCASE |
| E115HSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115HSLSES | GEARCASE |
| E115HSLSES - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E115JKLEOC 1995 | GEARCASE |
| E115JKLERS 1994 | GEARCASE |
| E115JLEDA 1996 | GEARCASE |
| E115JLEIE 1991 | GEARCASE |
| E115JLEND 1992 | GEARCASE |
| E115JLEOR 1995 | GEARCASE |
| E115JLERC 1994 | GEARCASE |
| E115JLETS 1993 | GEARCASE |
| E115JTLECS 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| E115MLCIH 1981 | GEARCASE |
| E115MLCIM 1981 | GEARCASE |
| E115MLCNB 1982 | GEARCASE |
| E115MLCOS 1985 | GEARCASE |
| E115MLCRD 1984 | GEARCASE |
| E115MLCSA 1980 | GEARCASE |
| E115MLCTE 1983 | GEARCASE |
| E115MLEIE 1991 | GEARCASE |
| E115MLEND 1992 | GEARCASE |
| E115MLEOR 1995 | GEARCASE |
| E115MLERS 1994 | GEARCASE |
| E115MLESB 1990 | GEARCASE |
| E115MLETS 1993 | GEARCASE |
| E115SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |

| | |
|-----------------|--|
| E115SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| E115SLEOC 1995 | GEARCASE - 20 IN. MODELS |
| E115SLEUA 1997 | GEARCASE - 20 IN. MODELS |
| E115SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| E115SNLAFL | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E115SXECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| E115SXEDR 1996 | GEARCASE - 20 IN. MODELS |
| E115SXEOC 1995 | GEARCASE - 20 IN. MODELS |
| E115SXEUA 1997 | GEARCASE - 20 IN. MODELS |
| E115SXEUC 1997 | GEARCASE - 20 IN. MODELS |
| E115TLCIH 1981 | GEARCASE |
| E115TLCIM 1981 | GEARCASE |
| E115TLCNB 1982 | GEARCASE |
| E115TLCOS 1985 | GEARCASE |
| E115TLCRD 1984 | GEARCASE |
| E115TLCSA 1980 | GEARCASE |
| E115TLCTE 1983 | GEARCASE |
| E115TLEDA 1996 | GEARCASE |
| E115TLEIE 1991 | GEARCASE |
| E115TLEND 1992 | GEARCASE |
| E115TLEOR 1995 | GEARCASE |
| E115TLERC 1994 | GEARCASE |
| E115TLESB 1990 | GEARCASE |
| E115TLETS 1993 | GEARCASE |
| E115TSLECM 1998 | GEARCASE |
| E115TSLEUA 1997 | GEARCASE |
| E115TSXECM 1998 | GEARCASE |
| E115TSXEUA 1997 | GEARCASE |
| E115TXADA 1996 | GEARCASE |
| E115TXAOR 1995 | GEARCASE |
| E115TXARS 1994 | GEARCASE |
| E115TXATS 1993 | GEARCASE |
| E115TXCIH 1981 | GEARCASE |
| E115TXCIM 1981 | GEARCASE |
| E115TXCNB 1982 | GEARCASE |

| | |
|----------------|---|
| E115TXCRD 1984 | GEARCASE |
| E115TXCSA 1980 | GEARCASE |
| E115TXCTE 1983 | GEARCASE |
| E115TXEIE 1991 | GEARCASE |
| E115TXEND 1992 | GEARCASE |
| E115TXESB 1990 | GEARCASE |
| E120TLCCA 1988 | GEARCASE - 120TL & TX/140 TL |
| E120TLCDC 1986 | GEARCASE |
| E120TLCEM 1989 | GEARCASE - 120TL & TX/140 TL |
| E120TLCUR 1987 | GEARCASE |
| E120TLEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| E120TLEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| E120TLERC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E120TLERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E120TLESB 1990 | GEARCASE - 120TL & TX/140 TL |
| E120TLETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E120TLETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E120TXARC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E120TXARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E120TXATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E120TXATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E120TXCCA 1988 | GEARCASE - 120TL & TX/140 TL |
| E120TXCDC 1986 | GEARCASE |
| E120TXCEM 1989 | GEARCASE - 120TL & TX/140 TL |
| E120TXCUR 1987 | GEARCASE |
| E120TXEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| E120TXEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| E120TXERC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E120TXERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E120TXESB 1990 | GEARCASE - 120TL & TX/140 TL |
| E120TXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E120TXETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |

| | |
|-----------------|---|
| E125ESXENR 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| E125ESXERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E125ESXESS 1990 | GEARCASE - ESX MODELS ONLY |
| E125ESXETA 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E125ESXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E125ESXW 1989 | GEARCASE - ESX MODELS ONLY |
| E130DGLAFB | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DGLAFF | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DGLAFH | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DGLAFI | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DGLAFK | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DGLAFL | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DPLAAA | 07-1_GEARCASE, S2-Type |
| E130DPLAAB | 07-1_GEARCASE, S2-Type |
| E130DPLABA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DPLAFA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DPLAFB | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DPLIIR | GEARCASE, S2-Type |
| E130DPLIIR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DPLINA | GEARCASE, S2-Type |
| E130DPLINA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DPLISC | GEARCASE |
| E130DPLISC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DPLISF | GEARCASE |
| E130DPLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DPLSES | GEARCASE |
| E130DPLSES - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DSLAAA | 07-1_GEARCASE, S2-Type |
| E130DSLAAAB | 07-1_GEARCASE, S2-Type |
| E130DSLABA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DSLAFI | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DSLAFB | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DSLAFH | 07-1_GEARCASE, (0.50 Ratio) S2-Type |

| | |
|------------------|---|
| E130DSLAFI | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DSLAFK | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DSLAFL | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E130DSLIIIR | GEARCASE, S2-Type |
| E130DSLIIIR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DSLINA | GEARCASE, S2-Type |
| E130DSLINA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DSLISC | GEARCASE |
| E130DSLISC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DSLISF | GEARCASE |
| E130DSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E130DSLSES | GEARCASE |
| E130DSLSES - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S2 |
| E140CXARC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140CXARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140CXATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140CXATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140CXCCS 1988 | GEARCASE - 120TL & TX/140 TL |
| E140CXCEC 1989 | GEARCASE - 120TL & TX/140 TL |
| E140CXEIA 1991 | GEARCASE - 120TL & TX/140 TL |
| E140CXENM 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| E140CXERE 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140CXERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140CXESR 1990 | GEARCASE - 120TL & TX/140 TL |
| E140CXETB 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140CXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140MLCIH 1981 | GEARCASE |
| E140MLCIM 1981 | GEARCASE |
| E140MLCNB 1982 | GEARCASE |
| E140MLCSA 1980 | GEARCASE |
| E140MLCTE 1983 | GEARCASE |
| E140TLATC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |

| | |
|-----------------|---|
| E140TLATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140TLCCM 1988 | GEARCASE - 120TL & TX/140 TL |
| E140TLCDC 1986 | GEARCASE |
| E140TLCEB 1989 | GEARCASE - 120TL & TX/140 TL |
| E140TLCRD 1984 | GEARCASE |
| E140TLCUA 1987 | GEARCASE |
| E140TLEID 1991 | GEARCASE - 120TL & TX/140 TL |
| E140TLENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| E140TLERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140TLERR 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140TLESE 1990 | GEARCASE - 120TL & TX/140 TL |
| E140TLETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140TLETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140TRLCIH 1981 | GEARCASE |
| E140TRLCIM 1981 | GEARCASE |
| E140TRLCNB 1982 | GEARCASE |
| E140TRLCSA 1980 | GEARCASE |
| E140TRLCTE 1983 | GEARCASE |
| E140TRXCIH 1981 | GEARCASE |
| E140TRXCIM 1981 | GEARCASE |
| E140TRXCNB 1982 | GEARCASE |
| E140TRXCSA 1980 | GEARCASE |
| E140TRXCTE 1983 | GEARCASE |
| E140TXARC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140TXARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140TXATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140TXATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140TXCCM 1988 | GEARCASE - 120TL & TX/140 TL |
| E140TXCDC 1986 | GEARCASE |
| E140TXCEB 1989 | GEARCASE - 120TL & TX/140 TL |
| E140TXCRD 1984 | GEARCASE |
| E140TXCUA 1987 | GEARCASE |
| E140TXEID 1991 | GEARCASE - 120TL & TX/140 TL |

| | |
|-------------------------|---|
| E140TXENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| E140TXERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140TXERR 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| E140TXESE 1990 | GEARCASE - 120TL & TX/140 TL |
| E140TXETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E140TXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| E40AELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40ARLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40ATLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40DELSDA | GEARCASE |
| E40DELSDA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DELSOR | GEARCASE |
| E40DELSOR - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E40DELSRC | GEARCASE |
| E40DELSRC - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E40DGTLAGA | 07-1_GEARCASE, F-Type |
| E40DGTLAGB | 07-1_GEARCASE, F-Type |
| E40DGTLAGC | 07-1_GEARCASE, F-Type |
| E40DGTLAGD | 07-1_GEARCASE, F-Type |
| E40DGTLAGF | 07-1_GEARCASE, F-Type |
| E40DGTLAGG | 07-1_GEARCASE, F-Type |
| E40DHGLAGA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHGLAGB - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHGLAGC - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHGLAGD - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHGLAGF - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHGLAGG - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLAAA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLABA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLAFA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLAFB - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLAGA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLAGB - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLAGC - ITALY ONLY | 07-1_GEARCASE, F-Type |

| | |
|-------------------------|--------------------------------------|
| E40DHLINS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DHLINS - ITALY ONLY | GEARCASE, F-Type |
| E40DHSLAAA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLABA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAFA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAFB - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAGA - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAGB - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAGC - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAGD - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAGF - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHSLAGG - ITALY ONLY | 07-1_GEARCASE, F-Type |
| E40DHLINS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DHLINS - ITALY ONLY | GEARCASE, F-Type |
| E40DPGLAGA | 07-1_GEARCASE, F-Type |
| E40DPGLAGB | 07-1_GEARCASE, F-Type |
| E40DPGLAGC | 07-1_GEARCASE, F-Type |
| E40DPGLAGD | 07-1_GEARCASE, F-Type |
| E40DPGLAGF | 07-1_GEARCASE, F-Type |
| E40DPGLAGG | 07-1_GEARCASE, F-Type |
| E40DPLAAA | 07-1_GEARCASE, F-Type |
| E40DPLABA | 07-1_GEARCASE, F-Type |
| E40DPLAFA | 07-1_GEARCASE, F-Type |
| E40DPLAFB | 07-1_GEARCASE, F-Type |
| E40DPLAGA | 07-1_GEARCASE, F-Type |
| E40DPLIIS | GEARCASE, F-Type |
| E40DPLIIS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DPLINC | GEARCASE, F-Type |
| E40DPLINC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DPLISD | GEARCASE |
| E40DPLISD - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DPLISF | GEARCASE |
| E40DPLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DPLSCB | GEARCASE |
| E40DPLSCB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |

| | |
|----------------|--------------------------------------|
| E40DPLSDA | GEARCASE |
| E40DPLSDA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DPLSEE | GEARCASE |
| E40DPLSEE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DPLSOR | GEARCASE |
| E40DPLSOR - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E40DPLSRC | GEARCASE |
| E40DPLSRC - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E40DPLSUM | GEARCASE |
| E40DPLSUM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRGLAGA | 07-1_GEARCASE, F-Type |
| E40DRGLAGB | 07-1_GEARCASE, F-Type |
| E40DRGLAGC | 07-1_GEARCASE, F-Type |
| E40DRGLAGD | 07-1_GEARCASE, F-Type |
| E40DRGLAGF | 07-1_GEARCASE, F-Type |
| E40DRGLAGG | 07-1_GEARCASE, F-Type |
| E40DRLAAA | 07-1_GEARCASE, F-Type |
| E40DRLABA | 07-1_GEARCASE, F-Type |
| E40DRLAFA | 07-1_GEARCASE, F-Type |
| E40DRLAFB | 07-1_GEARCASE, F-Type |
| E40DRLAGA | 07-1_GEARCASE, F-Type |
| E40DRLIIS | GEARCASE, F-Type |
| E40DRLIIS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRLINC | GEARCASE, F-Type |
| E40DRLINC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRLISD | GEARCASE |
| E40DRLISD - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRLISF | GEARCASE |
| E40DRLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRLSCB | GEARCASE |
| E40DRLSCB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRLSDA | GEARCASE |
| E40DRLSDA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRLSEE | GEARCASE |
| E40DRLSEE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |

| | |
|----------------|--------------------------------------|
| E40DRLSOR | GEARCASE |
| E40DRLSOR - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E40DRLSRC | GEARCASE |
| E40DRLSRC - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E40DRLSUM | GEARCASE |
| E40DRLSUM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DRMLABA | 07-1_GEARCASE, F-Type |
| E40DRMLAGA | 07-1_GEARCASE, F-Type |
| E40DRMLAGB | 07-1_GEARCASE, F-Type |
| E40DRMLAGC | 07-1_GEARCASE, F-Type |
| E40DRMLAGD | 07-1_GEARCASE, F-Type |
| E40DRMLAGF | 07-1_GEARCASE, F-Type |
| E40DRMLAGG | 07-1_GEARCASE, F-Type |
| E40DSLAAA | 07-1_GEARCASE, F-Type |
| E40DSLABA | 07-1_GEARCASE, F-Type |
| E40DSLafa | 07-1_GEARCASE, F-Type |
| E40DSLAFB | 07-1_GEARCASE, F-Type |
| E40DSLAGA | 07-1_GEARCASE, F-Type |
| E40DSLAGB | 07-1_GEARCASE, F-Type |
| E40DSLAGC | 07-1_GEARCASE, F-Type |
| E40DSLAGD | 07-1_GEARCASE, F-Type |
| E40DSLAGF | 07-1_GEARCASE, F-Type |
| E40DSLAGG | 07-1_GEARCASE, F-Type |
| E40DSLIIA | GEARCASE, F-Type |
| E40DSLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DSLINM | GEARCASE, F-Type |
| E40DSLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DSLISF | GEARCASE |
| E40DSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DSLISR | GEARCASE |
| E40DSLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DSLSCS | GEARCASE |
| E40DSLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DSLSEC | GEARCASE |
| E40DSLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |

| | |
|---|---|
| E40DTLAAA | 07-1_GEARCASE, F-Type |
| E40DTLABA | 07-1_GEARCASE, F-Type |
| E40DTLAFA | 07-1_GEARCASE, F-Type |
| E40DTLAFB | 07-1_GEARCASE, F-Type |
| E40DTLAGA | 07-1_GEARCASE, F-Type |
| E40DTLIIA | GEARCASE, F-Type |
| E40DTLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DTLINM | GEARCASE, F-Type |
| E40DTLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DTLISF | GEARCASE |
| E40DTLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DTLISR | GEARCASE |
| E40DTLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DTLSCS | GEARCASE |
| E40DTLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40DTLSEC | GEARCASE |
| E40DTLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E40ECCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40ELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40RCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40RLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40TECCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40TELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40TLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40TTLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E40WREES 1999 | GEARCASE |
| E40WRLEES 1999 | GEARCASE |
| E40WRLSIR commercial, rope start, 20 in shaft 2001 | GEARCASE |
| E40WRLSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000 | GEARCASE |
| E40WRSIR commercial, rope start, 15 in shaft 2001 | GEARCASE |
| E40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000 | GEARCASE |
| E40WRYEES 1999 | GEARCASE |
| E40WRYSIR commercial, rope start, 25 in shaft 2001 | GEARCASE |
| E40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000 | GEARCASE |

| | |
|-----------------|---|
| E45RCCDS 1986 | GEARCASE |
| E45RCCUC 1987 | GEARCASE |
| E45RCE 1989 | GEARCASE |
| E45RCEIA 1991 | GEARCASE |
| E45RCENM 1992 | GEARCASE |
| E45RCEOD 1995 | GEARCASE |
| E45RCERE 1994 | GEARCASE |
| E45RCESR 1990 | GEARCASE |
| E45RCETB 1993 | GEARCASE |
| E45RCLCDS 1986 | GEARCASE |
| E45RCLCUC 1987 | GEARCASE |
| E45RCLE 1989 | GEARCASE |
| E45RCLEDS 1996 | GEARCASE |
| E45RCLEIA 1991 | GEARCASE |
| E45RCLENM 1992 | GEARCASE |
| E45RCLEOD 1995 | GEARCASE |
| E45RCLERE 1994 | GEARCASE |
| E45RCLESR 1990 | GEARCASE |
| E45RCLETB 1993 | GEARCASE |
| E45RCLEUC 1997 | GEARCASE |
| E45WMLE 1989 | GEARCASE |
| E45WMLEIA 1991 | GEARCASE |
| E45WMLLENM 1992 | GEARCASE |
| E45WMLESR 1990 | GEARCASE |
| E50BECCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E50BECIC 1981 | GEARCASE, ROPE START |
| E50BELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E50BELCIC 1981 | GEARCASE, ROPE START |
| E50DGTLAGA | 07-1_GEARCASE, F-Type |
| E50DGTLAGB | 07-1_GEARCASE, F-Type |
| E50DGTLAGC | 07-1_GEARCASE, F-Type |
| E50DGTLAGD | 07-1_GEARCASE, F-Type |
| E50DGTLAGF | 07-1_GEARCASE, F-Type |
| E50DGTLAGG | 07-1_GEARCASE, F-Type |
| E50DPGLAGA | 07-1_GEARCASE, F-Type |

| | |
|----------------|--------------------------------------|
| E50DPGLAGB | 07-1_GEARCASE, F-Type |
| E50DPGLAGC | 07-1_GEARCASE, F-Type |
| E50DPGLAGD | 07-1_GEARCASE, F-Type |
| E50DPGLAGF | 07-1_GEARCASE, F-Type |
| E50DPGLAGG | 07-1_GEARCASE, F-Type |
| E50DPLAAA | 07-1_GEARCASE, F-Type |
| E50DPLABA | 07-1_GEARCASE, F-Type |
| E50DPLAFA | 07-1_GEARCASE, F-Type |
| E50DPLAFB | 07-1_GEARCASE, F-Type |
| E50DPLAGA | 07-1_GEARCASE, F-Type |
| E50DPLIIS | GEARCASE, F-Type |
| E50DPLIIS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DPLINC | GEARCASE, F-Type |
| E50DPLINC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DPLISD | GEARCASE |
| E50DPLISD - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DPLISF | GEARCASE |
| E50DPLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DPLSCB | GEARCASE |
| E50DPLSCB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DPLSDA | GEARCASE |
| E50DPLSEE | GEARCASE |
| E50DPLSEE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DPLSOR | GEARCASE |
| E50DPLSOR - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E50DPLSRC | GEARCASE |
| E50DPLSRC - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E50DPLSUM | GEARCASE |
| E50DPLSUM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DRMLAFA | 07-1_GEARCASE, F-Type |
| E50DRMLAFB | 07-1_GEARCASE, F-Type |
| E50DSLAAA | 07-1_GEARCASE, F-Type |
| E50DSLABA | 07-1_GEARCASE, F-Type |
| E50DSLafa | 07-1_GEARCASE, F-Type |
| E50DSLAFB | 07-1_GEARCASE, F-Type |

| | |
|----------------|--------------------------------------|
| E50DSLAGA | 07-1_GEARCASE, F-Type |
| E50DSLAGB | 07-1_GEARCASE, F-Type |
| E50DSLAGC | 07-1_GEARCASE, F-Type |
| E50DSLAGD | 07-1_GEARCASE, F-Type |
| E50DSLAGF | 07-1_GEARCASE, F-Type |
| E50DSLAGG | 07-1_GEARCASE, F-Type |
| E50DSLIIA | GEARCASE, F-Type |
| E50DSLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DSLINM | GEARCASE, F-Type |
| E50DSLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DSLISF | GEARCASE |
| E50DSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DSLISR | GEARCASE |
| E50DSLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DSLSCS | GEARCASE |
| E50DSLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DSLSEC | GEARCASE |
| E50DSLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DTLAAA | 07-1_GEARCASE, F-Type |
| E50DTLABA | 07-1_GEARCASE, F-Type |
| E50DTLAFA | 07-1_GEARCASE, F-Type |
| E50DTLAFB | 07-1_GEARCASE, F-Type |
| E50DTLAGA | 07-1_GEARCASE, F-Type |
| E50DTLECA 1998 | GEARCASE |
| E50DTLEDC 1996 | GEARCASE |
| E50DTLEOS 1995 | GEARCASE |
| E50DTLEUR 1997 | GEARCASE |
| E50DTLIIA | GEARCASE, F-Type |
| E50DTLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DTLINM | GEARCASE, F-Type |
| E50DTLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DTLISF | GEARCASE |
| E50DTLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DTLISR | GEARCASE |
| E50DTLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |

| | |
|-----------------|--|
| E50DTLSCS | GEARCASE |
| E50DTLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50DTLSEC | GEARCASE |
| E50DTLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E50ELED 1996 | GEARCASE |
| E50ELEOS 1995 | GEARCASE |
| E50ELEUR 1997 | GEARCASE |
| E50TELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E50TLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| E50TTLECA 1998 | GEARCASE |
| E50TTLEDC 1996 | GEARCASE |
| E50TTLEOS 1995 | GEARCASE |
| E50TTLEUR 1997 | GEARCASE |
| E55MJRLAAA | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLABA | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLABB | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLABF | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLAFA | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLAFB | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLAFC | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLAFD | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLAFF | 07-1_GEARCASE, F-Type (MJRL) |
| E55MJRLIIM | GEARCASE, F-Type (MJRL) |
| E55MJRLIIM - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL |
| E55MJRLINB | GEARCASE, F-Type (MJRL) |
| E55MJRLINB - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL |
| E55MJRLISA | GEARCASE |
| E55MJRLISA - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL |
| E55MJRLSCC | GEARCASE |
| E55MJRLSCC - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL |
| E55MJRLSEF | GEARCASE |
| E55MJRLSEF - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL |
| E55MJRLSER | GEARCASE |
| E55MJRLSER - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL |
| E55MRLAAA | 07-1_GEARCASE, F-Type (MRL) |

| | |
|----------------|---|
| E55MRLABA | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLABB | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLABF | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLAFA | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLAFB | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLAFC | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLAFD | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLAFF | 07-1_GEARCASE, F-Type (MRL) |
| E55MRLIIM | GEARCASE, F-Type (MRL) |
| E55MRLINB | GEARCASE, F-Type (MRL) |
| E55MRLINB - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MRL |
| E55MRLISA | GEARCASE |
| E55MRLISA - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MRL |
| E55MRLSCC | GEARCASE |
| E55MRLSCC - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MRL |
| E55MRLSEF | GEARCASE |
| E55MRLSEF - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MRL |
| E55MRLSER | GEARCASE |
| E55MRLSER - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles MRL |
| E55RCIM 1981 | GEARCASE, ROPE START |
| E55RLCSA 1980 | GEARCASE, ROPE START |
| E55RSLC 1997 | GEARCASE |
| E55RSLG 1995 | GEARCASE |
| E55RSLN 1983 | GEARCASE |
| E55RSLN-2 1983 | GEARCASE |
| E55RSLW 1996 | GEARCASE |
| E55RSN 1983 | GEARCASE |
| E55RSN-2 1983 | GEARCASE |
| E55RSYN 1983 | GEARCASE |
| E55RSYN-2 1983 | GEARCASE |
| E55RWLCDC 1986 | GEARCASE |
| E55RWLCOS 1985 | GEARCASE |
| E55RWLCRD 1984 | GEARCASE |
| E55RWLCUC 1987 | GEARCASE |
| E55RWLE 1989 | GEARCASE |

| | |
|---|--------------------------------------|
| E55RWLEIA 1991 | GEARCASE |
| E55RWLENM 1992 | GEARCASE |
| E55RWLERE 1994 | GEARCASE |
| E55RWLESR 1990 | GEARCASE |
| E55RWLETB 1993 | GEARCASE |
| E55TLCIM 1981 | GEARCASE, ROPE START |
| E55WREES 1999 | GEARCASE |
| E55WRLEES 1999 | GEARCASE |
| E55WRLSIR commercial, rope start, 20 in shaft 2001 | GEARCASE |
| E55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000 | GEARCASE |
| E55WRSIR commercial, rope start, 15 in shaft 2001 | GEARCASE |
| E55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000 | GEARCASE |
| E55WRYEES 1999 | GEARCASE |
| E55WRYISIR commercial, rope start, 25 in shaft 2001 | GEARCASE |
| E55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000 | GEARCASE |
| E60DGTLAGA | 07-1_GEARCASE, F-Type |
| E60DGTLAGB | 07-1_GEARCASE, F-Type |
| E60DGTLAGC | 07-1_GEARCASE, F-Type |
| E60DGTLAGD | 07-1_GEARCASE, F-Type |
| E60DGTLAGF | 07-1_GEARCASE, F-Type |
| E60DGTLAGG | 07-1_GEARCASE, F-Type |
| E60DPGLAGA | 07-1_GEARCASE, F-Type |
| E60DPGLAGB | 07-1_GEARCASE, F-Type |
| E60DPGLAGC | 07-1_GEARCASE, F-Type |
| E60DPGLAGD | 07-1_GEARCASE, F-Type |
| E60DPGLAGF | 07-1_GEARCASE, F-Type |
| E60DPGLAGG | 07-1_GEARCASE, F-Type |
| E60DPLAAA | 07-1_GEARCASE, F-Type |
| E60DPLABA | 07-1_GEARCASE, F-Type |
| E60DPLAFA | 07-1_GEARCASE, F-Type |
| E60DPLAFB | 07-1_GEARCASE, F-Type |
| E60DPLAGA | 07-1_GEARCASE, F-Type |
| E60DPLIIS | GEARCASE, F-Type |
| E60DPLIIS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |

| | |
|----------------|--------------------------------------|
| E60DPLINC | GEARCASE, F-Type |
| E60DPLINC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DPLISD | GEARCASE |
| E60DPLISD - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DPLISF | GEARCASE |
| E60DPLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DPLSCB | GEARCASE |
| E60DPLSCB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DPLSDA | GEARCASE |
| E60DPLSDA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DPLSEE | GEARCASE |
| E60DPLSEE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DPLSUM | GEARCASE |
| E60DPLSUM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DSLAAA | 07-1_GEARCASE, F-Type |
| E60DSLABA | 07-1_GEARCASE, F-Type |
| E60DSLafa | 07-1_GEARCASE, F-Type |
| E60DSLAFB | 07-1_GEARCASE, F-Type |
| E60DSLAGA | 07-1_GEARCASE, F-Type |
| E60DSLAGB | 07-1_GEARCASE, F-Type |
| E60DSLAGC | 07-1_GEARCASE, F-Type |
| E60DSLAGD | 07-1_GEARCASE, F-Type |
| E60DSLAGF | 07-1_GEARCASE, F-Type |
| E60DSLAGG | 07-1_GEARCASE, F-Type |
| E60DSLIIA | GEARCASE, F-Type |
| E60DSLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DSLINM | GEARCASE, F-Type |
| E60DSLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DSLISF | GEARCASE |
| E60DSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DSLISR | GEARCASE |
| E60DSLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DSLSCS | GEARCASE |
| E60DSLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DSLSEC | GEARCASE |

| | |
|----------------|--------------------------------------|
| E60DSLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DTLAAA | 07-1_GEARCASE, F-Type |
| E60DTLABA | 07-1_GEARCASE, F-Type |
| E60DTLAFA | 07-1_GEARCASE, F-Type |
| E60DTLAFB | 07-1_GEARCASE, F-Type |
| E60DTLAGA | 07-1_GEARCASE, F-Type |
| E60DTLIIA | GEARCASE, F-Type |
| E60DTLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DTLINM | GEARCASE, F-Type |
| E60DTLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DTLISF | GEARCASE |
| E60DTLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DTLISR | GEARCASE |
| E60DTLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DTLSCS | GEARCASE |
| E60DTLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60DTLSEC | GEARCASE |
| E60DTLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E60ECIA 1981 | GEARCASE, ROPE START |
| E60ECIH 1981 | GEARCASE, ROPE START |
| E60ECSR 1980 | GEARCASE, ROPE START |
| E60ELCCR 1988 | GEARCASE |
| E60ELCDS 1986 | GEARCASE - 20" MODELS |
| E60ELCEA 1989 | GEARCASE |
| E60ELCIA 1981 | GEARCASE, ROPE START |
| E60ELCIH 1981 | GEARCASE, ROPE START |
| E60ELCSR 1980 | GEARCASE, ROPE START |
| E60ELCUC 1987 | GEARCASE - 20" MODELS |
| E60ELEDR 1996 | GEARCASE |
| E60ELEIB 1991 | GEARCASE |
| E60ELENE 1992 | GEARCASE |
| E60ELEOC 1995 | GEARCASE |
| E60ELERS 1994 | GEARCASE |
| E60ELERV 1994 | GEARCASE |
| E60ELES 1990 | GEARCASE |

| | |
|----------------|-------------------------------------|
| E60ELETD 1993 | GEARCASE |
| E60ELEUA 1997 | GEARCASE |
| E60HGLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E60HGLAFD | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E60HGLAFF | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E60HGLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E60HSLAFD | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E60HSLAFF | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E60HSLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E60TLCCR 1988 | GEARCASE |
| E60TLCDS 1986 | GEARCASE - 20" MODELS |
| E60TLCEA 1989 | GEARCASE |
| E60TLCIA 1981 | GEARCASE, ROPE START |
| E60TLCIH 1981 | GEARCASE, ROPE START |
| E60TLCUC 1987 | GEARCASE - 20" MODELS |
| E60TLECM 1998 | GEARCASE |
| E60TLEDR 1996 | GEARCASE |
| E60TLEIB 1991 | GEARCASE |
| E60TLENE 1992 | GEARCASE |
| E60TLEOC 1995 | GEARCASE |
| E60TLERS 1994 | GEARCASE |
| E60TLERV 1994 | GEARCASE |
| E60TLESM 1990 | GEARCASE |
| E60TLETD 1993 | GEARCASE |
| E60TLEUA 1997 | GEARCASE |
| E60TTLCCR 1988 | GEARCASE |
| E60TTLCEA 1989 | GEARCASE |
| E60TTLECM 1998 | GEARCASE |
| E60TTLEDR 1996 | GEARCASE |
| E60TTLEIB 1991 | GEARCASE |
| E60TTLENE 1992 | GEARCASE |
| E60TTLEOC 1995 | GEARCASE |
| E60TTLERS 1994 | GEARCASE |
| E60TTLERV 1994 | GEARCASE |
| E60TTLESM 1990 | GEARCASE |

| | |
|------------------|--------------------------------------|
| E60TTLETD 1993 | GEARCASE |
| E60TTLEUA 1997 | GEARCASE |
| E60WDRLSOS | GEARCASE |
| E60WDRLSOS - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E60WDREYSOS | GEARCASE |
| E60WDREYSOS - FR | 07-1_BOÎTIER D'ENGRENAGES |
| E65GLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65GLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65GLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65GNLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65GNLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65GNLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65RSLC 1995 | GEARCASE |
| E65RSLM 1996 | GEARCASE |
| E65RSLZ2 1997 | GEARCASE |
| E65RWLCDR 1986 | GEARCASE |
| E65RWLCOC 1985 | GEARCASE |
| E65RWLCRS 1984 | GEARCASE |
| E65SLABB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65SLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65SLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65SLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65SNLABB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65SNLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65SNLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65SNLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E65TELCDR 1986 | GEARCASE |
| E65TELCOC 1985 | GEARCASE |
| E65TELCRS 1984 | GEARCASE |
| E65WDRLIIA | GEARCASE, F-Type |
| E65WDRLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRLINM | GEARCASE, F-Type |
| E65WDRLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRLISF | GEARCASE |
| E65WDRLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |

| | |
|--|--------------------------------------|
| E65WDRLISR | GEARCASE |
| E65WDRLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRLLSCS | GEARCASE |
| E65WDRLLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRLLSEC | GEARCASE |
| E65WDRLLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRYIIA | GEARCASE, F-Type |
| E65WDRYIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRYINM | GEARCASE, F-Type |
| E65WDRYINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRYISF | GEARCASE |
| E65WDRYISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRYISR | GEARCASE |
| E65WDRYISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRYSCS | GEARCASE |
| E65WDRYSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WDRYSEC | GEARCASE |
| E65WDRYSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type F |
| E65WELEES 1999 | GEARCASE |
| E65WELSIR Commercial, elec start, 20 in shaft 2001 | GEARCASE |
| E65WELSSC Commercial, Elec. Start, 20 IN. shaft 2000 | GEARCASE |
| E65WMLCDR 1986 | GEARCASE |
| E65WMLCOC 1985 | GEARCASE |
| E65WMLCUA 1987 | GEARCASE |
| E65WMLEIB 1991 | GEARCASE |
| E65WMLENE 1992 | GEARCASE |
| E65WMLEOC 1995 | GEARCASE |
| E65WMLERS 1994 | GEARCASE |
| E65WMLESM 1990 | GEARCASE |
| E65WMLETD 1993 | GEARCASE |
| E65WMLZ 1989 | GEARCASE |
| E65WRLEEO 1999 | GEARCASE |
| E65WRLEES 1999 | GEARCASE |
| E65WRLSIR commercial, rope start, 20 in shaft 2001 | GEARCASE |
| E65WRLSSC Commercial, Rope Start, 20 IN. shaft 2000 | GEARCASE |

| | |
|---|------------------------|
| E65WRYEEO 1999 | GEARCASE |
| E65WRYEES 1999 | GEARCASE |
| E65WRY SIR commercial, rope start, 22.5 in shaft 2001 | GEARCASE |
| E65WRYSSC Commercial, Rope Start, 22.5 IN. shaft 2000 | GEARCASE |
| E65WTLCOC 1985 | GEARCASE |
| E65WTL CRS 1984 | GEARCASE |
| E70ELCCA 1988 | GEARCASE |
| E70ELCDC 1986 | GEARCASE |
| E70ELCEM 1989 | GEARCASE |
| E70ELCIH 1981 | GEARCASE - 20" TRANSOM |
| E70ELCIM 1981 | GEARCASE - 20" TRANSOM |
| E70ELCNB 1982 | GEARCASE - 20" TRANSOM |
| E70ELCOS 1985 | GEARCASE - 20" MODELS |
| E70ELCRD 1984 | GEARCASE - 20" MODELS |
| E70ELCSA 1980 | GEARCASE-20" TRANSOM |
| E70ELCTE 1983 | GEARCASE - 20" TRANSOM |
| E70ELCUR 1987 | GEARCASE |
| E70ELEIE 1991 | GEARCASE |
| E70ELEND 1992 | GEARCASE |
| E70ELEOR 1995 | GEARCASE |
| E70ELERC 1994 | GEARCASE |
| E70ELERV 1994 | GEARCASE |
| E70ELESB 1990 | GEARCASE |
| E70ELETS 1993 | GEARCASE |
| E70TLCCA 1988 | GEARCASE |
| E70TLCDC 1986 | GEARCASE |
| E70TLCEM 1989 | GEARCASE |
| E70TLCIM 1981 | GEARCASE - 20" TRANSOM |
| E70TLCNB 1982 | GEARCASE - 20" TRANSOM |
| E70TLCOS 1985 | GEARCASE - 20" MODELS |
| E70TLCRD 1984 | GEARCASE - 20" MODELS |
| E70TLCTE 1983 | GEARCASE - 20" TRANSOM |
| E70TLCUR 1987 | GEARCASE |
| E70TLECB 1998 | GEARCASE |
| E70TLEDA 1996 | GEARCASE |

| | |
|----------------|--------------------------------------|
| E70TLEIE 1991 | GEARCASE |
| E70TLEND 1992 | GEARCASE |
| E70TLEOR 1995 | GEARCASE |
| E70TLERC 1994 | GEARCASE |
| E70TLERV 1994 | GEARCASE |
| E70TLESB 1990 | GEARCASE |
| E70TLETS 1993 | GEARCASE |
| E70TLEUM 1997 | GEARCASE |
| E70TTLEIE 1991 | GEARCASE |
| E70TTLEND 1992 | GEARCASE |
| E70TTLEOR 1995 | GEARCASE |
| E70TTLERC 1994 | GEARCASE |
| E70TTLERV 1994 | GEARCASE |
| E70TTLETS 1993 | GEARCASE |
| E75DPGLAFA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPGLAFB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPGLAFC | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPGLAFD | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPGLAFF | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPGLAFG | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPLAAA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPLAAA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DPLABA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPLABB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DPLIIS | GEARCASE, S-Type |
| E75DPLIIS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DPLINC | GEARCASE, S-Type |
| E75DPLINC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DPLISD | GEARCASE - PL, SL MODELS |
| E75DPLISD - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DPLISF | GEARCASE - PL, SL MODELS |
| E75DPLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DPLSCB | GEARCASE - PL, SL MODELS |
| E75DPLSCB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DPLSDA | GEARCASE - PL, SL MODELS |

| | |
|----------------|--|
| E75DPLSDA - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL |
| E75DPLSEE | GEARCASE - PL, SL MODELS |
| E75DPLSEE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DPLSOR | GEARCASE PL & SL MODELS |
| E75DPLSOR - FR | 07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES |
| E75DPLSRC | GEARCASE PL & SL MODELS |
| E75DPLSRC - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL |
| E75DPLSUM | GEARCASE - PL, SL MODELS |
| E75DPLSUM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DSLAAA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAAA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DSLABA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLABB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFD | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFD | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFD | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFG | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLAFG | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E75DSLIIA | GEARCASE, S-Type |
| E75DSLIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DSLINM | GEARCASE, S-Type |
| E75DSLINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DSLISF | GEARCASE - PL, SL MODELS |
| E75DSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DSLISR | GEARCASE - PL, SL MODELS |
| E75DSLISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DSLSCS | GEARCASE - PL, SL MODELS |
| E75DSLSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75DSLSEC | GEARCASE - PL, SL MODELS |
| E75DSLSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E75ECDC 1986 | GEARCASE - 20" MODELS |
| E75ECOS 1985 | GEARCASE - 20" MODELS |
| E75ECDR 1984 | GEARCASE - 20" MODELS |
| E75ECUR 1987 | GEARCASE - 20" MODELS |

| | |
|--|--|
| E75ELCRD 1984 | GEARCASE - 20" MODELS |
| E75ERICIH 1981 | GEARCASE - 20" TRANSOM |
| E75ERICIM 1981 | GEARCASE - 20" TRANSOM |
| E75ERCNB 1982 | GEARCASE - 20" TRANSOM |
| E75ERCSA 1980 | GEARCASE-20" TRANSOM |
| E75ERCTE 1983 | GEARCASE - 20" TRANSOM |
| E75ERLCIH 1981 | GEARCASE - 20" TRANSOM |
| E75ERLCIM 1981 | GEARCASE - 20" TRANSOM |
| E75ERLCNB 1982 | GEARCASE - 20" TRANSOM |
| E75ERLCSA 1980 | GEARCASE-20" TRANSOM |
| E75ERLCTE 1983 | GEARCASE - 20" TRANSOM |
| E75FPLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| E75FPLSNF - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL |
| E75FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002 | GEARCASE - FPL, MODELS |
| E75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E75FPLSTA | GEARCASE - FPL, FSL MODELS |
| E75FPLSTA - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL |
| E75FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| E75TLCRD 1984 | GEARCASE - 20" MODELS |
| E75TRLCIH 1981 | GEARCASE - 20" TRANSOM |
| E75TRLCIM 1981 | GEARCASE - 20" TRANSOM |
| E75TRLCNB 1982 | GEARCASE - 20" TRANSOM |
| E75TRLCSA 1980 | GEARCASE-20" TRANSOM |
| E75TRLCTE 1983 | GEARCASE - 20" TRANSOM |
| E85MLCSA 1980 | GEARCASE |
| E85STLCSA 1980 | GEARCASE |
| E85STXCSA 1980 | GEARCASE |
| E85TTLEIE 1991 | GEARCASE |
| E85TTLEND 1992 | GEARCASE |
| E85TTLEOR 1995 | GEARCASE |
| E85TTLERC 1994 | GEARCASE |
| E85TTLETS 1993 | GEARCASE |
| E88MSLCCC 1988 | GEARCASE |
| E88MSLCER 1989 | GEARCASE |

| | |
|----------------|--|
| E88MSLCUS 1987 | GEARCASE |
| E88MSLEDC 1996 | GEARCASE |
| E88MSLEIM 1991 | GEARCASE |
| E88MSLENB 1992 | GEARCASE |
| E88MSLEOS 1995 | GEARCASE |
| E88MSLERD 1994 | GEARCASE |
| E88MSLESA 1990 | GEARCASE |
| E88MSLETE 1993 | GEARCASE |
| E88TSLEDR 1996 | GEARCASE |
| E88TSLEOC 1995 | GEARCASE |
| E88TSLERS 1994 | GEARCASE |
| E90DHLAFA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90DHLAFB | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90DPGLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DPGLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DPGLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DPGLAFD | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DPGLAFF | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DPGLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DPLAAA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E90DPLAAA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DPLABA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E90DPLABB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E90DPLIIS | GEARCASE, S-Type |
| E90DPLIIS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DPLINC | GEARCASE, S-Type |
| E90DPLINC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DPLISD | GEARCASE - PL, SL MODELS |
| E90DPLISD - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DPLISF | GEARCASE - PL, SL MODELS |
| E90DPLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DPLSCB | GEARCASE - PL, SL MODELS |
| E90DPLSCB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DPLSDA | GEARCASE - PL, SL MODELS |
| E90DPLSDA - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL |

| | |
|-----------------|--|
| E90DPLSEE | GEARCASE - PL, SL MODELS |
| E90DPLSEE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DPLSOR | GEARCASE PL & SL MODELS |
| E90DPLSOR - FR | 07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES |
| E90DPLSRC | GEARCASE PL & SL MODELS |
| E90DPLSRC - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL |
| E90DPLSUM | GEARCASE - PL, SL MODELS |
| E90DPLSUM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DSLAAA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E90DSLAAA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DSLABA | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E90DSLABB | 07-1_GEARCASE, (0.50 Ratio) S-Type |
| E90DSLAF | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DSLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DSLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DSLAFD | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DSLAFD | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DSLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DSLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90DSLIIID | GEARCASE, S-Type |
| E90DSLIIID - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DSLINS | GEARCASE, S-Type |
| E90DSLINS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DSLISE | GEARCASE - PL, SL MODELS |
| E90DSLISE - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DSLISF | GEARCASE - PL, SL MODELS |
| E90DSLISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DSLSCM | GEARCASE - PL, SL MODELS |
| E90DSLSCM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DSLSDR | GEARCASE - PL, SL MODELS |
| E90DSLSDR - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL |
| E90DSLSEB | GEARCASE - PL, SL MODELS |
| E90DSLSEB - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90DLSOC | GEARCASE PL & SL MODELS |
| E90DLSOR - FR | 07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES |
| E90DLSOR | GEARCASE PL & SL MODELS |

| | |
|--|--|
| E90DSLSRC - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL |
| E90DSLSUA | GEARCASE - PL, SL MODELS |
| E90DSLSUM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90ELECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| E90ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| E90ELEOC 1995 | GEARCASE - 20 IN. MODELS |
| E90ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| E90ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| E90EXEOC 1995 | GEARCASE - 20 IN. MODELS |
| E90FPLEEC 1999 | GEARCASE -- FPL, FSL MODELS |
| E90FPLEEN 1999 | GEARCASE -- FPL, FSL MODELS |
| E90FPLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| E90FPLSNF - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL |
| E90FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002 | GEARCASE - FPL, MODELS |
| E90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| E90FPLSTB | GEARCASE - FPL, FSL MODELS |
| E90FPLSTB - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL |
| E90FSLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| E90FSLSTB | GEARCASE - FPL, FSL MODELS |
| E90FSLSTB - FR | 07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL |
| E90FTLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| E90FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| E90GLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GNLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GNLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GNLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GNLAFD | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GNLAFF | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90GNLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90HGLAFB | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HGLAFF | 07-1_GEARCASE, (0.50 Ratio) S2-Type |

| | |
|---------------|--|
| E90HGLAFH | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HGLAFI | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HGLAFK | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HGLAFL | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HSLAFA | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HSLAFB | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HSLAFF | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HSLAFH | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HSLAFI | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HSLAFK | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90HSLAFL | 07-1_GEARCASE, (0.50 Ratio) S2-Type |
| E90JLEIE 1991 | GEARCASE |
| E90JLEND 1992 | GEARCASE |
| E90JLEOR 1995 | GEARCASE |
| E90JLERC 1994 | GEARCASE |
| E90JLETS 1993 | GEARCASE |
| E90MLCDC 1986 | GEARCASE |
| E90MLCIH 1981 | GEARCASE |
| E90MLCIM 1981 | GEARCASE |
| E90MLCNB 1982 | GEARCASE |
| E90MLCOS 1985 | GEARCASE |
| E90MLCRD 1984 | GEARCASE |
| E90MLCTE 1983 | GEARCASE |
| E90MLCUR 1987 | GEARCASE |
| E90MLEOR 1995 | GEARCASE |
| E90MLERC 1994 | GEARCASE |
| E90SLABA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SLABB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| E90SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| E90SLEOC 1995 | GEARCASE - 20 IN. MODELS |
| E90SLEUA 1997 | GEARCASE - 20 IN. MODELS |

| | |
|----------------|-------------------------------------|
| E90SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| E90SNLABA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SNLABB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SNLAFA | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SNLAFB | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SNLAFC | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SNLAFD | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SNLAFF | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90SNLAFG | 07-1_GEARCASE, (0.42 Ratio) S2-Type |
| E90TLCCA 1988 | GEARCASE |
| E90TLCDC 1986 | GEARCASE |
| E90TLCEM 1989 | GEARCASE |
| E90TLCIH 1981 | GEARCASE |
| E90TLCIM 1981 | GEARCASE |
| E90TLCNB 1982 | GEARCASE |
| E90TLCOS 1985 | GEARCASE |
| E90TLCRD 1984 | GEARCASE |
| E90TLCTE 1983 | GEARCASE |
| E90TLCUR 1987 | GEARCASE |
| E90TLEDA 1996 | GEARCASE |
| E90TLEIE 1991 | GEARCASE |
| E90TLEND 1992 | GEARCASE |
| E90TLEOR 1995 | GEARCASE |
| E90TLERC 1994 | GEARCASE |
| E90TLESB 1990 | GEARCASE |
| E90TLETS 1993 | GEARCASE |
| E90TSLECM 1998 | GEARCASE |
| E90TSLEUA 1997 | GEARCASE |
| E90TXARC 1994 | GEARCASE |
| E90TXATS 1993 | GEARCASE |
| E90TXCDC 1986 | GEARCASE |
| E90TXCIH 1981 | GEARCASE |
| E90TXCIM 1981 | GEARCASE |
| E90TXCNB 1982 | GEARCASE |
| E90TXCOS 1985 | GEARCASE |

| | |
|-----------------|--|
| E90TXCRD 1984 | GEARCASE |
| E90TXCTE 1983 | GEARCASE |
| E90WDELIIA | GEARCASE, S-Type |
| E90WDELIIA - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90WDELINM | GEARCASE, S-Type |
| E90WDELINM - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90WDELISF | GEARCASE - PL, SL MODELS |
| E90WDELISF - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90WDELISR | GEARCASE - PL, SL MODELS |
| E90WDELISR - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90WDELSCS | GEARCASE - PL, SL MODELS |
| E90WDELSCS - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| E90WDELSEC | GEARCASE - PL, SL MODELS |
| E90WDELSEC - FR | 07-1_BOÎTIER D'ENGRENAGES, de type S |
| HE115SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| HE115SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| HE115SLEUA 1997 | GEARCASE - 20 IN. MODELS |
| HE115SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| HE115TXADA 1996 | GEARCASE |
| HE45RCLEDS 1996 | GEARCASE |
| HE45RCLEUC 1997 | GEARCASE |
| HE55RSLC 1997 | GEARCASE |
| HE55RSLW 1996 | GEARCASE |
| HE55WMLM 1996 | GEARCASE |
| HE55WMLZ 1997 | GEARCASE |
| HE70TXEDA 1996 | GEARCASE |
| HE70TXEUM 1997 | GEARCASE |
| HE88MSLEDC 1996 | GEARCASE |
| HE90MLEDA 1996 | GEARCASE |
| HE90TXADA 1996 | GEARCASE |
| HJ115SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| HJ115SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| HJ115SLEUA 1997 | GEARCASE - 20 IN. MODELS |
| HJ115SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| HJ115TXADA 1996 | GEARCASE |

| | |
|-----------------|---------------------------|
| HJ45RCLEDS 1996 | GEARCASE |
| HJ45RCLEUC 1997 | GEARCASE |
| HJ55RSLC 1997 | GEARCASE |
| HJ55RSLW 1996 | GEARCASE |
| HJ55WMLM 1996 | GEARCASE |
| HJ55WMLZ 1997 | GEARCASE |
| HJ70TXEDA 1996 | GEARCASE |
| HJ70TXEUM 1997 | GEARCASE |
| HJ88MSLEDC 1996 | GEARCASE |
| HJ90MLEDA 1996 | GEARCASE |
| HJ90TXADA 1996 | GEARCASE |
| J100MLCSC 1980 | GEARCASE |
| J100STLCCA 1988 | GEARCASE |
| J100STLCEM 1989 | GEARCASE |
| J100STLEIE 1991 | GEARCASE |
| J100STLEND 1992 | GEARCASE |
| J100STLERC 1994 | GEARCASE |
| J100STLESB 1990 | GEARCASE |
| J100STLETS 1993 | GEARCASE |
| J100TRLCSC 1980 | GEARCASE |
| J100TRXCSC 1980 | GEARCASE |
| J100WQLECS 1998 | GEARCASE -- 100WQL MODELS |
| J100WQXECS 1998 | GEARCASE -- 100WQL MODELS |
| J110MLCCA 1988 | GEARCASE |
| J110MLCDC 1986 | GEARCASE |
| J110MLCEM 1989 | GEARCASE |
| J110MLCUR 1987 | GEARCASE |
| J110TLAEM 1989 | GEARCASE |
| J110TLCCA 1988 | GEARCASE |
| J110TLCDC 1986 | GEARCASE |
| J110TLCDF 1986 | GEARCASE |
| J110TLCEM 1989 | GEARCASE |
| J110TLCUR 1987 | GEARCASE |
| J110TXCCA 1988 | GEARCASE |
| J110TXCEM 1989 | GEARCASE |

| | |
|-----------------|--|
| J110TXCUR 1987 | GEARCASE |
| J112TSLEDR 1996 | GEARCASE |
| J112TSLEOC 1995 | GEARCASE |
| J112TSLERS 1994 | GEARCASE |
| J112TSXEDR 1996 | GEARCASE |
| J112TSXEOC 1995 | GEARCASE |
| J112TSXERS 1994 | GEARCASE |
| J115ELECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| J115ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| J115ELEOC 1995 | GEARCASE - 20 IN. MODELS |
| J115ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| J115ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| J115FSLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| J115FSXECS 1998 | GEARCASE -- FSL, FTL MODELS |
| J115FTLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| J115GLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| J115GLEDR 1996 | GEARCASE - 20 IN. MODELS |
| J115GLEOC 1995 | GEARCASE - 20 IN. MODELS |
| J115GLEUA 1997 | GEARCASE - 20 IN. MODELS |
| J115GLEUC 1997 | GEARCASE - 20 IN. MODELS |
| J115GLSDE | GEARCASE - PL, GL MODELS |
| J115GLSDE - FR | 17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES |
| J115GLSOB | GEARCASE - PL, GL MODELS |
| J115GLSOB - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J115GLSRC | GEARCASE - PL, GL MODELS |
| J115GLSRC - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J115GLSTA | GEARCASE - PL, GL MODELS |
| J115GLSTA - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL |
| J115JKLEOC 1995 | GEARCASE |
| J115JKLERS 1994 | GEARCASE |
| J115JLEDA 1996 | GEARCASE |
| J115JLEIE 1991 | GEARCASE |
| J115JLEND 1992 | GEARCASE |
| J115JLEOR 1995 | GEARCASE |
| J115JLERC 1994 | GEARCASE |

| | |
|--|---|
| J115JLETS 1993 | GEARCASE |
| J115JPLEEC 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| J115JPLSIA jet drive, elec start, TNT, 20 in shaft 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| J115JPLSSR Jet Drive, Elec. Start,TNT, 20 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115JTLECS 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| J115MLCIH 1981 | GEARCASE |
| J115MLCIM 1981 | GEARCASE |
| J115MLCNB 1982 | GEARCASE |
| J115MLCOS 1985 | GEARCASE |
| J115MLCRD 1984 | GEARCASE |
| J115MLCSA 1980 | GEARCASE |
| J115MLCTE 1983 | GEARCASE |
| J115MLEIE 1991 | GEARCASE |
| J115MLEND 1992 | GEARCASE |
| J115MLEOR 1995 | GEARCASE |
| J115MLERS 1994 | GEARCASE |
| J115MLESB 1990 | GEARCASE |
| J115MLETS 1993 | GEARCASE |
| J115PLEEM 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| J115PLSDA | GEARCASE - PL, GL MODELS |
| J115PLSDA - FR | 17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES |
| J115PLSIE elec start, TNT, 20 in shaft 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| J115PLSNF - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS |
| J115PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002 | GEARCASE - PLS, VLS MODELS |
| J115PLSOR | GEARCASE - PL, GL MODELS |
| J115PLSOR - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J115PLSRC | GEARCASE - PL, GL MODELS |
| J115PLSRC - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J115PLSSB Elec. Start, TNT, 20 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115PLSTS | GEARCASE - PL, GL MODELS |
| J115PLSTS - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL |
| J115PXEEM 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| J115PXSNF - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS |
| J115PXSNF Carbureted, 25 in. shaft, White, Remote, Elec, TNT, 2002 | GEARCASE - PLS, VLS MODELS |

| | |
|--|---|
| J115PXSSB Elec. Start, TNT, 25 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115PXSTS | GEARCASE - PL, GL MODELS |
| J115PXSTS - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL |
| J115SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| J115SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| J115SLEOC 1995 | GEARCASE - 20 IN. MODELS |
| J115SLEUA 1997 | GEARCASE - 20 IN. MODELS |
| J115SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| J115SPLEES 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| J115SPLSSC Elec. Start, TNT, 20 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115SXECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| J115SXEDR 1996 | GEARCASE - 20 IN. MODELS |
| J115SXEOC 1995 | GEARCASE - 20 IN. MODELS |
| J115SXEUA 1997 | GEARCASE - 20 IN. MODELS |
| J115SXEUC 1997 | GEARCASE - 20 IN. MODELS |
| J115TLAIE 1991 | GEARCASE |
| J115TLAND 1992 | GEARCASE |
| J115TLARC 1994 | GEARCASE |
| J115TLASB 1990 | GEARCASE |
| J115TLATS 1993 | GEARCASE |
| J115TLCIH 1981 | GEARCASE |
| J115TLCIM 1981 | GEARCASE |
| J115TLCNB 1982 | GEARCASE |
| J115TLCOS 1985 | GEARCASE |
| J115TLCRD 1984 | GEARCASE |
| J115TLCSA 1980 | GEARCASE |
| J115TLCTE 1983 | GEARCASE |
| J115TLEDA 1996 | GEARCASE |
| J115TLEIE 1991 | GEARCASE |
| J115TLEND 1992 | GEARCASE |
| J115TLEOR 1995 | GEARCASE |
| J115TLERC 1994 | GEARCASE |
| J115TLESB 1990 | GEARCASE |
| J115TLETS 1993 | GEARCASE |
| J115TSLECM 1998 | GEARCASE |

| | |
|---|---|
| J115TSLEUA 1997 | GEARCASE |
| J115TSXECM 1998 | GEARCASE |
| J115TSXEUA 1997 | GEARCASE |
| J115TXADA 1996 | GEARCASE |
| J115TXAOR 1995 | GEARCASE |
| J115TXARS 1994 | GEARCASE |
| J115TXATS 1993 | GEARCASE |
| J115TXCIH 1981 | GEARCASE |
| J115TXCIM 1981 | GEARCASE |
| J115TXCNB 1982 | GEARCASE |
| J115TXCRD 1984 | GEARCASE |
| J115TXCSA 1980 | GEARCASE |
| J115TXCTE 1983 | GEARCASE |
| J115TXEIE 1991 | GEARCASE |
| J115TXEND 1992 | GEARCASE |
| J115TXESB 1990 | GEARCASE |
| J115VLSIC elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| J115VLSNF - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS |
| J115VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002 | GEARCASE - PLS, VLS MODELS |
| J115VLSSS Elec. Start, 20 IN. shaft, wht 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115VXSIC elec start, TNT, 25 in shaft, wht 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| J115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J120TLAEM 1989 | GEARCASE - 120TL & TX/140 TL |
| J120TLAIE 1991 | GEARCASE - 120TL & TX/140 TL |
| J120TLAND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J120TLARC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120TLARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120TLASB 1990 | GEARCASE - 120TL & TX/140 TL |
| J120TLATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J120TLATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J120TLCCA 1988 | GEARCASE - 120TL & TX/140 TL |
| J120TLCDC 1986 | GEARCASE |
| J120TLCEM 1989 | GEARCASE - 120TL & TX/140 TL |
| J120TLCUR 1987 | GEARCASE |

| | |
|-----------------|---|
| J120LEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| J120LEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J120LERC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120LERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120LESB 1990 | GEARCASE - 120TL & TX/140 TL |
| J120LETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J120LETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J120TXARC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120TXARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120TXATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J120TXATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J120TXCCA 1988 | GEARCASE - 120TL & TX/140 TL |
| J120TXCDC 1986 | GEARCASE |
| J120TXCEM 1989 | GEARCASE - 120TL & TX/140 TL |
| J120TXCUR 1987 | GEARCASE |
| J120XEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| J120XEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J120XERC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120XERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J120XESB 1990 | GEARCASE - 120TL & TX/140 TL |
| J120XETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J120XETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J125ESXENR 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J125ESXERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J125ESXESS 1990 | GEARCASE - ESX MODELS ONLY |
| J125ESXETA 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J125ESXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J125ESXW 1989 | GEARCASE - ESX MODELS ONLY |
| J140CXARC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140CXARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140CXATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |

| | |
|----------------|---|
| J140CXATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140CXCCS 1988 | GEARCASE - 120TL & TX/140 TL |
| J140CXCEC 1989 | GEARCASE - 120TL & TX/140 TL |
| J140CXEIA 1991 | GEARCASE - 120TL & TX/140 TL |
| J140CXENM 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J140CXERE 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140CXERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140CXESR 1990 | GEARCASE - 120TL & TX/140 TL |
| J140CXETB 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140CXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140MLCIH 1981 | GEARCASE |
| J140MLCIM 1981 | GEARCASE |
| J140MLCNB 1982 | GEARCASE |
| J140MLCSA 1980 | GEARCASE |
| J140MLCTE 1983 | GEARCASE |
| J140TLAEB 1989 | GEARCASE - 120TL & TX/140 TL |
| J140TLANS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J140TLARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TLARR 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TLASE 1990 | GEARCASE - 120TL & TX/140 TL |
| J140TLATC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140TLATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140TLCCM 1988 | GEARCASE - 120TL & TX/140 TL |
| J140TLCDC 1986 | GEARCASE |
| J140TLCEB 1989 | GEARCASE - 120TL & TX/140 TL |
| J140TLCIH 1981 | GEARCASE |
| J140TLCIM 1981 | GEARCASE |
| J140TLCNB 1982 | GEARCASE |
| J140TLCRD 1984 | GEARCASE |
| J140TLCSA 1980 | GEARCASE |
| J140TLCTE 1983 | GEARCASE |
| J140TLCUA 1987 | GEARCASE |
| J140TLEID 1991 | GEARCASE - 120TL & TX/140 TL |

| | |
|----------------|---|
| J140TLENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J140TLERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TLERR 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TLESE 1990 | GEARCASE - 120TL & TX/140 TL |
| J140TLETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140TLETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140TXARC 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TXARK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TXATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140TXATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140TXCCM 1988 | GEARCASE - 120TL & TX/140 TL |
| J140TXCDC 1986 | GEARCASE |
| J140TXCEB 1989 | GEARCASE - 120TL & TX/140 TL |
| J140TXCIH 1981 | GEARCASE |
| J140XCIM 1981 | GEARCASE |
| J140XCNB 1982 | GEARCASE |
| J140TXCRD 1984 | GEARCASE |
| J140TXCSA 1980 | GEARCASE |
| J140TXCTE 1983 | GEARCASE |
| J140TXCUA 1987 | GEARCASE |
| J140TXEID 1991 | GEARCASE - 120TL & TX/140 TL |
| J140TXENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| J140TXERK 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TXERR 1994 | GEARCASE - 120TL, 125ESX, & 140TL |
| J140TXESE 1990 | GEARCASE - 120TL & TX/140 TL |
| J140TXETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J140TXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| J40AELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40ARLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40ATLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40ECCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40ELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |

| | |
|---|---|
| J40JPLEEC 1999 | GEARCASE |
| J40JPLSIA jet drive,elec start, TNT, 20 in shaft 2001 | GEARCASE |
| J40JPLSSR Jet Drive, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| J40JVLZIA jet drive,elec start, TNT, 20 in shaft, wht 2001 | GEARCASE |
| J40RCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40RLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40TECCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40TELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40TLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40TTLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J40WREES 1999 | GEARCASE |
| J40WRLEES 1999 | GEARCASE |
| J40WRLSIR commercial, rope start, 20 in shaft 2001 | GEARCASE |
| J40WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000 | GEARCASE |
| J40WRSIR commercial, rope start, 15 in shaft 2001 | GEARCASE |
| J40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000 | GEARCASE |
| J40WRYEES 1999 | GEARCASE |
| J40WRYSIR commercial, rope start, 25 in shaft 2001 | GEARCASE |
| J40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000 | GEARCASE |
| J45RCCDS 1986 | GEARCASE |
| J45RCCUC 1987 | GEARCASE |
| J45RCE 1989 | GEARCASE |
| J45RCEIA 1991 | GEARCASE |
| J45RCENM 1992 | GEARCASE |
| J45RCEOD 1995 | GEARCASE |
| J45RCERE 1994 | GEARCASE |
| J45RCESR 1990 | GEARCASE |
| J45RCETB 1993 | GEARCASE |
| J45RCLCDS 1986 | GEARCASE |
| J45RCLCUC 1987 | GEARCASE |
| J45RCLE 1989 | GEARCASE |
| J45RCLEDS 1996 | GEARCASE |
| J45RCLEIA 1991 | GEARCASE |
| J45RCLENM 1992 | GEARCASE |

| | |
|-----------------|---|
| J45RCLEOD 1995 | GEARCASE |
| J45RCLERE 1994 | GEARCASE |
| J45RCLESR 1990 | GEARCASE |
| J45RCLETB 1993 | GEARCASE |
| J45RCLEUC 1997 | GEARCASE |
| J45WMLE 1989 | GEARCASE |
| J45WMLEIA 1991 | GEARCASE |
| J45WMLENM 1992 | GEARCASE |
| J45WMLSR 1990 | GEARCASE |
| J50BECCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J50BECIC 1981 | GEARCASE, ROPE START |
| J50BELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J50BELCIC 1981 | GEARCASE, ROPE START |
| J50DTLECA 1998 | GEARCASE |
| J50DTLEDC 1996 | GEARCASE |
| J50DTLEOS 1995 | GEARCASE |
| J50DTLEUR 1997 | GEARCASE |
| J50ELED 1996 | GEARCASE |
| J50ELEOS 1995 | GEARCASE |
| J50ELEUR 1997 | GEARCASE |
| J50TELCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J50TLCCS 1988 | GEARCASE - 40AR, 40AE, 40AT MODELS ONLY |
| J50TTLECA 1998 | GEARCASE |
| J50TTLEDC 1996 | GEARCASE |
| J50TTLEOS 1995 | GEARCASE |
| J50TTLEUR 1997 | GEARCASE |
| J55APRL | GEARCASE & ROTOR HOUSING (APRL MODEL) |
| J55APRL - FR | 27-6_BOÎTIER D'ENGRENAGES & BOÎTIER DE ROTOR - Modèles APRL |
| J55APRLSOM | GEARCASE & ROTOR HOUSING (APRL MODEL) |
| J55APRLSOM - FR | 27-6_BOÎTIER D'ENGRENAGES ET BOÎTIER DE ROTOR - Modèles APRL |
| J55APRLSRA | GEARCASE & ROTOR HOUSING (APRL MODEL) |
| J55APRLSRA - FR | 27-6_BOÎTIER D'ENGRENAGES ET BOÎTIER DE ROTOR - Modèles APRL |
| J55APRLSRG | GEARCASE & ROTOR HOUSING (APRL MODEL) |
| J55APRLSRG - FR | 27-6_BOÎTIER D'ENGRENAGES ET BOÎTIER DE ROTOR - Modèles APRL |

| | |
|--|--|
| J55MLSOR | GEARCASE (ML MODEL) |
| J55MLSOR - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles ML |
| J55MLSRC | GEARCASE (ML MODEL) |
| J55MLSRC - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles ML |
| J55MLSRG | GEARCASE (ML MODEL) |
| J55MLSRG - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles ML |
| J55MRL | GEARCASE (ML MODEL) |
| J55MRL - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles ML |
| J55RCIM 1981 | GEARCASE, ROPE START |
| J55RLCIM 1981 | GEARCASE, ROPE START |
| J55RLCSA 1980 | GEARCASE,ROPE START |
| J55RSLC 1997 | GEARCASE |
| J55RSLG 1995 | GEARCASE |
| J55RSLN 1983 | GEARCASE |
| J55RSLN-2 1983 | GEARCASE |
| J55RSLW 1996 | GEARCASE |
| J55RSN 1983 | GEARCASE |
| J55RSN-2 1983 | GEARCASE |
| J55RSYN 1983 | GEARCASE |
| J55RSYN-2 1983 | GEARCASE |
| J55RWLCDC 1986 | GEARCASE |
| J55RWLCOS 1985 | GEARCASE |
| J55RWLCRD 1984 | GEARCASE |
| J55RWLCUC 1987 | GEARCASE |
| J55RWLE 1989 | GEARCASE |
| J55RWLEIA 1991 | GEARCASE |
| J55RWLENM 1992 | GEARCASE |
| J55RWLERE 1994 | GEARCASE |
| J55RWLESR 1990 | GEARCASE |
| J55RWLETB 1993 | GEARCASE |
| J55WREES 1999 | GEARCASE |
| J55WRLEES 1999 | GEARCASE |
| J55WRLSIR commercial, rope start, 20 in shaft 2001 | GEARCASE |
| J55WRLSOE | GEARCASE |
| J55WRLSOE - FR | 27-1_BOÎTIER D'ENGRENAGES |

| | |
|---|---------------------------|
| J55WRLSRB | GEARCASE |
| J55WRLSRB - FR | 27-1_BOÎTIER D'ENGRENAGES |
| J55WRLSRG | GEARCASE |
| J55WRLSRG - FR | 27-1_BOÎTIER D'ENGRENAGES |
| J55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000 | GEARCASE |
| J55WRLSTM | GEARCASE |
| J55WRLSTM - FR | 27-1_BOÎTIER D'ENGRENAGES |
| J55WRSIR commercial, rope start, 15 in shaft 2001 | GEARCASE |
| J55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000 | GEARCASE |
| J55WRYEES 1999 | GEARCASE |
| J55WRYSIR commercial, rope start, 25 in shaft 2001 | GEARCASE |
| J55WRYSOB | GEARCASE |
| J55WRYSOB - FR | 27-1_BOÎTIER D'ENGRENAGES |
| J55WRYSRM | GEARCASE |
| J55WRYSRM - FR | 27-1_BOÎTIER D'ENGRENAGES |
| J55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000 | GEARCASE |
| J60ECIA 1981 | GEARCASE, ROPE START |
| J60ECIH 1981 | GEARCASE, ROPE START |
| J60ECSR 1980 | GEARCASE,ROPE START |
| J60ELCCR 1988 | GEARCASE |
| J60ELCDS 1986 | GEARCASE - 20" MODELS |
| J60ELCEA 1989 | GEARCASE |
| J60ELCIA 1981 | GEARCASE, ROPE START |
| J60ELCIH 1981 | GEARCASE, ROPE START |
| J60ELCSR 1980 | GEARCASE,ROPE START |
| J60ELCUC 1987 | GEARCASE - 20" MODELS |
| J60ELEDR 1996 | GEARCASE |
| J60ELEIB 1991 | GEARCASE |
| J60ELENE 1992 | GEARCASE |
| J60ELEOC 1995 | GEARCASE |
| J60ELERS 1994 | GEARCASE |
| J60ELERV 1994 | GEARCASE |
| J60ELES 1990 | GEARCASE |
| J60ELETD 1993 | GEARCASE |

| | |
|---|-----------------------|
| J60ELEUA 1997 | GEARCASE |
| J60PLEEB 1999 | GEARCASE |
| J60PLSID elec start, TNT, 20 in shaft 2001 | GEARCASE |
| J60PLSSE Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| J60TLCCR 1988 | GEARCASE |
| J60TLCDS 1986 | GEARCASE - 20" MODELS |
| J60TLCEA 1989 | GEARCASE |
| J60TLCIA 1981 | GEARCASE, ROPE START |
| J60TLCIH 1981 | GEARCASE, ROPE START |
| J60TLCUC 1987 | GEARCASE - 20" MODELS |
| J60TLECM 1998 | GEARCASE |
| J60TLEDR 1996 | GEARCASE |
| J60TLEIB 1991 | GEARCASE |
| J60TLENE 1992 | GEARCASE |
| J60TLEOC 1995 | GEARCASE |
| J60TLERS 1994 | GEARCASE |
| J60TLERV 1994 | GEARCASE |
| J60TLESM 1990 | GEARCASE |
| J60TLETD 1993 | GEARCASE |
| J60TLEUA 1997 | GEARCASE |
| J60TTLCCR 1988 | GEARCASE |
| J60TTLCEA 1989 | GEARCASE |
| J60TTLECM 1998 | GEARCASE |
| J60TTLEDR 1996 | GEARCASE |
| J60TTLEIB 1991 | GEARCASE |
| J60TTLENE 1992 | GEARCASE |
| J60TTLEOC 1995 | GEARCASE |
| J60TTLERS 1994 | GEARCASE |
| J60TTLERV 1994 | GEARCASE |
| J60TTLESM 1990 | GEARCASE |
| J60TTLETD 1993 | GEARCASE |
| J60TTLEUA 1997 | GEARCASE |
| J60VLSID elec start, TNT, 20 in shaft, wht 2001 | GEARCASE |
| J65RSLC 1995 | GEARCASE |
| J65RSLM 1996 | GEARCASE |

| | |
|---|------------------------|
| J65RSLZ2 1997 | GEARCASE |
| J65RWLCDR 1986 | GEARCASE |
| J65RWLCOC 1985 | GEARCASE |
| J65RWLCRS 1984 | GEARCASE |
| J65TELCDR 1986 | GEARCASE |
| J65TELCOC 1985 | GEARCASE |
| J65TELCRS 1984 | GEARCASE |
| J65WELEES 1999 | GEARCASE |
| J65WELSIR Commercial, elec start, 20 in shaft 2001 | GEARCASE |
| J65WELSSC Commercial, Elec. Start, 20 IN. shaft 2000 | GEARCASE |
| J65WMLCDR 1986 | GEARCASE |
| J65WMLCOC 1985 | GEARCASE |
| J65WMLCUA 1987 | GEARCASE |
| J65WMLEIB 1991 | GEARCASE |
| J65WMLENE 1992 | GEARCASE |
| J65WMLEOC 1995 | GEARCASE |
| J65WMLERS 1994 | GEARCASE |
| J65WMLESM 1990 | GEARCASE |
| J65WMLETD 1993 | GEARCASE |
| J65WMLZ 1989 | GEARCASE |
| J65WRLEEO 1999 | GEARCASE |
| J65WRLEES 1999 | GEARCASE |
| J65WRLSIR commercial, rope start, 20 in shaft 2001 | GEARCASE |
| J65WRLSSC Commercial, Rope Start, 20 IN. shaft 2000 | GEARCASE |
| J65WRYEEO 1999 | GEARCASE |
| J65WRYEES 1999 | GEARCASE |
| J65WRYSIR commercial, rope start, 22.5 in shaft 2001 | GEARCASE |
| J65WRYSSC Commercial, Rope Start, 22.5 IN. shaft 2000 | GEARCASE |
| J65WTLCOC 1985 | GEARCASE |
| J65WTLCRS 1984 | GEARCASE |
| J70ELCCA 1988 | GEARCASE |
| J70ELCDC 1986 | GEARCASE |
| J70ELCEM 1989 | GEARCASE |
| J70ELCIH 1981 | GEARCASE - 20" TRANSOM |
| J70ELCIM 1981 | GEARCASE - 20" TRANSOM |

| | |
|---|------------------------|
| J70ELCNB 1982 | GEARCASE - 20" TRANSOM |
| J70ELCOS 1985 | GEARCASE - 20" MODELS |
| J70ELCRD 1984 | GEARCASE - 20" MODELS |
| J70ELCSA 1980 | GEARCASE-20"TRANSOM |
| J70ELCTE 1983 | GEARCASE - 20" TRANSOM |
| J70ELCUR 1987 | GEARCASE |
| J70ELEIE 1991 | GEARCASE |
| J70ELEND 1992 | GEARCASE |
| J70ELEOR 1995 | GEARCASE |
| J70ELERC 1994 | GEARCASE |
| J70ELERV 1994 | GEARCASE |
| J70ELESB 1990 | GEARCASE |
| J70ELETS 1993 | GEARCASE |
| J70JLEOS 1995 | GEARCASE |
| J70PLEEE 1999 | GEARCASE |
| J70PLSIS elec start, TNT, 20 in shaft 2001 | GEARCASE |
| J70PLSSD Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| J70TLCCA 1988 | GEARCASE |
| J70TLCDC 1986 | GEARCASE |
| J70TLCEM 1989 | GEARCASE |
| J70TLCIM 1981 | GEARCASE - 20" TRANSOM |
| J70TLCNB 1982 | GEARCASE - 20" TRANSOM |
| J70TLCOS 1985 | GEARCASE - 20" MODELS |
| J70TLCRD 1984 | GEARCASE - 20" MODELS |
| J70TLCTE 1983 | GEARCASE - 20" TRANSOM |
| J70TLCUR 1987 | GEARCASE |
| J70TLECB 1998 | GEARCASE |
| J70TLEDA 1996 | GEARCASE |
| J70TLEIE 1991 | GEARCASE |
| J70TLEND 1992 | GEARCASE |
| J70TLEOR 1995 | GEARCASE |
| J70TLERC 1994 | GEARCASE |
| J70TLERV 1994 | GEARCASE |
| J70TLESB 1990 | GEARCASE |
| J70TLETS 1993 | GEARCASE |

| | |
|--|------------------------|
| J70TLEUM 1997 | GEARCASE |
| J70TTLEIE 1991 | GEARCASE |
| J70TTLEND 1992 | GEARCASE |
| J70TTLEOR 1995 | GEARCASE |
| J70TTLERC 1994 | GEARCASE |
| J70TTLERV 1994 | GEARCASE |
| J70TTLETS 1993 | GEARCASE |
| J70VLSIS elec start, TNT, 20 in shaft 2001 | GEARCASE |
| J75ECDC 1986 | GEARCASE - 20" MODELS |
| J75ECNB 1982 | GEARCASE - 20" TRANSOM |
| J75ECOS 1985 | GEARCASE - 20" MODELS |
| J75ECDR 1984 | GEARCASE - 20" MODELS |
| J75ECTE 1983 | GEARCASE - 20" TRANSOM |
| J75ECCR 1987 | GEARCASE - 20" MODELS |
| J75ELCNB 1982 | GEARCASE - 20" TRANSOM |
| J75ELCRD 1984 | GEARCASE - 20" MODELS |
| J75ELCTE 1983 | GEARCASE - 20" TRANSOM |
| J75ERCIH 1981 | GEARCASE - 20" TRANSOM |
| J75ERCIM 1981 | GEARCASE - 20" TRANSOM |
| J75ERCSA 1980 | GEARCASE-20"TRANSOM |
| J75ERLCIH 1981 | GEARCASE - 20" TRANSOM |
| J75ERLCIM 1981 | GEARCASE - 20" TRANSOM |
| J75ERLCSA 1980 | GEARCASE-20"TRANSOM |
| J75TELCIM 1981 | GEARCASE - 20" TRANSOM |
| J75TLCNB 1982 | GEARCASE - 20" TRANSOM |
| J75TLCRD 1984 | GEARCASE - 20" MODELS |
| J75TLCTE 1983 | GEARCASE - 20" TRANSOM |
| J75TRLCIH 1981 | GEARCASE - 20" TRANSOM |
| J75TRLCSA 1980 | GEARCASE-20"TRANSOM |
| J85MLCSA 1980 | GEARCASE |
| J85TLCSA 1980 | GEARCASE |
| J85TTLEIE 1991 | GEARCASE |
| J85TTLEND 1992 | GEARCASE |
| J85TTLEOR 1995 | GEARCASE |
| J85TTLERC 1994 | GEARCASE |

| | |
|----------------|--|
| J85TTLETS 1993 | GEARCASE |
| J85TXCSA 1980 | GEARCASE |
| J88MSLCCC 1988 | GEARCASE |
| J88MSLCER 1989 | GEARCASE |
| J88MSLCUS 1987 | GEARCASE |
| J88MSLEDC 1996 | GEARCASE |
| J88MSLEIM 1991 | GEARCASE |
| J88MSLENB 1992 | GEARCASE |
| J88MSLEOS 1995 | GEARCASE |
| J88MSLERD 1994 | GEARCASE |
| J88MSLESA 1990 | GEARCASE |
| J88MSLETE 1993 | GEARCASE |
| J88TSLEDR 1996 | GEARCASE |
| J88TSLEOC 1995 | GEARCASE |
| J88TSLERS 1994 | GEARCASE |
| J90ELECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| J90ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| J90ELEOC 1995 | GEARCASE - 20 IN. MODELS |
| J90ELEUA 1997 | GEARCASE - 20 IN. MODELS |
| J90ELEUC 1997 | GEARCASE - 20 IN. MODELS |
| J90EXEOC 1995 | GEARCASE - 20 IN. MODELS |
| J90FSLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| J90FTLECS 1998 | GEARCASE -- FSL, FTL MODELS |
| J90GLSDE | GEARCASE - PL, GL MODELS |
| J90GLSDE - FR | 17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES |
| J90GLSOB | GEARCASE - PL, GL MODELS |
| J90GLSOB - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J90GLSRM | GEARCASE - PL, GL MODELS |
| J90GLSRM - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J90GLSTA | GEARCASE - PL, GL MODELS |
| J90GLSTA - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL |
| J90JLEIE 1991 | GEARCASE |
| J90JLEND 1992 | GEARCASE |
| J90JLEOR 1995 | GEARCASE |
| J90JLERC 1994 | GEARCASE |

| | |
|--|---|
| J90JLETS 1993 | GEARCASE |
| J90MLCDC 1986 | GEARCASE |
| J90MLCIH 1981 | GEARCASE |
| J90MLCIM 1981 | GEARCASE |
| J90MLCNB 1982 | GEARCASE |
| J90MLCOS 1985 | GEARCASE |
| J90MLCRD 1984 | GEARCASE |
| J90MLCTE 1983 | GEARCASE |
| J90MLCUR 1987 | GEARCASE |
| J90MLEOR 1995 | GEARCASE |
| J90MLERC 1994 | GEARCASE |
| J90PLEEB 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| J90PLSDM | GEARCASE - PL, GL MODELS |
| J90PLSDM - FR | 17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES |
| J90PLSID elec start, TNT, 20 in shaft 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| J90PLSNF - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS |
| J90PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002 | GEARCASE - PLS, VLS MODELS |
| J90PLSOA | GEARCASE - PL, GL MODELS |
| J90PLSOA - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J90PLSRR | GEARCASE - PL, GL MODELS |
| J90PLSRR - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL |
| J90PLSSE Elec. Start, TNT, 20 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J90PLSTC | GEARCASE - PL, GL MODELS |
| J90PLSTC - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL |
| J90SLECM 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| J90SLEDR 1996 | GEARCASE - 20 IN. MODELS |
| J90SLEOC 1995 | GEARCASE - 20 IN. MODELS |
| J90SLEUA 1997 | GEARCASE - 20 IN. MODELS |
| J90SLEUC 1997 | GEARCASE - 20 IN. MODELS |
| J90SPLEES 1999 | GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS |
| J90SPLSSC Elec. Start, TNT, 20 IN. shaft, wht 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J90TLAEM 1989 | GEARCASE |
| J90TLAIE 1991 | GEARCASE |
| J90TLAND 1992 | GEARCASE |

| | |
|--|--|
| J90TLARC 1994 | GEARCASE |
| J90TLASB 1990 | GEARCASE |
| J90TLATS 1993 | GEARCASE |
| J90TLCCA 1988 | GEARCASE |
| J90TLCDC 1986 | GEARCASE |
| J90TLCEM 1989 | GEARCASE |
| J90TLCIH 1981 | GEARCASE |
| J90TLCIM 1981 | GEARCASE |
| J90TLCNB 1982 | GEARCASE |
| J90TLCOS 1985 | GEARCASE |
| J90TLCRD 1984 | GEARCASE |
| J90TLCTE 1983 | GEARCASE |
| J90TLCUR 1987 | GEARCASE |
| J90TLEDA 1996 | GEARCASE |
| J90TLEIE 1991 | GEARCASE |
| J90TLEND 1992 | GEARCASE |
| J90TLEOR 1995 | GEARCASE |
| J90TLERC 1994 | GEARCASE |
| J90TLESB 1990 | GEARCASE |
| J90TLETS 1993 | GEARCASE |
| J90TSLECM 1998 | GEARCASE |
| J90TSLEUA 1997 | GEARCASE |
| J90TXARC 1994 | GEARCASE |
| J90TXATS 1993 | GEARCASE |
| J90TXCDC 1986 | GEARCASE |
| J90TXCIH 1981 | GEARCASE |
| J90TXCIM 1981 | GEARCASE |
| J90TXCNB 1982 | GEARCASE |
| J90TXCOS 1985 | GEARCASE |
| J90TXCRD 1984 | GEARCASE |
| J90TXCTE 1983 | GEARCASE |
| J90VLSIC elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| J90VLSNF - FR | 27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS |
| J90VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002 | GEARCASE - PLS, VLS MODELS |

| | |
|--|--|
| J90VLSSE Elec. Start, TNT, 20 IN. shaft, wht 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| L115GLECA 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| L115GLEDC 1996 | GEARCASE - 20 IN. MODELS |
| L115GLEOS 1995 | GEARCASE - 20 IN. MODELS |
| L115GLEUC 1997 | GEARCASE - 20 IN. MODELS |
| L115GLEUR 1997 | GEARCASE - 20 IN. MODELS |
| L90GLECS 1998 | GEARCASE -- 90 & 115 EL, GL, SL MODELS |
| M55RWLR 1988 | GEARCASE |
| N65WMLM 1988 | GEARCASE |
| R45RCLR 1988 | GEARCASE |
| R45RCR 1988 | GEARCASE |
| R55RWLR 1988 | GEARCASE |
| RE115FLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| RE115FLSSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE115FLSSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE115FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| RE115FSSSH FFI, Elec Start, TNT, 20 IN. shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE115FSSSR FFI, Elec Start, TNT, 20 IN. shaft, wht 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE115FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| RE115FXSSH FFI, Elec Start, TNT, 25 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE115FXSSR FFI, Elec Start, TNT, 25 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE75FPLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| RE75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE90FPLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - FPL - FSL - FL - FVL - FSS MODELS |
| RE90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RE90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE - FPL, FSL, FL, FS MODELS |
| RJ115PLSIE elec start, TNT, 20 in shaft 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| RJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ115VLSIC elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| RJ115VLSSB Elec. Start, 20 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ115VXSIC elec start, TNT, 25 in shaft, wht 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| RJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |

| | |
|--|--|
| RJ70PLSIS elec start, TNT, 20 in shaft 2001 | GEARCASE |
| RJ70PLSSD Elec Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| RJ90PLSID elec start, TNT, 20 in shaft 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| RJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ90VLSIC elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - 90 - 115 PL - VL MODELS |
| RJ90VLSSE Elec. Start, 20 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| S45RCLR 1988 | GEARCASE |
| S45RCR 1988 | GEARCASE |
| SE100WMPLM 1996 | GEARCASE |
| SE100WMPLZ 1997 | GEARCASE |
| SE100WTPLM 1996 | GEARCASE |
| SE100WTPLZ 1997 | GEARCASE |
| SE40RPB 1997 | GEARCASE |
| SE40RPH 1996 | GEARCASE |
| SE40RPLB 1997 | GEARCASE |
| SE40RPLH 1996 | GEARCASE |
| SE40RPLT2 1998 | GEARCASE -- T & M MODELS ONLY |
| SE40RPLT2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SE40RPT2 1998 | GEARCASE -- T & M MODELS ONLY |
| SE40RPT2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SE40RPYB 1997 | GEARCASE |
| SE40RPYH 1996 | GEARCASE |
| SE40RPYT2 1998 | GEARCASE -- T & M MODELS ONLY |
| SE40RPYT2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SE45RSLB 1997 | GEARCASE |
| SE45RSLH 1996 | GEARCASE |
| SE55RSC 1997 | GEARCASE |
| SE55RSLC 1997 | GEARCASE |
| SE55RSLM2 1998 | GEARCASE -- T & M MODELS ONLY |
| SE55RSLM2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SE55RSLW 1996 | GEARCASE |
| SE55RSM2 1998 | GEARCASE -- T & M MODELS ONLY |
| SE55RSM2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SE55RSW 1996 | GEARCASE |
| SE55RSYC 1997 | GEARCASE |

| | |
|-----------------|---------------------------------|
| SE55RSYM2 1998 | GEARCASE -- T & M MODELS ONLY |
| SE55RSYM2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SE55RSYW 1996 | GEARCASE |
| SE65RSLD 1998 | GEARCASE |
| SE65RSLM 1996 | GEARCASE |
| SE65RSLZ2 1997 | GEARCASE |
| SE65RSYD 1998 | GEARCASE |
| SE65RSYM 1996 | GEARCASE |
| SE65RSYZ2 1997 | GEARCASE |
| SE65WMLD 1998 | GEARCASE |
| SE65WMLM 1996 | GEARCASE |
| SE65WMLZ2 1997 | GEARCASE |
| SE65WMYD 1998 | GEARCASE |
| SE65WMYM 1996 | GEARCASE |
| SE65WMYZ2 1997 | GEARCASE |
| SJ100WMPLM 1996 | GEARCASE |
| SJ100WMPLZ 1997 | GEARCASE |
| SJ100WTPLM 1996 | GEARCASE |
| SJ100WTPLZ 1997 | GEARCASE |
| SJ115ELED 1996 | GEARCASE - 20 IN. MODELS |
| SJ40RPB 1997 | GEARCASE |
| SJ40RPH 1996 | GEARCASE |
| SJ40RPLB 1997 | GEARCASE |
| SJ40RPLH 1996 | GEARCASE |
| SJ40RPLT2 1998 | GEARCASE -- T & M MODELS ONLY |
| SJ40RPLT2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SJ40RPT2 1998 | GEARCASE -- T & M MODELS ONLY |
| SJ40RPT2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SJ40RPYB 1997 | GEARCASE |
| SJ40RPYH 1996 | GEARCASE |
| SJ40RPYT2 1998 | GEARCASE -- T & M MODELS ONLY |
| SJ40RPYT2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SJ45RSLB 1997 | GEARCASE |
| SJ45RSLH 1996 | GEARCASE |
| SJ55RSC 1997 | GEARCASE |

| | |
|-----------------|---------------------------------|
| SJ55RSLC 1997 | GEARCASE |
| SJ55RSLM2 1998 | GEARCASE -- T & M MODELS ONLY |
| SJ55RSLM2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SJ55RSLW 1996 | GEARCASE |
| SJ55RSM2 1998 | GEARCASE -- T & M MODELS ONLY |
| SJ55RSM2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SJ55RSW 1996 | GEARCASE |
| SJ55RSYC 1997 | GEARCASE |
| SJ55RSYM2 1998 | GEARCASE -- T & M MODELS ONLY |
| SJ55RSYM2 1998 | GEARCASE -- T2 & M2 MODELS ONLY |
| SJ55RSYW 1996 | GEARCASE |
| SJ60TLEDR 1996 | GEARCASE |
| SJ65RSLD 1998 | GEARCASE |
| SJ65RSLM 1996 | GEARCASE |
| SJ65RSLZ2 1997 | GEARCASE |
| SJ65RSYD 1998 | GEARCASE |
| SJ65RSYM 1996 | GEARCASE |
| SJ65RSYZ2 1997 | GEARCASE |
| SJ65WMLD 1998 | GEARCASE |
| SJ65WMLM 1996 | GEARCASE |
| SJ65WMLZ2 1997 | GEARCASE |
| SJ65WMYD 1998 | GEARCASE |
| SJ65WMYM 1996 | GEARCASE |
| SJ65WMYZ2 1997 | GEARCASE |
| SJ70TLEDA 1996 | GEARCASE |
| SJ90ELEDR 1996 | GEARCASE - 20 IN. MODELS |
| T65WMLM 1988 | GEARCASE |
| TE110TLCEM 1989 | GEARCASE |
| TE110TLESF 1989 | GEARCASE |
| TE110TXCEM 1989 | GEARCASE |
| TE115TLEIE 1991 | GEARCASE |
| TE115TLEND 1992 | GEARCASE |
| TE115TLESB 1990 | GEARCASE |
| TE115TLETS 1993 | GEARCASE |
| TE120TXCEM 1989 | GEARCASE - 120TL & TX/140 TL |

| | |
|-----------------|------------------------------|
| TE60TLCEA 1989 | GEARCASE |
| TE60TLEIB 1991 | GEARCASE |
| TE60TLENE 1992 | GEARCASE |
| TE60TLESF 1989 | GEARCASE |
| TE60TLESF 1990 | GEARCASE |
| TE60TLESM 1990 | GEARCASE |
| TE60TLETD 1993 | GEARCASE |
| TE70TLCEM 1989 | GEARCASE |
| TE70TLESB 1990 | GEARCASE |
| TE70TLESF 1989 | GEARCASE |
| TE70TLESF 1990 | GEARCASE |
| TE90TLCEM 1989 | GEARCASE |
| TE90TLEIE 1991 | GEARCASE |
| TE90TLEND 1992 | GEARCASE |
| TE90TLESB 1990 | GEARCASE |
| TE90TLESF 1989 | GEARCASE |
| TE90TLESF 1990 | GEARCASE |
| TE90TLETS 1993 | GEARCASE |
| TJ110TLCEM 1989 | GEARCASE |
| TJ110TXCEM 1989 | GEARCASE |
| TJ115TLEIE 1991 | GEARCASE |
| TJ115TLEND 1992 | GEARCASE |
| TJ115TLESB 1990 | GEARCASE |
| TJ115TLETS 1993 | GEARCASE |
| TJ120TXCEM 1989 | GEARCASE - 120TL & TX/140 TL |
| TJ60TLCEA 1989 | GEARCASE |
| TJ60TLEIB 1991 | GEARCASE |
| TJ60TLENE 1992 | GEARCASE |
| TJ60TLESF 1989 | GEARCASE |
| TJ60TLESF 1990 | GEARCASE |
| TJ60TLESM 1990 | GEARCASE |
| TJ60TLETD 1993 | GEARCASE |
| TJ70TLCEM 1989 | GEARCASE |
| TJ70TLESB 1990 | GEARCASE |
| TJ70TLESF 1989 | GEARCASE |

| | |
|-----------------|---|
| TJ70TLESF 1990 | GEARCASE |
| TJ90TLCEM 1989 | GEARCASE |
| TJ90TLEIE 1991 | GEARCASE |
| TJ90TLEND 1992 | GEARCASE |
| TJ90TLESB 1990 | GEARCASE |
| TJ90TLETS 1993 | GEARCASE |
| TR-10R 1968 | GEARCASE GROUP |
| TR-10S 1968 | GEARCASE GROUP |
| TRL-10R 1968 | GEARCASE GROUP |
| TRL-10S 1968 | GEARCASE GROUP |
| V115SHLETS 1993 | GEARCASE |
| V115SLEIE 1991 | GEARCASE |
| V115SLEND 1992 | GEARCASE |
| V115SLETS 1993 | GEARCASE |
| V90SLEIE 1991 | GEARCASE |
| V90SLEND 1992 | GEARCASE |
| V90SLETE 1993 | GEARCASE |
| VE100SLEIE 1991 | GEARCASE |
| VE100SLEND 1992 | GEARCASE |
| VE100SLESB 1990 | GEARCASE |
| VE100SLETS 1993 | GEARCASE |
| VE115TLEIE 1991 | GEARCASE |
| VE115TLESB 1990 | GEARCASE |
| VE115TLETS 1993 | GEARCASE |
| VE115TXEIE 1991 | GEARCASE |
| VE115TXESB 1990 | GEARCASE |
| VE120TLEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| VE120TLEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VE120TLESB 1990 | GEARCASE - 120TL & TX/140 TL |
| VE120TLETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE120TLETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE120TXEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| VE120TXEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VE120TXESB 1990 | GEARCASE - 120TL & TX/140 TL |

| | |
|-----------------|---|
| VE120TXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE120TXETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE140TLEID 1991 | GEARCASE - 120TL & TX/140 TL |
| VE140TLENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VE140TLESE 1990 | GEARCASE - 120TL & TX/140 TL |
| VE140TLETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE140TLETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE140TXEID 1991 | GEARCASE - 120TL & TX/140 TL |
| VE140TXENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VE140TXESE 1990 | GEARCASE - 120TL & TX/140 TL |
| VE140TXETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE140TXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VE60ELEIB 1991 | GEARCASE |
| VE60ELENE 1992 | GEARCASE |
| VE60ELESM 1990 | GEARCASE |
| VE60ELETD 1993 | GEARCASE |
| VE60TLEIB 1991 | GEARCASE |
| VE60TLENE 1992 | GEARCASE |
| VE60TLESM 1990 | GEARCASE |
| VE70ELEIE 1991 | GEARCASE |
| VE70ELEND 1992 | GEARCASE |
| VE70ELESB 1990 | GEARCASE |
| VE70ELETS 1993 | GEARCASE |
| VE70TLEIE 1991 | GEARCASE |
| VE70TLEND 1992 | GEARCASE |
| VE70TLESB 1990 | GEARCASE |
| VE70TLETS 1993 | GEARCASE |
| VE88MSLCCC 1988 | GEARCASE |
| VE88MSLCER 1989 | GEARCASE |
| VE88MSLESA 1990 | GEARCASE |
| VE90MLEIE 1991 | GEARCASE |
| VE90MLEND 1992 | GEARCASE |

| | |
|-----------------|---|
| VE90MLESB 1990 | GEARCASE |
| VE90MLETS 1993 | GEARCASE |
| VE90TLEIE 1991 | GEARCASE |
| VE90TLEND 1992 | GEARCASE |
| VE90TLESB 1990 | GEARCASE |
| VE90TLETS 1993 | GEARCASE |
| VJ100SLEIE 1991 | GEARCASE |
| VJ100SLEND 1992 | GEARCASE |
| VJ100SLESB 1990 | GEARCASE |
| VJ100SLETS 1993 | GEARCASE |
| VJ115TLAIE 1991 | GEARCASE |
| VJ115TLAND 1992 | GEARCASE |
| VJ115TLASB 1990 | GEARCASE |
| VJ115TLATS 1993 | GEARCASE |
| VJ115TLEIE 1991 | GEARCASE |
| VJ115TLESB 1990 | GEARCASE |
| VJ115TLETS 1993 | GEARCASE |
| VJ115TXEIE 1991 | GEARCASE |
| VJ115TXESB 1990 | GEARCASE |
| VJ120TLAIE 1991 | GEARCASE - 120TL & TX/140 TL |
| VJ120TLAND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VJ120TLASB 1990 | GEARCASE - 120TL & TX/140 TL |
| VJ120TLATF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ120TLATS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ120TLEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| VJ120TLEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VJ120TLESB 1990 | GEARCASE - 120TL & TX/140 TL |
| VJ120TLETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ120TLETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ120TXEIE 1991 | GEARCASE - 120TL & TX/140 TL |
| VJ120TXEND 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VJ120TXESB 1990 | GEARCASE - 120TL & TX/140 TL |
| VJ120TXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |

| | |
|-----------------|---|
| VJ120TXETS 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ140TLAID 1991 | GEARCASE - 120TL & TX/140 TL |
| VJ140TLANS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VJ140TLASE 1990 | GEARCASE - 120TL & TX/140 TL |
| VJ140TLEID 1991 | GEARCASE - 120TL & TX/140 TL |
| VJ140TLENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VJ140TLESE 1990 | GEARCASE - 120TL & TX/140 TL |
| VJ140TLETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ140TLETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ140TXEID 1991 | GEARCASE - 120TL & TX/140 TL |
| VJ140TXENS 1992 | GEARCASE - 120TL & TX/125ESX/140 TL |
| VJ140TXESE 1990 | GEARCASE - 120TL & TX/140 TL |
| VJ140TXETC 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ140TXETF 1993 | GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY |
| VJ60ELEIB 1991 | GEARCASE |
| VJ60ELENE 1992 | GEARCASE |
| VJ60ELESB 1990 | GEARCASE |
| VJ60ELETD 1993 | GEARCASE |
| VJ60TLEIB 1991 | GEARCASE |
| VJ60TLENE 1992 | GEARCASE |
| VJ60TLESB 1990 | GEARCASE |
| VJ70ELEIE 1991 | GEARCASE |
| VJ70ELEND 1992 | GEARCASE |
| VJ70ELESB 1990 | GEARCASE |
| VJ70ELETS 1993 | GEARCASE |
| VJ70TLEIE 1991 | GEARCASE |
| VJ70TLEND 1992 | GEARCASE |
| VJ70TLESB 1990 | GEARCASE |
| VJ70TLETS 1993 | GEARCASE |
| VJ88MSLCCC 1988 | GEARCASE |
| VJ88MSLCER 1989 | GEARCASE |
| VJ88MSLESA 1990 | GEARCASE |
| VJ90MLEIE 1991 | GEARCASE |

| | |
|------------------|----------|
| VJ90MLEND 1992 | GEARCASE |
| VJ90MLESB 1990 | GEARCASE |
| VJ90MLETS 1993 | GEARCASE |
| VJ90TLAIE 1991 | GEARCASE |
| VJ90TLAND 1992 | GEARCASE |
| VJ90TLASB 1990 | GEARCASE |
| VJ90TLATS 1993 | GEARCASE |
| VJ90TLEIE 1991 | GEARCASE |
| VJ90TLEND 1992 | GEARCASE |
| VJ90TLESB 1990 | GEARCASE |
| VJ90TLETS 1993 | GEARCASE |
| XE112TSLEDR 1996 | GEARCASE |
| XE112TSLEOC 1995 | GEARCASE |
| XE112TSLERS 1994 | GEARCASE |
| XE112TSXEDR 1996 | GEARCASE |
| XE112TSXEOC 1995 | GEARCASE |
| XE112TSXERS 1994 | GEARCASE |
| XE115HLECM 1998 | GEARCASE |
| XE115HLEUA 1997 | GEARCASE |
| XE115HXECM 1998 | GEARCASE |
| XE115HXEUA 1997 | GEARCASE |
| XE88TSLEDR 1996 | GEARCASE |
| XE88TSLEOC 1995 | GEARCASE |
| XE88TSLERS 1994 | GEARCASE |
| XE90TSLECM 1998 | GEARCASE |
| XE90TSLEUA 1997 | GEARCASE |
| XJ112TSLEDR 1996 | GEARCASE |
| XJ112TSLEOC 1995 | GEARCASE |
| XJ112TSLERS 1994 | GEARCASE |
| XJ112TSXEDR 1996 | GEARCASE |
| XJ112TSXEOC 1995 | GEARCASE |
| XJ112TSXERS 1994 | GEARCASE |
| XJ115HLECM 1998 | GEARCASE |
| XJ115HLEUA 1997 | GEARCASE |
| XJ115HXECM 1998 | GEARCASE |

| | |
|-----------------|----------|
| XJ115HXEUA 1997 | GEARCASE |
| XJ88TSLEDR 1996 | GEARCASE |
| XJ88TSLEOC 1995 | GEARCASE |
| XJ88TSLERS 1994 | GEARCASE |
| XJ90TSLECM 1998 | GEARCASE |
| XJ90TSLEUA 1997 | GEARCASE |