

Where Used: Part Number 0315837

Model Name	Diagram
50172S 1971	GEARCASE
50173S 1971	GEARCASE
50202C 1972	GEARCASE 50 HP MANUAL START
50202C 1972	GEARCASE ELECTRIC START
50203C 1972	GEARCASE 50 HP MANUAL START
50203C 1972	GEARCASE ELECTRIC START
50272C 1972	GEARCASE 50 HP MANUAL START
50272C 1972	GEARCASE ELECTRIC START
50273C 1972	GEARCASE 50 HP MANUAL START
50273C 1972	GEARCASE ELECTRIC START
50302R 1973	GEARCASE MANUAL START
50302R 1973	GEARCASE ELECTRIC START
50303R 1973	GEARCASE MANUAL START
50303R 1973	GEARCASE ELECTRIC START
50372R 1973	GEARCASE MANUAL START
50372R 1973	GEARCASE ELECTRIC START
50373R 1973	GEARCASE MANUAL START
50373R 1973	GEARCASE ELECTRIC START
50442M 1974	GEARCASE
50443M 1974	GEARCASE
50472M 1974	GEARCASE
50473M 1974	GEARCASE
50542B 1975	GEARCASE
50543B 1975	GEARCASE
50572B 1975	GEARCASE
50573B 1975	GEARCASE
50902C 1979	GEARCASE ROPE START
50902C 1979	GEARCASE, ELECTRIC START
50903C 1979	GEARCASE ROPE START
50903C 1979	GEARCASE, ELECTRIC START
50ES71S 1971	GEARCASE
50ES72C 1972	GEARCASE 50 HP MANUAL START
50ES72C 1972	GEARCASE ELECTRIC START

50ES73R 1973	GEARCASE MANUAL START
50ES73R 1973	GEARCASE ELECTRIC START
50ES74M 1974	GEARCASE
50ES75B 1975	GEARCASE
50ESL71S 1971	GEARCASE
50ESL72C 1972	GEARCASE 50 HP MANUAL START
50ESL72C 1972	GEARCASE ELECTRIC START
50ESL73R 1973	GEARCASE MANUAL START
50ESL73R 1973	GEARCASE ELECTRIC START
50ESL74M 1974	GEARCASE
50ESL75B 1975	GEARCASE
50R72C 1972	GEARCASE 50 HP MANUAL START
50R72C 1972	GEARCASE ELECTRIC START
50R73R 1973	GEARCASE MANUAL START
50R73R 1973	GEARCASE ELECTRIC START
50R79C 1979	GEARCASE, ELECTRIC START
50R79C 1979	GEARCASE, ROPE START
50RL72C 1972	GEARCASE 50 HP MANUAL START
50RL72C 1972	GEARCASE ELECTRIC START
50RL73R 1973	GEARCASE MANUAL START
50RL73R 1973	GEARCASE ELECTRIC START
50RL79C 1979	GEARCASE, ELECTRIC START
50RL79C 1979	GEARCASE, ROPE START
55642E 1976	GEARCASE
55643E 1976	GEARCASE
55672E 1976	GEARCASE
55673E 1976	GEARCASE
55772D 1977	GEARCASE
55773D 1977	GEARCASE
55874S 1978	GEARCASE
55875S 1978	GEARCASE
55974C 1979	GEARCASE ROPE START
55974C 1979	GEARCASE, ELECTRIC START
55975C 1979	GEARCASE ROPE START
55975C 1979	GEARCASE, ELECTRIC START

55E76E 1976	GEARCASE
55E77D 1977	GEARCASE
55E78S 1978	GEARCASE
55E79C 1979	GEARCASE, ELECTRIC START
55E79C 1979	GEARCASE, ROPE START
55EL76E 1976	GEARCASE
55EL77D 1977	GEARCASE
55EL78S 1978	GEARCASE
55EL79C 1979	GEARCASE, ELECTRIC START
55EL79C 1979	GEARCASE, ROPE START
E35AELCDE 1986	GEARCASE
E35AELCUD 1987	GEARCASE
E35ARLCDE 1986	GEARCASE
E35ARLCUD 1987	GEARCASE
E40AELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40AELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ARLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ARLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ATLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ATLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ECDE 1986	GEARCASE
E40ECOB 1985	GEARCASE
E40ECRM 1984	GEARCASE
E40ECUD 1987	GEARCASE
E40ELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ELCDE 1986	GEARCASE
E40ELCOB 1985	GEARCASE
E40ELCRM 1984	GEARCASE
E40ELCUD 1987	GEARCASE
E40RCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40RCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40RCDE 1986	GEARCASE

E40RCOB 1985	GEARCASE
E40RCRM 1984	GEARCASE
E40RCUD 1987	GEARCASE
E40RLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40RLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40RLCDE 1986	GEARCASE
E40RLCOB 1985	GEARCASE
E40RLCRM 1984	GEARCASE
E40RLCUD 1987	GEARCASE
E40TECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TECDE 1986	GEARCASE
E40TECOB 1985	GEARCASE
E40TECRM 1984	GEARCASE
E40TECUD 1987	GEARCASE
E40TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TELDE 1986	GEARCASE
E40TELCOB 1985	GEARCASE
E40TELCRM 1984	GEARCASE
E40TLCDE 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TLCDE 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TLCUD 1987	GEARCASE
E40TTLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TTLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E45RCCDS 1986	GEARCASE
E45RCCUC 1987	GEARCASE
E45RCE 1989	GEARCASE
E45RCEIA 1991	GEARCASE
E45RCENM 1992	GEARCASE
E45RCERE 1994	GEARCASE
E45RCESR 1990	GEARCASE
E45RCETB 1993	GEARCASE
E45RCLCDS 1986	GEARCASE

E45RCLCUC 1987	GEARCASE
E45RCLE 1989	GEARCASE
E45RCLEIA 1991	GEARCASE
E45RCLENM 1992	GEARCASE
E45RCLERE 1994	GEARCASE
E45RCLESR 1990	GEARCASE
E45RCLETB 1993	GEARCASE
E45WMLE 1989	GEARCASE
E45WMLEIA 1991	GEARCASE
E45WMLENM 1992	GEARCASE
E45WMLESR 1990	GEARCASE
E48ESLCCC 1988	GEARCASE
E48ESLCUS 1987	GEARCASE
E50BECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50BECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50BECDE 1986	GEARCASE
E50BECIC 1981	GEARCASE, ELECTRIC START
E50BECIC 1981	GEARCASE, ROPE START
E50BECNR 1982	GEARCASE
E50BECOB 1985	GEARCASE
E50BECRM 1984	GEARCASE
E50BECTA 1983	GEARCASE
E50BECUD 1987	GEARCASE
E50BELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50BELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50BELCDE 1986	GEARCASE
E50BELCIC 1981	GEARCASE, ELECTRIC START
E50BELCIC 1981	GEARCASE, ROPE START
E50BELCNR 1982	GEARCASE
E50BELCOB 1985	GEARCASE
E50BELCRM 1984	GEARCASE
E50BELCTA 1983	GEARCASE
E50BELCUD 1987	GEARCASE
E50ECSR 1980	GEARCASE
E50ELCSR 1980	GEARCASE

E50TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50TELCDE 1986	GEARCASE
E50TELCOB 1985	GEARCASE
E50TELCRM 1984	GEARCASE
E50TELCTA 1983	GEARCASE
E50TELCUD 1987	GEARCASE
E50TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50TLCDE 1986	GEARCASE
E50TLCOB 1985	GEARCASE
E50TLCRM 1984	GEARCASE
E50TLCUD 1987	GEARCASE
E55RCIM 1981	GEARCASE, ELECTRIC START
E55RCIM 1981	GEARCASE, ROPE START
E55RLCSA 1980	GEARCASE, ELECTRIC START
E55RLCSA 1980	GEARCASE, ROPE START
E55RSLN 1983	GEARCASE
E55RSLN-2 1983	GEARCASE
E55RSN 1983	GEARCASE
E55RSN-2 1983	GEARCASE
E55RSYN 1983	GEARCASE
E55RSYN-2 1983	GEARCASE
E55RWLCDC 1986	GEARCASE
E55RWLCOS 1985	GEARCASE
E55RWLCRD 1984	GEARCASE
E55RWLCUC 1987	GEARCASE
E55RWLE 1989	GEARCASE
E55RWLEIA 1991	GEARCASE
E55RWLENM 1992	GEARCASE
E55RWLERE 1994	GEARCASE
E55RWLESR 1990	GEARCASE
E55RWLETB 1993	GEARCASE
E55TLCIM 1981	GEARCASE, ELECTRIC START
E55TLCIM 1981	GEARCASE, ROPE START

E60ECIA 1981	GEARCASE, ELECTRIC START
E60ECIA 1981	GEARCASE, ROPE START
E60ECIH 1981	GEARCASE, ELECTRIC START
E60ECIH 1981	GEARCASE, ROPE START
E60ECNM 1982	GEARCASE
E60ECSR 1980	GEARCASE, ELECTRIC START
E60ECSR 1980	GEARCASE, ROPE START
E60ECTB 1983	GEARCASE
E60ELCIA 1981	GEARCASE, ELECTRIC START
E60ELCIA 1981	GEARCASE, ROPE START
E60ELCIH 1981	GEARCASE, ELECTRIC START
E60ELCIH 1981	GEARCASE, ROPE START
E60ELCNM 1982	GEARCASE
E60ELCOD 1985	GEARCASE
E60ELCRE 1984	GEARCASE
E60ELCSR 1980	GEARCASE, ELECTRIC START
E60ELCSR 1980	GEARCASE, ROPE START
E60ELCTB 1983	GEARCASE
E60TLCIA 1981	GEARCASE, ELECTRIC START
E60TLCIA 1981	GEARCASE, ROPE START
E60TLCIH 1981	GEARCASE, ELECTRIC START
E60TLCIH 1981	GEARCASE, ROPE START
E60TLCNM 1982	GEARCASE
E60TLCOD 1985	GEARCASE
E60TLCRE 1984	GEARCASE
E60TLCTB 1983	GEARCASE
J35AELCDE 1986	GEARCASE
J35AELCUD 1987	GEARCASE
J35ARLCDE 1986	GEARCASE
J35ARLCUD 1987	GEARCASE
J40AELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40AELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ARLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ARLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ATLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY

J40ATLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ECDE 1986	GEARCASE
J40ECOB 1985	GEARCASE
J40ECRM 1984	GEARCASE
J40ECUD 1987	GEARCASE
J40ELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ELCDE 1986	GEARCASE
J40ELCOB 1985	GEARCASE
J40ELCRM 1984	GEARCASE
J40ELCUD 1987	GEARCASE
J40RCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40RCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40RCDE 1986	GEARCASE
J40RCOB 1985	GEARCASE
J40RCRM 1984	GEARCASE
J40RCUD 1987	GEARCASE
J40RLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40RLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40RLCDE 1986	GEARCASE
J40RLCOB 1985	GEARCASE
J40RLCRM 1984	GEARCASE
J40RLCUD 1987	GEARCASE
J40TECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TECDE 1986	GEARCASE
J40TECOB 1985	GEARCASE
J40TECRM 1984	GEARCASE
J40TECUD 1987	GEARCASE
J40TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TELCDDE 1986	GEARCASE
J40TELCOB 1985	GEARCASE

J40TELCRM 1984	GEARCASE
J40TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TLCDE 1986	GEARCASE
J40TLCUD 1987	GEARCASE
J40TTLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TTLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J45RCCDS 1986	GEARCASE
J45RCCUC 1987	GEARCASE
J45RCE 1989	GEARCASE
J45RCEIA 1991	GEARCASE
J45RCENM 1992	GEARCASE
J45RCERE 1994	GEARCASE
J45RCESR 1990	GEARCASE
J45RCETB 1993	GEARCASE
J45RCLCDS 1986	GEARCASE
J45RCLCUC 1987	GEARCASE
J45RCLE 1989	GEARCASE
J45RCLEIA 1991	GEARCASE
J45RCLENM 1992	GEARCASE
J45RCLERE 1994	GEARCASE
J45RCLESR 1990	GEARCASE
J45RCLETB 1993	GEARCASE
J45WMLE 1989	GEARCASE
J45WMLEIA 1991	GEARCASE
J45WMLENM 1992	GEARCASE
J45WMLESR 1990	GEARCASE
J48ESLCCC 1988	GEARCASE
J48ESLCUS 1987	GEARCASE
J50BECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50BECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50BECDE 1986	GEARCASE
J50BECIC 1981	GEARCASE, ELECTRIC START
J50BECIC 1981	GEARCASE, ROPE START
J50BECNR 1982	GEARCASE

J50BECOB 1985	GEARCASE
J50BECRM 1984	GEARCASE
J50BECTA 1983	GEARCASE
J50BECUD 1987	GEARCASE
J50BELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50BELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50BELCDE 1986	GEARCASE
J50BELCIC 1981	GEARCASE, ELECTRIC START
J50BELCIC 1981	GEARCASE, ROPE START
J50BELCNR 1982	GEARCASE
J50BELCOB 1985	GEARCASE
J50BELCRM 1984	GEARCASE
J50BELCTA 1983	GEARCASE
J50BELCUD 1987	GEARCASE
J50ECSR 1980	GEARCASE
J50ELCSR 1980	GEARCASE
J50TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50TELCEE 1986	GEARCASE
J50TELCOB 1985	GEARCASE
J50TELCRM 1984	GEARCASE
J50TELCTA 1983	GEARCASE
J50TELCTU 1987	GEARCASE
J50TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50TLCDE 1986	GEARCASE
J50TLCOB 1985	GEARCASE
J50TLCRM 1984	GEARCASE
J50TLCUD 1987	GEARCASE
J55RCIM 1981	GEARCASE, ELECTRIC START
J55RCIM 1981	GEARCASE, ROPE START
J55RLCIM 1981	GEARCASE, ELECTRIC START
J55RLCIM 1981	GEARCASE, ROPE START
J55RLCSA 1980	GEARCASE,ELECTRIC START
J55RLCSA 1980	GEARCASE,ROPE START

J55RSLN 1983	GEARCASE
J55RSLN-2 1983	GEARCASE
J55RSN 1983	GEARCASE
J55RSN-2 1983	GEARCASE
J55RSYN 1983	GEARCASE
J55RSYN-2 1983	GEARCASE
J55RWLCDC 1986	GEARCASE
J55RWLCOS 1985	GEARCASE
J55RWLCRD 1984	GEARCASE
J55RWLCUC 1987	GEARCASE
J55RWLE 1989	GEARCASE
J55RWLEIA 1991	GEARCASE
J55RWLENM 1992	GEARCASE
J55RWLERE 1994	GEARCASE
J55RWLESR 1990	GEARCASE
J55RWLETB 1993	GEARCASE
J60ECIA 1981	GEARCASE, ELECTRIC START
J60ECIA 1981	GEARCASE, ROPE START
J60ECIH 1981	GEARCASE, ELECTRIC START
J60ECIH 1981	GEARCASE, ROPE START
J60ECNM 1982	GEARCASE
J60ECSR 1980	GEARCASE,ELECTRIC START
J60ECSR 1980	GEARCASE,ROPE START
J60ECTB 1983	GEARCASE
J60ELCIA 1981	GEARCASE, ELECTRIC START
J60ELCIA 1981	GEARCASE, ROPE START
J60ELCIH 1981	GEARCASE, ELECTRIC START
J60ELCIH 1981	GEARCASE, ROPE START
J60ELCNM 1982	GEARCASE
J60ELCOD 1985	GEARCASE
J60ELCRE 1984	GEARCASE
J60ELCSR 1980	GEARCASE,ELECTRIC START
J60ELCSR 1980	GEARCASE,ROPE START
J60ELCTB 1983	GEARCASE
J60TLCIA 1981	GEARCASE, ELECTRIC START

J60TLCIA 1981	GEARCASE, ROPE START
J60TLCIH 1981	GEARCASE, ELECTRIC START
J60TLCIH 1981	GEARCASE, ROPE START
J60TLCNM 1982	GEARCASE
J60TLCOD 1985	GEARCASE
J60TLCRE 1984	GEARCASE
J60TLCTB 1983	GEARCASE
M55RWLR 1988	GEARCASE
MISCELLANEOUS 1972	CHROME PUMP KITS 50 HP
MISCELLANEOUS 1973	CHROME PUMP KITS 50 HP
MISCELLANEOUS 1974	CHROME PUMP KITS 50 HP
MISCELLANEOUS 1975	CHROME PUMP KITS 50 HP
MISCELLANEOUS 1976	CHROME PUMP KITS 55 H.P.
MISCELLANEOUS 1977	CHROME PUMP KITS 55 HP
R45RCLR 1988	GEARCASE
R45RCR 1988	GEARCASE
R55RWLR 1988	GEARCASE
S45RCLR 1988	GEARCASE
S45RCR 1988	GEARCASE
VE48ESLCCC 1988	GEARCASE
VJ48ESLCCC 1988	GEARCASE