

Where Used: Part Number 0322693

Model Name	Diagram
20/35HP	REMOTE ELECTRIC START KIT
BE10FDLECM 1998	IGNITION SWITCH & CABLE -- 9.9
BE10FDLEDR 1996	IGNITION SWITCH & CABLE - 9.9
BE10FDLEUA 1997	IGNITION SWITCH & CABLE - 9.9
BE10FPXEDC 1996	IGNITION SWITCH & CABLE - 9.9
BE10FPXEUR 1997	IGNITION SWITCH & CABLE - 9.9
BE10FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
BE10FRELUUA 1997	IGNITION SWITCH & CABLE - 9.9
BE15FAEDR 1996	IGNITION SWITCH & CABLE - 9.9
BE15FAEUA 1997	IGNITION SWITCH & CABLE - 9.9
BE15FDLECM 1998	IGNITION SWITCH & CABLE -- 9.9
BE15FDLEDR 1996	IGNITION SWITCH & CABLE - 9.9
BE15FDLEUA 1997	IGNITION SWITCH & CABLE - 9.9
BE15FKEDR 1996	IGNITION SWITCH & CABLE - 9.9
BE15FKEUA 1997	IGNITION SWITCH & CABLE - 9.9
BE15FREDR 1996	IGNITION SWITCH & CABLE - 9.9
BE15FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
BE15FRELUUA 1997	IGNITION SWITCH & CABLE - 9.9
BE15FREUA 1997	IGNITION SWITCH & CABLE - 9.9
BE15FWECA 1998	IGNITION SWITCH & CABLE -- 9.9
BE15FWEDC 1996	IGNITION SWITCH & CABLE - 9.9
BE15FWEUR 1997	IGNITION SWITCH & CABLE - 9.9
BE15FWLECA 1998	IGNITION SWITCH & CABLE -- 9.9
BE15FWLEDC 1996	IGNITION SWITCH & CABLE - 9.9
BE15FWLEUR 1997	IGNITION SWITCH & CABLE - 9.9
BE40EECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BE40EEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE40EEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE40ELECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BE40ELEDs 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE40EEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE40TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BE40TLEDs 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL

BE40TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE50BEEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE50BELEDs 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE50ESECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BE50RLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BE50RLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE50TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BE50TLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE50TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BE50TSLECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BE50TSLEUS 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ10FDLECM 1998	IGNITION SWITCH & CABLE -- 9.9
BJ10FDLEDR 1996	IGNITION SWITCH & CABLE - 9.9
BJ10FDLEUA 1997	IGNITION SWITCH & CABLE - 9.9
BJ10FPXEDC 1996	IGNITION SWITCH & CABLE - 9.9
BJ10FPXEUR 1997	IGNITION SWITCH & CABLE - 9.9
BJ10FREldr 1996	IGNITION SWITCH & CABLE - 9.9
BJ10FRELUA 1997	IGNITION SWITCH & CABLE - 9.9
BJ15FAEDR 1996	IGNITION SWITCH & CABLE - 9.9
BJ15FAEUA 1997	IGNITION SWITCH & CABLE - 9.9
BJ15FDLECM 1998	IGNITION SWITCH & CABLE -- 9.9
BJ15FDLEDR 1996	IGNITION SWITCH & CABLE - 9.9
BJ15FDLEUA 1997	IGNITION SWITCH & CABLE - 9.9
BJ15FKEDR 1996	IGNITION SWITCH & CABLE - 9.9
BJ15FKEUA 1997	IGNITION SWITCH & CABLE - 9.9
BJ15FREDR 1996	IGNITION SWITCH & CABLE - 9.9
BJ15FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
BJ15FRELUA 1997	IGNITION SWITCH & CABLE - 9.9
BJ15FREUA 1997	IGNITION SWITCH & CABLE - 9.9
BJ15FWECA 1998	IGNITION SWITCH & CABLE -- 9.9
BJ15FWEDC 1996	IGNITION SWITCH & CABLE - 9.9
BJ15FWEUR 1997	IGNITION SWITCH & CABLE - 9.9
BJ15FWLECA 1998	IGNITION SWITCH & CABLE -- 9.9
BJ15FWLEDC 1996	IGNITION SWITCH & CABLE - 9.9
BJ15FWLEUR 1997	IGNITION SWITCH & CABLE - 9.9

BJ40EECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BJ40EEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ40EEEE 1999	SWITCH & CABLE -- 40TPL ONLY
BJ40EEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ40ELECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BJ40ELEDs 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ40ELEEA 1999	SWITCH & CABLE -- 40TPL ONLY
BJ40ELEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ40ELSIF elec start, 20 in shaft, n/a usa 2001	SWITCH & CABLE - 40 TPL ONLY
BJ40ELSSM Elec. Start, 20 IN. shaft, N/A USA 2000	SWITCH & CABLE - 40 TPL ONLY
BJ40ESIF elec start, 15 in shaft, n/a usa 2001	SWITCH & CABLE - 40 TPL ONLY
BJ40ESSM Elec. Start, 15 IN. shaft, N/A USA 2000	SWITCH & CABLE - 40 TPL ONLY
BJ40PLEEA 1999	SWITCH & CABLE -- 40TPL ONLY
BJ40PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	SWITCH & CABLE - 40 TPL ONLY
BJ40PLSSM Elec. Start, TNT, 15 IN. shaft, N/A USA 2000	SWITCH & CABLE - 40 TPL ONLY
BJ40TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BJ40TLEDs 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ40TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ50BEEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ50BELEDs 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ50EEER 1999	SWITCH & CABLE -- 40TPL ONLY
BJ50ELEER 1999	SWITCH & CABLE -- 40TPL ONLY
BJ50ELSIF elec start, 20 in shaft, n/a usa 2001	SWITCH & CABLE - 40 TPL ONLY
BJ50ELSSA Elec. Start, 20 IN. shaft, N/A USA 2000	SWITCH & CABLE - 40 TPL ONLY
BJ50ESECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BJ50ESIF elec start, 15 in shaft, n/a usa 2001	SWITCH & CABLE - 40 TPL ONLY
BJ50ESSA Elec Start, 15 IN. shaft, N/A USA 2000	SWITCH & CABLE - 40 TPL ONLY
BJ50PLEEA 1999	SWITCH & CABLE -- 40TPL ONLY
BJ50PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	SWITCH & CABLE - 40 TPL ONLY
BJ50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft, N/A USA 2000	SWITCH & CABLE - 40 TPL ONLY
BJ50RLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BJ50RLEEA 1999	SWITCH & CABLE -- 40TPL ONLY
BJ50RLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ50RLSIF elec start, 20 in shaft, n/a usa 2001	SWITCH & CABLE - 40 TPL ONLY

BJ50RLSSM Rope Start, 20 IN. shaft, N/A USA 2000	SWITCH & CABLE - 40 TPL ONLY
BJ50TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BJ50TLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ50TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
BJ50TSLECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
BJ50TSLEUS 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
C155WTLM 1988	REMOTE CONTROL
C155WTXM 1988	REMOTE CONTROL
CE275TLCDC 1986	REMOTE CONTROL
CE275TLCOS 1985	REMOTE CONTROL
CE275TXCDC 1986	REMOTE CONTROL
CE275TXCOS 1985	REMOTE CONTROL
CE300TLCDC 1986	REMOTE CONTROL
CE300TLCOS 1985	REMOTE CONTROL
CE300TXCDC 1986	REMOTE CONTROL
CE300TXCOS 1985	REMOTE CONTROL
CJ275TLCDC 1986	REMOTE CONTROL
CJ275TLCOS 1985	REMOTE CONTROL
CJ275TXCDC 1986	REMOTE CONTROL
CJ275TXCOS 1985	REMOTE CONTROL
CJ300TLCDC 1986	REMOTE CONTROL
CJ300TLCOS 1985	REMOTE CONTROL
CJ300TXCDC 1986	REMOTE CONTROL
CJ300TXCOS 1985	REMOTE CONTROL
D100WTLM 1988	REMOTE CONTROL
D100WTXM 1988	REMOTE CONTROL
E100MLCSC 1980	REMOTE CONTROL
E100STLCCA 1988	REMOTE CONTROL
E100STLCEM 1989	REMOTE CONTROL
E100STLESB 1990	REMOTE CONTROL
E100TLCSC 1980	REMOTE CONTROL
E100TXCSC 1980	REMOTE CONTROL
E100WMLCDR 1986	REMOTE CONTROL
E100WMLCOC 1985	REMOTE CONTROL
E100WMLCRS 1984	REMOTE CONTROL

E100WTLCDR 1986	REMOTE CONTROL
E100WTLCOG 1985	REMOTE CONTROL
E100WTLCRS 1984	REMOTE CONTROL
E100WTLCUA 1987	REMOTE CONTROL
E100WTLESM 1990	REMOTE CONTROL
E100WTLZ 1989	REMOTE CONTROL
E100WTXCDR 1986	REMOTE CONTROL
E100WTXCUA 1987	REMOTE CONTROL
E100WTXESM 1990	REMOTE CONTROL
E100WTXZ 1989	REMOTE CONTROL
E10EBL4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E10EESC 1990	REMOTE CONTROL
E10EL4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E10EL4SID 4-stroke, elec start, remote, 20 in shaft 2001	IGNITION SWITCH & CABLE - 9.9
E10EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	IGNITION SWITCH & CABLE - 9.9
E10EESC 1990	REMOTE CONTROL
E10EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	IGNITION SWITCH & CABLE - 9.9
E10EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	IGNITION SWITCH & CABLE - 9.9
E10FEXECM 1998	IGNITION SWITCH & CABLE -- 9.9
E10FEXEDR 1996	IGNITION SWITCH & CABLE - 9.9
E10FEXEO 1995	IGNITION SWITCH & CABLE - 9.9
E10FEXEUA 1997	IGNITION SWITCH & CABLE - 9.9
E10FRECM 1998	IGNITION SWITCH & CABLE -- 9.9
E10FREDR 1996	IGNITION SWITCH & CABLE - 9.9
E10FRELECM 1998	IGNITION SWITCH & CABLE -- 9.9
E10FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
E10FRELEOC 1995	IGNITION SWITCH & CABLE - 9.9
E10FRELEUA 1997	IGNITION SWITCH & CABLE - 9.9
E10FREOC 1995	IGNITION SWITCH & CABLE - 9.9
E10FREUA 1997	IGNITION SWITCH & CABLE - 9.9
E10FRLECM 1998	IGNITION SWITCH & CABLE -- 9.9
E10FRLEDR 1996	IGNITION SWITCH & CABLE - 9.9
E10FRLEO 1995	IGNITION SWITCH & CABLE - 9.9
E10FRLEUA 1997	IGNITION SWITCH & CABLE - 9.9

E10R4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E10R4SID 4-stroke, rope start, tiller, 15 in shaft 2001	IGNITION SWITCH & CABLE - 9.9
E10R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	IGNITION SWITCH & CABLE - 9.9
E10RELESC 1990	REMOTE CONTROL
E10RESC 1990	REMOTE CONTROL
E10RL4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E10RL4SID 4-stroke, rope start, tiller, 20 in shaft 2001	IGNITION SWITCH & CABLE - 9.9
E10RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	IGNITION SWITCH & CABLE - 9.9
E10RLESC 1990	REMOTE CONTROL
E10RV4SIC 4-stroke, rope start, tiller, 15 in shaft, wht 2001	IGNITION SWITCH & CABLE - 9.9
E10RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	IGNITION SWITCH & CABLE - 9.9
E10RVL4SIC 4-stroke, rope start, tiller, 20 in shaft, wht 2001	IGNITION SWITCH & CABLE - 9.9
E10RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	IGNITION SWITCH & CABLE - 9.9
E10SELESC 1990	REMOTE CONTROL
E10TEX4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E10TEX4SID 4-stroke, elec start, tiller, 25 in shaft 2001	IGNITION SWITCH & CABLE - 9.9
E10TEX4SSE 4-Stroke, Elec. Start, Tiller, 25 IN shaft 2000	IGNITION SWITCH & CABLE - 9.9
E10TVX4SIC 4-stroke, elec start, tiller, 25 in shaft, wht 2001	IGNITION SWITCH & CABLE - 9.9
E10TVX4SSS 4-Stroke, Elec. Start, Tiller, 25 IN shaft, wht 2000	IGNITION SWITCH & CABLE - 9.9
E110MLCCA 1988	REMOTE CONTROL
E110MLCDC 1986	REMOTE CONTROL
E110MLCEM 1989	REMOTE CONTROL
E110MLCUR 1987	REMOTE CONTROL
E110TLCCA 1988	REMOTE CONTROL
E110TLCDC 1986	REMOTE CONTROL
E110TLCDF 1986	REMOTE CONTROL
E110TLCEM 1989	REMOTE CONTROL
E110TLCUR 1987	REMOTE CONTROL
E110TXCCA 1988	REMOTE CONTROL
E110TXCEM 1989	REMOTE CONTROL

E110TXCUR 1987	REMOTE CONTROL
E115JKLEOC 1995	IGNITION SWITCH & CABLE - 85 MODELS
E115JKLERS 1994	IGNITION SWITCH & CABLE - 85 MODELS
E115MLCIH 1981	REMOTE CONTROL
E115MLCIM 1981	REMOTE CONTROL
E115MLCNB 1982	REMOTE CONTROL
E115MLCOS 1985	REMOTE CONTROL
E115MLCRD 1984	REMOTE CONTROL
E115MLCSA 1980	REMOTE CONTROL
E115MLCTE 1983	REMOTE CONTROL
E115MLESB 1990	REMOTE CONTROL
E115TLCIH 1981	REMOTE CONTROL
E115TLCIM 1981	REMOTE CONTROL
E115TLCNB 1982	REMOTE CONTROL
E115TLCOS 1985	REMOTE CONTROL
E115TLCRD 1984	REMOTE CONTROL
E115TLCSA 1980	REMOTE CONTROL
E115TLCTE 1983	REMOTE CONTROL
E115TLESB 1990	REMOTE CONTROL
E115TXCIH 1981	REMOTE CONTROL
E115TXCIM 1981	REMOTE CONTROL
E115TXCNB 1982	REMOTE CONTROL
E115TXCRD 1984	REMOTE CONTROL
E115TXCSA 1980	REMOTE CONTROL
E115TXCTE 1983	REMOTE CONTROL
E115TXESB 1990	REMOTE CONTROL
E120TLCCA 1988	REMOTE CONTROL
E120TLCDC 1986	REMOTE CONTROL
E120TLCEM 1989	REMOTE CONTROL
E120TLCOS 1985	REMOTE CONTROL
E120TLCUR 1987	REMOTE CONTROL
E120TLESB 1990	REMOTE CONTROL
E120TXCCA 1988	REMOTE CONTROL
E120TXCDC 1986	REMOTE CONTROL
E120TXCEM 1989	REMOTE CONTROL

E120TXCOS 1985	REMOTE CONTROL
E120TXCUR 1987	REMOTE CONTROL
E120TXESB 1990	REMOTE CONTROL
E125ESXESS 1990	REMOTE CONTROL
E125ESXW 1989	REMOTE CONTROL
E125WTPLE 1995	REMOTE CONTROL
E140CXCCS 1988	REMOTE CONTROL
E140CXCEC 1989	REMOTE CONTROL
E140CXESR 1990	REMOTE CONTROL
E140MLCIH 1981	REMOTE CONTROL
E140MLCIM 1981	REMOTE CONTROL
E140MLCNB 1982	REMOTE CONTROL
E140MLCSA 1980	REMOTE CONTROL
E140MLCTE 1983	REMOTE CONTROL
E140TLCCM 1988	REMOTE CONTROL
E140TLCDC 1986	REMOTE CONTROL
E140TLCEB 1989	REMOTE CONTROL
E140TLCOS 1985	REMOTE CONTROL
E140TLCRD 1984	REMOTE CONTROL
E140TLCUA 1987	REMOTE CONTROL
E140TLESE 1990	REMOTE CONTROL
E140TRLCIH 1981	REMOTE CONTROL
E140TRLCIM 1981	REMOTE CONTROL
E140TRLCNB 1982	REMOTE CONTROL
E140TRLCSA 1980	REMOTE CONTROL
E140TRLCTE 1983	REMOTE CONTROL
E140TRXCIH 1981	REMOTE CONTROL
E140TRXCIM 1981	REMOTE CONTROL
E140TRXCNB 1982	REMOTE CONTROL
E140TRXCSA 1980	REMOTE CONTROL
E140TRXCTE 1983	REMOTE CONTROL
E140TXCCM 1988	REMOTE CONTROL
E140TXCDC 1986	REMOTE CONTROL
E140TXCEB 1989	REMOTE CONTROL
E140TXCOS 1985	REMOTE CONTROL

E140TXCRD 1984	REMOTE CONTROL
E140TXCUA 1987	REMOTE CONTROL
E140TXESE 1990	REMOTE CONTROL
E150ANCRS 1984	REMOTE CONTROL
E150CXCCA 1988	REMOTE CONTROL
E150CXCEM 1989	REMOTE CONTROL
E150CXESB 1990	REMOTE CONTROL
E150STLCCA 1988	REMOTE CONTROL
E150STLCDC 1986	REMOTE CONTROL
E150STLCEM 1989	REMOTE CONTROL
E150STLCOH 1985	REMOTE CONTROL
E150STLCOS 1985	REMOTE CONTROL
E150STLCRD 1984	REMOTE CONTROL
E150STLCTE 1983	REMOTE CONTROL
E150STLCUR 1987	REMOTE CONTROL
E150STLESB 1990	REMOTE CONTROL
E150TLCCA 1988	REMOTE CONTROL
E150TLCDC 1986	REMOTE CONTROL
E150TLCEM 1989	REMOTE CONTROL
E150TLCOS 1985	REMOTE CONTROL
E150TLCRD 1984	REMOTE CONTROL
E150TLCUR 1987	REMOTE CONTROL
E150TLESB 1990	REMOTE CONTROL
E150TRLCIA 1981	REMOTE CONTROL
E150TRLCIH 1981	REMOTE CONTROL
E150TRLCNM 1982	REMOTE CONTROL
E150TRLCSF 1980	REMOTE CONTROL
E150TRLCSR 1980	REMOTE CONTROL
E150TRLCTB 1983	REMOTE CONTROL
E150TRLCTE 1983	REMOTE CONTROL
E150TRXCIA 1981	REMOTE CONTROL
E150TRXCIH 1981	REMOTE CONTROL
E150TRXCNM 1982	REMOTE CONTROL
E150TRXCSF 1980	REMOTE CONTROL
E150TRXCSR 1980	REMOTE CONTROL

E150TRXCTB 1983	REMOTE CONTROL
E150TRXCTE 1983	REMOTE CONTROL
E150TXCCA 1988	REMOTE CONTROL
E150TXCDC 1986	REMOTE CONTROL
E150TXCEM 1989	REMOTE CONTROL
E150TXCOS 1985	REMOTE CONTROL
E150TXCRD 1984	REMOTE CONTROL
E150TXCUR 1987	REMOTE CONTROL
E150TXESB 1990	REMOTE CONTROL
E150WTLEOR 1995	REMOTE CONTROL
E150WTLERC 1994	REMOTE CONTROL
E150WTLERV 1994	REMOTE CONTROL
E150WTLETG 1993	REMOTE CONTROL
E150WTLETS 1993	REMOTE CONTROL
E150WTXEOR 1995	REMOTE CONTROL
E150WTXERC 1994	REMOTE CONTROL
E150WTXERV 1994	REMOTE CONTROL
E150WTXETG 1993	REMOTE CONTROL
E150WTXETS 1993	REMOTE CONTROL
E155WTLCDR 1986	REMOTE CONTROL
E155WTLCOG 1985	REMOTE CONTROL
E155WTLCRS 1984	REMOTE CONTROL
E155WTLCUA 1987	REMOTE CONTROL
E155WTLISM 1990	REMOTE CONTROL
E155WTLZ 1989	REMOTE CONTROL
E155WTXCDR 1986	REMOTE CONTROL
E155WTXCOC 1985	REMOTE CONTROL
E155WTXCRS 1984	REMOTE CONTROL
E155WTXCUA 1987	REMOTE CONTROL
E155WTXESM 1990	REMOTE CONTROL
E155WTXZ 1989	REMOTE CONTROL
E15DLEOC 1995	IGNITION SWITCH & CABLE - 9.9
E15EBL4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E15EESR 1990	REMOTE CONTROL
E15EL4EEB 1999	IGNITION SWITCH & CABLE -- 9.9

E15EL4SID 4-stroke, elec start, 20 in shaft 2001	IGNITION SWITCH & CABLE - 9.9
E15EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	IGNITION SWITCH & CABLE - 9.9
E15ELESR 1990	REMOTE CONTROL
E15EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	IGNITION SWITCH & CABLE - 9.9
E15EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	IGNITION SWITCH & CABLE - 9.9
E15FKEDR 1996	IGNITION SWITCH & CABLE - 9.9
E15FKEUA 1997	IGNITION SWITCH & CABLE - 9.9
E15FRECM 1998	IGNITION SWITCH & CABLE -- 9.9
E15FREDR 1996	IGNITION SWITCH & CABLE - 9.9
E15FRELECM 1998	IGNITION SWITCH & CABLE -- 9.9
E15FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
E15FRELEUA 1997	IGNITION SWITCH & CABLE - 9.9
E15FREOC 1995	IGNITION SWITCH & CABLE - 9.9
E15FREUA 1997	IGNITION SWITCH & CABLE - 9.9
E15FRLECM 1998	IGNITION SWITCH & CABLE -- 9.9
E15FRLEDR 1996	IGNITION SWITCH & CABLE - 9.9
E15FRLEOC 1995	IGNITION SWITCH & CABLE - 9.9
E15FRLEUA 1997	IGNITION SWITCH & CABLE - 9.9
E15KEOC 1995	IGNITION SWITCH & CABLE - 9.9
E15R4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E15R4SID 4-stroke, rope start, 15 in shaft 2001	IGNITION SWITCH & CABLE - 9.9
E15R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	IGNITION SWITCH & CABLE - 9.9
E15RB4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E15RBL4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E15RELESR 1990	REMOTE CONTROL
E15RESR 1990	REMOTE CONTROL
E15RL4EEB 1999	IGNITION SWITCH & CABLE -- 9.9
E15RL4SID 4-stroke, rope start, 20 in shaft 2001	IGNITION SWITCH & CABLE - 9.9
E15RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	IGNITION SWITCH & CABLE - 9.9
E15RLESR 1990	REMOTE CONTROL
E15RV4SIC 4-stroke,rope start, 15 in shaft, wht 2001	IGNITION SWITCH & CABLE - 9.9
E15RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	IGNITION SWITCH & CABLE - 9.9
E15RVL4SIC 4-stroke, elec start, 15 in shaft, wht 2001	IGNITION SWITCH & CABLE - 9.9

E15RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	IGNITION SWITCH & CABLE - 9.9
E175STLCCM 1988	REMOTE CONTROL
E175STLCEB 1989	REMOTE CONTROL
E175STLESE 1990	REMOTE CONTROL
E175TLCCM 1988	REMOTE CONTROL
E175TLCDR 1986	REMOTE CONTROL
E175TLCOC 1985	REMOTE CONTROL
E175TLCUA 1987	REMOTE CONTROL
E175TRLCIM 1981	REMOTE CONTROL
E175TRLCNB 1982	REMOTE CONTROL
E175TRLCSA 1980	REMOTE CONTROL
E175TRLCSF 1980	REMOTE CONTROL
E175TRLCTD 1983	REMOTE CONTROL
E175TRLCTE 1983	REMOTE CONTROL
E175TRXCIH 1981	REMOTE CONTROL
E175TRXCIM 1981	REMOTE CONTROL
E175TRXCNB 1982	REMOTE CONTROL
E175TRXCSA 1980	REMOTE CONTROL
E175TRXCSF 1980	REMOTE CONTROL
E175TRXCTD 1983	REMOTE CONTROL
E175TRXCTE 1983	REMOTE CONTROL
E175TXCCM 1988	REMOTE CONTROL
E175TXCDR 1986	REMOTE CONTROL
E175TXCEB 1989	REMOTE CONTROL
E175TXCOC 1985	REMOTE CONTROL
E175TXCUA 1987	REMOTE CONTROL
E175TXESE 1990	REMOTE CONTROL
E185ESXESS 1990	REMOTE CONTROL
E185ESXW 1989	REMOTE CONTROL
E185TLCOC 1985	REMOTE CONTROL
E185TLCRS 1984	REMOTE CONTROL
E185TXCOC 1985	REMOTE CONTROL
E185TXCRS 1984	REMOTE CONTROL
E200CXCCR 1988	REMOTE CONTROL

E20ECOS 1985	REMOTE CONTROL
E20ECUR 1987	REMOTE CONTROL
E20EESB 1990	REMOTE CONTROL
E20ELCCA 1988	REMOTE CONTROL
E20ELCDC 1986	REMOTE CONTROL
E20ELCEM 1989	REMOTE CONTROL
E20ELCOS 1985	REMOTE CONTROL
E20ELCUR 1987	REMOTE CONTROL
E20ELESB 1990	REMOTE CONTROL
E20TECDC 1986	REMOTE CONTROL
E225CLCUB 1987	REMOTE CONTROL
E225CXCCCE 1988	REMOTE CONTROL
E225CXCCED 1989	REMOTE CONTROL
E225CXCCUB 1987	REMOTE CONTROL
E225CXCESS 1990	REMOTE CONTROL
E225PLCCCE 1988	REMOTE CONTROL
E225PLCCED 1989	REMOTE CONTROL
E225PLCCUB 1987	REMOTE CONTROL
E225PLESS 1990	REMOTE CONTROL
E225PXCCCE 1988	REMOTE CONTROL
E225PXCCED 1989	REMOTE CONTROL
E225PXCCUB 1987	REMOTE CONTROL
E225PXCESS 1990	REMOTE CONTROL
E225TLCCCE 1988	REMOTE CONTROL
E225TLCCED 1989	REMOTE CONTROL
E225TLCCUB 1987	REMOTE CONTROL
E225TLESS 1990	REMOTE CONTROL
E225TXCCCE 1988	REMOTE CONTROL
E225TXCCED 1989	REMOTE CONTROL
E225TXCCUB 1987	REMOTE CONTROL
E225TXCESS 1990	REMOTE CONTROL
E235STLCOR 1985	REMOTE CONTROL
E235STLCRC 1984	REMOTE CONTROL
E235STLCTS 1983	REMOTE CONTROL
E235STLCOR 1985	REMOTE CONTROL

E235TLCRC 1984	REMOTE CONTROL
E235TRLCIB 1981	REMOTE CONTROL
E235TRLCIH 1981	REMOTE CONTROL
E235TRLCNE 1982	REMOTE CONTROL
E235TRLCSM 1980	REMOTE CONTROL
E235TRLCTD 1983	REMOTE CONTROL
E235TRLCTS 1983	REMOTE CONTROL
E235TRXCIB 1981	REMOTE CONTROL
E235TRXCIH 1981	REMOTE CONTROL
E235TRXCNE 1982	REMOTE CONTROL
E235TRXCSCM 1980	REMOTE CONTROL
E235TRXCTD 1983	REMOTE CONTROL
E235TRXCTS 1983	REMOTE CONTROL
E235TXCOR 1985	REMOTE CONTROL
E235TXCRC 1984	REMOTE CONTROL
E25CNE 1982	REMOTE CONTROL
E25ECCM 1988	REMOTE CONTROL
E25ECDR 1986	REMOTE CONTROL
E25ECEB 1989	REMOTE CONTROL
E25ECIB 1981	INSTRUMENT AND CABLE
E25ECIM 1981	INSTRUMENT AND CABLE
E25ECOC 1985	REMOTE CONTROL
E25ECSR 1984	REMOTE CONTROL
E25ECTD 1983	REMOTE CONTROL
E25ECUA 1987	REMOTE CONTROL
E25EESE 1990	REMOTE CONTROL
E25ELCCM 1988	REMOTE CONTROL
E25ELCDR 1986	REMOTE CONTROL
E25ELCEB 1989	REMOTE CONTROL
E25ELCIB 1981	INSTRUMENT AND CABLE
E25ELCIM 1981	INSTRUMENT AND CABLE
E25ELCNE 1982	REMOTE CONTROL
E25ELCOC 1985	REMOTE CONTROL
E25ELCRS 1984	REMOTE CONTROL
E25ELCTD 1983	REMOTE CONTROL

E25ELCUA 1987	REMOTE CONTROL
E25ELESE 1990	REMOTE CONTROL
E25RCCA 1988	REMOTE CONTROL
E25RCDC 1986	REMOTE CONTROL
E25RCIM 1981	INSTRUMENT AND CABLE
E25RCNB 1982	REMOTE CONTROL
E25RCOS 1985	REMOTE CONTROL
E25RCRD 1984	REMOTE CONTROL
E25RCSA 1980	INSTRUMENT & CABLE
E25RCTE 1983	REMOTE CONTROL
E25RCUR 1987	REMOTE CONTROL
E25RLCCA 1988	REMOTE CONTROL
E25RLCDC 1986	REMOTE CONTROL
E25RLCIM 1981	INSTRUMENT AND CABLE
E25RLCNB 1982	REMOTE CONTROL
E25RLCOS 1985	REMOTE CONTROL
E25RLCRD 1984	REMOTE CONTROL
E25RLCSA 1980	INSTRUMENT & CABLE
E25RLCTE 1983	REMOTE CONTROL
E25RLCUR 1987	REMOTE CONTROL
E25TECCA 1988	REMOTE CONTROL
E25TECDC 1986	REMOTE CONTROL
E25TECIM 1981	INSTRUMENT AND CABLE
E25TECNB 1982	REMOTE CONTROL
E25TECOS 1985	REMOTE CONTROL
E25TECRD 1984	REMOTE CONTROL
E25TECSA 1980	INSTRUMENT & CABLE
E25TECTE 1983	REMOTE CONTROL
E25TECUR 1987	REMOTE CONTROL
E25TELCCA 1988	REMOTE CONTROL
E25TELCDC 1986	REMOTE CONTROL
E25TELCIM 1981	INSTRUMENT AND CABLE
E25TELCNB 1982	REMOTE CONTROL
E25TELCOS 1985	REMOTE CONTROL
E25TELCRD 1984	REMOTE CONTROL

E25TELCSA 1980	INSTRUMENT & CABLE
E25TELCTE 1983	REMOTE CONTROL
E25TELCUR 1987	REMOTE CONTROL
E275CLCUR 1987	REMOTE CONTROL
E275CXCCA 1988	REMOTE CONTROL - STANDARD ROTATION
E275CXCUR 1987	REMOTE CONTROL
E275PLCCA 1988	REMOTE CONTROL - STANDARD ROTATION
E275PLCUR 1987	REMOTE CONTROL
E275PTLCDC 1986	REMOTE CONTROL
E275PTXCDC 1986	REMOTE CONTROL
E275PXCCA 1988	REMOTE CONTROL - STANDARD ROTATION
E275PXCUR 1987	REMOTE CONTROL
E275TLCOS 1985	REMOTE CONTROL
E275TXCOS 1985	REMOTE CONTROL
E28ESLCEA 1989	REMOTE CONTROL
E28ESLESM 1990	REMOTE CONTROL
E300CLCUR 1987	REMOTE CONTROL
E300CXCCA 1988	REMOTE CONTROL - STANDARD ROTATION
E300CXCEM 1989	REMOTE CONTROL
E300CXCUR 1987	REMOTE CONTROL
E300CXESB 1990	REMOTE CONTROL
E300PLCCA 1988	REMOTE CONTROL - STANDARD ROTATION
E300PLCEM 1989	REMOTE CONTROL
E300PLCUR 1987	REMOTE CONTROL
E300PLESB 1990	REMOTE CONTROL
E300PXCCA 1988	REMOTE CONTROL - STANDARD ROTATION
E300PXCEM 1989	REMOTE CONTROL
E300PXCUR 1987	REMOTE CONTROL
E300PXESB 1990	REMOTE CONTROL
E300TLCDC 1986	REMOTE CONTROL
E300TLCOS 1985	REMOTE CONTROL
E300TXCDC 1986	REMOTE CONTROL
E300TXCOS 1985	REMOTE CONTROL
E30ECCE 1988	REMOTE CONTROL
E30ECDM 1986	REMOTE CONTROL

E30ECED 1989	REMOTE CONTROL
E30EOCA 1985	REMOTE CONTROL
E30ECRR 1984	REMOTE CONTROL
E30ECUB 1987	REMOTE CONTROL
E30EESS 1990	REMOTE CONTROL
E30ELCCE 1988	REMOTE CONTROL
E30ELCDM 1986	REMOTE CONTROL
E30ELCED 1989	REMOTE CONTROL
E30ELCOA 1985	REMOTE CONTROL
E30ELCRR 1984	REMOTE CONTROL
E30ELCUB 1987	REMOTE CONTROL
E30ELESS 1990	REMOTE CONTROL
E30RCCE 1988	REMOTE CONTROL
E30RCDM 1986	REMOTE CONTROL
E30RCOA 1985	REMOTE CONTROL
E30RCUB 1987	REMOTE CONTROL
E30RLCCE 1988	REMOTE CONTROL
E30RLCDM 1986	REMOTE CONTROL
E30RLCOA 1985	REMOTE CONTROL
E30RLCUB 1987	REMOTE CONTROL
E30TECCE 1988	REMOTE CONTROL
E30TECDM 1986	REMOTE CONTROL
E30TECOA 1985	REMOTE CONTROL
E30TECUB 1987	REMOTE CONTROL
E30TELCCE 1988	REMOTE CONTROL
E30TELCDM 1986	REMOTE CONTROL
E30TELCOA 1985	REMOTE CONTROL
E30TELCUB 1987	REMOTE CONTROL
E35AELCDE 1986	REMOTE CONTROL
E35AELCUD 1987	REMOTE CONTROL
E35ARLCDE 1986	REMOTE CONTROL
E35ARLCUD 1987	REMOTE CONTROL
E35ECIG 1981	INSTRUMENT & CABLE
E35ECND 1982	REMOTE CONTROL
E35ECRR 1984	REMOTE CONTROL

E35ECSM 1980	INSTRUMENT & CABLE
E35ECTS 1983	REMOTE CONTROL
E35ELCIG 1981	INSTRUMENT & CABLE
E35ELCND 1982	REMOTE CONTROL
E35ELCRR 1984	REMOTE CONTROL
E35ELCSM 1980	INSTRUMENT & CABLE
E35ELCTS 1983	REMOTE CONTROL
E35RCCE 1988	REMOTE CONTROL
E35RCDM 1986	REMOTE CONTROL
E35RCIG 1981	INSTRUMENT & CABLE
E35RCND 1982	REMOTE CONTROL
E35RCRR 1984	REMOTE CONTROL
E35RCTS 1983	REMOTE CONTROL
E35RCUB 1987	REMOTE CONTROL
E35RLCCE 1988	REMOTE CONTROL
E35RLCDM 1986	REMOTE CONTROL
E35RLCIG 1981	INSTRUMENT & CABLE
E35RLCND 1982	REMOTE CONTROL
E35RLCRR 1984	REMOTE CONTROL
E35RLCTS 1983	REMOTE CONTROL
E35RLCUB 1987	REMOTE CONTROL
E35TCSM 1980	INSTRUMENT & CABLE
E35TELCNB 1982	REMOTE CONTROL
E35TELCRR 1984	REMOTE CONTROL
E35TELCTS 1983	REMOTE CONTROL
E35TLESM 1980	INSTRUMENT & CABLE
E40AELCCS 1988	REMOTE CONTROL
E40ARLCCS 1988	REMOTE CONTROL
E40ATLCCS 1988	REMOTE CONTROL
E40ECCS 1988	REMOTE CONTROL
E40ECDE 1986	REMOTE CONTROL
E40ECOB 1985	REMOTE CONTROL
E40ECRM 1984	REMOTE CONTROL
E40ECUD 1987	REMOTE CONTROL
E40EENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY

E40EENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40EEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40EERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40EESR 1990	REMOTE CONTROL
E40EETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40ELCCS 1988	REMOTE CONTROL
E40ELCDE 1986	REMOTE CONTROL
E40ELCOB 1985	REMOTE CONTROL
E40ELCRM 1984	REMOTE CONTROL
E40ELCUD 1987	REMOTE CONTROL
E40ELECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E40ELEDs 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40ELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40ELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40ELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40ELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40ELESR 1990	REMOTE CONTROL
E40ELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40ELEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RCCS 1988	REMOTE CONTROL
E40RCDE 1986	REMOTE CONTROL
E40RCOB 1985	REMOTE CONTROL
E40RCRM 1984	REMOTE CONTROL
E40RCUD 1987	REMOTE CONTROL
E40RECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E40REDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40REOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RESR 1990	REMOTE CONTROL
E40RETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40REUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RLCCS 1988	REMOTE CONTROL
E40RLCDE 1986	REMOTE CONTROL
E40RLCOB 1985	REMOTE CONTROL

E40RLCRM 1984	REMOTE CONTROL
E40RLCUD 1987	REMOTE CONTROL
E40RLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E40RLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40RLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RLESR 1990	REMOTE CONTROL
E40RLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40RLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TECCS 1988	REMOTE CONTROL
E40TECDE 1986	REMOTE CONTROL
E40TECOB 1985	REMOTE CONTROL
E40TECRM 1984	REMOTE CONTROL
E40TECUD 1987	REMOTE CONTROL
E40TEECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E40TEEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TEENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40TEENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40TEEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TEERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TEESR 1990	REMOTE CONTROL
E40TEETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TEEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TELCCS 1988	REMOTE CONTROL
E40TELCDE 1986	REMOTE CONTROL
E40TELCOB 1985	REMOTE CONTROL
E40TELCRM 1984	REMOTE CONTROL
E40TELECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E40TELEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40TELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TELESR 1990	REMOTE CONTROL

E40TELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TELEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TLCCS 1988	REMOTE CONTROL
E40TLCDE 1986	REMOTE CONTROL
E40TLCUD 1987	REMOTE CONTROL
E40TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E40TLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40TLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40TLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TLESR 1990	REMOTE CONTROL
E40TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TTLCCS 1988	REMOTE CONTROL
E40TTLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E40TTLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TTLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E40TTLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TTLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TTLESR 1990	REMOTE CONTROL
E40TTLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TTLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E40TTLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E45RCE 1989	REMOTE CONTROL - ELECTRIC START
E45RCEIA 1991	REMOTE CONTROL
E45RCENM 1992	REMOTE CONTROL
E45RCESR 1990	REMOTE CONTROL
E45RCLE 1989	REMOTE CONTROL - ELECTRIC START
E45RCLEIA 1991	REMOTE CONTROL
E45RCLENM 1992	REMOTE CONTROL
E45RCLESR 1990	REMOTE CONTROL
E45WMLE 1989	REMOTE CONTROL - ELECTRIC START
E45WMLEIA 1991	REMOTE CONTROL

E45WMLNEM 1992	REMOTE CONTROL
E45WMLSR 1990	REMOTE CONTROL
E48ESLCCC 1988	REMOTE CONTROL
E48ESLESA 1990	REMOTE CONTROL
E50BECCS 1988	REMOTE CONTROL
E50BECDE 1986	REMOTE CONTROL
E50BECIC 1981	REMOTE CONTROL
E50BECNR 1982	REMOTE CONTROL
E50BECOB 1985	REMOTE CONTROL
E50BECRM 1984	REMOTE CONTROL
E50BECTA 1983	REMOTE CONTROL
E50BECUD 1987	REMOTE CONTROL
E50BEENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50BEENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50BEEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50BEERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50BEESR 1990	REMOTE CONTROL
E50BEETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50BELCCS 1988	REMOTE CONTROL
E50BELCDE 1986	REMOTE CONTROL
E50BELCIC 1981	REMOTE CONTROL
E50BELCNR 1982	REMOTE CONTROL
E50BELCOB 1985	REMOTE CONTROL
E50BELCRM 1984	REMOTE CONTROL
E50BELCTA 1983	REMOTE CONTROL
E50BELCUD 1987	REMOTE CONTROL
E50BELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50BELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50BELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50BELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50BELESR 1990	REMOTE CONTROL
E50BELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50ECSR 1980	REMOTE CONTROL
E50ELCSR 1980	REMOTE CONTROL
E50ESLECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL

E50ESLEUR 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50JEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50JENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50JENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50JEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50JERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50JETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50JEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50RNLIA 1990	REMOTE CONTROL
E50TELCCS 1988	REMOTE CONTROL
E50TELCDE 1986	REMOTE CONTROL
E50TELCOB 1985	REMOTE CONTROL
E50TELCRM 1984	REMOTE CONTROL
E50TELCCTA 1983	REMOTE CONTROL
E50TELCUD 1987	REMOTE CONTROL
E50TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50TELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TELESR 1990	REMOTE CONTROL
E50TELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TLCCS 1988	REMOTE CONTROL
E50TLCDE 1986	REMOTE CONTROL
E50TLCOB 1985	REMOTE CONTROL
E50TLCRM 1984	REMOTE CONTROL
E50TLCUD 1987	REMOTE CONTROL
E50TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E50TLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50TENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
E50TLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TLESR 1990	REMOTE CONTROL
E50TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL

E50TSLECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
E50TSLEUS 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
E50TTLECA 1998	IGNITION SWITCH & CABLE
E50TTLEDC 1996	IGNITION SWITCH & CABLE
E50TTLEOS 1995	IGNITION SWITCH & CABLE
E50TTLEUR 1997	IGNITION SWITCH & CABLE
E55RCIM 1981	REMOTE CONTROL
E55RLCSA 1980	REMOTE CONTROL
E55RWLE 1989	REMOTE CONTROL - ELECTRIC START
E55RWLEIA 1991	REMOTE CONTROL
E55RWLENM 1992	REMOTE CONTROL
E55RWLESR 1990	REMOTE CONTROL
E55TLCIM 1981	REMOTE CONTROL
E60ECIA 1981	REMOTE CONTROL
E60ECIH 1981	REMOTE CONTROL
E60ECNM 1982	REMOTE CONTROL
E60ECSR 1980	REMOTE CONTROL
E60ECTB 1983	REMOTE CONTROL
E60ELCCR 1988	REMOTE CONTROL
E60ELCDS 1986	REMOTE CONTROL
E60ELCEA 1989	REMOTE CONTROL
E60ELCIA 1981	REMOTE CONTROL
E60ELCIH 1981	REMOTE CONTROL
E60ELCNM 1982	REMOTE CONTROL
E60ELCOD 1985	REMOTE CONTROL
E60ELCRE 1984	REMOTE CONTROL
E60ELCSR 1980	REMOTE CONTROL
E60ELCTB 1983	REMOTE CONTROL
E60ELCUC 1987	REMOTE CONTROL
E60ELES 1990	REMOTE CONTROL
E60TLCCR 1988	REMOTE CONTROL
E60TLCDS 1986	REMOTE CONTROL
E60TLCEA 1989	REMOTE CONTROL
E60TLCIA 1981	REMOTE CONTROL
E60TLCIH 1981	REMOTE CONTROL

E60TLCNM 1982	REMOTE CONTROL
E60TLCOD 1985	REMOTE CONTROL
E60TLCRE 1984	REMOTE CONTROL
E60TLCTB 1983	REMOTE CONTROL
E60TLCUC 1987	REMOTE CONTROL
E60TLESM 1990	REMOTE CONTROL
E60TTLCCR 1988	REMOTE CONTROL
E60TTLCEA 1989	REMOTE CONTROL
E60TTLECM 1998	IGNITION SWITCH & CABLE
E60TTLEDR 1996	IGNITION SWITCH & CABLE
E60TTLENE 1992	IGNITION SWITCH & CABLE
E60TTLEOC 1995	IGNITION SWITCH & CABLE
E60TTLERS 1994	IGNITION SWITCH & CABLE
E60TTLERV 1994	IGNITION SWITCH & CABLE
E60TTLESM 1990	REMOTE CONTROL
E60TTLETD 1993	IGNITION SWITCH & CABLE
E60TTLEUA 1997	IGNITION SWITCH & CABLE
E65RWLCRS 1984	REMOTE CONTROL
E65TELCRS 1984	REMOTE CONTROL
E65WMLCDR 1986	REMOTE CONTROL
E65WMLCOC 1985	REMOTE CONTROL
E65WMLCUA 1987	REMOTE CONTROL
E65WMLESM 1990	REMOTE CONTROL
E65WMLZ 1989	REMOTE CONTROL
E65WTLCOC 1985	REMOTE CONTROL
E65WTLCRS 1984	REMOTE CONTROL
E70ELCCA 1988	REMOTE CONTROL
E70ELCDC 1986	REMOTE CONTROL
E70ELCEM 1989	REMOTE CONTROL
E70ELCIH 1981	REMOTE CONTROL
E70ELCIM 1981	REMOTE CONTROL
E70ELCNB 1982	REMOTE CONTROL
E70ELCOS 1985	REMOTE CONTROL
E70ELCRD 1984	REMOTE CONTROL
E70ELCSA 1980	REMOTE CONTROL

E70ELCTE 1983	REMOTE CONTROL
E70ELCUR 1987	REMOTE CONTROL
E70ELESB 1990	REMOTE CONTROL
E70TLCCA 1988	REMOTE CONTROL
E70TLCDC 1986	REMOTE CONTROL
E70TLCEM 1989	REMOTE CONTROL
E70TLCIM 1981	REMOTE CONTROL
E70TLCNB 1982	REMOTE CONTROL
E70TLCOS 1985	REMOTE CONTROL
E70TLCRD 1984	REMOTE CONTROL
E70TLCTE 1983	REMOTE CONTROL
E70TLCUR 1987	REMOTE CONTROL
E70TLESB 1990	REMOTE CONTROL
E70TTLEND 1992	IGNITION SWITCH & CABLE
E70TTLEOR 1995	IGNITION SWITCH & CABLE
E70TTLERC 1994	IGNITION SWITCH & CABLE
E70TTLERV 1994	IGNITION SWITCH & CABLE
E70TTLETS 1993	IGNITION SWITCH & CABLE
E75ECCA 1988	REMOTE CONTROL
E75ECDC 1986	REMOTE CONTROL
E75ECOS 1985	REMOTE CONTROL
E75ECDRD 1984	REMOTE CONTROL
E75ECUR 1987	REMOTE CONTROL
E75ELCRD 1984	REMOTE CONTROL
E75ERCIH 1981	REMOTE CONTROL
E75ERCIM 1981	REMOTE CONTROL
E75ERCNB 1982	REMOTE CONTROL
E75ERCSA 1980	REMOTE CONTROL
E75ERCTE 1983	REMOTE CONTROL
E75ERLCIH 1981	REMOTE CONTROL
E75ERLCIM 1981	REMOTE CONTROL
E75ERLCNB 1982	REMOTE CONTROL
E75ERLCSA 1980	REMOTE CONTROL
E75ERLCTE 1983	REMOTE CONTROL
E75TLCRD 1984	REMOTE CONTROL

E75TRLCIH 1981	REMOTE CONTROL
E75TRLCIM 1981	REMOTE CONTROL
E75TRLCNB 1982	REMOTE CONTROL
E75TRLCSA 1980	REMOTE CONTROL
E75TRLCTE 1983	REMOTE CONTROL
E85MLCSA 1980	REMOTE CONTROL
E85STLCSA 1980	REMOTE CONTROL
E85STXCOSA 1980	REMOTE CONTROL
E85TTLEND 1992	IGNITION SWITCH & CABLE
E85TTLEOR 1995	IGNITION SWITCH & CABLE - 85 MODELS
E85TTLERC 1994	IGNITION SWITCH & CABLE - 85 MODELS
E85TTLETS 1993	IGNITION SWITCH & CABLE
E88MSLCCC 1988	REMOTE CONTROL
E88MSLCER 1989	REMOTE CONTROL
E88MSLESA 1990	REMOTE CONTROL
E90MLCDC 1986	REMOTE CONTROL
E90MLCIH 1981	REMOTE CONTROL
E90MLCIM 1981	REMOTE CONTROL
E90MLCNB 1982	REMOTE CONTROL
E90MLCOS 1985	REMOTE CONTROL
E90MLCRD 1984	REMOTE CONTROL
E90MLCTE 1983	REMOTE CONTROL
E90MLCUR 1987	REMOTE CONTROL
E90TLCCA 1988	REMOTE CONTROL
E90TLCDC 1986	REMOTE CONTROL
E90TLCEM 1989	REMOTE CONTROL
E90TLCIH 1981	REMOTE CONTROL
E90TLCIM 1981	REMOTE CONTROL
E90TLCNB 1982	REMOTE CONTROL
E90TLCOS 1985	REMOTE CONTROL
E90TLCRD 1984	REMOTE CONTROL
E90TLCTE 1983	REMOTE CONTROL
E90TLCUR 1987	REMOTE CONTROL
E90TLESB 1990	REMOTE CONTROL
E90TXCDC 1986	REMOTE CONTROL

E90TXCIH 1981	REMOTE CONTROL
E90TXCIM 1981	REMOTE CONTROL
E90TXCNB 1982	REMOTE CONTROL
E90TXCOS 1985	REMOTE CONTROL
E90TXCRD 1984	REMOTE CONTROL
E90TXCTE 1983	REMOTE CONTROL
ELECTRICAL	REMOTE START KIT - 25,30 HP (2-Stroke)
ELECTRICAL 1980	REMOTE ELECTRIC STARTING KIT 25 MODELS
ELECTRICAL 1992	IGNITION SWITCH & CABLE - 40/50 MODELS
ELECTRICAL 1992	REMOTE ELECTRIC START KIT 20, 25, 30 & 35 ROPE, TE MODELS
ELECTRICAL 1992	REMOTE ELECTRIC START KIT - 40 & 50 ROPE & TE MODELS
ELECTRICAL 1992	REMOTE STARTING KIT - 9.9, 15 TE
ELECTRICAL 1992	WIRING KIT - SINGLE LEVER CONTROLS REM. ELEC. START 10-V-8
ELECTRICAL 1992	WIRING KIT - DUAL ENGINE
ELECTRICAL 1993	IGNITION SWITCH & CABLE - 25/48 MODELS
ELECTRICAL 1993	REMOTE ELECTRIC START KIT 20, 25, 30 & 35 ROPE, TE MODELS
ELECTRICAL 1993	WIRING KIT - DUAL ENGINE
ELECTRICAL 1993	WIRING KIT - REMOTE ELECTRIC START, 10 THRU V8
ELECTRICAL 1994	IGNITION SWITCH & CABLE - 25/48 MODELS
ELECTRICAL 1994	REMOTE ELECTRIC START KIT 20, 25, 30 & 35 ROPE, TE MODELS
ELECTRICAL 1994	REMOTE START KIT - 9.9, 15
ELECTRICAL 1994	WIRING KIT - REMOTE ELECTRIC START , 10 THRU V8
ELECTRICAL 1994	WIRING KIT - DUAL ENGINE
ELECTRICAL 1995	IGNITION SWITCH & CABLE - 25/48 MODELS
ELECTRICAL 1995	REMOTE ELECTRIC START KIT 20,25,30,35 ROPE & TE (2-CYL)
ELECTRICAL 1995	REMOTE START KIT - 9.9, 15 TILLER ELECTRIC (2-STROKE)
ELECTRICAL 1995	WIRING KIT - SINGLE LEVER CONTROLS REMOTE ELEC. START-10-V8
ELECTRICAL 1995	WIRING KIT - DUAL ENGINE
ELECTRICAL 1996	REMOTE ELEC. START KIT 20, 25, 30, & 35 ROPE & TE (2-CYL.)
ELECTRICAL 1996	REMOTE START KIT - 9.9, 15 TILLER ELECTRIC (2-STROKE)
ELECTRICAL 1997	REMOTE ELECTRIC START KIT 20, 25, 30, 35 ROPE & TE (2-CYL)
ELECTRICAL 1997	REMOTE START KIT - 9.9, 15 TILLER ELECTRIC (2-STROKE)
ELECTRICAL 1998	REMOTE ELECTRIC START KIT 20/25/30/35 ROPE, TE MODELS-2-CYL.

ELECTRICAL 1999	REMOTE ELECTRIC START KIT 20, 25, 30, & 35 ROPE & TE MODELS (2-CYL)
ELECTRICAL 2000	REMOTE ELECTRIC START KIT - 20, 25, 30, & 35 ROPE & TE MODELS (2-CYLINDER)
HE40REDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
HE40REUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
HE40RLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
HE40RLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
HE55WMLM 1996	REMOTE CONTROL
HJ40REDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
HJ40REUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
HJ40RLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
HJ40RLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
HJ55WMLM 1996	REMOTE CONTROL
J100MLCSC 1980	REMOTE CONTROL
J100STLCCA 1988	REMOTE CONTROL
J100STLCEM 1989	REMOTE CONTROL
J100STLESB 1990	REMOTE CONTROL
J100TRLCS 1980	REMOTE CONTROL
J100TRXCSC 1980	REMOTE CONTROL
J100WMLCDR 1986	REMOTE CONTROL
J100WMLCOC 1985	REMOTE CONTROL
J100WMLCRS 1984	REMOTE CONTROL
J100WTLCDR 1986	REMOTE CONTROL
J100WTLCOC 1985	REMOTE CONTROL
J100WTLCRS 1984	REMOTE CONTROL
J100WTLCUA 1987	REMOTE CONTROL
J100WTLESM 1990	REMOTE CONTROL
J100WTLZ 1989	REMOTE CONTROL
J100WTXCDR 1986	REMOTE CONTROL
J100WTXCUA 1987	REMOTE CONTROL
J100WTXESM 1990	REMOTE CONTROL
J100WTXZ 1989	REMOTE CONTROL
J10EESC 1990	REMOTE CONTROL
J10EESC 1990	REMOTE CONTROL
J10FEXECM 1998	IGNITION SWITCH & CABLE -- 9.9

J10FEXEDR 1996	IGNITION SWITCH & CABLE - 9.9
J10FEXEO 1995	IGNITION SWITCH & CABLE - 9.9
J10FEXEUA 1997	IGNITION SWITCH & CABLE - 9.9
J10FRECM 1998	IGNITION SWITCH & CABLE -- 9.9
J10FREDR 1996	IGNITION SWITCH & CABLE - 9.9
J10FRELECM 1998	IGNITION SWITCH & CABLE -- 9.9
J10FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
J10FRELEOC 1995	IGNITION SWITCH & CABLE - 9.9
J10FRELEUA 1997	IGNITION SWITCH & CABLE - 9.9
J10FREOC 1995	IGNITION SWITCH & CABLE - 9.9
J10FREUA 1997	IGNITION SWITCH & CABLE - 9.9
J10FRLECM 1998	IGNITION SWITCH & CABLE -- 9.9
J10FRLEDR 1996	IGNITION SWITCH & CABLE - 9.9
J10FRLEO 1995	IGNITION SWITCH & CABLE - 9.9
J10FRLEUA 1997	IGNITION SWITCH & CABLE - 9.9
J10RELESC 1990	REMOTE CONTROL
J10RESC 1990	REMOTE CONTROL
J10RLESC 1990	REMOTE CONTROL
J10SELESC 1990	REMOTE CONTROL
J110MLCCA 1988	REMOTE CONTROL
J110MLCDC 1986	REMOTE CONTROL
J110MLCEM 1989	REMOTE CONTROL
J110MLCUR 1987	REMOTE CONTROL
J110TLAEM 1989	REMOTE CONTROL
J110TLCCA 1988	REMOTE CONTROL
J110TLCDC 1986	REMOTE CONTROL
J110TLCDF 1986	REMOTE CONTROL
J110TLCEM 1989	REMOTE CONTROL
J110TLCUR 1987	REMOTE CONTROL
J110TXCCA 1988	REMOTE CONTROL
J110TXCEM 1989	REMOTE CONTROL
J110TXCUR 1987	REMOTE CONTROL
J115JKLEOC 1995	IGNITION SWITCH & CABLE - 85 MODELS
J115JKLERS 1994	IGNITION SWITCH & CABLE - 85 MODELS
J115MLCIH 1981	REMOTE CONTROL

J115MLCIM 1981	REMOTE CONTROL
J115MLCNB 1982	REMOTE CONTROL
J115MLCOS 1985	REMOTE CONTROL
J115MLCRD 1984	REMOTE CONTROL
J115MLCSA 1980	REMOTE CONTROL
J115MLCTE 1983	REMOTE CONTROL
J115MLESB 1990	REMOTE CONTROL
J115TLASB 1990	REMOTE CONTROL
J115TLCIH 1981	REMOTE CONTROL
J115TLCIM 1981	REMOTE CONTROL
J115TLCNB 1982	REMOTE CONTROL
J115TLCOS 1985	REMOTE CONTROL
J115TLCRD 1984	REMOTE CONTROL
J115TLCSA 1980	REMOTE CONTROL
J115TLCTE 1983	REMOTE CONTROL
J115TLESB 1990	REMOTE CONTROL
J115TXCIH 1981	REMOTE CONTROL
J115TXCIM 1981	REMOTE CONTROL
J115TXCNB 1982	REMOTE CONTROL
J115TXCRD 1984	REMOTE CONTROL
J115TXCSA 1980	REMOTE CONTROL
J115TXCTE 1983	REMOTE CONTROL
J115TXESB 1990	REMOTE CONTROL
J120LAEM 1989	REMOTE CONTROL
J120TLASB 1990	REMOTE CONTROL
J120TLCCA 1988	REMOTE CONTROL
J120TLCDC 1986	REMOTE CONTROL
J120TLCEM 1989	REMOTE CONTROL
J120TLCOS 1985	REMOTE CONTROL
J120TLCUR 1987	REMOTE CONTROL
J120TLESB 1990	REMOTE CONTROL
J120TXCCA 1988	REMOTE CONTROL
J120TXCDC 1986	REMOTE CONTROL
J120TXCEM 1989	REMOTE CONTROL
J120XCCOS 1985	REMOTE CONTROL

J120TXCUR 1987	REMOTE CONTROL
J120TXESB 1990	REMOTE CONTROL
J125ESXESS 1990	REMOTE CONTROL
J125ESXW 1989	REMOTE CONTROL
J125WTPLE 1995	REMOTE CONTROL
J140CXCCS 1988	REMOTE CONTROL
J140CXCEC 1989	REMOTE CONTROL
J140CXESR 1990	REMOTE CONTROL
J140MLCIH 1981	REMOTE CONTROL
J140MLCIM 1981	REMOTE CONTROL
J140MLCNB 1982	REMOTE CONTROL
J140MLCSA 1980	REMOTE CONTROL
J140MLCTE 1983	REMOTE CONTROL
J140TLAEB 1989	REMOTE CONTROL
J140TLASE 1990	REMOTE CONTROL
J140TLCCM 1988	REMOTE CONTROL
J140TLCDC 1986	REMOTE CONTROL
J140TLCEB 1989	REMOTE CONTROL
J140TLCIH 1981	REMOTE CONTROL
J140TLCIM 1981	REMOTE CONTROL
J140TLCNB 1982	REMOTE CONTROL
J140TLCOS 1985	REMOTE CONTROL
J140TLCRD 1984	REMOTE CONTROL
J140TLCSA 1980	REMOTE CONTROL
J140TLCTE 1983	REMOTE CONTROL
J140TLCUA 1987	REMOTE CONTROL
J140TLESE 1990	REMOTE CONTROL
J140TXCCM 1988	REMOTE CONTROL
J140TXCDC 1986	REMOTE CONTROL
J140TXCEB 1989	REMOTE CONTROL
J140TXCIH 1981	REMOTE CONTROL
J140TXCIM 1981	REMOTE CONTROL
J140TXCNB 1982	REMOTE CONTROL
J140TXCOS 1985	REMOTE CONTROL
J140TXCRD 1984	REMOTE CONTROL

J140TXCSA 1980	REMOTE CONTROL
J140TXCTE 1983	REMOTE CONTROL
J140TXCUA 1987	REMOTE CONTROL
J140TXESE 1990	REMOTE CONTROL
J150CXCCA 1988	REMOTE CONTROL
J150CXCEM 1989	REMOTE CONTROL
J150CXESB 1990	REMOTE CONTROL
J150GTLCUR 1987	REMOTE CONTROL
J150STLACA 1988	REMOTE CONTROL
J150STLCCA 1988	REMOTE CONTROL
J150STLCDC 1986	REMOTE CONTROL
J150STLCEM 1989	REMOTE CONTROL
J150STLCOH 1985	REMOTE CONTROL
J150STLCOS 1985	REMOTE CONTROL
J150STLCRD 1984	REMOTE CONTROL
J150STLCTE 1983	REMOTE CONTROL
J150STLCUR 1987	REMOTE CONTROL
J150STLESB 1990	REMOTE CONTROL
J150TLAEM 1989	REMOTE CONTROL
J150TLASB 1990	REMOTE CONTROL
J150TLCCA 1988	REMOTE CONTROL
J150TLCDC 1986	REMOTE CONTROL
J150TLCEM 1989	REMOTE CONTROL
J150TLCIA 1981	REMOTE CONTROL
J150TLCIH 1981	REMOTE CONTROL
J150TLCNM 1982	REMOTE CONTROL
J150TLCOS 1985	REMOTE CONTROL
J150TLCRD 1984	REMOTE CONTROL
J150TLCSF 1980	REMOTE CONTROL
J150TLCSR 1980	REMOTE CONTROL
J150TLCTB 1983	REMOTE CONTROL
J150TLCTE 1983	REMOTE CONTROL
J150TLCUR 1987	REMOTE CONTROL
J150TLESB 1990	REMOTE CONTROL
J150TXCCA 1988	REMOTE CONTROL

J150TXCDC 1986	REMOTE CONTROL
J150TXCEM 1989	REMOTE CONTROL
J150TXCIA 1981	REMOTE CONTROL
J150TXCIH 1981	REMOTE CONTROL
J150TXCNM 1982	REMOTE CONTROL
J150XCCOS 1985	REMOTE CONTROL
J150TXCRD 1984	REMOTE CONTROL
J150TXCSF 1980	REMOTE CONTROL
J150TXCSR 1980	REMOTE CONTROL
J150TXCTB 1983	REMOTE CONTROL
J150TXCTE 1983	REMOTE CONTROL
J150TXCUR 1987	REMOTE CONTROL
J150TXESB 1990	REMOTE CONTROL
J150WTLEOR 1995	REMOTE CONTROL
J150WTLERC 1994	REMOTE CONTROL
J150WTLERV 1994	REMOTE CONTROL
J150WTLETG 1993	REMOTE CONTROL
J150WTLETS 1993	REMOTE CONTROL
J150WTXEOR 1995	REMOTE CONTROL
J150WTXERC 1994	REMOTE CONTROL
J150WTXERV 1994	REMOTE CONTROL
J150WTXETG 1993	REMOTE CONTROL
J150WTXETS 1993	REMOTE CONTROL
J155WTLCDR 1986	REMOTE CONTROL
J155WTLCOG 1985	REMOTE CONTROL
J155WTLCRS 1984	REMOTE CONTROL
J155WTLCUA 1987	REMOTE CONTROL
J155WTLISM 1990	REMOTE CONTROL
J155WTLZ 1989	REMOTE CONTROL
J155WTXCDR 1986	REMOTE CONTROL
J155WTXCOC 1985	REMOTE CONTROL
J155WTXCRS 1984	REMOTE CONTROL
J155WTXCUA 1987	REMOTE CONTROL
J155WTXISM 1990	REMOTE CONTROL
J155WTXZ 1989	REMOTE CONTROL

J15DLEOC 1995	IGNITION SWITCH & CABLE - 9.9
J15EESR 1990	REMOTE CONTROL
J15ELESR 1990	REMOTE CONTROL
J15FKEDR 1996	IGNITION SWITCH & CABLE - 9.9
J15FKEUA 1997	IGNITION SWITCH & CABLE - 9.9
J15FRECM 1998	IGNITION SWITCH & CABLE -- 9.9
J15FREDR 1996	IGNITION SWITCH & CABLE - 9.9
J15FRELECM 1998	IGNITION SWITCH & CABLE -- 9.9
J15FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
J15FRELEUA 1997	IGNITION SWITCH & CABLE - 9.9
J15FREOC 1995	IGNITION SWITCH & CABLE - 9.9
J15FREUA 1997	IGNITION SWITCH & CABLE - 9.9
J15FRLECM 1998	IGNITION SWITCH & CABLE -- 9.9
J15FRLEDR 1996	IGNITION SWITCH & CABLE - 9.9
J15FRLEOC 1995	IGNITION SWITCH & CABLE - 9.9
J15FRLEUA 1997	IGNITION SWITCH & CABLE - 9.9
J15KEOC 1995	IGNITION SWITCH & CABLE - 9.9
J15RELESR 1990	REMOTE CONTROL
J15RESR 1990	REMOTE CONTROL
J15RLESR 1990	REMOTE CONTROL
J175STLACM 1988	REMOTE CONTROL
J175STLCCM 1988	REMOTE CONTROL
J175STLCEB 1989	REMOTE CONTROL
J175STLESE 1990	REMOTE CONTROL
J175TLCCM 1988	REMOTE CONTROL
J175TLCDR 1986	REMOTE CONTROL
J175TLCIH 1981	REMOTE CONTROL
J175TLCIM 1981	REMOTE CONTROL
J175TLCNB 1982	REMOTE CONTROL
J175TLCOC 1985	REMOTE CONTROL
J175TLCSA 1980	REMOTE CONTROL
J175TLCSF 1980	REMOTE CONTROL
J175TLCTD 1983	REMOTE CONTROL
J175TLCTE 1983	REMOTE CONTROL
J175TLCUA 1987	REMOTE CONTROL

J175TXCCM 1988	REMOTE CONTROL
J175TXCDR 1986	REMOTE CONTROL
J175TXCEB 1989	REMOTE CONTROL
J175TXCIH 1981	REMOTE CONTROL
J175TXCIM 1981	REMOTE CONTROL
J175TXCNB 1982	REMOTE CONTROL
J175TXCOC 1985	REMOTE CONTROL
J175TXCSA 1980	REMOTE CONTROL
J175TXCSF 1980	REMOTE CONTROL
J175TXCTD 1983	REMOTE CONTROL
J175TXCTE 1983	REMOTE CONTROL
J175TXCUA 1987	REMOTE CONTROL
J175TXESE 1990	REMOTE CONTROL
J185ESXESS 1990	REMOTE CONTROL
J185ESXW 1989	REMOTE CONTROL
J185TLCOC 1985	REMOTE CONTROL
J185TLCRS 1984	REMOTE CONTROL
J185TXCOC 1985	REMOTE CONTROL
J185TXCR 1984	REMOTE CONTROL
J200CXCCR 1988	REMOTE CONTROL
J200CXCEA 1989	REMOTE CONTROL
J200CXESM 1990	REMOTE CONTROL
J200STLACM 1988	REMOTE CONTROL
J200STLCCM 1988	REMOTE CONTROL
J200STLCEB 1989	REMOTE CONTROL
J200STLCUA 1987	REMOTE CONTROL
J200STLESE 1990	REMOTE CONTROL
J200TLCIH 1981	REMOTE CONTROL
J200TLCNE 1982	REMOTE CONTROL
J200TLCSF 1980	REMOTE CONTROL
J200TLCSM 1980	REMOTE CONTROL
J200TLCTD 1983	REMOTE CONTROL
J200TLCTS 1983	REMOTE CONTROL
J200TXCCR 1988	REMOTE CONTROL
J200TXCEA 1989	REMOTE CONTROL

J200TXCIB 1981	REMOTE CONTROL
J200TXCIH 1981	REMOTE CONTROL
J200TXCNE 1982	REMOTE CONTROL
J200TXCSF 1980	REMOTE CONTROL
J200TXCSM 1980	REMOTE CONTROL
J200TXCTD 1983	REMOTE CONTROL
J200TXCTS 1983	REMOTE CONTROL
J200TXCUC 1987	REMOTE CONTROL
J200TXESM 1990	REMOTE CONTROL
J20CRCCA 1988	REMOTE CONTROL
J20CRCDC 1986	REMOTE CONTROL
J20CRCOS 1985	REMOTE CONTROL
J20CRCUR 1987	REMOTE CONTROL
J20CRLCCA 1988	REMOTE CONTROL
J20CRLCDC 1986	REMOTE CONTROL
J20CRLCOS 1985	REMOTE CONTROL
J20CRLCUR 1987	REMOTE CONTROL
J20ECCA 1988	REMOTE CONTROL
J20ECDC 1986	REMOTE CONTROL
J20ECEM 1989	REMOTE CONTROL
J20ECOS 1985	REMOTE CONTROL
J20ECUR 1987	REMOTE CONTROL
J20EESB 1990	REMOTE CONTROL
J20ELCCA 1988	REMOTE CONTROL
J20ELCDC 1986	REMOTE CONTROL
J20ELCEM 1989	REMOTE CONTROL
J20ELCOS 1985	REMOTE CONTROL
J20ELCUR 1987	REMOTE CONTROL
J20ELESB 1990	REMOTE CONTROL
J20TECDC 1986	REMOTE CONTROL
J225CLCUB 1987	REMOTE CONTROL
J225CXCE 1988	REMOTE CONTROL
J225CXCED 1989	REMOTE CONTROL
J225XCUB 1987	REMOTE CONTROL
J225XCESS 1990	REMOTE CONTROL

J225PLAED 1989	REMOTE CONTROL
J225PLASS 1990	REMOTE CONTROL
J225PLCCE 1988	REMOTE CONTROL
J225PLCED 1989	REMOTE CONTROL
J225PLCUB 1987	REMOTE CONTROL
J225PLESS 1990	REMOTE CONTROL
J225PXCCE 1988	REMOTE CONTROL
J225PXCED 1989	REMOTE CONTROL
J225PXCUB 1987	REMOTE CONTROL
J225PXESS 1990	REMOTE CONTROL
J225TLAED 1989	REMOTE CONTROL
J225TLASS 1990	REMOTE CONTROL
J225TLCCE 1988	REMOTE CONTROL
J225TLCED 1989	REMOTE CONTROL
J225TLCUB 1987	REMOTE CONTROL
J225TLESS 1990	REMOTE CONTROL
J225TXCCE 1988	REMOTE CONTROL
J225TXCED 1989	REMOTE CONTROL
J225TXCUB 1987	REMOTE CONTROL
J225TXESS 1990	REMOTE CONTROL
J235STLCOR 1985	REMOTE CONTROL
J235STLCRC 1984	REMOTE CONTROL
J235STLCTS 1983	REMOTE CONTROL
J235TLCIB 1981	REMOTE CONTROL
J235TLCIH 1981	REMOTE CONTROL
J235TLCNE 1982	REMOTE CONTROL
J235TLCOR 1985	REMOTE CONTROL
J235TLCRC 1984	REMOTE CONTROL
J235TLCSM 1980	REMOTE CONTROL
J235TLCTD 1983	REMOTE CONTROL
J235TLCTS 1983	REMOTE CONTROL
J235TXCIB 1981	REMOTE CONTROL
J235TXCIH 1981	REMOTE CONTROL
J235TXCNE 1982	REMOTE CONTROL
J235TXCOR 1985	REMOTE CONTROL

J235TXCRC 1984	REMOTE CONTROL
J235TXCSM 1980	REMOTE CONTROL
J235TXCTD 1983	REMOTE CONTROL
J235TXCTS 1983	REMOTE CONTROL
J25ECCM 1988	REMOTE CONTROL
J25ECDR 1986	REMOTE CONTROL
J25ECEB 1989	REMOTE CONTROL
J25ECIB 1981	INSTRUMENT AND CABLE
J25ECIM 1981	INSTRUMENT AND CABLE
J25ECNE 1982	REMOTE CONTROL
J25ECOC 1985	REMOTE CONTROL
J25ECRS 1984	REMOTE CONTROL
J25ECTD 1983	REMOTE CONTROL
J25ECUA 1987	REMOTE CONTROL
J25EESE 1990	REMOTE CONTROL
J25ELCCM 1988	REMOTE CONTROL
J25ELCDR 1986	REMOTE CONTROL
J25ELCEB 1989	REMOTE CONTROL
J25ELCIB 1981	INSTRUMENT AND CABLE
J25ELCIM 1981	INSTRUMENT AND CABLE
J25ELCNE 1982	REMOTE CONTROL
J25ELCOC 1985	REMOTE CONTROL
J25ELCRS 1984	REMOTE CONTROL
J25ELCTD 1983	REMOTE CONTROL
J25ELCUA 1987	REMOTE CONTROL
J25ELESE 1990	REMOTE CONTROL
J25RCCA 1988	REMOTE CONTROL
J25RCDC 1986	REMOTE CONTROL
J25RCIM 1981	INSTRUMENT AND CABLE
J25RCNB 1982	REMOTE CONTROL
J25RCOS 1985	REMOTE CONTROL
J25RCRD 1984	REMOTE CONTROL
J25RCSA 1980	INSTRUMENT & CABLE
J25RCTE 1983	REMOTE CONTROL
J25RCUR 1987	REMOTE CONTROL

J25RELCNB 1982	REMOTE CONTROL
J25RLCCA 1988	REMOTE CONTROL
J25RLCDC 1986	REMOTE CONTROL
J25RLCIM 1981	INSTRUMENT AND CABLE
J25RLCNB 1982	REMOTE CONTROL
J25RLCOS 1985	REMOTE CONTROL
J25RLCRD 1984	REMOTE CONTROL
J25RLCSA 1980	INSTRUMENT & CABLE
J25RLCTE 1983	REMOTE CONTROL
J25RLCUR 1987	REMOTE CONTROL
J25TECCA 1988	REMOTE CONTROL
J25TECDC 1986	REMOTE CONTROL
J25TECIM 1981	INSTRUMENT AND CABLE
J25TECNB 1982	REMOTE CONTROL
J25TECOS 1985	REMOTE CONTROL
J25TECRD 1984	REMOTE CONTROL
J25TECSA 1980	INSTRUMENT & CABLE
J25TECTE 1983	REMOTE CONTROL
J25TECUR 1987	REMOTE CONTROL
J25TELCCA 1988	REMOTE CONTROL
J25TELCDC 1986	REMOTE CONTROL
J25TELCIM 1981	INSTRUMENT AND CABLE
J25TELCOS 1985	REMOTE CONTROL
J25TELCRD 1984	REMOTE CONTROL
J25TELCSA 1980	INSTRUMENT & CABLE
J25TELCTE 1983	REMOTE CONTROL
J25TELCUR 1987	REMOTE CONTROL
J275CLCUR 1987	REMOTE CONTROL
J275CXCCA 1988	REMOTE CONTROL - STANDARD ROTATION
J275CXCUR 1987	REMOTE CONTROL
J275PLCCA 1988	REMOTE CONTROL - STANDARD ROTATION
J275PLCUR 1987	REMOTE CONTROL
J275PTLCDC 1986	REMOTE CONTROL
J275PTXCDC 1986	REMOTE CONTROL
J275PXCCA 1988	REMOTE CONTROL - STANDARD ROTATION

J275PXCUR 1987	REMOTE CONTROL
J275TLCOS 1985	REMOTE CONTROL
J275TXCOS 1985	REMOTE CONTROL
J28ESLCEA 1989	REMOTE CONTROL
J28ESLESM 1990	REMOTE CONTROL
J300CLCUR 1987	REMOTE CONTROL
J300CXCCA 1988	REMOTE CONTROL - STANDARD ROTATION
J300CXCEM 1989	REMOTE CONTROL
J300CXCUR 1987	REMOTE CONTROL
J300CXESB 1990	REMOTE CONTROL
J300PLCCA 1988	REMOTE CONTROL - STANDARD ROTATION
J300PLCEM 1989	REMOTE CONTROL
J300PLCUR 1987	REMOTE CONTROL
J300PLESB 1990	REMOTE CONTROL
J300PXCCA 1988	REMOTE CONTROL - STANDARD ROTATION
J300PXCEM 1989	REMOTE CONTROL
J300PXCUR 1987	REMOTE CONTROL
J300PXESB 1990	REMOTE CONTROL
J300TLCDC 1986	REMOTE CONTROL
J300TLCOS 1985	REMOTE CONTROL
J300TXCDC 1986	REMOTE CONTROL
J300TXCOS 1985	REMOTE CONTROL
J30ECCE 1988	REMOTE CONTROL
J30ECDM 1986	REMOTE CONTROL
J30ECED 1989	REMOTE CONTROL
J30EOA 1985	REMOTE CONTROL
J30ECRR 1984	REMOTE CONTROL
J30ECUB 1987	REMOTE CONTROL
J30EES 1990	REMOTE CONTROL
J30ELCCE 1988	REMOTE CONTROL
J30ELCDM 1986	REMOTE CONTROL
J30ELCED 1989	REMOTE CONTROL
J30ELCOA 1985	REMOTE CONTROL
J30ELCRR 1984	REMOTE CONTROL
J30ELCUB 1987	REMOTE CONTROL

J30ELESS 1990	REMOTE CONTROL
J30RCCE 1988	REMOTE CONTROL
J30RCDM 1986	REMOTE CONTROL
J30RCOA 1985	REMOTE CONTROL
J30RCUB 1987	REMOTE CONTROL
J30RLCCE 1988	REMOTE CONTROL
J30RLCDM 1986	REMOTE CONTROL
J30RLCOA 1985	REMOTE CONTROL
J30RLCUB 1987	REMOTE CONTROL
J30TECCE 1988	REMOTE CONTROL
J30TECDM 1986	REMOTE CONTROL
J30TECOA 1985	REMOTE CONTROL
J30TECUB 1987	REMOTE CONTROL
J30TELCCE 1988	REMOTE CONTROL
J30TELCDM 1986	REMOTE CONTROL
J30TELCOA 1985	REMOTE CONTROL
J30TELCUB 1987	REMOTE CONTROL
J35AELCDE 1986	REMOTE CONTROL
J35AELCUD 1987	REMOTE CONTROL
J35ARLCDE 1986	REMOTE CONTROL
J35ARLCUD 1987	REMOTE CONTROL
J35ECIG 1981	INSTRUMENT & CABLE
J35ECND 1982	REMOTE CONTROL
J35ECRR 1984	REMOTE CONTROL
J35ECSM 1980	INSTRUMENT & CABLE
J35ECTS 1983	REMOTE CONTROL
J35ELCIG 1981	INSTRUMENT & CABLE
J35ELCND 1982	REMOTE CONTROL
J35ELCRR 1984	REMOTE CONTROL
J35ELCSM 1980	INSTRUMENT & CABLE
J35ELCTS 1983	REMOTE CONTROL
J35RCCE 1988	REMOTE CONTROL
J35RCDM 1986	REMOTE CONTROL
J35RCIG 1981	INSTRUMENT & CABLE
J35RCND 1982	REMOTE CONTROL

J35RCRR 1984	REMOTE CONTROL
J35RCSM 1980	INSTRUMENT & CABLE
J35RCTS 1983	REMOTE CONTROL
J35RCUB 1987	REMOTE CONTROL
J35RLCCE 1988	REMOTE CONTROL
J35RLCDM 1986	REMOTE CONTROL
J35RLCIG 1981	INSTRUMENT & CABLE
J35RLCND 1982	REMOTE CONTROL
J35RLCRR 1984	REMOTE CONTROL
J35RLCSM 1980	INSTRUMENT & CABLE
J35RLCTS 1983	REMOTE CONTROL
J35RLCUB 1987	REMOTE CONTROL
J35TELCNB 1982	REMOTE CONTROL
J35TELCRR 1984	REMOTE CONTROL
J35TELCTS 1983	REMOTE CONTROL
J40AELCCS 1988	REMOTE CONTROL
J40ARLCCS 1988	REMOTE CONTROL
J40ATLCCS 1988	REMOTE CONTROL
J40ECCS 1988	REMOTE CONTROL
J40ECDE 1986	REMOTE CONTROL
J40ECOB 1985	REMOTE CONTROL
J40ECRM 1984	REMOTE CONTROL
J40ECUD 1987	REMOTE CONTROL
J40EENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40EENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40EEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40EERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40EESR 1990	REMOTE CONTROL
J40EETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40ELCCS 1988	REMOTE CONTROL
J40ELCDE 1986	REMOTE CONTROL
J40ELCOB 1985	REMOTE CONTROL
J40ELCRM 1984	REMOTE CONTROL
J40ELCUD 1987	REMOTE CONTROL
J40ELECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL

J40ELED5 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40ELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40ELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40ELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40ELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40ELESR 1990	REMOTE CONTROL
J40ELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40ELEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40PLEEA 1999	SWITCH & CABLE -- 40TPL ONLY
J40PLSIF elec start, TNT, 20 in shaft 2001	SWITCH & CABLE - 40 TPL ONLY
J40PLSSM Elec. Start, TNT, 20 IN. shaft 2000	SWITCH & CABLE - 40 TPL ONLY
J40RCCS 1988	REMOTE CONTROL
J40RCDE 1986	REMOTE CONTROL
J40RCOB 1985	REMOTE CONTROL
J40RCRM 1984	REMOTE CONTROL
J40RCUD 1987	REMOTE CONTROL
J40RECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J40REDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40REEA 1999	SWITCH & CABLE -- 40TPL ONLY
J40RENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40REOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40RERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40RESR 1990	REMOTE CONTROL
J40RETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40REUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40RLCCS 1988	REMOTE CONTROL
J40RLCDE 1986	REMOTE CONTROL
J40RLCOB 1985	REMOTE CONTROL
J40RLCRM 1984	REMOTE CONTROL
J40RLCUD 1987	REMOTE CONTROL
J40RLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J40RLED5 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40RLEEA 1999	SWITCH & CABLE -- 40TPL ONLY
J40RLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40RLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL

J40RLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40RLESR 1990	REMOTE CONTROL
J40RLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40RLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40RLSIF rope start, 20 in shaft 2001	SWITCH & CABLE - 40 TPL ONLY
J40RLSSM Rope Start, Tiller, 20 IN. shaft 2000	SWITCH & CABLE - 40 TPL ONLY
J40RSIF rope start, 15 in shaft 2001	SWITCH & CABLE - 40 TPL ONLY
J40RSSM Rope Start, Tiller, 15 IN. shaft 2000	SWITCH & CABLE - 40 TPL ONLY
J40TECCS 1988	REMOTE CONTROL
J40TECDE 1986	REMOTE CONTROL
J40TECOB 1985	REMOTE CONTROL
J40TECRM 1984	REMOTE CONTROL
J40TECUD 1987	REMOTE CONTROL
J40TEECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J40TEEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TEENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40TEENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40TEEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TEERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TEESR 1990	REMOTE CONTROL
J40TEETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TEEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TELCCS 1988	REMOTE CONTROL
J40TELCDE 1986	REMOTE CONTROL
J40TELCOB 1985	REMOTE CONTROL
J40TELCRM 1984	REMOTE CONTROL
J40TELECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J40TELEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40TELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TELESR 1990	REMOTE CONTROL
J40TELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TELEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL

J40TLCCS 1988	REMOTE CONTROL
J40TLCDE 1986	REMOTE CONTROL
J40TLCUD 1987	REMOTE CONTROL
J40TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J40TLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40TLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40TLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TLESR 1990	REMOTE CONTROL
J40TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TPLEEA 1999	SWITCH & CABLE -- 40TPL ONLY
J40TPLSIF elec start, tiller, TNT, 20 in shaft 2001	SWITCH & CABLE - 40 TPL ONLY
J40TPLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	SWITCH & CABLE - 40 TPL ONLY
J40TTLCCS 1988	REMOTE CONTROL
J40TTLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J40TTLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TTLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J40TTLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TTLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TTLESR 1990	REMOTE CONTROL
J40TTLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TTLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J40TTLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J45RCE 1989	REMOTE CONTROL - ELECTRIC START
J45RCEIA 1991	REMOTE CONTROL
J45RCENM 1992	REMOTE CONTROL
J45RCESR 1990	REMOTE CONTROL
J45RCLE 1989	REMOTE CONTROL - ELECTRIC START
J45RCLEIA 1991	REMOTE CONTROL
J45RCLENM 1992	REMOTE CONTROL
J45RCLESR 1990	REMOTE CONTROL
J45WMLE 1989	REMOTE CONTROL - ELECTRIC START

J45WMLEIA 1991	REMOTE CONTROL
J45WMLNEM 1992	REMOTE CONTROL
J45WMLSR 1990	REMOTE CONTROL
J48ESLCCC 1988	REMOTE CONTROL
J48ESLESA 1990	REMOTE CONTROL
J50BECCS 1988	REMOTE CONTROL
J50BECDE 1986	REMOTE CONTROL
J50BECIC 1981	REMOTE CONTROL
J50BECNR 1982	REMOTE CONTROL
J50BECOB 1985	REMOTE CONTROL
J50BECRM 1984	REMOTE CONTROL
J50BECTA 1983	REMOTE CONTROL
J50BECUD 1987	REMOTE CONTROL
J50BEENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50BEENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50BEEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50BEERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50BEESR 1990	REMOTE CONTROL
J50BEETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50BELCCS 1988	REMOTE CONTROL
J50BELCDE 1986	REMOTE CONTROL
J50BELCIC 1981	REMOTE CONTROL
J50BELCNR 1982	REMOTE CONTROL
J50BELCOB 1985	REMOTE CONTROL
J50BELCRM 1984	REMOTE CONTROL
J50BELCTA 1983	REMOTE CONTROL
J50BELCUD 1987	REMOTE CONTROL
J50BELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50BELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50BELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50BELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50BELESR 1990	REMOTE CONTROL
J50BELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50ECSR 1980	REMOTE CONTROL
J50ELCSR 1980	REMOTE CONTROL

J50ELEER 1999	SWITCH & CABLE -- 40TPL ONLY
J50ELSIF elec start, 20 in shaft 2001	SWITCH & CABLE - 40 TPL ONLY
J50ELSSA Elec. Start, Tiller, 15 IN. shaft 2000	SWITCH & CABLE - 40 TPL ONLY
J50ESLECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J50ESLEUR 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50JEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50JENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50JENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50JEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50JERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50JETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50JEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50PLEEA 1999	SWITCH & CABLE -- 40TPL ONLY
J50PLSIF elec start, TNT, 20 in shaft 2001	SWITCH & CABLE - 40 TPL ONLY
J50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	SWITCH & CABLE - 40 TPL ONLY
J50TELCCS 1988	REMOTE CONTROL
J50TELCDE 1986	REMOTE CONTROL
J50TELCOB 1985	REMOTE CONTROL
J50TELCRM 1984	REMOTE CONTROL
J50TELCTA 1983	REMOTE CONTROL
J50TELCUD 1987	REMOTE CONTROL
J50TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50TELEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TELERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TELESR 1990	REMOTE CONTROL
J50TELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TLCCS 1988	REMOTE CONTROL
J50TLCDE 1986	REMOTE CONTROL
J50TLCOB 1985	REMOTE CONTROL
J50TLCRM 1984	REMOTE CONTROL
J50TLCUD 1987	REMOTE CONTROL
J50TLECR 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J50TLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
J50TLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY

J50TLEOD 1995	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TLERE 1994	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TLESR 1990	REMOTE CONTROL
J50TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TLEUC 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TSLECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL
J50TSLEUS 1997	IGNITION SWITCH & CABLE - 40TE, 40TTL
J50TTLECA 1998	IGNITION SWITCH & CABLE
J50TTLEDC 1996	IGNITION SWITCH & CABLE
J50TTLEOS 1995	IGNITION SWITCH & CABLE
J50TTLEUR 1997	IGNITION SWITCH & CABLE
J55RCIM 1981	REMOTE CONTROL
J55RLCIM 1981	REMOTE CONTROL
J55RLCSA 1980	REMOTE CONTROL
J55RWLE 1989	REMOTE CONTROL - ELECTRIC START
J55RWLEIA 1991	REMOTE CONTROL
J55RWLENM 1992	REMOTE CONTROL
J55RWLESR 1990	REMOTE CONTROL
J60ECIA 1981	REMOTE CONTROL
J60ECIH 1981	REMOTE CONTROL
J60ECNM 1982	REMOTE CONTROL
J60ECSR 1980	REMOTE CONTROL
J60ECTB 1983	REMOTE CONTROL
J60ELCCR 1988	REMOTE CONTROL
J60ELCDS 1986	REMOTE CONTROL
J60ELCEA 1989	REMOTE CONTROL
J60ELCIA 1981	REMOTE CONTROL
J60ELCIH 1981	REMOTE CONTROL
J60ELCNM 1982	REMOTE CONTROL
J60ELCOD 1985	REMOTE CONTROL
J60ELCRE 1984	REMOTE CONTROL
J60ELCSR 1980	REMOTE CONTROL
J60ELCTB 1983	REMOTE CONTROL
J60ELCUC 1987	REMOTE CONTROL

J60ELES	1990	REMOTE CONTROL
J60TLCCR	1988	REMOTE CONTROL
J60TLCDS	1986	REMOTE CONTROL
J60TLCEA	1989	REMOTE CONTROL
J60TLCIA	1981	REMOTE CONTROL
J60TLCIH	1981	REMOTE CONTROL
J60TLCNM	1982	REMOTE CONTROL
J60TLCOD	1985	REMOTE CONTROL
J60TLCRE	1984	REMOTE CONTROL
J60TLCTB	1983	REMOTE CONTROL
J60TLCUC	1987	REMOTE CONTROL
J60TLESM	1990	REMOTE CONTROL
J60TTLCCR	1988	REMOTE CONTROL
J60TTLCEA	1989	REMOTE CONTROL
J60TTLECM	1998	IGNITION SWITCH & CABLE
J60TTLEDR	1996	IGNITION SWITCH & CABLE
J60TTLENE	1992	IGNITION SWITCH & CABLE
J60TTLEOC	1995	IGNITION SWITCH & CABLE
J60TTLERS	1994	IGNITION SWITCH & CABLE
J60TTLERV	1994	IGNITION SWITCH & CABLE
J60TTLESM	1990	REMOTE CONTROL
J60TTLETD	1993	IGNITION SWITCH & CABLE
J60TTLEUA	1997	IGNITION SWITCH & CABLE
J65RWLCRS	1984	REMOTE CONTROL
J65TELCRS	1984	REMOTE CONTROL
J65WMLCDR	1986	REMOTE CONTROL
J65WMLCOC	1985	REMOTE CONTROL
J65WMLCUA	1987	REMOTE CONTROL
J65WMLESM	1990	REMOTE CONTROL
J65WMLZ	1989	REMOTE CONTROL
J65WTLCOC	1985	REMOTE CONTROL
J65WTLCRS	1984	REMOTE CONTROL
J70ELCCA	1988	REMOTE CONTROL
J70ELCDC	1986	REMOTE CONTROL
J70ELCEM	1989	REMOTE CONTROL

J70ELCIH 1981	REMOTE CONTROL
J70ELCIM 1981	REMOTE CONTROL
J70ELCNB 1982	REMOTE CONTROL
J70ELCOS 1985	REMOTE CONTROL
J70ELCRD 1984	REMOTE CONTROL
J70ELCSA 1980	REMOTE CONTROL
J70ELCTE 1983	REMOTE CONTROL
J70ELCUR 1987	REMOTE CONTROL
J70ELESB 1990	REMOTE CONTROL
J70TLCCA 1988	REMOTE CONTROL
J70TLCDC 1986	REMOTE CONTROL
J70TLCEM 1989	REMOTE CONTROL
J70TLCIM 1981	REMOTE CONTROL
J70TLCNB 1982	REMOTE CONTROL
J70TLCOS 1985	REMOTE CONTROL
J70TLCRD 1984	REMOTE CONTROL
J70TLCTE 1983	REMOTE CONTROL
J70TLCUR 1987	REMOTE CONTROL
J70TLESB 1990	REMOTE CONTROL
J70TTLEND 1992	IGNITION SWITCH & CABLE
J70TTLEOR 1995	IGNITION SWITCH & CABLE
J70TTLERC 1994	IGNITION SWITCH & CABLE
J70TTLERV 1994	IGNITION SWITCH & CABLE
J70TTLETS 1993	IGNITION SWITCH & CABLE
J75ECCA 1988	REMOTE CONTROL
J75ECD 1986	REMOTE CONTROL
J75ECNB 1982	REMOTE CONTROL
J75ECOS 1985	REMOTE CONTROL
J75ECD 1984	REMOTE CONTROL
J75ECTE 1983	REMOTE CONTROL
J75ECUR 1987	REMOTE CONTROL
J75ELCNB 1982	REMOTE CONTROL
J75ELCRD 1984	REMOTE CONTROL
J75ELCTE 1983	REMOTE CONTROL
J75ERCIH 1981	REMOTE CONTROL

J75ERCIM 1981	REMOTE CONTROL
J75ERCSA 1980	REMOTE CONTROL
J75ERLCIH 1981	REMOTE CONTROL
J75ERLCIM 1981	REMOTE CONTROL
J75ERLCSA 1980	REMOTE CONTROL
J75TELCIM 1981	REMOTE CONTROL
J75TLCNB 1982	REMOTE CONTROL
J75TLCRD 1984	REMOTE CONTROL
J75TLCTE 1983	REMOTE CONTROL
J75TRLCIH 1981	REMOTE CONTROL
J75TRLCSA 1980	REMOTE CONTROL
J85MLCSA 1980	REMOTE CONTROL
J85TLCSA 1980	REMOTE CONTROL
J85TTLEND 1992	IGNITION SWITCH & CABLE
J85TTLEOR 1995	IGNITION SWITCH & CABLE - 85 MODELS
J85TTLERC 1994	IGNITION SWITCH & CABLE - 85 MODELS
J85TTLETS 1993	IGNITION SWITCH & CABLE
J85TXCSA 1980	REMOTE CONTROL
J88MSLCCC 1988	REMOTE CONTROL
J88MSLCER 1989	REMOTE CONTROL
J88MSLESA 1990	REMOTE CONTROL
J90MLCDC 1986	REMOTE CONTROL
J90MLCIH 1981	REMOTE CONTROL
J90MLCIM 1981	REMOTE CONTROL
J90MLCNB 1982	REMOTE CONTROL
J90MLCOS 1985	REMOTE CONTROL
J90MLCRD 1984	REMOTE CONTROL
J90MLCTE 1983	REMOTE CONTROL
J90MLCUR 1987	REMOTE CONTROL
J90TLAEM 1989	REMOTE CONTROL
J90TLASB 1990	REMOTE CONTROL
J90TLCCA 1988	REMOTE CONTROL
J90TLCDC 1986	REMOTE CONTROL
J90TLCEM 1989	REMOTE CONTROL
J90TLCIH 1981	REMOTE CONTROL

J90TLCIM 1981	REMOTE CONTROL
J90TLCNB 1982	REMOTE CONTROL
J90TLCOS 1985	REMOTE CONTROL
J90TLCRD 1984	REMOTE CONTROL
J90TLCTE 1983	REMOTE CONTROL
J90TLCUR 1987	REMOTE CONTROL
J90TLESB 1990	REMOTE CONTROL
J90TXCDC 1986	REMOTE CONTROL
J90TXCIH 1981	REMOTE CONTROL
J90TXCIM 1981	REMOTE CONTROL
J90TXCNB 1982	REMOTE CONTROL
J90TXCOS 1985	REMOTE CONTROL
J90TXCRD 1984	REMOTE CONTROL
J90TXCTE 1983	REMOTE CONTROL
L10FRELECM 1998	IGNITION SWITCH & CABLE -- 9.9
L10FRELEDR 1996	IGNITION SWITCH & CABLE - 9.9
L10FRELEUA 1997	IGNITION SWITCH & CABLE - 9.9
N65WMLM 1988	REMOTE CONTROL
REMOTE CONTROL 1995	REMOTE CONTROL ASS'Y - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROL 1995	REMOTE CONTROL - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROL 1995	REMOTE CONTROL - SIDE MOUNT - PREWIRED
REMOTE CONTROL 1996	REMOTE CONTROL - BINNACLE - SINGLE LEVER - KEY SWITCH
REMOTE CONTROLS 1991	REMOTE CONTROL
REMOTE CONTROLS 1992	REMOTE CONTROL - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROLS 1992	REMOTE CONTROL
REMOTE CONTROLS 1992	REMOTE CONTROL ASSY - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROLS 1993	REMOTE CONTROL - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROLS 1993	REMOTE CONTROL ASSY - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROLS 1993	REMOTE CONTROL - SIDE MOUNT - PREWIRED
REMOTE CONTROLS 1994	REMOTE CONTROL - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROLS 1994	REMOTE CONTROL ASSY - BINNACLE - SINGLE LEVER - PREWIRED
REMOTE CONTROLS 1994	REMOTE CONTROL - SIDE MOUNT - PREWIRED
REMOTE CONTROLS 1997	REMOTE CONTROL ASSY - BINNACLE - SINGLE LEVER - KEY SWITCH
RJ50ELSIF elec start, TNT, 20 in shaft 2001	SWITCH & CABLE - 40 TPL ONLY

SE125WTPLV 1996	REMOTE CONTROL
SE125WTPXV 1996	REMOTE CONTROL
SE50TLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
SJ125WTPLV 1996	REMOTE CONTROL
SJ125WTPXV 1996	REMOTE CONTROL
SJ40EEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
SJ40REDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
SJ40RLEDS 1996	IGNITION SWITCH & CABLE - 40TE, 40TTL
T65WMLM 1988	REMOTE CONTROL
TE10ELESC 1990	REMOTE CONTROL
TE10RELESC 1990	REMOTE CONTROL
TE10RLESC 1990	REMOTE CONTROL
TE110TLCEM 1989	REMOTE CONTROL
TE110TLESF 1989	REMOTE CONTROL
TE110TXCEM 1989	REMOTE CONTROL
TE115TLESB 1990	REMOTE CONTROL
TE120TXCEM 1989	REMOTE CONTROL
TE150SLCEM 1989	REMOTE CONTROL
TE150SLESB 1990	REMOTE CONTROL
TE150TXCEM 1989	REMOTE CONTROL
TE200TXCEA 1989	REMOTE CONTROL
TE25ELCEB 1989	REMOTE CONTROL
TE25ELESE 1990	REMOTE CONTROL
TE25ELESF 1989	REMOTE CONTROL
TE30ELCED 1989	REMOTE CONTROL
TE30ELESF 1989	REMOTE CONTROL
TE30ELESS 1990	REMOTE CONTROL
TE40ELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
TE40ELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
TE40ELESR 1990	REMOTE CONTROL
TE40ELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
TE40TELESF 1990	REMOTE CONTROL
TE40TELESR 1990	REMOTE CONTROL
TE50TLESF 1990	REMOTE CONTROL
TE50TLESR 1990	REMOTE CONTROL

TE60TLCEA 1989	REMOTE CONTROL
TE60TLESF 1989	REMOTE CONTROL
TE60TLESF 1990	REMOTE CONTROL
TE60TLESM 1990	REMOTE CONTROL
TE70TLCEM 1989	REMOTE CONTROL
TE70TLESB 1990	REMOTE CONTROL
TE70TLESF 1989	REMOTE CONTROL
TE70TLESF 1990	REMOTE CONTROL
TE90TLCEM 1989	REMOTE CONTROL
TE90TLESB 1990	REMOTE CONTROL
TE90TLESF 1989	REMOTE CONTROL
TE90TLESF 1990	REMOTE CONTROL
TJ10ELESC 1990	REMOTE CONTROL
TJ10RELESC 1990	REMOTE CONTROL
TJ10RLESC 1990	REMOTE CONTROL
TJ110TLCEM 1989	REMOTE CONTROL
TJ110TXCEM 1989	REMOTE CONTROL
TJ115TLESB 1990	REMOTE CONTROL
TJ120TXCEM 1989	REMOTE CONTROL
TJ150SLCEM 1989	REMOTE CONTROL
TJ150SLESB 1990	REMOTE CONTROL
TJ150TXCEM 1989	REMOTE CONTROL
TJ200TXCEA 1989	REMOTE CONTROL
TJ25ELCEB 1989	REMOTE CONTROL
TJ25ELESE 1990	REMOTE CONTROL
TJ25ELESF 1989	REMOTE CONTROL
TJ30ELCED 1989	REMOTE CONTROL
TJ30ELESF 1989	REMOTE CONTROL
TJ30ELESS 1990	REMOTE CONTROL
TJ40ELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
TJ40ELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
TJ40ELESF 1990	REMOTE CONTROL
TJ40ELESR 1990	REMOTE CONTROL
TJ40ELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
TJ40TELESF 1990	REMOTE CONTROL

TJ40TELESR 1990	REMOTE CONTROL
TJ50TLESF 1990	REMOTE CONTROL
TJ50TLESR 1990	REMOTE CONTROL
TJ60TLCEA 1989	REMOTE CONTROL
TJ60TLESF 1989	REMOTE CONTROL
TJ60TLESF 1990	REMOTE CONTROL
TJ60TLESM 1990	REMOTE CONTROL
TJ70TLCEM 1989	REMOTE CONTROL
TJ70TLESB 1990	REMOTE CONTROL
TJ70TLESF 1989	REMOTE CONTROL
TJ70TLESF 1990	REMOTE CONTROL
TJ90TLCEM 1989	REMOTE CONTROL
TJ90TLESB 1990	REMOTE CONTROL
VE100SLESB 1990	REMOTE CONTROL
VE115TLESB 1990	REMOTE CONTROL
VE115TXESB 1990	REMOTE CONTROL
VE120TLESB 1990	REMOTE CONTROL
VE120TXESB 1990	REMOTE CONTROL
VE140TLESE 1990	REMOTE CONTROL
VE140TXESE 1990	REMOTE CONTROL
VE150SLESB 1990	REMOTE CONTROL
VE150TLESB 1990	REMOTE CONTROL
VE150TXESB 1990	REMOTE CONTROL
VE175SLESE 1990	REMOTE CONTROL
VE175TXESE 1990	REMOTE CONTROL
VE200SLESE 1990	REMOTE CONTROL
VE200TXESM 1990	REMOTE CONTROL
VE225PLESS 1990	REMOTE CONTROL
VE225PXESS 1990	REMOTE CONTROL
VE225TLESS 1990	REMOTE CONTROL
VE225TXESS 1990	REMOTE CONTROL
VE25ELESE 1990	REMOTE CONTROL
VE28ESLCEA 1989	REMOTE CONTROL
VE28ESLESM 1990	REMOTE CONTROL
VE30EESS 1990	REMOTE CONTROL

VE30ELESS 1990	REMOTE CONTROL
VE40EENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40EENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40EESR 1990	REMOTE CONTROL
VE40EETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE40ELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40ELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40ELESR 1990	REMOTE CONTROL
VE40ELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE40TELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40TELESR 1990	REMOTE CONTROL
VE40TELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE40TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40TLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE40TLESR 1990	REMOTE CONTROL
VE40TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE40TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE48ESLCCC 1988	REMOTE CONTROL
VE48ESLESA 1990	REMOTE CONTROL
VE50BEENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE50BEENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE50BEESR 1990	REMOTE CONTROL
VE50BEETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE50BELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE50BELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE50BELESR 1990	REMOTE CONTROL
VE50BELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE50TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE50TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE50TLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VE50TLESR 1990	REMOTE CONTROL
VE50TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE50TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VE60ELESM 1990	REMOTE CONTROL

VE60TLESM 1990	REMOTE CONTROL
VE70ELESB 1990	REMOTE CONTROL
VE70TLESB 1990	REMOTE CONTROL
VE88MSLCCC 1988	REMOTE CONTROL
VE88MSLCER 1989	REMOTE CONTROL
VE88MSLESA 1990	REMOTE CONTROL
VE90MLESB 1990	REMOTE CONTROL
VE90TLESB 1990	REMOTE CONTROL
VJ100SLESB 1990	REMOTE CONTROL
VJ115TLASB 1990	REMOTE CONTROL
VJ115TLESB 1990	REMOTE CONTROL
VJ115TXESB 1990	REMOTE CONTROL
VJ120TLASB 1990	REMOTE CONTROL
VJ120TLESB 1990	REMOTE CONTROL
VJ120TXESB 1990	REMOTE CONTROL
VJ140TLASE 1990	REMOTE CONTROL
VJ140TLESE 1990	REMOTE CONTROL
VJ140TXESE 1990	REMOTE CONTROL
VJ150SLESB 1990	REMOTE CONTROL
VJ150TLESB 1990	REMOTE CONTROL
VJ150TXESB 1990	REMOTE CONTROL
VJ175SLESE 1990	REMOTE CONTROL
VJ175TXESE 1990	REMOTE CONTROL
VJ200SLESE 1990	REMOTE CONTROL
VJ200TXESM 1990	REMOTE CONTROL
VJ225PLESS 1990	REMOTE CONTROL
VJ225PXESS 1990	REMOTE CONTROL
VJ225TLASS 1990	REMOTE CONTROL
VJ225TLESS 1990	REMOTE CONTROL
VJ225TXESS 1990	REMOTE CONTROL
VJ25ELESE 1990	REMOTE CONTROL
VJ28ESLCEA 1989	REMOTE CONTROL
VJ28ESLESM 1990	REMOTE CONTROL
VJ30EESS 1990	REMOTE CONTROL
VJ30ELESS 1990	REMOTE CONTROL

VJ40EENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40EENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40EESR 1990	REMOTE CONTROL
VJ40EETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ40ELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40ELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40ELESR 1990	REMOTE CONTROL
VJ40ELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ40TELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40TELESR 1990	REMOTE CONTROL
VJ40TELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ40TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40TLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ40TLESR 1990	REMOTE CONTROL
VJ40TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ40TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ48ESLCCC 1988	REMOTE CONTROL
VJ48ESLESA 1990	REMOTE CONTROL
VJ50BEENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ50BEENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ50BEESR 1990	REMOTE CONTROL
VJ50BEETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ50BELENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ50BELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ50BELESR 1990	REMOTE CONTROL
VJ50BELETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ50TELENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ50TLENJ 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ50TLENM 1992	IGNITION SWITCH & CABLE "J" MODEL NUMBER SUFFIX ONLY
VJ50TLESR 1990	REMOTE CONTROL
VJ50TLETB 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ50TLETF 1993	IGNITION SWITCH & CABLE - 40TE, 40TTL
VJ60ELESM 1990	REMOTE CONTROL
VJ60TLESM 1990	REMOTE CONTROL

VJ70ELESB 1990	REMOTE CONTROL
VJ70TLESB 1990	REMOTE CONTROL
VJ88MSLCCC 1988	REMOTE CONTROL
VJ88MSLCER 1989	REMOTE CONTROL
VJ88MSLESA 1990	REMOTE CONTROL
VJ90MLESB 1990	REMOTE CONTROL
VJ90TLASB 1990	REMOTE CONTROL
VJ90TLESB 1990	REMOTE CONTROL
W100WTLM 1988	REMOTE CONTROL
W100WTXM 1988	REMOTE CONTROL
X155WTLM 1988	REMOTE CONTROL
X155WTXM 1988	REMOTE CONTROL
X50ESLECC 1998	IGNITION SWITCH & CABLE -- 40TE, 40TTL