

Where Used: Part Number 0338876

Model Name	Diagram
BE10FDLECM 1998	FUEL PUMP
BE10FDLEDR 1996	FUEL PUMP
BE10FDLEUA 1997	FUEL PUMP
BE10FPXEDC 1996	FUEL PUMP
BE10FPXEUR 1997	FUEL PUMP
BE10FRELDL 1996	FUEL PUMP
BE10FRELU 1997	FUEL PUMP
BE15FAEDL 1996	FUEL PUMP
BE15FAEUA 1997	FUEL PUMP
BE15FDLECM 1998	FUEL PUMP
BE15FDLEDR 1996	FUEL PUMP
BE15FDLEUA 1997	FUEL PUMP
BE15FKEDL 1996	FUEL PUMP
BE15FKEUA 1997	FUEL PUMP
BE15FREDR 1996	FUEL PUMP
BE15FRELEDR 1996	FUEL PUMP
BE15FRELU 1997	FUEL PUMP
BE15FREUA 1997	FUEL PUMP
BE15FWECA 1998	FUEL PUMP
BE15FWEDC 1996	FUEL PUMP
BE15FWEUR 1997	FUEL PUMP
BE15FWLECA 1998	FUEL PUMP
BE15FWLEDC 1996	FUEL PUMP
BE15FWLEUR 1997	FUEL PUMP
BE3REDS 1996	FUEL PUMP
BE4BREDS 1996	FUEL PUMP
BE4BREUC 1997	FUEL PUMP
BE4BRLEDS 1996	FUEL PUMP
BE4BRLEUC 1997	FUEL PUMP
BE4RDHEDS 1996	FUEL PUMP
BE4RDHLEDS 1996	FUEL PUMP
BE4REDS 1996	FUEL PUMP
BE4RLEDS 1996	FUEL PUMP

BE5DREDS 1996	FUEL PUMP
BE5DREUC 1997	FUEL PUMP
BE5DRLEDS 1996	FUEL PUMP
BE5DRLEUC 1997	FUEL PUMP
BE6DRECR 1998	FUEL PUMP
BE6DREDS 1996	FUEL PUMP
BE6DREUC 1997	FUEL PUMP
BE6DRLECR 1998	FUEL PUMP
BE6DRLEDS 1996	FUEL PUMP
BE6DRLEUC 1997	FUEL PUMP
BE6REDS 1996	FUEL PUMP
BE6RLEDS 1996	FUEL PUMP
BE8RCB 1997	FUEL PUMP
BE8RCH 1996	FUEL PUMP
BE8RCLB 1997	FUEL PUMP
BE8RCLH 1996	FUEL PUMP
BE8RCLT 1998	FUEL PUMP
BE8RCT 1998	FUEL PUMP
BE8REDS 1996	FUEL PUMP
BE8RLEDS 1996	FUEL PUMP
BE8SRLEDS 1996	FUEL PUMP
BJ10FDLECM 1998	FUEL PUMP
BJ10FDLEDR 1996	FUEL PUMP
BJ10FDLEUA 1997	FUEL PUMP
BJ10FPXEDC 1996	FUEL PUMP
BJ10FPXEUR 1997	FUEL PUMP
BJ10FREldr 1996	FUEL PUMP
BJ10FRElua 1997	FUEL PUMP
BJ15FAEDR 1996	FUEL PUMP
BJ15FAEUA 1997	FUEL PUMP
BJ15FDLECM 1998	FUEL PUMP
BJ15FDLEDR 1996	FUEL PUMP
BJ15FDLEUA 1997	FUEL PUMP
BJ15FKEDR 1996	FUEL PUMP
BJ15FKEUA 1997	FUEL PUMP

BJ15FREDR 1996	FUEL PUMP
BJ15FRELEDR 1996	FUEL PUMP
BJ15FRELUA 1997	FUEL PUMP
BJ15FREUA 1997	FUEL PUMP
BJ15FWECA 1998	FUEL PUMP
BJ15FWEDC 1996	FUEL PUMP
BJ15FWEUR 1997	FUEL PUMP
BJ15FWLECA 1998	FUEL PUMP
BJ15FWLEDC 1996	FUEL PUMP
BJ15FWLEUR 1997	FUEL PUMP
BJ3REDS 1996	FUEL PUMP
BJ4BREDS 1996	FUEL PUMP
BJ4BREUC 1997	FUEL PUMP
BJ4BRLEDS 1996	FUEL PUMP
BJ4BRLEUC 1997	FUEL PUMP
BJ4RDHEDS 1996	FUEL PUMP
BJ4RDHLEDS 1996	FUEL PUMP
BJ4REDS 1996	FUEL PUMP
BJ4RLEDS 1996	FUEL PUMP
BJ5DREDS 1996	FUEL PUMP
BJ5DREUC 1997	FUEL PUMP
BJ5DRLEDS 1996	FUEL PUMP
BJ5DRLEUC 1997	FUEL PUMP
BJ6DRECR 1998	FUEL PUMP
BJ6DREDS 1996	FUEL PUMP
BJ6DREUC 1997	FUEL PUMP
BJ6DRLECR 1998	FUEL PUMP
BJ6DRLEDS 1996	FUEL PUMP
BJ6DRLEUC 1997	FUEL PUMP
BJ6REDS 1996	FUEL PUMP
BJ6RLEDS 1996	FUEL PUMP
BJ8RCB 1997	FUEL PUMP
BJ8RCH 1996	FUEL PUMP
BJ8RCLB 1997	FUEL PUMP
BJ8RCLH 1996	FUEL PUMP

BJ8RCLT 1998	FUEL PUMP
BJ8RCT 1998	FUEL PUMP
BJ8REDS 1996	FUEL PUMP
BJ8RLEDS 1996	FUEL PUMP
BJ8SRLEDS 1996	FUEL PUMP
E10EBL4EEB 1999	FUEL PUMP
E10EL4EEB 1999	FUEL PUMP
E10EL4SID 4-stroke, elec start, remote, 20 in shaft 2001	FUEL PUMP
E10EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	FUEL PUMP
E10EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	FUEL PUMP
E10EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	FUEL PUMP
E10FEXECM 1998	FUEL PUMP
E10FEXEDR 1996	FUEL PUMP
E10FEXEO 1995	FUEL PUMP
E10FEXEUA 1997	FUEL PUMP
E10FRECM 1998	FUEL PUMP
E10FREDR 1996	FUEL PUMP
E10FRELECM 1998	FUEL PUMP
E10FRELEDR 1996	FUEL PUMP
E10FRELEOC 1995	FUEL PUMP
E10FRELEUA 1997	FUEL PUMP
E10FREOC 1995	FUEL PUMP
E10FREUA 1997	FUEL PUMP
E10FRLECM 1998	FUEL PUMP
E10FRLEDR 1996	FUEL PUMP
E10FRLEO 1995	FUEL PUMP
E10FRLEUA 1997	FUEL PUMP
E10R4EEB 1999	FUEL PUMP
E10R4SID 4-stroke, rope start, tiller, 15 in shaft 2001	FUEL PUMP
E10R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	FUEL PUMP
E10RL4EEB 1999	FUEL PUMP
E10RL4SID 4-stroke, rope start, tiller, 20 in shaft 2001	FUEL PUMP
E10RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	FUEL PUMP
E10RV4SIC 4-stroke, rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
E10RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	FUEL PUMP

E10RVL4SIC 4-stroke, rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
E10RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	FUEL PUMP
E10TEX4EEB 1999	FUEL PUMP
E10TEX4SID 4-stroke, elec start, tiller, 25 in shaft 2001	FUEL PUMP
E10TEX4SSE 4-Stroke, Elec. Start, Tiller, 25 IN shaft 2000	FUEL PUMP
E10TVX4SIC 4-stroke, elec start, tiller, 25 in shaft, wht 2001	FUEL PUMP
E10TVX4SSS 4-Stroke, Elec. Start, Tiller, 25 IN shaft, wht 2000	FUEL PUMP
E15DLEOC 1995	FUEL PUMP
E15EBL4EEB 1999	FUEL PUMP
E15EL4EEB 1999	FUEL PUMP
E15EL4SID 4-stroke, elec start, 20 in shaft 2001	FUEL PUMP
E15EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	FUEL PUMP
E15EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	FUEL PUMP
E15EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	FUEL PUMP
E15FKEDR 1996	FUEL PUMP
E15FKEUA 1997	FUEL PUMP
E15FRECM 1998	FUEL PUMP
E15FREDR 1996	FUEL PUMP
E15FRELECM 1998	FUEL PUMP
E15FRELEDR 1996	FUEL PUMP
E15FRELEUA 1997	FUEL PUMP
E15FREOC 1995	FUEL PUMP
E15FREUA 1997	FUEL PUMP
E15FRLECM 1998	FUEL PUMP
E15FRLEDR 1996	FUEL PUMP
E15FRLEOC 1995	FUEL PUMP
E15FRLEUA 1997	FUEL PUMP
E15KEOC 1995	FUEL PUMP
E15R4EEB 1999	FUEL PUMP
E15R4SID 4-stroke, rope start, 15 in shaft 2001	FUEL PUMP
E15R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	FUEL PUMP
E15RB4EEB 1999	FUEL PUMP
E15RBL4EEB 1999	FUEL PUMP
E15RL4EEB 1999	FUEL PUMP
E15RL4SID 4-stroke, rope start, 20 in shaft 2001	FUEL PUMP

E15RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	FUEL PUMP
E15RV4SIC 4-stroke,rope start, 15 in shaft, wht 2001	FUEL PUMP
E15RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	FUEL PUMP
E15RVL4SIC 4-stroke, elec start, 15 in shaft, wht 2001	FUEL PUMP
E15RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	FUEL PUMP
E3REOD 1995	FUEL PUMP
E3RERE 1994	FUEL PUMP
E3RETB 1993	FUEL PUMP
E3REUC 1997	FUEL PUMP
E4BRECRJ 1998	FUEL PUMP
E4BRLECRJ 1998	FUEL PUMP
E4RDHEOD 1995	FUEL PUMP
E4RDHERE 1994	FUEL PUMP
E4RDHETB 1993	FUEL PUMP
E4RDHLEOD 1995	FUEL PUMP
E4RDHLERE 1994	FUEL PUMP
E4RDHLETB 1993	FUEL PUMP
E4REDS 1996	FUEL PUMP
E4REOD 1995	FUEL PUMP
E4RERE 1994	FUEL PUMP
E4RETB 1993	FUEL PUMP
E4REUC 1997	FUEL PUMP
E4RLEDs 1996	FUEL PUMP
E4RLEOD 1995	FUEL PUMP
E4RLERE 1994	FUEL PUMP
E4RLETB 1993	FUEL PUMP
E4RLEUC 1997	FUEL PUMP
E5DRECR 1998	FUEL PUMP
E5DRLECR 1998	FUEL PUMP
E6RECR 1998	FUEL PUMP
E6REDS 1996	FUEL PUMP
E6REOD 1995	FUEL PUMP
E6RERE 1994	FUEL PUMP
E6RETB 1993	FUEL PUMP
E6REUC 1997	FUEL PUMP

E6RLECR 1998	FUEL PUMP
E6RLEDs 1996	FUEL PUMP
E6RLEOD 1995	FUEL PUMP
E6RLERE 1994	FUEL PUMP
E6RLETB 1993	FUEL PUMP
E6RLEUC 1997	FUEL PUMP
E6SLEDs 1996	FUEL PUMP
E6SLEOD 1995	FUEL PUMP
E6SLERE 1994	FUEL PUMP
E6SLETB 1993	FUEL PUMP
E8DREEA 1999	FUEL PUMP
E8DRSSM Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	FUEL PUMP
E8RECR 1998	FUEL PUMP
E8REDS 1996	FUEL PUMP
E8REOD 1995	FUEL PUMP
E8RERE 1994	FUEL PUMP
E8RETB 1993	FUEL PUMP
E8REUC 1997	FUEL PUMP
E8RLECR 1998	FUEL PUMP
E8RLEDs 1996	FUEL PUMP
E8RLEOD 1995	FUEL PUMP
E8RLERE 1994	FUEL PUMP
E8RLETB 1993	FUEL PUMP
E8RLEUC 1997	FUEL PUMP
E8SRLECA 1998	FUEL PUMP
E8SRLEDs 1996	FUEL PUMP
E8SRLEOD 1995	FUEL PUMP
E8SRLERE 1994	FUEL PUMP
E8SRLETB 1993	FUEL PUMP
E8SRLEUC 1997	FUEL PUMP
E8WREES 1999	FUEL PUMP
E8WRLEES 1999	FUEL PUMP
E8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
E8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP

E8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
HE15KCF 1997	FUEL PUMP - 15KC MODELS ONLY
HE15KCLF 1997	FUEL PUMP - 15KC MODELS ONLY
HE15KCLN 1996	FUEL PUMP - 15KC MODELS ONLY
HE15KCLO 1998	FUEL PUMP -- 15KC MODELS ONLY
HE15KCN 1996	FUEL PUMP - 15KC MODELS ONLY
HE15KCO 1998	FUEL PUMP -- 15KC MODELS ONLY
HE15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
HE15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCF 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLF 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLN 1996	FUEL PUMP - 15KC MODELS ONLY
HJ15KCLO 1998	FUEL PUMP -- 15KC MODELS ONLY
HJ15KCN 1996	FUEL PUMP - 15KC MODELS ONLY
HJ15KCO 1998	FUEL PUMP -- 15KC MODELS ONLY
HJ15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
HJ15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
J10FEXECM 1998	FUEL PUMP
J10FEXEDR 1996	FUEL PUMP
J10FEXEO 1995	FUEL PUMP
J10FEXEUA 1997	FUEL PUMP
J10FRECM 1998	FUEL PUMP
J10FREDR 1996	FUEL PUMP
J10FRELECM 1998	FUEL PUMP
J10FRELEDR 1996	FUEL PUMP
J10FRELEOC 1995	FUEL PUMP
J10FRELEUA 1997	FUEL PUMP
J10FREOC 1995	FUEL PUMP
J10FREUA 1997	FUEL PUMP
J10FRLECM 1998	FUEL PUMP
J10FRLEDR 1996	FUEL PUMP
J10FRLEO 1995	FUEL PUMP
J10FRLEUA 1997	FUEL PUMP
J15DLEOC 1995	FUEL PUMP
J15FKEDR 1996	FUEL PUMP

J15FKEUA 1997	FUEL PUMP
J15FRECM 1998	FUEL PUMP
J15FREDR 1996	FUEL PUMP
J15FRELECM 1998	FUEL PUMP
J15FRELEDR 1996	FUEL PUMP
J15FRELEUA 1997	FUEL PUMP
J15FREOC 1995	FUEL PUMP
J15FREUA 1997	FUEL PUMP
J15FRLECM 1998	FUEL PUMP
J15FRLEDR 1996	FUEL PUMP
J15FRLEOC 1995	FUEL PUMP
J15FRLEUA 1997	FUEL PUMP
J15KEOC 1995	FUEL PUMP
J3REOD 1995	FUEL PUMP
J3RERE 1994	FUEL PUMP
J3RETB 1993	FUEL PUMP
J3REUC 1997	FUEL PUMP
J4BRECRJ 1998	FUEL PUMP
J4BRLECRJ 1998	FUEL PUMP
J4RDHEOD 1995	FUEL PUMP
J4RDHERE 1994	FUEL PUMP
J4RDHETB 1993	FUEL PUMP
J4RDHLEOD 1995	FUEL PUMP
J4RDHLERE 1994	FUEL PUMP
J4RDHLETB 1993	FUEL PUMP
J4REDS 1996	FUEL PUMP
J4REEA 1999	FUEL PUMP
J4REOD 1995	FUEL PUMP
J4RERE 1994	FUEL PUMP
J4RETB 1993	FUEL PUMP
J4REUC 1997	FUEL PUMP
J4RLEDs 1996	FUEL PUMP
J4RLEEA 1999	FUEL PUMP
J4RLEOD 1995	FUEL PUMP
J4RLERE 1994	FUEL PUMP

J4RLETB 1993	FUEL PUMP
J4RLEUC 1997	FUEL PUMP
J4RLSIB Rope Start, Tiller, 20 IN. shaft 2001	FUEL PUMP
J4RLSSM Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J4RSIB Rope Start, Tiller, 15 IN. shaft 2001	FUEL PUMP
J4RSSM Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J5DRECR 1998	FUEL PUMP
J5DRLECR 1998	FUEL PUMP
J6RECR 1998	FUEL PUMP
J6REDS 1996	FUEL PUMP
J6REEA 1999	FUEL PUMP
J6REOD 1995	FUEL PUMP
J6RERE 1994	FUEL PUMP
J6RETB 1993	FUEL PUMP
J6REUC 1997	FUEL PUMP
J6RLECR 1998	FUEL PUMP
J6RLEDs 1996	FUEL PUMP
J6RLEEA 1999	FUEL PUMP
J6RLEOD 1995	FUEL PUMP
J6RLERE 1994	FUEL PUMP
J6RLETB 1993	FUEL PUMP
J6RLEUC 1997	FUEL PUMP
J6RLSIB rope start, tiller, 20 in shaft 2001	FUEL PUMP
J6RLSOC	FUEL PUMP
J6RLSOC - FR	23-2_POMPE À CARBURANT
J6RLSRS	FUEL PUMP
J6RLSRS - FR	23-2_POMPE À CARBURANT
J6RLSSM Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J6RLSTD	FUEL PUMP
J6RLSTD - FR	23-2_POMPE À CARBURANT
J6RLVSIB rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J6RSIB rope start, tiller, 15 in shaft 2001	FUEL PUMP
J6RSOC	FUEL PUMP
J6RSOC - FR	23-2_POMPE À CARBURANT
J6RSRS	FUEL PUMP

J6RSRS - FR	23-2_POMPE À CARBURANT
J6RSSM Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J6RSTD	FUEL PUMP
J6RSTD - FR	23-2_POMPE À CARBURANT
J6RVSIB rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
J6SLEDs 1996	FUEL PUMP
J6SLEOD 1995	FUEL PUMP
J6SLERE 1994	FUEL PUMP
J6SLETB 1993	FUEL PUMP
J8DREEA 1999	FUEL PUMP
J8RECR 1998	FUEL PUMP
J8REDS 1996	FUEL PUMP
J8REEM 1999	FUEL PUMP
J8REOD 1995	FUEL PUMP
J8RERE 1994	FUEL PUMP
J8RETB 1993	FUEL PUMP
J8REUC 1997	FUEL PUMP
J8RLECR 1998	FUEL PUMP
J8RLEDs 1996	FUEL PUMP
J8RLEEM 1999	FUEL PUMP
J8RLEOD 1995	FUEL PUMP
J8RLERE 1994	FUEL PUMP
J8RLETB 1993	FUEL PUMP
J8RLEUC 1997	FUEL PUMP
J8RLSIE rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8RLSOR	FUEL PUMP
J8RLSOR - FR	23-2_POMPE À CARBURANT
J8RLSRC	FUEL PUMP
J8RLSRC - FR	23-2_POMPE À CARBURANT
J8RLSSB Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8RLSTS	FUEL PUMP
J8RLSTS - FR	23-2_POMPE À CARBURANT
J8RLVSIE rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J8RLXSIE rope start, tiller, 25 in shaft, wht 2001	FUEL PUMP
J8RSIE rope start, tiller, 15 in shaft 2001	FUEL PUMP

J8RSOR	FUEL PUMP
J8RSOR - FR	23-2_POMPE À CARBURANT
J8RSRC	FUEL PUMP
J8RSRC - FR	23-2_POMPE À CARBURANT
J8RSSB Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J8RSTD	FUEL PUMP
J8RSTD - FR	23-2_POMPE À CARBURANT
J8RVSIE rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
J8RXEEM 1999	FUEL PUMP
J8RXSIE rope start, tiller, 25 in shaft 2001	FUEL PUMP
J8RXSSB Rope Start, Tiller, 25 IN. shaft 2000	FUEL PUMP
J8SRLECA 1998	FUEL PUMP
J8SRLEDS 1996	FUEL PUMP
J8SRLEOD 1995	FUEL PUMP
J8SRLERE 1994	FUEL PUMP
J8SRLETB 1993	FUEL PUMP
J8SRLEUC 1997	FUEL PUMP
J8WREES 1999	FUEL PUMP
J8WRLEES 1999	FUEL PUMP
J8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP
J8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
L10FRELECM 1998	FUEL PUMP
L10FRELEDR 1996	FUEL PUMP
L10FRELEUA 1997	FUEL PUMP
SE10RPB 1996	FUEL PUMP - 15KC MODELS ONLY
SE10RPLB 1996	FUEL PUMP - 15KC MODELS ONLY
SE10RPLT 1997	FUEL PUMP - 15KC MODELS ONLY
SE10RPLY 1998	FUEL PUMP -- 15KC MODELS ONLY
SE10RPT 1997	FUEL PUMP - 15KC MODELS ONLY
SE10RPY 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPC 1998	FUEL PUMP -- 15KC MODELS ONLY
SE15RPG 1996	FUEL PUMP - 15KC MODELS ONLY
SE15RPLC 1998	FUEL PUMP -- 15KC MODELS ONLY

SE15RPLG 1996	FUEL PUMP - 15KC MODELS ONLY
SE15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
SE15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPB 1996	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLB 1996	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLT 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPLY 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ10RPT 1997	FUEL PUMP - 15KC MODELS ONLY
SJ10RPY 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPC 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPG 1996	FUEL PUMP - 15KC MODELS ONLY
SJ15RPLC 1998	FUEL PUMP -- 15KC MODELS ONLY
SJ15RPLG 1996	FUEL PUMP - 15KC MODELS ONLY
SJ15RPLW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ15RPW 1997	FUEL PUMP - 15KC MODELS ONLY
SJ3REDS 1996	FUEL PUMP
SJ4REDS 1996	FUEL PUMP
SJ4RLEDS 1996	FUEL PUMP
SJ6REDS 1996	FUEL PUMP
SJ6RLEDS 1996	FUEL PUMP
SJ8REDS 1996	FUEL PUMP
SJ8RLEDS 1996	FUEL PUMP