

Where Used: Part Number 0341591

Model Name	Diagram
8/9.9HP (4 Stroke)	GEARCASE EXTENSION KIT
9.9/15HP (2 Stroke) 1993-Current	GEARCASE EXTENSION KIT
BE10EEDD 1996	GEARCASE
BE10ELEDD 1996	GEARCASE
BE10FAEDC 1996	GEARCASE
BE10FAEUR 1997	GEARCASE
BE10FCLEDC 1996	GEARCASE
BE10FCLEUR 1997	GEARCASE
BE10FWEDC 1996	GEARCASE
BE10FWEUR 1997	GEARCASE
BE10FWLEDC 1996	GEARCASE
BE10FWLEUR 1997	GEARCASE
BE10REDD 1996	GEARCASE
BE10RELEDD 1996	GEARCASE
BE10RELEUS 1997	GEARCASE
BE10RLEDD 1996	GEARCASE
BE10SELEDD 1996	GEARCASE
BE15EEDS 1996	GEARCASE
BE15ELEDS 1996	GEARCASE
BE15REDS 1996	GEARCASE
BE15RELEUC 1997	GEARCASE
BE15RLEDS 1996	GEARCASE
BE8FRBECA 1998	GEARCASE
BE8FRBEDC 1996	GEARCASE
BE8FRBEUR 1997	GEARCASE
BE8FRBLECA 1998	GEARCASE
BE8FRBLEDC 1996	GEARCASE
BE8FRBLEUR 1997	GEARCASE
BE8FRBXEDC 1996	GEARCASE
BE8FRBXEUR 1997	GEARCASE
BJ10EEDD 1996	GEARCASE
BJ10ELEDD 1996	GEARCASE
BJ10FAEDC 1996	GEARCASE

BJ10FAEUR 1997	GEARCASE
BJ10FCLEDC 1996	GEARCASE
BJ10FCLEUR 1997	GEARCASE
BJ10FWEDC 1996	GEARCASE
BJ10FWEUR 1997	GEARCASE
BJ10FWLEDC 1996	GEARCASE
BJ10FWLEUR 1997	GEARCASE
BJ10REDD 1996	GEARCASE
BJ10RELEDD 1996	GEARCASE
BJ10RELEUS 1997	GEARCASE
BJ10RHLSDA	GEARCASE
BJ10RHLSDA - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RHLSOR	GEARCASE
BJ10RHLSOR - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RHLSRC	GEARCASE
BJ10RHLSRC - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RHLSTS	GEARCASE
BJ10RHLSTS - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RHSDA	GEARCASE
BJ10RHSDA - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RHSOR	GEARCASE
BJ10RHSOR - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RHSRC	GEARCASE
BJ10RHSRC - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RHSTS	GEARCASE
BJ10RHSTS - FR	27-1_BOÎTIER D'ENGRENAGES
BJ10RLEDD 1996	GEARCASE
BJ10SELEDD 1996	GEARCASE
BJ15EEDS 1996	GEARCASE
BJ15ELEDs 1996	GEARCASE
BJ15REDS 1996	GEARCASE
BJ15RELEUC 1997	GEARCASE
BJ15RLEDs 1996	GEARCASE
BJ8FRBECA 1998	GEARCASE
BJ8FRBEDC 1996	GEARCASE

BJ8FRBEUR 1997	GEARCASE
BJ8FRBLECA 1998	GEARCASE
BJ8FRBLEDC 1996	GEARCASE
BJ8FRBLEUR 1997	GEARCASE
BJ8FRBXEDC 1996	GEARCASE
BJ8FRBXEUR 1997	GEARCASE
E10EECC 1998	GEARCASE
E10EEDD 1996	GEARCASE
E10EEOE 1995	GEARCASE
E10EEUS 1997	GEARCASE
E10ELECC 1998	GEARCASE
E10ELEDD 1996	GEARCASE
E10ELEOE 1995	GEARCASE
E10ELEUS 1997	GEARCASE
E10FOECA 1998	GEARCASE
E10FOLECA 1998	GEARCASE
E10RECC 1998	GEARCASE
E10REDD 1996	GEARCASE
E10RELECC 1998	GEARCASE
E10RELEDD 1996	GEARCASE
E10RELEOE 1995	GEARCASE
E10RELEUS 1997	GEARCASE
E10REOE 1995	GEARCASE
E10REUS 1997	GEARCASE
E10RLECC 1998	GEARCASE
E10RLEDD 1996	GEARCASE
E10RLEOE 1995	GEARCASE
E10RLEUS 1997	GEARCASE
E10SELECC 1998	GEARCASE
E10SELEDD 1996	GEARCASE
E10SELEOE 1995	GEARCASE
E10SELEUS 1997	GEARCASE
E15EECR 1998	GEARCASE
E15EEDS 1996	GEARCASE
E15EEOD 1995	GEARCASE

E15EEUC 1997	GEARCASE
E15ELECR 1998	GEARCASE
E15ELEDs 1996	GEARCASE
E15ELEOD 1995	GEARCASE
E15ELEUC 1997	GEARCASE
E15RECR 1998	GEARCASE
E15REDS 1996	GEARCASE
E15RELECR 1998	GEARCASE
E15RELEDs 1996	GEARCASE
E15RELEOD 1995	GEARCASE
E15RELEUC 1997	GEARCASE
E15REOD 1995	GEARCASE
E15REUC 1997	GEARCASE
E15RLECR 1998	GEARCASE
E15RLEDs 1996	GEARCASE
E15RLEOD 1995	GEARCASE
E15RLEUC 1997	GEARCASE
E15WREES 1999	GEARCASE
E15WRLEES 1999	GEARCASE
E15WRLSIR commercial, rope start, tiller, 20 in shaft 2001	GEARCASE
E15WRLSSC Commercial, Rope Start, Tiller, 20 IN shaft 2000	GEARCASE
E15WRSIR commercial, rope start, tiller, 15 in shaft 2001	GEARCASE
E15WRSSC Commercial, Rope Start, Tiller, 15 IN shaft 2000	GEARCASE
E8FRECA 1998	GEARCASE
E8FREDC 1996	GEARCASE
E8FREUR 1997	GEARCASE
E8FRLECA 1998	GEARCASE
E8FRXECA 1998	GEARCASE
E8FRXEDC 1996	GEARCASE
E8FRXEUR 1997	GEARCASE
E8R4EEM 1999	GEARCASE
E8R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	GEARCASE
E8R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E8RB4EEM 1999	GEARCASE
E8RBL4EEM 1999	GEARCASE

E8RL4EEM 1999	GEARCASE
E8RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	GEARCASE
E8RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
E8RVL4SIC 4-stroke, rope start, tiller, 20 in shaft, wht 2001	GEARCASE
E8RVL4SSB 4-Stroke, Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	GEARCASE
HE10FDEDC 1996	GEARCASE
HE10FDLEDC 1996	GEARCASE
HE10FELECA 1998	GEARCASE
HE10FELEDC 1996	GEARCASE
HE10FELEUR 1997	GEARCASE
HE10FOEUR 1997	GEARCASE
HE10FOLEUR 1997	GEARCASE
HE10FTEDC 1996	GEARCASE
HE10FTEUR 1997	GEARCASE
HE10FTLEDC 1996	GEARCASE
HE10FTLEUR 1997	GEARCASE
HE15KCF 1997	GEARCASE
HE15KCLF 1997	GEARCASE
HE15KCLN 1996	GEARCASE
HE15KCLO 1998	GEARCASE
HE15KCN 1996	GEARCASE
HE15KCO 1998	GEARCASE
HE15RPLW 1997	GEARCASE
HE15RPW 1997	GEARCASE
HE8FREDC 1996	GEARCASE
HE8FREUR 1997	GEARCASE
HE8FRLEDC 1996	GEARCASE
HE8FRLEUR 1997	GEARCASE
HJ10FDEDC 1996	GEARCASE
HJ10FDLEDC 1996	GEARCASE
HJ10FELECA 1998	GEARCASE
HJ10FELEDC 1996	GEARCASE
HJ10FELEUR 1997	GEARCASE
HJ10FOEUR 1997	GEARCASE
HJ10FOLEUR 1997	GEARCASE

HJ10FTEDC 1996	GEARCASE
HJ10FTEUR 1997	GEARCASE
HJ10FTLEDC 1996	GEARCASE
HJ10FTLEUR 1997	GEARCASE
HJ15KCF 1997	GEARCASE
HJ15KCLF 1997	GEARCASE
HJ15KCLN 1996	GEARCASE
HJ15KCLO 1998	GEARCASE
HJ15KCN 1996	GEARCASE
HJ15KCO 1998	GEARCASE
HJ15RPLW 1997	GEARCASE
HJ15RPW 1997	GEARCASE
HJ8FREDC 1996	GEARCASE
HJ8FREUR 1997	GEARCASE
HJ8FRLEDC 1996	GEARCASE
HJ8FRLEUR 1997	GEARCASE
J10EECC 1998	GEARCASE
J10EEDD 1996	GEARCASE
J10EEOE 1995	GEARCASE
J10EEUS 1997	GEARCASE
J10ELECC 1998	GEARCASE
J10ELEDD 1996	GEARCASE
J10ELEER 1999	GEARCASE
J10ELEOE 1995	GEARCASE
J10ELEUS 1997	GEARCASE
J10ELSIM elec start, remote, 20 in shaft 2001	GEARCASE
J10ELSSA Electric Start, 15 IN. shaft 2000	GEARCASE
J10EVLSIC elec start, 20 in shaft, wht 2001	GEARCASE
J10EVLSSS Electric Start, 20 IN. shaft, wht 2000	GEARCASE
J10FOECA 1998	GEARCASE
J10FOLECA 1998	GEARCASE
J10RECC 1998	GEARCASE
J10REDD 1996	GEARCASE
J10REER 1999	GEARCASE
J10RELECC 1998	GEARCASE

J10RELEDD 1996	GEARCASE
J10RELEOE 1995	GEARCASE
J10RELEUS 1997	GEARCASE
J10REOE 1995	GEARCASE
J10REUS 1997	GEARCASE
J10RGTSIC elec start,15 in shaft, wht 2001	GEARCASE
J10RGTSSS Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	GEARCASE
J10RLECC 1998	GEARCASE
J10RLEDD 1996	GEARCASE
J10RLEER 1999	GEARCASE
J10RLEOE 1995	GEARCASE
J10RLEUS 1997	GEARCASE
J10RLGTSIC elec start,20 in shaft, wht 2001	GEARCASE
J10RLGTSSS Rope Start, Tiller, 20 IN. shaft, N/A USA 2000	GEARCASE
J10RLSDC	GEARCASE
J10RLSDC - FR	27-1_BOÎTIER D'ENGRENAGES
J10RLSIM rope start, tiller, 20 in shaft 2001	GEARCASE
J10RLSOS	GEARCASE
J10RLSOS - FR	27-1_BOÎTIER D'ENGRENAGES
J10RLSRD	GEARCASE
J10RLSRD - FR	27-1_BOÎTIER D'ENGRENAGES
J10RLSSA Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J10RLSTE	GEARCASE
J10RLSTE - FR	27-1_BOÎTIER D'ENGRENAGES
J10RLSUR	GEARCASE
J10RLSUR - FR	07-1_BOÎTIER D'ENGRENAGES
J10RSDC	GEARCASE
J10RSDC - FR	27-1_BOÎTIER D'ENGRENAGES
J10RSIM rope start, tiller, 15 in shaft 2001	GEARCASE
J10RSOS	GEARCASE
J10RSOS - FR	27-1_BOÎTIER D'ENGRENAGES
J10RSRD	GEARCASE
J10RSRD - FR	27-1_BOÎTIER D'ENGRENAGES
J10RSSA Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J10RSTE	GEARCASE

J10RSTE - FR	27-1_BOÎTIER D'ENGRENAGES
J10RSUR	GEARCASE
J10RSUR - FR	07-1_BOÎTIER D'ENGRENAGES
J10RVLSIC rope start, tiller, 20 in shaft, wht 2001	GEARCASE
J10RVLSSS Rope Start, Tiller, 20 IN. shaft, wht 2000	GEARCASE
J10RVSIC rope start, tiller, 15 in shaft, wht 2001	GEARCASE
J10RVSSS Rope Start, Tiller, 15 IN. shaft, wht 2000	GEARCASE
J10SELECC 1998	GEARCASE
J10SELEDD 1996	GEARCASE
J10SELEOE 1995	GEARCASE
J10SELEUS 1997	GEARCASE
J10TEEER 1999	GEARCASE
J10TEGSSS Electric Start, Tiller, 15 IN. shaft, N/A USA 2000	GEARCASE
J10TEGTSIC elec start, tiller, 15 in shaft, wht 2001	GEARCASE
J10TELEER 1999	GEARCASE
J10TELSIM elec start, tiller, 20 in shaft 2001	GEARCASE
J10TELSSA Electric Start, Tiller, 20 IN. shaft 2000	GEARCASE
J10TESIM elec start, tiller, 15 in shaft 2001	GEARCASE
J10TESSA Electric Start, Tiller, 15 IN. shaft 2000	GEARCASE
J10TVESIM elec start, tiller, 15 in shaft, wht 2001	GEARCASE
J15EECR 1998	GEARCASE
J15EEDS 1996	GEARCASE
J15EEOD 1995	GEARCASE
J15EEUC 1997	GEARCASE
J15ELECR 1998	GEARCASE
J15ELEDs 1996	GEARCASE
J15ELEEA 1999	GEARCASE
J15ELEOD 1995	GEARCASE
J15ELEUC 1997	GEARCASE
J15ELSIB elec start, remote, 20 in shaft 2001	GEARCASE
J15ELSSM Electric Start, 20 IN. shaft 2000	GEARCASE
J15EVLSIC elec start, remote, 20 in shaft, wht 2001	GEARCASE
J15EVLSSS Electric Start, 20 IN. shaft, wht 2000	GEARCASE
J15RECR 1998	GEARCASE
J15REDS 1996	GEARCASE

J15REEA 1999	GEARCASE
J15RELECR 1998	GEARCASE
J15RELEDS 1996	GEARCASE
J15RELEOD 1995	GEARCASE
J15RELEUC 1997	GEARCASE
J15REOD 1995	GEARCASE
J15REUC 1997	GEARCASE
J15RLECR 1998	GEARCASE
J15RLEDS 1996	GEARCASE
J15RLEEA 1999	GEARCASE
J15RLEOD 1995	GEARCASE
J15RLEUC 1997	GEARCASE
J15RLSDR	GEARCASE
J15RLSDR - FR	27-1_BOÎTIER D'ENGRENAGES
J15RLSIB rope start, tiller, 20 in shaft 2001	GEARCASE
J15RLSOC	GEARCASE
J15RLSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J15RLSRS	GEARCASE
J15RLSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J15RLSSM Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J15RLSTD	GEARCASE
J15RLSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J15RLSUA	GEARCASE
J15RLSUA - FR	07-1_BOÎTIER D'ENGRENAGES
J15RSDR	GEARCASE
J15RSDR - FR	27-1_BOÎTIER D'ENGRENAGES
J15RSIB rope start, tiller, 15 in shaft 2001	GEARCASE
J15RSOC	GEARCASE
J15RSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J15RSRS	GEARCASE
J15RSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J15RSSM Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J15RSTD	GEARCASE
J15RSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J15RSUA	GEARCASE

J15RSUA - FR	07-1_BOÎTIER D'ENGRENAGES
J15RTSDC	GEARCASE
J15RTSDC - FR	27-1_BOÎTIER D'ENGRENAGES
J15RTSOS	GEARCASE
J15RTSOS - FR	27-1_BOÎTIER D'ENGRENAGES
J15RTSUR	GEARCASE
J15RTSUR - FR	07-1_BOÎTIER D'ENGRENAGES
J15RVLSIC rope start, tiller, 20 in shaft, wht 2001	GEARCASE
J15RVLSSS Rope Start, Tiller, 20 IN. shaft, wht 2000	GEARCASE
J15RVSIC rope start, tiller, 15 in shaft, wht 2001	GEARCASE
J15RVSSS Rope Start, Tiller, 15 IN. shaft, wht 2000	GEARCASE
J15TEEEA 1999	GEARCASE
J15TELEEA 1999	GEARCASE
J15TELSIB elec start, tiller, 20 in shaft 2001	GEARCASE
J15TELSSM Electric Start, Tiller, 20 IN. shaft 2000	GEARCASE
J15TESIB elec start, tiller, 15 in shaft 2001	GEARCASE
J15TESSM Electric Start, Tiller, 15 IN. shaft 2000	GEARCASE
J15TVESIB elec start, tiller, 15 in shaft, wht 2001	GEARCASE
J15WREES 1999	GEARCASE
J15WRLEES 1999	GEARCASE
J15WRLSIR commercial, rope start, tiller, 20 in shaft 2001	GEARCASE
J15WRLSOB	GEARCASE
J15WRLSOB - FR	27-1_BOÎTIER D'ENGRENAGES
J15WRLSRM	GEARCASE
J15WRLSRM - FR	27-1_BOÎTIER D'ENGRENAGES
J15WRLSSC Commercial, Rope Start, Tiller, 20 IN shaft 2000	GEARCASE
J15WRSIR commercial, rope start, tiller, 15 in shaft 2001	GEARCASE
J15WRSOB	GEARCASE
J15WRSOB - FR	27-1_BOÎTIER D'ENGRENAGES
J15WRSRM	GEARCASE
J15WRSRM - FR	27-1_BOÎTIER D'ENGRENAGES
J15WRSSC Commercial, Rope Start, Tiller, 15 IN shaft 2000	GEARCASE
J8FRECA 1998	GEARCASE
J8FREDC 1996	GEARCASE
J8FREUR 1997	GEARCASE

J8FRLECA 1998	GEARCASE
J8FRXECA 1998	GEARCASE
J8FRXEDC 1996	GEARCASE
J8FRXEUR 1997	GEARCASE
J8R4SRC	GEARCASE
J8R4SRC - FR	17-1_BOÎTIER D'ENGRENAGES
J8R4STS	GEARCASE
J8R4STS - FR	17-1_BOÎTIER D'ENGRENAGES
J8RL4SRC	GEARCASE
J8RL4SRC - FR	17-1_BOÎTIER D'ENGRENAGES
J8RL4STS	GEARCASE
J8RL4STS - FR	17-1_BOÎTIER D'ENGRENAGES
MISCELLANEOUS	GEARCASE EXTENSION KIT - 9.9,15 HP (2-Stroke)
MISCELLANEOUS	GEARCASE EXTENSION KIT - 9.9,15 HP (2-Stroke)
SE10RPB 1996	GEARCASE
SE10RPLB 1996	GEARCASE
SE10RPLT 1997	GEARCASE
SE10RPLY 1998	GEARCASE
SE10RPT 1997	GEARCASE
SE10RPY 1998	GEARCASE
SE15BAECA 1998	GEARCASE
SE15BAEDC 1996	GEARCASE
SE15BAEEM 1999	GEARCASE
SE15BAEUR 1997	GEARCASE
SE15BASIR rope start, tiller, 15 in shaft, n/a usa 2001	GEARCASE
SE15BASSB Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	GEARCASE
SE15RPC 1998	GEARCASE
SE15RPG 1996	GEARCASE
SE15RPLC 1998	GEARCASE
SE15RPLG 1996	GEARCASE
SE15RPLW 1997	GEARCASE
SE15RPW 1997	GEARCASE
SJ10REDD 1996	GEARCASE
SJ10RLEDD 1996	GEARCASE

SJ10RPB 1996	GEARCASE
SJ10RPLB 1996	GEARCASE
SJ10RPLT 1997	GEARCASE
SJ10RPLY 1998	GEARCASE
SJ10RPT 1997	GEARCASE
SJ10RPY 1998	GEARCASE
SJ10SELEDD 1996	GEARCASE
SJ15BAECA 1998	GEARCASE
SJ15BAEDC 1996	GEARCASE
SJ15BAEEM 1999	GEARCASE
SJ15BAEUR 1997	GEARCASE
SJ15REDS 1996	GEARCASE
SJ15RLEDS 1996	GEARCASE
SJ15RPC 1998	GEARCASE
SJ15RPG 1996	GEARCASE
SJ15RPLC 1998	GEARCASE
SJ15RPLG 1996	GEARCASE
SJ15RPLW 1997	GEARCASE
SJ15RPW 1997	GEARCASE
SJ15RTEEM 1999	GEARCASE
SJ15RTSIR rope start, tiller, 15 in shaft, n/a usa 2001	GEARCASE
SJ15RTSSB Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	GEARCASE