

Where Used: Part Number 0345992

Model Name	Diagram
BJ115PLSIE elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ115VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90PLSID elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90PXSSS Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90VLSIC elec start, TNT, 20 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
E100FPLSOC	GEARCASE - FPL, FSL MODELS
E100FPLSOC - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E100FPLSRS	GEARCASE - FPL, FSL MODELS
E100FPLSRS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E100FSLSOC	GEARCASE - FPL, FSL MODELS
E100FSLSOC - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E100FSLSRS	GEARCASE - FPL, FSL MODELS
E100FSLSRS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E115FPLEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FPLEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FPLSDS	GEARCASE - PL, SL MODELS
E115FPLSDS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E115FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E115FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E115FPLSOD	GEARCASE - FPL, FSL MODELS
E115FPLSOD - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES

E115FPLSRE	GEARCASE - FPL, FSL MODELS
E115FPLSRE - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPLSTB	GEARCASE - FPL, FSL MODELS
E115FPLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FPXEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FPXEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FPXSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E115FPXSNF Ficht Fuel Injection, 25 in., White, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E115FPXSSH FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPXSSR FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPXSTB	GEARCASE - FPL, FSL MODELS
E115FPXSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FSLEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FSLEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FSLSDS	GEARCASE - PL, SL MODELS
E115FSLSDS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E115FSLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FSLSOD	GEARCASE - FPL, FSL MODELS
E115FSLSOD - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E115FSLSRE	GEARCASE - FPL, FSL MODELS
E115FSLSRE - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E115FSLSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FSLSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FSLSTB	GEARCASE - FPL, FSL MODELS
E115FSLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E75DPGLAFA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFC	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type

E75DPGLAFF	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFG	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLIIS	GEARCASE, S-Type
E75DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLINC	GEARCASE, S-Type
E75DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLISD	GEARCASE - PL, SL MODELS
E75DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLISF	GEARCASE - PL, SL MODELS
E75DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSCB	GEARCASE - PL, SL MODELS
E75DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSDA	GEARCASE - PL, SL MODELS
E75DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E75DPLSEE	GEARCASE - PL, SL MODELS
E75DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSOR	GEARCASE PL & SL MODELS
E75DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E75DPLSRC	GEARCASE PL & SL MODELS
E75DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL
E75DPLSUM	GEARCASE - PL, SL MODELS
E75DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLafa	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLafb	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLafc	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLafd	07-1_GEARCASE, (0.50 Ratio) S-Type

E75DSLAF	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFG	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLIIA	GEARCASE, S-Type
E75DSLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLINM	GEARCASE, S-Type
E75DSLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLISF	GEARCASE - PL, SL MODELS
E75DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLISR	GEARCASE - PL, SL MODELS
E75DSLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLSCS	GEARCASE - PL, SL MODELS
E75DSLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLSEC	GEARCASE - PL, SL MODELS
E75DSLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E75FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E75FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E75FPLSTA	GEARCASE - FPL, FSL MODELS
E75FPLSTA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E75FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E90DPLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLIIS	GEARCASE, S-Type
E90DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLINC	GEARCASE, S-Type
E90DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLISD	GEARCASE - PL, SL MODELS
E90DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLISF	GEARCASE - PL, SL MODELS
E90DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSCB	GEARCASE - PL, SL MODELS

E90DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSDA	GEARCASE - PL, SL MODELS
E90DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E90DPLSEE	GEARCASE - PL, SL MODELS
E90DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSOR	GEARCASE PL & SL MODELS
E90DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E90DPLSRC	GEARCASE PL & SL MODELS
E90DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL
E90DPLSUM	GEARCASE - PL, SL MODELS
E90DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLIID	GEARCASE, S-Type
E90DSLIID - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLINS	GEARCASE, S-Type
E90DSLINS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLISE	GEARCASE - PL, SL MODELS
E90DSLISE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLISF	GEARCASE - PL, SL MODELS
E90DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLSCM	GEARCASE - PL, SL MODELS
E90DSLSCM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLSDR	GEARCASE - PL, SL MODELS
E90DSLSDR - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E90DSLSEB	GEARCASE - PL, SL MODELS
E90DSLSEB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DLSOC	GEARCASE PL & SL MODELS
E90DLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E90DLSORC	GEARCASE PL & SL MODELS
E90DLSORC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL

E90DSLSUA	GEARCASE - PL, SL MODELS
E90DSLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90FPLEEC 1999	GEARCASE -- FPL, FSL MODELS
E90FPLEEN 1999	GEARCASE -- FPL, FSL MODELS
E90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E90FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E90FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E90FPLSTB	GEARCASE - FPL, FSL MODELS
E90FPLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E90FSLSTB	GEARCASE - FPL, FSL MODELS
E90FSLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E90FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E90WDELIIA	GEARCASE, S-Type
E90WDELIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELINM	GEARCASE, S-Type
E90WDELINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELISF	GEARCASE - PL, SL MODELS
E90WDELISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELISR	GEARCASE - PL, SL MODELS
E90WDELISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELSCS	GEARCASE - PL, SL MODELS
E90WDELSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELSEC	GEARCASE - PL, SL MODELS
E90WDELSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
J115GLSDE	GEARCASE - PL, GL MODELS
J115GLSDE - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J115GLSOB	GEARCASE - PL, GL MODELS
J115GLSOB - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115GLSRC	GEARCASE - PL, GL MODELS
J115GLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL

J115GLSTA	GEARCASE - PL, GL MODELS
J115GLSTA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115JPLSIA jet drive, elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115JPLSSR Jet Drive, Elec. Start,TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115PLSDA	GEARCASE - PL, GL MODELS
J115PLSDA - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J115PLSIE elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J115PLSOR	GEARCASE - PL, GL MODELS
J115PLSOR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115PLSRC	GEARCASE - PL, GL MODELS
J115PLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115PLSSB Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115PLSTS	GEARCASE - PL, GL MODELS
J115PLSTS - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115PXSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115PXSNF Carbureted, 25 in. shaft, White, Remote, Elec, TNT, 2002	GEARCASE - PLS, VLS MODELS
J115PXSSB Elec. Start, TNT, 25 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115PXSTS	GEARCASE - PL, GL MODELS
J115PXSTS - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115SPLSSC Elec. Start, TNT, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115VLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J115VLSSS Elec. Start, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115VXSIC elec start, TNT, 25 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS

J90GLSDE	GEARCASE - PL, GL MODELS
J90GLSDE - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J90GLSOB	GEARCASE - PL, GL MODELS
J90GLSOB - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90GLSRM	GEARCASE - PL, GL MODELS
J90GLSRM - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90GLSTA	GEARCASE - PL, GL MODELS
J90GLSTA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J90PLSDM	GEARCASE - PL, GL MODELS
J90PLSDM - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J90PLSID elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J90PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J90PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J90PLSOA	GEARCASE - PL, GL MODELS
J90PLSOA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90PLSRR	GEARCASE - PL, GL MODELS
J90PLSRR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90PLSSE Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J90PLSTC	GEARCASE - PL, GL MODELS
J90PLSTC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J90SPLSSC Elec. Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J90VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J90VLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J90VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J90VLSSE Elec. Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RE115FLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FLSSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FLSSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS

RE115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FSSSH FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FSSSR FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FXSSH FFI, Elec Start, TNT, 25 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FXSSR FFI, Elec Start, TNT, 25 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RJ115PLSIE elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115VLSSB Elec. Start, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115VXSIC elec start, TNT, 25 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ90PLSID elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ90VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ90VLSSS Elec. Start, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS