

Where Used: Part Number 0378101

Model Name	Diagram
1002R 1970	POWERHEAD GROUP
18002C 1970	POWERHEAD GROUP
18002E 1970	POWERHEAD GROUP
18003C 1970	POWERHEAD GROUP
18003E 1970	POWERHEAD GROUP
1802S 1968	POWERHEAD GROUP
18102S 1971	CYLINDER & CRANKCASE
18103S 1971	CYLINDER & CRANKCASE
18202R 1972	CYLINDER & CRANKCASE
18203R 1972	CYLINDER & CRANKCASE
18802A 1968	POWERHEAD GROUP
18802E 1968	POWERHEAD GROUP
18802M 1968	POWERHEAD GROUP
18803A 1968	POWERHEAD GROUP
18803E 1968	POWERHEAD GROUP
18803M 1968	POWERHEAD GROUP
18902B 1969	POWERHEAD GROUP
18902D 1969	POWERHEAD GROUP
18903B 1969	POWERHEAD GROUP
18903D 1969	POWERHEAD GROUP
1902C 1969	POWERHEAD GROUP
1R69C 1969	POWERHEAD GROUP
1R70R 1970	POWERHEAD GROUP
20R70C 1970	POWERHEAD GROUP
20R70E 1970	POWERHEAD GROUP
20R71S 1971	CYLINDER & CRANKCASE
20R72R 1972	CYLINDER & CRANKCASE
20RL70C 1970	POWERHEAD GROUP
20RL70E 1970	POWERHEAD GROUP
20RL71S 1971	CYLINDER & CRANKCASE
20RL72R 1972	CYLINDER & CRANKCASE
25002C 1970	POWERHEAD GROUP
25002E 1970	POWERHEAD GROUP

25003C 1970	POWERHEAD GROUP
25003E 1970	POWERHEAD GROUP
25102S 1971	CYLINDER & CRANKCASE
25103S 1971	CYLINDER & CRANKCASE
25202R 1972	CYLINDER & CRANKCASE
25203R 1972	CYLINDER & CRANKCASE
25252R 1972	CYLINDER & CRANKCASE
25253R 1972	CYLINDER & CRANKCASE
25502B 1975	CYLINDER & CRANKCASE
25503B 1975	CYLINDER & CRANKCASE
25552B 1975	CYLINDER & CRANKCASE
25553B 1975	CYLINDER & CRANKCASE
25602E 1976	CYLINDER & CRANKCASE
25603E 1976	CYLINDER & CRANKCASE
25652E 1976	CYLINDER & CRANKCASE
25653E 1976	CYLINDER & CRANKCASE
25902B 1969	POWERHEAD GROUP
25902D 1969	POWERHEAD GROUP
25903B 1969	POWERHEAD GROUP
25903D 1969	POWERHEAD GROUP
25E72R 1972	CYLINDER AND CRANKCASE
25E75B 1975	CYLINDER & CRANKCASE
25E76E 1976	CYLINDER & CRANKCASE
25EL72R 1972	CYLINDER AND CRANKCASE
25EL75B 1975	CYLINDER & CRANKCASE
25EL76E 1976	CYLINDER & CRANKCASE
25R69B 1969	POWERHEAD GROUP
25R69D 1969	POWERHEAD GROUP
25R70C 1970	POWERHEAD GROUP
25R70E 1970	POWERHEAD GROUP
25R71S 1971	CYLINDER & CRANKCASE
25R72R 1972	CYLINDER AND CRANKCASE
25R75B 1975	CYLINDER & CRANKCASE
25R76E 1976	CYLINDER & CRANKCASE
25RL69B 1969	POWERHEAD GROUP

25RL69D 1969	POWERHEAD GROUP
25RL70C 1970	POWERHEAD GROUP
25RL70E 1970	POWERHEAD GROUP
25RL71S 1971	CYLINDER & CRANKCASE
25RL72R 1972	CYLINDER AND CRANKCASE
25RL75B 1975	CYLINDER & CRANKCASE
25RL76E 1976	CYLINDER & CRANKCASE
33002M 1970	POWER HEAD GROUP ELECTRIC START
33002M 1970	POWER HEAD GROUP MANUAL START
33003M 1970	POWER HEAD GROUP ELECTRIC START
33003M 1970	POWER HEAD GROUP MANUAL START
33052M 1970	POWER HEAD GROUP ELECTRIC START
33052M 1970	POWER HEAD GROUP MANUAL START
33053M 1970	POWER HEAD GROUP ELECTRIC START
33053M 1970	POWER HEAD GROUP MANUAL START
33802M 1968	POWER HEAD GROUP ELECTRIC START
33802M 1968	POWER HEAD GROUP MANUAL START
33802R 1968	POWER HEAD GROUP ELECTRIC START
33802R 1968	POWER HEAD GROUP MANUAL START
33803M 1968	POWER HEAD GROUP ELECTRIC START
33803M 1968	POWER HEAD GROUP MANUAL START
33803R 1968	POWER HEAD GROUP ELECTRIC START
33803R 1968	POWER HEAD GROUP MANUAL START
33852M 1968	POWER HEAD GROUP ELECTRIC START
33852M 1968	POWER HEAD GROUP MANUAL START
33852R 1968	POWER HEAD GROUP ELECTRIC START
33852R 1968	POWER HEAD GROUP MANUAL START
33853M 1968	POWER HEAD GROUP ELECTRIC START
33853M 1968	POWER HEAD GROUP MANUAL START
33853R 1968	POWER HEAD GROUP ELECTRIC START
33853R 1968	POWER HEAD GROUP MANUAL START
33902A 1969	POWERHEAD GROUP ELECTRIC START
33902A 1969	POWERHEAD GROUP MANUAL START
33903A 1969	POWERHEAD GROUP ELECTRIC START
33903A 1969	POWERHEAD GROUP MANUAL START

33952A 1969	POWERHEAD GROUP ELECTRIC START
33952A 1969	POWERHEAD GROUP MANUAL START
33953A 1969	POWERHEAD GROUP ELECTRIC START
33953A 1969	POWERHEAD GROUP MANUAL START
33E69A 1969	POWER HEAD GROUP ELECTRIC START
33E69A 1969	POWER HEAD GROUP MANUAL START
33E70M 1970	POWER HEAD GROUP ELECTRIC START
33E70M 1970	POWER HEAD GROUP MANUAL START
33EL69A 1969	POWER HEAD GROUP ELECTRIC START
33EL69A 1969	POWER HEAD GROUP MANUAL START
33EL70M 1970	POWER HEAD GROUP ELECTRIC START
33EL70M 1970	POWER HEAD GROUP MANUAL START
33R69A 1969	POWER HEAD GROUP ELECTRIC START
33R69A 1969	POWER HEAD GROUP MANUAL START
33R70M 1970	POWER HEAD GROUP ELECTRIC START
33R70M 1970	POWER HEAD GROUP MANUAL START
33RL69A 1969	POWER HEAD GROUP ELECTRIC START
33RL69A 1969	POWER HEAD GROUP MANUAL START
33RL70M 1970	POWER HEAD GROUP ELECTRIC START
33RL70M 1970	POWER HEAD GROUP MANUAL START
3802A 1968	POWERHEAD GROUP
3802M 1968	POWERHEAD GROUP
3803A 1968	POWERHEAD GROUP
3803M 1968	POWERHEAD GROUP
3806A 1968	POWERHEAD GROUP
3806M 1968	POWERHEAD GROUP
3807A 1968	POWERHEAD GROUP
3807M 1968	POWERHEAD GROUP
3832A 1968	POWERHEAD GROUP
3832M 1968	POWERHEAD GROUP
3833A 1968	POWERHEAD GROUP
3833M 1968	POWERHEAD GROUP
3836A 1968	POWERHEAD GROUP
3836M 1968	POWERHEAD GROUP
3837A 1968	POWERHEAD GROUP

3837M 1968	POWERHEAD GROUP
40002A 1970	POWERHEAD GROUP
40003A 1970	POWERHEAD GROUP
40052A 1970	POWERHEAD GROUP
40053A 1970	POWERHEAD GROUP
4006E 1970	POWERHEAD GROUP
40072A 1970	POWERHEAD GROUP ELECTRIC SHIFT
40073A 1970	POWERHEAD GROUP ELECTRIC SHIFT
4007E 1970	POWERHEAD GROUP
40102B 1971	CYLINDER & CRANKCASE
40102G 1971	CYLINDER & CRANKCASE
40103B 1971	CYLINDER & CRANKCASE
40103G 1971	CYLINDER & CRANKCASE
40152B 1971	CYLINDER & CRANKCASE
40152G 1971	CYLINDER & CRANKCASE
40153B 1971	CYLINDER & CRANKCASE
40153G 1971	CYLINDER & CRANKCASE
40202E 1972	CYLINDER & CRANKCASE
40203E 1972	CYLINDER & CRANKCASE
40252E 1972	CYLINDER & CRANKCASE
40253E 1972	CYLINDER & CRANKCASE
40304D 1973	CYLINDER & CRANKCASE
40305D 1973	CYLINDER & CRANKCASE
40354D 1973	CYLINDER & CRANKCASE
40355D 1973	CYLINDER & CRANKCASE
4036E 1970	POWERHEAD GROUP
4037E 1970	POWERHEAD GROUP
40802A 1968	POWERHEAD GROUP
40802D 1968	POWERHEAD GROUP
40802S 1968	POWERHEAD GROUP
40803A 1968	POWERHEAD GROUP
40803D 1968	POWERHEAD GROUP
40803S 1968	POWERHEAD GROUP
40852A 1968	POWERHEAD GROUP ELECTRIC START
40852C 1968	POWERHEAD GROUP ELECTRIC START

40852D 1968	POWERHEAD GROUP ELECTRIC START
40852S 1968	POWERHEAD GROUP ELECTRIC START
40853A 1968	POWERHEAD GROUP ELECTRIC START
40853C 1968	POWERHEAD GROUP ELECTRIC START
40853D 1968	POWERHEAD GROUP ELECTRIC START
40853S 1968	POWERHEAD GROUP ELECTRIC START
40872A 1968	POWERHEAD GROUP ELECTRIC SHIFT
40872C 1968	POWERHEAD GROUP ELECTRIC SHIFT
40872D 1968	POWERHEAD GROUP ELECTRIC SHIFT
40873A 1968	POWERHEAD GROUP ELECTRIC SHIFT
40873C 1968	POWERHEAD GROUP ELECTRIC SHIFT
40873D 1968	POWERHEAD GROUP ELECTRIC SHIFT
40902R 1969	POWERHEAD GROUP
40903R 1969	POWERHEAD GROUP
40952R 1969	POWERHEAD GROUP
40953R 1969	POWERHEAD GROUP
40972R 1969	POWERHEAD GROUP ELECTRIC SHIFT
40973R 1969	POWERHEAD GROUP ELECTRIC SHIFT
40E69R 1969	POWERHEAD GROUP ELECTRIC START
40E70A 1970	POWERHEAD GROUP
40E71B 1971	CYLINDER & CRANKCASE
40E71G 1971	CYLINDER & CRANKCASE
40E72E 1972	CYLINDER & CRANKCASE
40E73D 1973	CYLINDER & CRANKCASE
40EL69R 1969	POWERHEAD GROUP ELECTRIC START
40EL70A 1970	POWERHEAD GROUP
40EL71B 1971	CYLINDER & CRANKCASE
40EL71G 1971	CYLINDER & CRANKCASE
40EL72E 1972	CYLINDER & CRANKCASE
40EL73D 1973	CYLINDER & CRANKCASE
40ES69R 1969	POWERHEAD GROUP ELECTRIC SHIFT
40ES70A 1970	POWERHEAD GROUP ELECTRIC SHIFT
40ESL69R 1969	POWERHEAD GROUP ELECTRIC SHIFT
40ESL70A 1970	POWERHEAD GROUP ELECTRIC SHIFT
40R69R 1969	POWERHEAD GROUP

40R70A 1970	POWERHEAD GROUP
40R71B 1971	CYLINDER & CRANKCASE
40R71G 1971	CYLINDER & CRANKCASE
40R72E 1972	CYLINDER & CRANKCASE
40R73D 1973	CYLINDER & CRANKCASE
40RL69R 1969	POWERHEAD GROUP
40RL70A 1970	POWERHEAD GROUP
40RL71B 1971	CYLINDER & CRANKCASE
40RL71G 1971	CYLINDER & CRANKCASE
40RL72E 1972	CYLINDER & CRANKCASE
40RL73D 1973	CYLINDER & CRANKCASE
4902B 1969	POWERHEAD GROUP
4906B 1969	POWERHEAD GROUP
4936B 1969	POWERHEAD GROUP
4R69B 1969	POWERHEAD GROUP
4R70E 1970	POWERHEAD GROUP
4RL70E 1970	POWERHEAD GROUP
4W69B 1969	POWERHEAD GROUP
4W70E 1970	POWERHEAD GROUP
4WF69B 1969	POWERHEAD GROUP
4WL70E 1970	POWERHEAD GROUP
5802B 1968	POWERHEAD GROUP
5802E 1968	POWERHEAD GROUP
5802M 1968	POWERHEAD GROUP
5803B 1968	POWERHEAD GROUP
5803E 1968	POWERHEAD GROUP
5803M 1968	POWERHEAD GROUP
6002B 1970	POWERHEAD GROUP
6003B 1970	POWERHEAD GROUP
6802A 1968	POWERHEAD GROUP
6802C 1968	POWERHEAD GROUP
6802R 1968	POWERHEAD GROUP
6803A 1968	POWERHEAD GROUP
6803C 1968	POWERHEAD GROUP
6803R 1968	POWERHEAD GROUP

6902M 1969	POWERHEAD GROUP
6903M 1969	POWERHEAD GROUP
6R69M 1969	POWERHEAD GROUP
6R70B 1970	POWERHEAD GROUP
6RL69M 1969	POWERHEAD GROUP
6RL70B 1970	POWERHEAD GROUP
9022A 1970	POWER HEAD AND STARTER GROUP
9022C 1970	POWER HEAD AND STARTER GROUP
9023A 1970	POWER HEAD AND STARTER GROUP
9023C 1970	POWER HEAD AND STARTER GROUP
9122R 1971	CYLINDER & CRANKCASE
9123R 1971	CYLINDER & CRANKCASE
9222M 1972	CYLINDER & CRANKCASE
9223M 1972	CYLINDER & CRANKCASE
9322B 1973	CYLINDER & CRANKCASE
9323B 1973	CYLINDER & CRANKCASE
9822D 1968	POWERHEAD AND STARTER GROUP
9822E 1968	POWERHEAD AND STARTER GROUP
9823D 1968	POWERHEAD AND STARTER GROUP
9823E 1968	POWERHEAD AND STARTER GROUP
9922S 1969	POWERHEAD AND STARTER GROUP
9923S 1969	POWERHEAD AND STARTER GROUP
9R69S 1969	POWERHEAD AND STARTER GROUP
9R70A 1970	POWERHEAD AND STARTER GROUP
9R70C 1970	POWERHEAD AND STARTER GROUP
9R71R 1971	CYLINDER & CRANKCASE
9R72M 1972	CYLINDER & CRANKCASE
9R73B 1973	CYLINDER & CRANKCASE
9RL69S 1969	POWERHEAD AND STARTER GROUP
9RL70A 1970	POWERHEAD AND STARTER GROUP
9RL70C 1970	POWERHEAD AND STARTER GROUP
9RL71R 1971	CYLINDER & CRANKCASE
9RL72M 1972	CYLINDER & CRANKCASE
9RL73B 1973	CYLINDER & CRANKCASE
CD-25A 1968	POWERHEAD GROUP

CD-25C 1968	POWERHEAD GROUP
CD-25R 1968	POWERHEAD GROUP
CDL-25A 1968	POWERHEAD GROUP
CDL-25C 1968	POWERHEAD GROUP
CDL-25R 1968	POWERHEAD GROUP
DU-15S 1968	POWERHEAD GROUP
DUE-15F 1968	POWERHEAD GROUP
DUE-15S 1968	POWERHEAD GROUP
FD-22A 1968	POWERHEAD GROUP
FD-22E 1968	POWERHEAD GROUP
FD-22M 1968	POWERHEAD GROUP
FDL-22A 1968	POWERHEAD GROUP
FDL-22E 1968	POWERHEAD GROUP
FDL-22M 1968	POWERHEAD GROUP
JH-23A 1968	POWERHEAD GROUP
JH-23M 1968	POWERHEAD GROUP
JHF-23A 1968	POWERHEAD GROUP
JHF-23M 1968	POWERHEAD GROUP
JHFL-23A 1968	POWERHEAD GROUP
JHFL-23M 1968	POWERHEAD GROUP
JHL-23A 1968	POWERHEAD GROUP
JHL-23M 1968	POWERHEAD GROUP
JW-23A 1968	POWERHEAD GROUP
JW-23M 1968	POWERHEAD GROUP
JWF-23A 1968	POWERHEAD GROUP
JWF-23M 1968	POWERHEAD GROUP
JWFL-23A 1968	POWERHEAD GROUP
JWFL-23M 1968	POWERHEAD GROUP
JWL-23A 1968	POWERHEAD GROUP
JWL-23M 1968	POWERHEAD GROUP
LD-13B 1968	POWERHEAD GROUP
LD-13E 1968	POWERHEAD GROUP
LD-13M 1968	POWERHEAD GROUP
LDL-13B 1968	POWERHEAD GROUP
LDL-13E 1968	POWERHEAD GROUP

LDL-13M 1968	POWERHEAD GROUP
MQ-14D 1968	POWERHEAD AND STARTER GROUP
MQ-14E 1968	POWERHEAD AND STARTER GROUP
MQL-14D 1968	POWERHEAD AND STARTER GROUP
MQL-14E 1968	POWERHEAD AND STARTER GROUP
RD-30A 1968	POWERHEAD GROUP MANUAL START
RD-30D 1968	POWERHEAD GROUP MANUAL START
RD-30S 1968	POWERHEAD GROUP MANUAL START
RDL-30A 1968	POWERHEAD GROUP MANUAL START
RDL-30D 1968	POWERHEAD GROUP MANUAL START
RDL-30S 1968	POWERHEAD GROUP MANUAL START
RDS-30A 1968	POWERHEAD GROUP
RDS-30C 1968	POWERHEAD GROUP
RDS-30D 1968	POWERHEAD GROUP
RDS-30S 1968	POWERHEAD GROUP
RDSL-30A 1968	POWERHEAD GROUP
RDSL-30C 1968	POWERHEAD GROUP
RDSL-30D 1968	POWERHEAD GROUP
RDSL-30S 1968	POWERHEAD GROUP
RK-30A 1968	POWERHEAD GROUP ELECTRIC SHIFT
RK-30C 1968	POWERHEAD GROUP ELECTRIC SHIFT
RK-30D 1968	POWERHEAD GROUP ELECTRIC SHIFT
RKL-30A 1968	POWERHEAD GROUP ELECTRIC SHIFT
RKL-30C 1968	POWERHEAD GROUP ELECTRIC SHIFT
RKL-30D 1968	POWERHEAD GROUP ELECTRIC SHIFT
RX-16M 1968	POWER HEAD GROUP ELECTRIC START
RX-16M 1968	POWER HEAD GROUP MANUAL START
RX-16R 1968	POWER HEAD GROUP ELECTRIC START
RX-16R 1968	POWER HEAD GROUP MANUAL START
RXE-16M 1968	POWER HEAD GROUP ELECTRIC START
RXE-16M 1968	POWER HEAD GROUP MANUAL START
RXE-16R 1968	POWER HEAD GROUP ELECTRIC START
RXE-16R 1968	POWER HEAD GROUP MANUAL START
RXEL-16M 1968	POWER HEAD GROUP ELECTRIC START
RXEL-16M 1968	POWER HEAD GROUP MANUAL START

RXEL-16R 1968	POWER HEAD GROUP ELECTRIC START
RXEL-16R 1968	POWER HEAD GROUP MANUAL START
RXL-16M 1968	POWER HEAD GROUP ELECTRIC START
RXL-16M 1968	POWER HEAD GROUP MANUAL START
RXL-16R 1968	POWER HEAD GROUP ELECTRIC START
RXL-16R 1968	POWER HEAD GROUP MANUAL START
SC-10S 1968	POWERHEAD GROUP