

Where Used: Part Number 0379504

Model Name	Diagram
100193A 1971	GEARCASE
100193C 1971	GEARCASE
100293R 1972	GEARCASE
100882B 1968	GEARCASE GROUP
100883B 1968	GEARCASE GROUP
100990S 1979	GEARCASE
100993S 1979	GEARCASE
100999S 1979	GEARCASE
100ESL71A 1971	GEARCASE
100ESL71C 1971	GEARCASE
100ESL72R 1972	GEARCASE
100ML79S 1979	GEARCASE
100TLR79S 1979	GEARCASE
100TXLR79S 1979	GEARCASE
115393M 1973	GEARCASE
115493B 1974	GEARCASE GROUP
115593 1975	GEARCASE
115693D 1976	GEARCASE
115693G 1976	GEARCASE
115699D 1976	GEARCASE
115699G 1976	GEARCASE
115790S 1977	GEARCASE
115793S 1977	GEARCASE
115799S 1977	GEARCASE
115890C 1978	GEARCASE
115893C 1978	GEARCASE
115899C 1978	GEARCASE
115990R 1979	GEARCASE
115993R 1979	GEARCASE
115999R 1979	GEARCASE
115EL77S 1977	GEARCASE
115ESL73M 1973	GEARCASE
115ESL74B 1974	GEARCASE

115ESL75E 1975	GEARCASE
115ETL74B 1974	GEARCASE
115ETL75E 1975	GEARCASE
115ETL77 1977	GEARCASE
115ETZ78C 1978	GEARCASE
115ML78C 1978	GEARCASE
115ML79R 1979	GEARCASE
115TL79R 1979	GEARCASE
115TXL77S 1977	GEARCASE
115TXL78C 1978	GEARCASE
115TXL79R 1979	GEARCASE
120FTHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
120FTHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
125183C 1971	GEARCASE
125283R 1972	GEARCASE
125ESL71C 1971	GEARCASE
125ESL72R 1972	GEARCASE
135383M 1973	GEARCASE
135443B 1974	GEARCASE
135483B 1974	GEARCASE
135489B 1974	GEARCASE
135543E 1975	GEARCASE
135583E 1975	GEARCASE
135589E 1975	GEARCASE
135643D 1976	GEARCASE
135643G 1976	GEARCASE
135683D 1976	GEARCASE
135683G 1976	GEARCASE
135ESL73M 1973	GEARCASE
135ESL74B 1974	GEARCASE
135ESL75E 1975	GEARCASE
135ETL74B 1974	GEARCASE
135ETL75E 1975	GEARCASE
140740S 1977	GEARCASE
140743S 1977	GEARCASE

140783S 1977	GEARCASE
140840C 1978	GEARCASE
140843C 1978	GEARCASE
140883C 1978	GEARCASE
140940R 1979	GEARCASE
140943R 1979	GEARCASE
140983R 1979	GEARCASE
140FTHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140FTHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140ML77S 1977	GEARCASE
140ML78C 1978	GEARCASE
140ML79R 1979	GEARCASE
140SPHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140SPHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140STHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140STHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140TL77S 1977	GEARCASE
140TL78C 1978	GEARCASE
140TL79R 1979	GEARCASE
140TX78C 1978	GEARCASE
140TXL77S 1977	GEARCASE
140TXL79R 1979	GEARCASE
232AMFTC 1987	LOWER GEARCASE
232AMRGDE 1988	LOWER GEARCASE
232AMRGDP 1988	LOWER GEARCASE
232APFTC 1987	LOWER GEARCASE
232APRGDE 1988	LOWER GEARCASE
232APRGDP 1988	LOWER GEARCASE
232APSRC 1987	LOWER GEARCASE
232BMRMED 1989	LOWER GEARCASE
232BMRMEF 1989	LOWER GEARCASE
232BMRPWS 1990	LOWER GEARCASE
232BPRMED 1989	LOWER GEARCASE
232BPRMEF 1989	LOWER GEARCASE
232BPRPWS 1990	LOWER GEARCASE

252AMKWB 1986	LOWER GEARCASE
252APKWB 1986	LOWER GEARCASE
252FTHRCNC 1982	LOWER GEARCASE GROUP
252FTHRCNG 1982	LOWER GEARCASE GROUP
252FTHRCOM 1985	LOWER GEARCASE GROUP
252FTHRCRA 1984	LOWER GEARCASE GROUP
252FTHRCTR 1983	LOWER GEARCASE GROUP
252STHRCNC 1982	LOWER GEARCASE GROUP
252STHRCOM 1985	LOWER GEARCASE GROUP
252STHRCRA 1984	LOWER GEARCASE GROUP
252STHRCTR 1983	LOWER GEARCASE GROUP
302AMARJ 1987	LOWER GEARCASE
302AMARY 1987	LOWER GEARCASE
302AMFTC 1987	LOWER GEARCASE
302AMKWB 1986	LOWER GEARCASE
302AMRGDP 1988	LOWER GEARCASE
302AMRMED 1989	LOWER GEARCASE
302APARY 1987	LOWER GEARCASE
302APFTC 1987	LOWER GEARCASE
302APKWB 1986	LOWER GEARCASE
302APRGDP 1988	LOWER GEARCASE
302APRMED 1989	LOWER GEARCASE
302APSRC 1987	LOWER GEARCASE
302ARSRY 1987	LOWER GEARCASE
302FPHRCNC 1982	LOWER GEARCASE GROUP
302FPHRCNG 1982	LOWER GEARCASE GROUP
302FPHRCTR 1983	LOWER GEARCASE GROUP
302FTHRCNC 1982	LOWER GEARCASE GROUP
302FTHRCNG 1982	LOWER GEARCASE GROUP
302FTHRCOM 1985	LOWER GEARCASE GROUP
302FTHRCRA 1984	LOWER GEARCASE GROUP
302FTHRCTR 1983	LOWER GEARCASE GROUP
302SPHRCNC 1982	LOWER GEARCASE GROUP
302SPHRCNG 1982	LOWER GEARCASE GROUP
302SPHRCOM 1985	LOWER GEARCASE GROUP

302SPHRCRA 1984	LOWER GEARCASE GROUP
302SPHRCTR 1983	LOWER GEARCASE GROUP
302STHRCNC 1982	LOWER GEARCASE GROUP
302STHRCNG 1982	LOWER GEARCASE GROUP
302STHRCOM 1985	LOWER GEARCASE GROUP
302STHRCRA 1984	LOWER GEARCASE GROUP
302STHRCTR 1983	LOWER GEARCASE GROUP
50172S 1971	GEARCASE
50173S 1971	GEARCASE
50202C 1972	GEARCASE 50 HP MANUAL START
50202C 1972	GEARCASE ELECTRIC START
50203C 1972	GEARCASE 50 HP MANUAL START
50203C 1972	GEARCASE ELECTRIC START
50272C 1972	GEARCASE 50 HP MANUAL START
50272C 1972	GEARCASE ELECTRIC START
50273C 1972	GEARCASE 50 HP MANUAL START
50273C 1972	GEARCASE ELECTRIC START
50302R 1973	GEARCASE MANUAL START
50302R 1973	GEARCASE ELECTRIC START
50303R 1973	GEARCASE MANUAL START
50303R 1973	GEARCASE ELECTRIC START
50372R 1973	GEARCASE MANUAL START
50372R 1973	GEARCASE ELECTRIC START
50373R 1973	GEARCASE MANUAL START
50373R 1973	GEARCASE ELECTRIC START
50442M 1974	GEARCASE
50443M 1974	GEARCASE
50472M 1974	GEARCASE
50473M 1974	GEARCASE
50902C 1979	GEARCASE ROPE START
50903C 1979	GEARCASE ROPE START
50ES71S 1971	GEARCASE
50ES72C 1972	GEARCASE 50 HP MANUAL START
50ES72C 1972	GEARCASE ELECTRIC START
50ES73R 1973	GEARCASE MANUAL START

50ES73R 1973	GEARCASE ELECTRIC START
50ES74M 1974	GEARCASE
50ESL71S 1971	GEARCASE
50ESL72C 1972	GEARCASE 50 HP MANUAL START
50ESL72C 1972	GEARCASE ELECTRIC START
50ESL73R 1973	GEARCASE MANUAL START
50ESL73R 1973	GEARCASE ELECTRIC START
50ESL74M 1974	GEARCASE
50R72C 1972	GEARCASE 50 HP MANUAL START
50R72C 1972	GEARCASE ELECTRIC START
50R73R 1973	GEARCASE MANUAL START
50R73R 1973	GEARCASE ELECTRIC START
50R79C 1979	GEARCASE, ROPE START
50RL72C 1972	GEARCASE 50 HP MANUAL START
50RL72C 1972	GEARCASE ELECTRIC START
50RL73R 1973	GEARCASE MANUAL START
50RL73R 1973	GEARCASE ELECTRIC START
50RL79C 1979	GEARCASE, ROPE START
55974C 1979	GEARCASE ROPE START
55975C 1979	GEARCASE ROPE START
55E79C 1979	GEARCASE, ROPE START
55EL79C 1979	GEARCASE, ROPE START
60172C 1971	GEARCASE
60172E 1971	GEARCASE
60173C 1971	GEARCASE
60173E 1971	GEARCASE
60ES71C 1971	GEARCASE
60ES71E 1971	GEARCASE
60ESL71C 1971	GEARCASE
60ESL71E 1971	GEARCASE
65272S 1972	GEARCASE
65273S 1972	GEARCASE
65372R 1973	GEARCASE
65373R 1973	GEARCASE
65ES72S 1972	GEARCASE

65ES73R 1973	GEARCASE
65ESL72S 1972	GEARCASE
65ESL73R 1973	GEARCASE
70442M 1974	GEARCASE
70443M 1974	GEARCASE
70472M 1974	GEARCASE
70473M 1974	GEARCASE
70572B 1975	GEARCASE FOR MODELS 70572B,70573B
70572B 1975	GEARCASE FOR MODELS 70572E,70573E
70572E 1975	GEARCASE FOR MODELS 70572B,70573B
70572E 1975	GEARCASE FOR MODELS 70572E,70573E
70573B 1975	GEARCASE FOR MODELS 70572B,70573B
70573B 1975	GEARCASE FOR MODELS 70572E,70573E
70573E 1975	GEARCASE FOR MODELS 70572B,70573B
70573E 1975	GEARCASE FOR MODELS 70572E,70573E
70673D 1976	GEARCASE
70773S 1977	GEARCASE-20"TRANSOM
70873C 1978	GEARCASE - 20" TRANSOM
70973R 1979	GEARCASE-20" TRANSOM
70EL76D 1976	GEARCASE
70EL77S 1977	GEARCASE-20"TRANSOM
70EL78C 1978	GEARCASE-20 INCH TRANSOM
70EL79R 1979	GEARCASE-20" TRANSOM
70ES74M 1974	GEARCASE
70ES75B 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ES75B 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ES75E 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ES75E 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ESL74M 1974	GEARCASE
70ESL75B 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ESL75B 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ESL75E 1975	GEARCASE FOR MODELS 70ES75B,70ESL75B
70ESL75E 1975	GEARCASE FOR MODELS 70ES75E,70ESL75E
70ESLR74M 1974	GEARCASE
75542B 1975	GEARCASE - 20" TRANSOM

75543B 1975	GEARCASE - 20" TRANSOM
75642D 1976	GEARCASE-20" TRANSOM
75643D 1976	GEARCASE-20" TRANSOM
75742S 1977	GEARCASE-20"TRANSOM
75743S 1977	GEARCASE-20"TRANSOM
75842C 1978	GEARCASE - 20" TRANSOM
75843C 1978	GEARCASE - 20" TRANSOM
75942R 1979	GEARCASE-20" TRANSOM
75943R 1979	GEARCASE-20" TRANSOM
75ELR76D 1976	GEARCASE-20" TRANSOM
75ELR77S 1977	GEARCASE-20"TRANSOM
75ELR78C 1978	GEARCASE-20 INCH TRANSOM
75ELR79R 1979	GEARCASE-20" TRANSOM
75ER76D 1976	GEARCASE-20" TRANSOM
75ER77S 1977	GEARCASE-20"TRANSOM
75ER78C 1978	GEARCASE-20 INCH TRANSOM
75ER79R 1979	GEARCASE-20" TRANSOM
75ESLR75B 1975	GEARCASE-20" TRANSOM
75ESR75B 1975	GEARCASE-20" TRANSOM
85193A 1971	GEARCASE
85193H 1971	GEARCASE
85293R 1972	GEARCASE
85393M 1973	GEARCASE
85493B 1974	GEARCASE
85593E 1975	GEARCASE
85693D 1976	GEARCASE
85693G 1976	GEARCASE
85699G 1976	GEARCASE
85790S 1977	GEARCASE
85793S 1977	GEARCASE
85799S 1977	GEARCASE
85890C 1978	GEARCASE
85895C 1978	GEARCASE
85899C 1978	GEARCASE
85990R 1979	GEARCASE

85995R 1979	GEARCASE
85999R 1979	GEARCASE
85EL76D 1976	GEARCASE
85EL76G 1976	GEARCASE
85EL77S 1977	GEARCASE
85ESL71A 1971	GEARCASE
85ESL71H 1971	GEARCASE
85ESL72R 1972	GEARCASE
85ESL73M 1973	GEARCASE
85ESL74B 1974	GEARCASE
85ESL75E 1975	GEARCASE
85ETLR76D 1976	GEARCASE
85ETLR76G 1976	GEARCASE
85ETLR77S 1977	GEARCASE
85ETLR78C 1978	GEARCASE
85ML78C 1978	GEARCASE
85ML79R 1979	GEARCASE
85TL79R 1979	GEARCASE
85TXL79R 1979	GEARCASE
85TXLR77S 1977	GEARCASE
85TXLR78C 1978	GEARCASE
990206F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990206S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990207F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990207FF 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990207R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990207R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990207S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990210F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990210R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP

990210R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990210R2 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990210S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990211A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990211A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990211A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990211F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990211M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990211R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990211R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990211R11 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990211S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990212A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990212F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990212R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990212R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990212S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990215F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990215FF 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990215R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990215R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990215S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990216F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP

990216FF 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990216R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990216R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990216S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990217F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990217FF 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990217R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990217R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990217S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990218F 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990218R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990218R1 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990218R2 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990218S 1973	LOWER GEARCASE GROUP 100, 120, 140, 165, 225 & 245 HP
990220R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990220R2 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990221R 1974	LOWER GEARCASE GROUP 120, 140, 165, 170, 190, 225 & 245 HP
990223A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990223A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990223A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990224A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990224A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990224A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP

990225A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990225A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990225A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990226A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990226A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990226A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990227A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990227A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990227A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990228A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990228A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990228A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990229A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990229A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990229A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990229E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990229G 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990229M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990230A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990230A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990230E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990230G 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990230M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP

990231A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990231A1 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990231A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990231E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990231G 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990231M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990232A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990232A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990232E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990232G 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990232M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990234E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990234E1 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990234M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990235E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990235E1 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990235M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990236E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990236E1 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990236M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990237E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990237E1 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990237M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP

990239M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990240A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990240A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990240E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990240G 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990240M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990241A 1975	LOWER GEARCASE GROUP 120,140,165,175,190,225 & 235 HP
990241A11 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990241E 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990241G 1977	LOWER GEARCASE GROUP 120,140,175,190,235 HP STERN DRIVE
990241M 1976	LOWER GEARCASE GROUP 120,140,165,175,190,225,235 HP
990242C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990242C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990242D 1978	LOWER GEARCASE
990242H 1978	LOWER GEARCASE
990242H1 1978	LOWER GEARCASE
990242S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990242S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990243C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990243C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990243D 1978	LOWER GEARCASE
990243H 1978	LOWER GEARCASE
990243H1 1978	LOWER GEARCASE
990243S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990243S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990244C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990244C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990244D 1978	LOWER GEARCASE
990244H 1978	LOWER GEARCASE
990244H1 1978	LOWER GEARCASE

990244P 1978	LOWER GEARCASE
990244S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990244S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990245C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990245C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990245D 1978	LOWER GEARCASE
990245H 1978	LOWER GEARCASE
990245H1 1978	LOWER GEARCASE
990245S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990245S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
A115DGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115DSLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHLAFH	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHLAFI	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHLAFK	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHLAFH	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHLAFI	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHLAFK	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type
AM55RSLD 1999	GEARCASE
BE115ELEDR 1996	GEARCASE - 20 IN. MODELS
BE115ELEUA 1997	GEARCASE - 20 IN. MODELS
BE115ELEUC 1997	GEARCASE - 20 IN. MODELS
BE115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BE115GLEDR 1996	GEARCASE - 20 IN. MODELS
BE115GLEUA 1997	GEARCASE - 20 IN. MODELS
BE115GLEUC 1997	GEARCASE - 20 IN. MODELS
BE115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BE115SXEDR 1996	GEARCASE - 20 IN. MODELS
BE115SXEUA 1997	GEARCASE - 20 IN. MODELS
BE115SXEUC 1997	GEARCASE - 20 IN. MODELS
BE115TLEDA 1996	GEARCASE
BE50DTLEDC 1996	GEARCASE
BE50DTLEUR 1997	GEARCASE

BE60ELED R 1996	GEARCASE
BE60ELEUA 1997	GEARCASE
BE60TLECM 1998	GEARCASE
BE60TLED R 1996	GEARCASE
BE60TLEUA 1997	GEARCASE
BE70ELECB 1998	GEARCASE
BE70ELED A 1996	GEARCASE
BE70ELEUM 1997	GEARCASE
BE70TLECB 1998	GEARCASE
BE70TLED A 1996	GEARCASE
BE70TLEUM 1997	GEARCASE
BE90ELED R 1996	GEARCASE - 20 IN. MODELS
BE90ELEUA 1997	GEARCASE - 20 IN. MODELS
BE90ELEUC 1997	GEARCASE - 20 IN. MODELS
BE90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BE90SLED R 1996	GEARCASE - 20 IN. MODELS
BE90SLEUA 1997	GEARCASE - 20 IN. MODELS
BE90SLEUC 1997	GEARCASE - 20 IN. MODELS
BE90SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BE90SXEU A 1997	GEARCASE - 20 IN. MODELS
BE90SXEU C 1997	GEARCASE - 20 IN. MODELS
BE90TLED A 1996	GEARCASE
BJ115ELED R 1996	GEARCASE - 20 IN. MODELS
BJ115ELEUA 1997	GEARCASE - 20 IN. MODELS
BJ115ELEUC 1997	GEARCASE - 20 IN. MODELS
BJ115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BJ115GLEDR 1996	GEARCASE - 20 IN. MODELS
BJ115GLEUA 1997	GEARCASE - 20 IN. MODELS
BJ115GLEUC 1997	GEARCASE - 20 IN. MODELS
BJ115PLEEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ115PLSIE elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ115PX EEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS

BJ115SXEDR 1996	GEARCASE - 20 IN. MODELS
BJ115SXEUA 1997	GEARCASE - 20 IN. MODELS
BJ115SXEUC 1997	GEARCASE - 20 IN. MODELS
BJ115TLEDA 1996	GEARCASE
BJ115VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ50DTLEDC 1996	GEARCASE
BJ50DTLEUR 1997	GEARCASE
BJ60ELEDR 1996	GEARCASE
BJ60ELEUA 1997	GEARCASE
BJ60TLECM 1998	GEARCASE
BJ60TLEDR 1996	GEARCASE
BJ60TLEUA 1997	GEARCASE
BJ70ELECB 1998	GEARCASE
BJ70ELEDA 1996	GEARCASE
BJ70ELEUM 1997	GEARCASE
BJ70PLEEE 1999	GEARCASE
BJ70PLSIS elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE
BJ70PLSSD Elec Start, TNT, 20 IN. shaft 2000	GEARCASE
BJ70TLECB 1998	GEARCASE
BJ70TLEDA 1996	GEARCASE
BJ70TLEUM 1997	GEARCASE
BJ90ELEDR 1996	GEARCASE - 20 IN. MODELS
BJ90ELEUA 1997	GEARCASE - 20 IN. MODELS
BJ90ELEUC 1997	GEARCASE - 20 IN. MODELS
BJ90PLEEB 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ90PLSID elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90PXEEB 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ90PXSSE Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BJ90SLEDR 1996	GEARCASE - 20 IN. MODELS
BJ90SLEUA 1997	GEARCASE - 20 IN. MODELS
BJ90SLEUC 1997	GEARCASE - 20 IN. MODELS
BJ90SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS

BJ90SXEU 1997	GEARCASE - 20 IN. MODELS
BJ90SXEU 1997	GEARCASE - 20 IN. MODELS
BJ90TLEDA 1996	GEARCASE
BJ90VLSIC elec start, TNT, 20 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90VXSIS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
CU-16C 1968	LOWER GEARCASE GROUP
CUE-16C 1968	LOWER GEARCASE GROUP
CUFM-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUFM-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUFM-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUFM-69B 1969	LOWER GEARCASE GROUP 120,155,210 HP
CUFM-69B 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUFM-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
CUFR-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUFR-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUFR-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUFR-69B 1969	LOWER GEARCASE GROUP 120,155,210 HP
CUFR-69B 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUFR-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
CUTM-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUTM-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUTM-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUTM-69B 1969	LOWER GEARCASE GROUP 120,155,210 HP
CUTM-69B 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUTM-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
CUTR-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUTR-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUTR-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
CUTR-69B 1969	LOWER GEARCASE GROUP 120,155,210 HP
CUTR-69B 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
CUTR-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
E100FPLSOC	GEARCASE - FPL, FSL MODELS
E100FPLSOC - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E100FPLSRS	GEARCASE - FPL, FSL MODELS

E100FPLSRS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E100FSLSOC	GEARCASE - FPL, FSL MODELS
E100FSLSOC - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E100FSLSRS	GEARCASE - FPL, FSL MODELS
E100FSLSRS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E100MLCSC 1980	GEARCASE
E100STLCCA 1988	GEARCASE
E100STLCEM 1989	GEARCASE
E100STLEIE 1991	GEARCASE
E100STLEND 1992	GEARCASE
E100STLERC 1994	GEARCASE
E100STLESB 1990	GEARCASE
E100STLETS 1993	GEARCASE
E100TLCSC 1980	GEARCASE
E100TXCSC 1980	GEARCASE
E100WQLECS 1998	GEARCASE -- 100WQL MODELS
E100WQXECS 1998	GEARCASE -- 100WQL MODELS
E110MLCCA 1988	GEARCASE
E110MLCDC 1986	GEARCASE
E110MLCEM 1989	GEARCASE
E110MLCUR 1987	GEARCASE
E110TLCCA 1988	GEARCASE
E110TLCDC 1986	GEARCASE
E110TLCDF 1986	GEARCASE
E110TLCEM 1989	GEARCASE
E110TLCUR 1987	GEARCASE
E110TXCCA 1988	GEARCASE
E110TXCEM 1989	GEARCASE
E110TXCUR 1987	GEARCASE
E112TSLEDR 1996	GEARCASE
E112TSLEOC 1995	GEARCASE
E112TSLERS 1994	GEARCASE
E112TSXEDR 1996	GEARCASE
E112TSXEOC 1995	GEARCASE
E112TSXERS 1994	GEARCASE

E115DGLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFH	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFI	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFK	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DHLAAA	07-1_GEARCASE, S2-Type
E115DHLAAB	07-1_GEARCASE, S2-Type
E115DHLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DHLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DHLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DHLIIR	GEARCASE, S2-Type
E115DHLIIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DHLINA	GEARCASE, S2-Type
E115DHLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DHLISC	GEARCASE
E115DHLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DHLISF	GEARCASE
E115DHLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DHLSES	GEARCASE
E115DHLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLAAA	07-1_GEARCASE, S2-Type
E115DPLAAB	07-1_GEARCASE, S2-Type
E115DPLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DPLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DPLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DPLIIB	GEARCASE, S2-Type
E115DPLIIB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLINE	GEARCASE, S2-Type
E115DPLINE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLISF	GEARCASE
E115DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLISM	GEARCASE
E115DPLISM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2

E115DPLSCR	GEARCASE
E115DPLSCR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLSEF	GEARCASE
E115DPLSEF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLSUC	GEARCASE
E115DPLSUC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E115DSLAAA	07-1_GEARCASE, S2-Type
E115DSLAAAB	07-1_GEARCASE, S2-Type
E115DSLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DSLafa	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DSLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLaff	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFH	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLafi	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFK	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLafL	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLIIb	GEARCASE, S2-Type
E115DSLIIb - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLInE	GEARCASE, S2-Type
E115DSLInE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLISF	GEARCASE
E115DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLISM	GEARCASE
E115DSLISM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLSCR	GEARCASE
E115DSLSCR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLSEF	GEARCASE
E115DSLSEF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DLSUC	GEARCASE
E115DLSUC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E115ELECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115ELEDR 1996	GEARCASE - 20 IN. MODELS
E115ELEOC 1995	GEARCASE - 20 IN. MODELS
E115ELEUA 1997	GEARCASE - 20 IN. MODELS

E115ELEUC 1997	GEARCASE - 20 IN. MODELS
E115FPLEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FPLEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FPLSDS	GEARCASE - PL, SL MODELS
E115FPLSDS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E115FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E115FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E115FPLSOD	GEARCASE - FPL, FSL MODELS
E115FPLSOD - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E115FPLSRE	GEARCASE - FPL, FSL MODELS
E115FPLSRE - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPLSTB	GEARCASE - FPL, FSL MODELS
E115FPLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FPXEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FPXEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FPXSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E115FPXSNF Ficht Fuel Injection, 25 in., White, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E115FPXSSH FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPXSSR FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPXSTB	GEARCASE - FPL, FSL MODELS
E115FPXSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FSLECS 1998	GEARCASE -- FSL, FTL MODELS
E115FSLEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FSLEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FSLSDS	GEARCASE - PL, SL MODELS
E115FSLSDS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E115FSLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FSLSOD	GEARCASE - FPL, FSL MODELS
E115FSLSOD - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E115FSLSRE	GEARCASE - FPL, FSL MODELS

E115FSLSRE - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E115FSLSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FSLSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FSLSTB	GEARCASE - FPL, FSL MODELS
E115FSLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FSXECS 1998	GEARCASE -- FSL, FTL MODELS
E115FTLECS 1998	GEARCASE -- FSL, FTL MODELS
E115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115GLEDR 1996	GEARCASE - 20 IN. MODELS
E115GLEOC 1995	GEARCASE - 20 IN. MODELS
E115GLEUA 1997	GEARCASE - 20 IN. MODELS
E115GLEUC 1997	GEARCASE - 20 IN. MODELS
E115GNLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115HGLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115HGLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLAAA	07-1_GEARCASE, S2-Type
E115HSLAAB	07-1_GEARCASE, S2-Type
E115HSLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115HSLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLIIR	GEARCASE, S2-Type
E115HSLIIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLINA	GEARCASE, S2-Type
E115HSLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLISC	GEARCASE
E115HSLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLISF	GEARCASE
E115HSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLSES	GEARCASE
E115HSLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115JKLEOC 1995	GEARCASE
E115JKLERS 1994	GEARCASE
E115JLEDA 1996	GEARCASE
E115JLEIE 1991	GEARCASE

E115JLEND 1992	GEARCASE
E115JLEOR 1995	GEARCASE
E115JLERC 1994	GEARCASE
E115JLETS 1993	GEARCASE
E115JTLECS 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115MLCIH 1981	GEARCASE
E115MLCIM 1981	GEARCASE
E115MLCNB 1982	GEARCASE
E115MLCOS 1985	GEARCASE
E115MLCRD 1984	GEARCASE
E115MLCSA 1980	GEARCASE
E115MLCTE 1983	GEARCASE
E115MLEIE 1991	GEARCASE
E115MLEND 1992	GEARCASE
E115MLEOR 1995	GEARCASE
E115MLERS 1994	GEARCASE
E115MLESB 1990	GEARCASE
E115MLETS 1993	GEARCASE
E115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115SLEDR 1996	GEARCASE - 20 IN. MODELS
E115SLEOC 1995	GEARCASE - 20 IN. MODELS
E115SLEUA 1997	GEARCASE - 20 IN. MODELS
E115SLEUC 1997	GEARCASE - 20 IN. MODELS
E115SNLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115SXEDR 1996	GEARCASE - 20 IN. MODELS
E115SXEOC 1995	GEARCASE - 20 IN. MODELS
E115SXEUUA 1997	GEARCASE - 20 IN. MODELS
E115SXEUUC 1997	GEARCASE - 20 IN. MODELS
E115TLCIH 1981	GEARCASE
E115TLCIM 1981	GEARCASE
E115TLCNB 1982	GEARCASE
E115TLCOS 1985	GEARCASE
E115TLCRD 1984	GEARCASE
E115TLCSA 1980	GEARCASE

E115TLCTE 1983	GEARCASE
E115TLEDA 1996	GEARCASE
E115TLEIE 1991	GEARCASE
E115TLEND 1992	GEARCASE
E115TLEOR 1995	GEARCASE
E115TLERC 1994	GEARCASE
E115TLESB 1990	GEARCASE
E115TLETS 1993	GEARCASE
E115TSLECM 1998	GEARCASE
E115TSLEUA 1997	GEARCASE
E115TSXECM 1998	GEARCASE
E115TSXEUA 1997	GEARCASE
E115TXADA 1996	GEARCASE
E115TXAOR 1995	GEARCASE
E115TXARS 1994	GEARCASE
E115TXATS 1993	GEARCASE
E115TXCIH 1981	GEARCASE
E115TXCIM 1981	GEARCASE
E115TXCNB 1982	GEARCASE
E115TXCRD 1984	GEARCASE
E115TXCSA 1980	GEARCASE
E115TXCTE 1983	GEARCASE
E115TXEIE 1991	GEARCASE
E115TXEND 1992	GEARCASE
E115TXESB 1990	GEARCASE
E120TLCCA 1988	GEARCASE - 120TL & TX/140 TL
E120TLCDC 1986	GEARCASE
E120TLCEM 1989	GEARCASE - 120TL & TX/140 TL
E120TLCUR 1987	GEARCASE
E120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
E120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E120TLERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TLESB 1990	GEARCASE - 120TL & TX/140 TL
E120TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY

E120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXCCA 1988	GEARCASE - 120TL & TX/140 TL
E120TXCDC 1986	GEARCASE
E120TXCEM 1989	GEARCASE - 120TL & TX/140 TL
E120TXCUR 1987	GEARCASE
E120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
E120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E120TXERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXESB 1990	GEARCASE - 120TL & TX/140 TL
E120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E125ESXENR 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E125ESXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E125ESXESS 1990	GEARCASE - ESX MODELS ONLY
E125ESXETA 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E125ESXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E125ESXW 1989	GEARCASE - ESX MODELS ONLY
E130DGLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFL	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DPLAAA	07-1_GEARCASE, S2-Type
E130DPLAAB	07-1_GEARCASE, S2-Type
E130DPLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DPLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type

E130DPLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DPLIIR	GEARCASE, S2-Type
E130DPLIIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLINA	GEARCASE, S2-Type
E130DPLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLISC	GEARCASE
E130DPLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLISF	GEARCASE
E130DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLSES	GEARCASE
E130DPLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLAAA	07-1_GEARCASE, S2-Type
E130DSLAAAB	07-1_GEARCASE, S2-Type
E130DSLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLafa	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLaff	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFL	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLIIR	GEARCASE, S2-Type
E130DSLIIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLINA	GEARCASE, S2-Type
E130DSLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLISC	GEARCASE
E130DSLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLISF	GEARCASE
E130DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLSES	GEARCASE
E130DSLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E140CXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY

E140CXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140CXCCS 1988	GEARCASE - 120TL & TX/140 TL
E140CXCEC 1989	GEARCASE - 120TL & TX/140 TL
E140CXEIA 1991	GEARCASE - 120TL & TX/140 TL
E140CXENM 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E140CXERE 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXESR 1990	GEARCASE - 120TL & TX/140 TL
E140CXETB 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140CXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140MLCIH 1981	GEARCASE
E140MLCIM 1981	GEARCASE
E140MLCNB 1982	GEARCASE
E140MLCSA 1980	GEARCASE
E140MLCTE 1983	GEARCASE
E140TLATC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TLCCM 1988	GEARCASE - 120TL & TX/140 TL
E140TLCDC 1986	GEARCASE
E140TLCEB 1989	GEARCASE - 120TL & TX/140 TL
E140TLCRD 1984	GEARCASE
E140TLCUA 1987	GEARCASE
E140TLEID 1991	GEARCASE - 120TL & TX/140 TL
E140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E140TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TLERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TLESE 1990	GEARCASE - 120TL & TX/140 TL
E140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TRLCIH 1981	GEARCASE
E140TRLCIM 1981	GEARCASE
E140TRLCNB 1982	GEARCASE

E140TRLCSA 1980	GEARCASE
E140TRLCTE 1983	GEARCASE
E140TRXCIH 1981	GEARCASE
E140TRXCIM 1981	GEARCASE
E140TRXCNB 1982	GEARCASE
E140TRXCSA 1980	GEARCASE
E140TRXCTE 1983	GEARCASE
E140TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TXCCM 1988	GEARCASE - 120TL & TX/140 TL
E140TXCDC 1986	GEARCASE
E140TXCEB 1989	GEARCASE - 120TL & TX/140 TL
E140TXCRD 1984	GEARCASE
E140TXCUA 1987	GEARCASE
E140TXEID 1991	GEARCASE - 120TL & TX/140 TL
E140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E140TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXESE 1990	GEARCASE - 120TL & TX/140 TL
E140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E40AELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ARLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ATLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40DELSDA	GEARCASE
E40DELSDA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DELSOR	GEARCASE
E40DELSOR - FR	07-1_BOÎTIER D'ENGRENAGES
E40DELSRC	GEARCASE
E40DELSRC - FR	07-1_BOÎTIER D'ENGRENAGES
E40DGTLAGA	07-1_GEARCASE, F-Type

E40DGTLAGB	07-1_GEARCASE, F-Type
E40DGTLAGC	07-1_GEARCASE, F-Type
E40DGTLAGD	07-1_GEARCASE, F-Type
E40DGTLAGF	07-1_GEARCASE, F-Type
E40DGTLAGG	07-1_GEARCASE, F-Type
E40DHGLAGA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHGLAGB - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHGLAGC - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHGLAGD - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHGLAGF - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHGLAGG - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLAAA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLABA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLAFA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLAFB - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLAGA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLAGB - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLAGC - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHLINS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DHLINS - ITALY ONLY	GEARCASE, F-Type
E40DHSLAAA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLABA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAFA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAFB - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAGA - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAGB - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAGC - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAGD - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAGF - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLAGG - ITALY ONLY	07-1_GEARCASE, F-Type
E40DHSLINS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DHSLINS - ITALY ONLY	GEARCASE, F-Type
E40DPGLAGA	07-1_GEARCASE, F-Type
E40DPGLAGB	07-1_GEARCASE, F-Type
E40DPGLAGC	07-1_GEARCASE, F-Type

E40DPGLAGD	07-1_GEARCASE, F-Type
E40DPGLAGF	07-1_GEARCASE, F-Type
E40DPGLAGG	07-1_GEARCASE, F-Type
E40DPLAAA	07-1_GEARCASE, F-Type
E40DPLABA	07-1_GEARCASE, F-Type
E40DPLAFA	07-1_GEARCASE, F-Type
E40DPLAFB	07-1_GEARCASE, F-Type
E40DPLAGA	07-1_GEARCASE, F-Type
E40DPLIIS	GEARCASE, F-Type
E40DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DPLINC	GEARCASE, F-Type
E40DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DPLISD	GEARCASE
E40DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DPLISF	GEARCASE
E40DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DPLSCB	GEARCASE
E40DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DPLSDA	GEARCASE
E40DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DPLSEE	GEARCASE
E40DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DPLSOR	GEARCASE
E40DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES
E40DPLSRC	GEARCASE
E40DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES
E40DPLSUM	GEARCASE
E40DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRGLAGA	07-1_GEARCASE, F-Type
E40DRGLAGB	07-1_GEARCASE, F-Type
E40DRGLAGC	07-1_GEARCASE, F-Type
E40DRGLAGD	07-1_GEARCASE, F-Type
E40DRGLAGF	07-1_GEARCASE, F-Type
E40DRGLAGG	07-1_GEARCASE, F-Type
E40DRLAAA	07-1_GEARCASE, F-Type

E40DRLABA	07-1_GEARCASE, F-Type
E40DRLAFA	07-1_GEARCASE, F-Type
E40DRLAFB	07-1_GEARCASE, F-Type
E40DRLAGA	07-1_GEARCASE, F-Type
E40DRLIIS	GEARCASE, F-Type
E40DRLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRLINC	GEARCASE, F-Type
E40DRLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRLISD	GEARCASE
E40DRLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRLISF	GEARCASE
E40DRLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRLSCB	GEARCASE
E40DRLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRLSDA	GEARCASE
E40DRLSDA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRLSEE	GEARCASE
E40DRLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRLSOR	GEARCASE
E40DRLSOR - FR	07-1_BOÎTIER D'ENGRENAGES
E40DRLSRC	GEARCASE
E40DRLSRC - FR	07-1_BOÎTIER D'ENGRENAGES
E40DRLSUM	GEARCASE
E40DRLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DRMLABA	07-1_GEARCASE, F-Type
E40DRMLAGA	07-1_GEARCASE, F-Type
E40DRMLAGB	07-1_GEARCASE, F-Type
E40DRMLAGC	07-1_GEARCASE, F-Type
E40DRMLAGD	07-1_GEARCASE, F-Type
E40DRMLAGF	07-1_GEARCASE, F-Type
E40DRMLAGG	07-1_GEARCASE, F-Type
E40DSLAAA	07-1_GEARCASE, F-Type
E40DSLABA	07-1_GEARCASE, F-Type
E40DSLAFB	07-1_GEARCASE, F-Type
E40DSLAFB	07-1_GEARCASE, F-Type

E40DSLAGA	07-1_GEARCASE, F-Type
E40DSLAGB	07-1_GEARCASE, F-Type
E40DSLAGC	07-1_GEARCASE, F-Type
E40DSLAGD	07-1_GEARCASE, F-Type
E40DSLAGF	07-1_GEARCASE, F-Type
E40DSLAGG	07-1_GEARCASE, F-Type
E40DSLIIA	GEARCASE, F-Type
E40DSLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DSLINM	GEARCASE, F-Type
E40DSLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DSLISF	GEARCASE
E40DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DSLISR	GEARCASE
E40DSLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DSLSCS	GEARCASE
E40DSLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DSLSEC	GEARCASE
E40DSLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DTLAAA	07-1_GEARCASE, F-Type
E40DTLABA	07-1_GEARCASE, F-Type
E40DTLAFA	07-1_GEARCASE, F-Type
E40DTLAFB	07-1_GEARCASE, F-Type
E40DTLAGA	07-1_GEARCASE, F-Type
E40DTLIIA	GEARCASE, F-Type
E40DTLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DTLINM	GEARCASE, F-Type
E40DTLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DTLISF	GEARCASE
E40DTLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DTLISR	GEARCASE
E40DTLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DTLSCS	GEARCASE
E40DTLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E40DTLSEC	GEARCASE
E40DTLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F

E40ECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40RCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40RLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TTLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40WREES 1999	GEARCASE
E40WRLEES 1999	GEARCASE
E40WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
E40WRLSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E40WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
E40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E40WRYEES 1999	GEARCASE
E40WRY SIR commercial, rope start, 25 in shaft 2001	GEARCASE
E40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
E45RCCDS 1986	GEARCASE
E45RCCUC 1987	GEARCASE
E45RCE 1989	GEARCASE
E45RCEIA 1991	GEARCASE
E45RCENM 1992	GEARCASE
E45RCEOD 1995	GEARCASE
E45RCERE 1994	GEARCASE
E45RCESR 1990	GEARCASE
E45RCETB 1993	GEARCASE
E45RCLCDS 1986	GEARCASE
E45RCLCUC 1987	GEARCASE
E45RCLE 1989	GEARCASE
E45RCLEDS 1996	GEARCASE
E45RCLEIA 1991	GEARCASE
E45RCLENM 1992	GEARCASE
E45RCLEOD 1995	GEARCASE
E45RCLERE 1994	GEARCASE

E45RCLESR 1990	GEARCASE
E45RCLETB 1993	GEARCASE
E45RCLEUC 1997	GEARCASE
E45WMLE 1989	GEARCASE
E45WMLEIA 1991	GEARCASE
E45WMLENM 1992	GEARCASE
E45WMLESR 1990	GEARCASE
E50BECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50BECIC 1981	GEARCASE, ROPE START
E50BELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50BELCIC 1981	GEARCASE, ROPE START
E50DGTLAGA	07-1_GEARCASE, F-Type
E50DGTLAGB	07-1_GEARCASE, F-Type
E50DGTLAGC	07-1_GEARCASE, F-Type
E50DGTLAGD	07-1_GEARCASE, F-Type
E50DGTLAGF	07-1_GEARCASE, F-Type
E50DGTLAGG	07-1_GEARCASE, F-Type
E50DPGLAGA	07-1_GEARCASE, F-Type
E50DPGLAGB	07-1_GEARCASE, F-Type
E50DPGLAGC	07-1_GEARCASE, F-Type
E50DPGLAGD	07-1_GEARCASE, F-Type
E50DPGLAGF	07-1_GEARCASE, F-Type
E50DPGLAGG	07-1_GEARCASE, F-Type
E50DPLAAA	07-1_GEARCASE, F-Type
E50DPLABA	07-1_GEARCASE, F-Type
E50DPLAFA	07-1_GEARCASE, F-Type
E50DPLAFB	07-1_GEARCASE, F-Type
E50DPLAGA	07-1_GEARCASE, F-Type
E50DPLIIS	GEARCASE, F-Type
E50DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DPLINC	GEARCASE, F-Type
E50DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DPLISD	GEARCASE
E50DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DPLISF	GEARCASE

E50DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DPLSCB	GEARCASE
E50DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DPLSDA	GEARCASE
E50DPLSEE	GEARCASE
E50DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DPLSOR	GEARCASE
E50DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES
E50DPLSRC	GEARCASE
E50DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES
E50DPLSUM	GEARCASE
E50DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DRMLAFA	07-1_GEARCASE, F-Type
E50DRMLAFB	07-1_GEARCASE, F-Type
E50DSLAAA	07-1_GEARCASE, F-Type
E50DSLABA	07-1_GEARCASE, F-Type
E50DSLafa	07-1_GEARCASE, F-Type
E50DSLAFB	07-1_GEARCASE, F-Type
E50DSLAGA	07-1_GEARCASE, F-Type
E50DSL AGB	07-1_GEARCASE, F-Type
E50DSL AGC	07-1_GEARCASE, F-Type
E50DSL AGD	07-1_GEARCASE, F-Type
E50DSL AGF	07-1_GEARCASE, F-Type
E50DSL AGG	07-1_GEARCASE, F-Type
E50DSLIIA	GEARCASE, F-Type
E50DSLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DSLINM	GEARCASE, F-Type
E50DSLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DSLISF	GEARCASE
E50DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DSLISR	GEARCASE
E50DSLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DSLSCS	GEARCASE
E50DSLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DSLSEC	GEARCASE

E50DSLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DTLAAA	07-1_GEARCASE, F-Type
E50DTLABA	07-1_GEARCASE, F-Type
E50DTLAFA	07-1_GEARCASE, F-Type
E50DTLAFB	07-1_GEARCASE, F-Type
E50DTLAGA	07-1_GEARCASE, F-Type
E50DTLECA 1998	GEARCASE
E50DTLEDC 1996	GEARCASE
E50DTLEOS 1995	GEARCASE
E50DTLEUR 1997	GEARCASE
E50DTLIIA	GEARCASE, F-Type
E50DTLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DTLINM	GEARCASE, F-Type
E50DTLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DTLISF	GEARCASE
E50DTLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DTLISR	GEARCASE
E50DTLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DTLSCS	GEARCASE
E50DTLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50DTLSEC	GEARCASE
E50DTLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E50ELED 1996	GEARCASE
E50ELEOS 1995	GEARCASE
E50ELEUR 1997	GEARCASE
E50TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50TTLECA 1998	GEARCASE
E50TTLEDC 1996	GEARCASE
E50TTLEOS 1995	GEARCASE
E50TTLEUR 1997	GEARCASE
E55MJRLAAA	07-1_GEARCASE, F-Type (MJRL)
E55MJRLABA	07-1_GEARCASE, F-Type (MJRL)
E55MJRLABB	07-1_GEARCASE, F-Type (MJRL)
E55MJRLABF	07-1_GEARCASE, F-Type (MJRL)

E55MJRLAFA	07-1_GEARCASE, F-Type (MJRL)
E55MJRLAFB	07-1_GEARCASE, F-Type (MJRL)
E55MJRLAFC	07-1_GEARCASE, F-Type (MJRL)
E55MJRLAFD	07-1_GEARCASE, F-Type (MJRL)
E55MJRLAFF	07-1_GEARCASE, F-Type (MJRL)
E55MJRLIIM	GEARCASE, F-Type (MJRL)
E55MJRLIIM - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL
E55MJRLINB	GEARCASE, F-Type (MJRL)
E55MJRLINB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL
E55MJRLISA	GEARCASE
E55MJRLISA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL
E55MJRLSCC	GEARCASE
E55MJRLSCC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL
E55MJRLSEF	GEARCASE
E55MJRLSEF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL
E55MJRLSER	GEARCASE
E55MJRLSER - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MJRL
E55MRLAAA	07-1_GEARCASE, F-Type (MRL)
E55MRLABA	07-1_GEARCASE, F-Type (MRL)
E55MRLABB	07-1_GEARCASE, F-Type (MRL)
E55MRLABF	07-1_GEARCASE, F-Type (MRL)
E55MRLAFA	07-1_GEARCASE, F-Type (MRL)
E55MRLAFB	07-1_GEARCASE, F-Type (MRL)
E55MRLAFC	07-1_GEARCASE, F-Type (MRL)
E55MRLAFD	07-1_GEARCASE, F-Type (MRL)
E55MRLAFF	07-1_GEARCASE, F-Type (MRL)
E55MRLIIM	GEARCASE, F-Type (MRL)
E55MRLINB	GEARCASE, F-Type (MRL)
E55MRLINB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MRL
E55MRLISA	GEARCASE
E55MRLISA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MRL
E55MRLSCC	GEARCASE
E55MRLSCC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MRL
E55MRLSEF	GEARCASE
E55MRLSEF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MRL

E55MRLSER	GEARCASE
E55MRLSER - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles MRL
E55RCIM 1981	GEARCASE, ROPE START
E55RLCSA 1980	GEARCASE, ROPE START
E55RSLC 1997	GEARCASE
E55RSLG 1995	GEARCASE
E55RSLN 1983	GEARCASE
E55RSLN-2 1983	GEARCASE
E55RSLW 1996	GEARCASE
E55RSN 1983	GEARCASE
E55RSN-2 1983	GEARCASE
E55RSYN 1983	GEARCASE
E55RSYN-2 1983	GEARCASE
E55RWLCDC 1986	GEARCASE
E55RWLCOS 1985	GEARCASE
E55RWLCRD 1984	GEARCASE
E55RWLCUC 1987	GEARCASE
E55RWLE 1989	GEARCASE
E55RWLEIA 1991	GEARCASE
E55RWLENM 1992	GEARCASE
E55RWLERE 1994	GEARCASE
E55RWLESR 1990	GEARCASE
E55RWLETB 1993	GEARCASE
E55TLCIM 1981	GEARCASE, ROPE START
E55WREES 1999	GEARCASE
E55WRLEES 1999	GEARCASE
E55WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
E55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
E55WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
E55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E55WRYEES 1999	GEARCASE
E55WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
E55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
E60DGTLAGA	07-1_GEARCASE, F-Type

E60DGTLAGB	07-1_GEARCASE, F-Type
E60DGTLAGC	07-1_GEARCASE, F-Type
E60DGTLAGD	07-1_GEARCASE, F-Type
E60DGTLAGF	07-1_GEARCASE, F-Type
E60DGTLAGG	07-1_GEARCASE, F-Type
E60DPGLAGA	07-1_GEARCASE, F-Type
E60DPGLAGB	07-1_GEARCASE, F-Type
E60DPGLAGC	07-1_GEARCASE, F-Type
E60DPGLAGD	07-1_GEARCASE, F-Type
E60DPGLAGF	07-1_GEARCASE, F-Type
E60DPGLAGG	07-1_GEARCASE, F-Type
E60DPLAAA	07-1_GEARCASE, F-Type
E60DPLABA	07-1_GEARCASE, F-Type
E60DPLAFA	07-1_GEARCASE, F-Type
E60DPLAFB	07-1_GEARCASE, F-Type
E60DPLAGA	07-1_GEARCASE, F-Type
E60DPLIIS	GEARCASE, F-Type
E60DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DPLINC	GEARCASE, F-Type
E60DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DPLISD	GEARCASE
E60DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DPLISF	GEARCASE
E60DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DPLSCB	GEARCASE
E60DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DPLSDA	GEARCASE
E60DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DPLSEE	GEARCASE
E60DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DPLSUM	GEARCASE
E60DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DSLAAA	07-1_GEARCASE, F-Type
E60DSLABA	07-1_GEARCASE, F-Type
E60DSLafa	07-1_GEARCASE, F-Type

E60DSLAFB	07-1_GEARCASE, F-Type
E60DSLAGA	07-1_GEARCASE, F-Type
E60DSLAGB	07-1_GEARCASE, F-Type
E60DSLAGC	07-1_GEARCASE, F-Type
E60DSLAGD	07-1_GEARCASE, F-Type
E60DSLAGF	07-1_GEARCASE, F-Type
E60DSLAGG	07-1_GEARCASE, F-Type
E60DSLIIA	GEARCASE, F-Type
E60DSLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DSLINM	GEARCASE, F-Type
E60DSLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DSLISF	GEARCASE
E60DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DSLISR	GEARCASE
E60DSLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DSLSCS	GEARCASE
E60DSLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DSLSEC	GEARCASE
E60DSLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DTLAAA	07-1_GEARCASE, F-Type
E60DTLABA	07-1_GEARCASE, F-Type
E60DTLAFA	07-1_GEARCASE, F-Type
E60DTLAFB	07-1_GEARCASE, F-Type
E60DTLAGA	07-1_GEARCASE, F-Type
E60DTLIIA	GEARCASE, F-Type
E60DTLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DTLINM	GEARCASE, F-Type
E60DTLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DTLISF	GEARCASE
E60DTLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DTLISR	GEARCASE
E60DTLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DTLSCS	GEARCASE
E60DTLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60DTLSEC	GEARCASE

E60DTLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E60ECIA 1981	GEARCASE, ROPE START
E60ECIH 1981	GEARCASE, ROPE START
E60ECSR 1980	GEARCASE, ROPE START
E60ELCCR 1988	GEARCASE
E60ELCDS 1986	GEARCASE - 20" MODELS
E60ELCEA 1989	GEARCASE
E60ELCIA 1981	GEARCASE, ROPE START
E60ELCIH 1981	GEARCASE, ROPE START
E60ELCSR 1980	GEARCASE, ROPE START
E60ELCUC 1987	GEARCASE - 20" MODELS
E60ELEDR 1996	GEARCASE
E60ELEIB 1991	GEARCASE
E60ELENE 1992	GEARCASE
E60ELEOC 1995	GEARCASE
E60ELERS 1994	GEARCASE
E60ELERV 1994	GEARCASE
E60ELES M 1990	GEARCASE
E60ELET D 1993	GEARCASE
E60ELEUA 1997	GEARCASE
E60HGLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HGLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HGLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HSLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HSLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HSLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60TLCCR 1988	GEARCASE
E60TLCDS 1986	GEARCASE - 20" MODELS
E60TLCEA 1989	GEARCASE
E60TLCIA 1981	GEARCASE, ROPE START
E60TLCIH 1981	GEARCASE, ROPE START
E60TLCUC 1987	GEARCASE - 20" MODELS
E60TLECM 1998	GEARCASE
E60TLEDR 1996	GEARCASE

E60TLEIB 1991	GEARCASE
E60TLENE 1992	GEARCASE
E60TLEOC 1995	GEARCASE
E60TLERS 1994	GEARCASE
E60TLERV 1994	GEARCASE
E60TLESM 1990	GEARCASE
E60TLETD 1993	GEARCASE
E60TLEUA 1997	GEARCASE
E60TTLCCR 1988	GEARCASE
E60TTLCEA 1989	GEARCASE
E60TTLECM 1998	GEARCASE
E60TTLEDR 1996	GEARCASE
E60TTLEIB 1991	GEARCASE
E60TTLENE 1992	GEARCASE
E60TTLEOC 1995	GEARCASE
E60TTLERS 1994	GEARCASE
E60TTLERV 1994	GEARCASE
E60TTLESM 1990	GEARCASE
E60TTLETD 1993	GEARCASE
E60TTLEUA 1997	GEARCASE
E60WDRLSOS	GEARCASE
E60WDRLSOS - FR	07-1_BOÎTIER D'ENGRENAGES
E60WDRLSOS	GEARCASE
E60WDRLSOS - FR	07-1_BOÎTIER D'ENGRENAGES
E65GLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65RSLC 1995	GEARCASE
E65RSLM 1996	GEARCASE
E65RSLZ2 1997	GEARCASE
E65RWLCDR 1986	GEARCASE
E65RWLCOC 1985	GEARCASE

E65RWLCRS 1984	GEARCASE
E65SLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65TELCDR 1986	GEARCASE
E65TELCOC 1985	GEARCASE
E65TELCRS 1984	GEARCASE
E65WDRLIIA	GEARCASE, F-Type
E65WDRLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRLINM	GEARCASE, F-Type
E65WDRLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRLISF	GEARCASE
E65WDRLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRLISR	GEARCASE
E65WDRLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRLSCS	GEARCASE
E65WDRLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRLSEC	GEARCASE
E65WDRLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRYIIA	GEARCASE, F-Type
E65WDRYIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRYINM	GEARCASE, F-Type
E65WDRYINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRYISF	GEARCASE
E65WDRYISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRYISR	GEARCASE
E65WDRYISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRYSCS	GEARCASE
E65WDRYSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WDRYSEC	GEARCASE

E65WDYSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type F
E65WELEES 1999	GEARCASE
E65WELSIR Commercial, elec start, 20 in shaft 2001	GEARCASE
E65WELSSC Commercial, Elec. Start, 20 IN. shaft 2000	GEARCASE
E65WMLCDR 1986	GEARCASE
E65WMLCOC 1985	GEARCASE
E65WMLCUA 1987	GEARCASE
E65WMLEIB 1991	GEARCASE
E65WMLENE 1992	GEARCASE
E65WMLEOC 1995	GEARCASE
E65WMLERS 1994	GEARCASE
E65WMLESM 1990	GEARCASE
E65WMLETD 1993	GEARCASE
E65WMLZ 1989	GEARCASE
E65WRLEEO 1999	GEARCASE
E65WRLEES 1999	GEARCASE
E65WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
E65WRLSSC Commercial, Rope Start, 20 IN. shaft 2000	GEARCASE
E65WRYEEO 1999	GEARCASE
E65WRYEES 1999	GEARCASE
E65WRYSIR commercial, rope start, 22.5 in shaft 2001	GEARCASE
E65WRYSSC Commercial, Rope Start, 22.5 IN. shaft 2000	GEARCASE
E65WTLCOC 1985	GEARCASE
E65WTLCRS 1984	GEARCASE
E70ELCCA 1988	GEARCASE
E70ELCDC 1986	GEARCASE
E70ELCEM 1989	GEARCASE
E70ELCIH 1981	GEARCASE - 20" TRANSOM
E70ELCIM 1981	GEARCASE - 20" TRANSOM
E70ELCNB 1982	GEARCASE - 20" TRANSOM
E70ELCOS 1985	GEARCASE - 20" MODELS
E70ELCRD 1984	GEARCASE - 20" MODELS
E70ELCSA 1980	GEARCASE-20" TRANSOM
E70ELCTE 1983	GEARCASE - 20" TRANSOM
E70ELCUR 1987	GEARCASE

E70ELEIE 1991	GEARCASE
E70ELEND 1992	GEARCASE
E70ELEOR 1995	GEARCASE
E70ELERC 1994	GEARCASE
E70ELERV 1994	GEARCASE
E70ELESB 1990	GEARCASE
E70ELETs 1993	GEARCASE
E70TLCCA 1988	GEARCASE
E70TLCDC 1986	GEARCASE
E70TLCEM 1989	GEARCASE
E70TLCIM 1981	GEARCASE - 20" TRANSOM
E70TLCNB 1982	GEARCASE - 20" TRANSOM
E70TLCOS 1985	GEARCASE - 20" MODELS
E70TLCRD 1984	GEARCASE - 20" MODELS
E70TLCTE 1983	GEARCASE - 20" TRANSOM
E70TLCUR 1987	GEARCASE
E70TLECB 1998	GEARCASE
E70TLEDA 1996	GEARCASE
E70TLEIE 1991	GEARCASE
E70TLEND 1992	GEARCASE
E70TLEOR 1995	GEARCASE
E70TLERC 1994	GEARCASE
E70TLERV 1994	GEARCASE
E70TLESB 1990	GEARCASE
E70TLETs 1993	GEARCASE
E70TLEUM 1997	GEARCASE
E70TTLEIE 1991	GEARCASE
E70TTLEND 1992	GEARCASE
E70TTLEOR 1995	GEARCASE
E70TTLERC 1994	GEARCASE
E70TTLERV 1994	GEARCASE
E70TTLETs 1993	GEARCASE
E75DPGLAFA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFC	07-1_GEARCASE, (0.50 Ratio) S-Type

E75DPGLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFF	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFG	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLIIS	GEARCASE, S-Type
E75DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLINC	GEARCASE, S-Type
E75DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLISD	GEARCASE - PL, SL MODELS
E75DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLISF	GEARCASE - PL, SL MODELS
E75DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSCB	GEARCASE - PL, SL MODELS
E75DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSDA	GEARCASE - PL, SL MODELS
E75DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E75DPLSEE	GEARCASE - PL, SL MODELS
E75DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSOR	GEARCASE PL & SL MODELS
E75DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E75DPLSRC	GEARCASE PL & SL MODELS
E75DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL
E75DPLSUM	GEARCASE - PL, SL MODELS
E75DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLafa	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFc	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type

E75DSLAF	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFG	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLIIA	GEARCASE, S-Type
E75DSLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLINM	GEARCASE, S-Type
E75DSLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLISF	GEARCASE - PL, SL MODELS
E75DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLISR	GEARCASE - PL, SL MODELS
E75DSLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLSCS	GEARCASE - PL, SL MODELS
E75DSLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLSEC	GEARCASE - PL, SL MODELS
E75DSLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75ECDC 1986	GEARCASE - 20" MODELS
E75ECOS 1985	GEARCASE - 20" MODELS
E75ECDR 1984	GEARCASE - 20" MODELS
E75ECUR 1987	GEARCASE - 20" MODELS
E75ELCRD 1984	GEARCASE - 20" MODELS
E75ERCIH 1981	GEARCASE - 20" TRANSOM
E75ERCIM 1981	GEARCASE - 20" TRANSOM
E75ERCNB 1982	GEARCASE - 20" TRANSOM
E75ERCSA 1980	GEARCASE-20" TRANSOM
E75ERCTE 1983	GEARCASE - 20" TRANSOM
E75ERLCIH 1981	GEARCASE - 20" TRANSOM
E75ERLCIM 1981	GEARCASE - 20" TRANSOM
E75ERLCNB 1982	GEARCASE - 20" TRANSOM
E75ERLCSA 1980	GEARCASE-20" TRANSOM
E75ERLCTE 1983	GEARCASE - 20" TRANSOM
E75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E75FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E75FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E75FPLSTA	GEARCASE - FPL, FSL MODELS

E75FPLSTA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E75FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E75TLCRD 1984	GEARCASE - 20" MODELS
E75TRLCIH 1981	GEARCASE - 20" TRANSOM
E75TRLCIM 1981	GEARCASE - 20" TRANSOM
E75TRLCNB 1982	GEARCASE - 20" TRANSOM
E75TRLCSA 1980	GEARCASE-20" TRANSOM
E75TRLCTE 1983	GEARCASE - 20" TRANSOM
E85MLCSA 1980	GEARCASE
E85STLCSA 1980	GEARCASE
E85STXCSEA 1980	GEARCASE
E85TTLEIE 1991	GEARCASE
E85TTLEND 1992	GEARCASE
E85TTLEOR 1995	GEARCASE
E85TTLERC 1994	GEARCASE
E85TTLETS 1993	GEARCASE
E88MSLCCC 1988	GEARCASE
E88MSLCER 1989	GEARCASE
E88MSLCUS 1987	GEARCASE
E88MSLEDC 1996	GEARCASE
E88MSLEIM 1991	GEARCASE
E88MSLENB 1992	GEARCASE
E88MSLEOS 1995	GEARCASE
E88MSLERD 1994	GEARCASE
E88MSLESA 1990	GEARCASE
E88MSLETE 1993	GEARCASE
E88TSLEDR 1996	GEARCASE
E88TSLEOC 1995	GEARCASE
E88TSLERS 1994	GEARCASE
E90DHLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90DHLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90DPGLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type

E90DPGLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLIIS	GEARCASE, S-Type
E90DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLINC	GEARCASE, S-Type
E90DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLISD	GEARCASE - PL, SL MODELS
E90DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLISF	GEARCASE - PL, SL MODELS
E90DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSCB	GEARCASE - PL, SL MODELS
E90DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSDA	GEARCASE - PL, SL MODELS
E90DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E90DPLSEE	GEARCASE - PL, SL MODELS
E90DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSOR	GEARCASE PL & SL MODELS
E90DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E90DPLSRC	GEARCASE PL & SL MODELS
E90DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL
E90DPLSUM	GEARCASE - PL, SL MODELS
E90DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLafa	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFc	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFf	07-1_GEARCASE, (0.42 Ratio) S2-Type

E90DSLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLIIID	GEARCASE, S-Type
E90DSLIIID - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLINS	GEARCASE, S-Type
E90DSLINS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLISE	GEARCASE - PL, SL MODELS
E90DSLISE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLISF	GEARCASE - PL, SL MODELS
E90DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLSCM	GEARCASE - PL, SL MODELS
E90DSLSCM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLSDR	GEARCASE - PL, SL MODELS
E90DSLSDR - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E90DSLSEB	GEARCASE - PL, SL MODELS
E90DSLSEB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLSOC	GEARCASE PL & SL MODELS
E90DSLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E90DSL SRC	GEARCASE PL & SL MODELS
E90DSL SRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL
E90DLSUA	GEARCASE - PL, SL MODELS
E90DLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90ELECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E90ELEDR 1996	GEARCASE - 20 IN. MODELS
E90ELEOC 1995	GEARCASE - 20 IN. MODELS
E90ELEUA 1997	GEARCASE - 20 IN. MODELS
E90ELEUC 1997	GEARCASE - 20 IN. MODELS
E90EXEOC 1995	GEARCASE - 20 IN. MODELS
E90FPLEEC 1999	GEARCASE -- FPL, FSL MODELS
E90FPLEEN 1999	GEARCASE -- FPL, FSL MODELS
E90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E90FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E90FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS

E90FPLSTB	GEARCASE - FPL, FSL MODELS
E90FPLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E90FSLECS 1998	GEARCASE -- FSL, FTL MODELS
E90FSLSTB	GEARCASE - FPL, FSL MODELS
E90FSLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E90FTLECS 1998	GEARCASE -- FSL, FTL MODELS
E90FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E90GLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90HGLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFL	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFL	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90JLEIE 1991	GEARCASE
E90JLEND 1992	GEARCASE
E90JLEOR 1995	GEARCASE
E90JLERC 1994	GEARCASE
E90JLETS 1993	GEARCASE
E90MLCDC 1986	GEARCASE

E90MLCIH 1981	GEARCASE
E90MLCIM 1981	GEARCASE
E90MLCNB 1982	GEARCASE
E90MLCOS 1985	GEARCASE
E90MLCRD 1984	GEARCASE
E90MLCTE 1983	GEARCASE
E90MLCUR 1987	GEARCASE
E90MLEOR 1995	GEARCASE
E90MLERC 1994	GEARCASE
E90SLABA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E90SLEDR 1996	GEARCASE - 20 IN. MODELS
E90SLEOC 1995	GEARCASE - 20 IN. MODELS
E90SLEUA 1997	GEARCASE - 20 IN. MODELS
E90SLEUC 1997	GEARCASE - 20 IN. MODELS
E90SNLABA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90TLCCA 1988	GEARCASE
E90TLCDC 1986	GEARCASE
E90TLCEM 1989	GEARCASE
E90TLCIH 1981	GEARCASE
E90TLCIM 1981	GEARCASE
E90TLCNB 1982	GEARCASE
E90TLCOS 1985	GEARCASE
E90TLCRD 1984	GEARCASE

E90TLCTE 1983	GEARCASE
E90TLCUR 1987	GEARCASE
E90TLEDA 1996	GEARCASE
E90TLEIE 1991	GEARCASE
E90TLEND 1992	GEARCASE
E90TLEOR 1995	GEARCASE
E90TLERC 1994	GEARCASE
E90TLESB 1990	GEARCASE
E90TLETS 1993	GEARCASE
E90TSLECM 1998	GEARCASE
E90TSLEUA 1997	GEARCASE
E90TXARC 1994	GEARCASE
E90TXATS 1993	GEARCASE
E90TXCDC 1986	GEARCASE
E90TXCIH 1981	GEARCASE
E90TXCIM 1981	GEARCASE
E90TXCNB 1982	GEARCASE
E90TXCOS 1985	GEARCASE
E90TXCRD 1984	GEARCASE
E90TXCTE 1983	GEARCASE
E90WDELIIA	GEARCASE, S-Type
E90WDELIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELINM	GEARCASE, S-Type
E90WDELINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELISF	GEARCASE - PL, SL MODELS
E90WDELISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELISR	GEARCASE - PL, SL MODELS
E90WDELISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELSCS	GEARCASE - PL, SL MODELS
E90WDELSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELSEC	GEARCASE - PL, SL MODELS
E90WDELSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
GUFM-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
GUFM-10S 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE

GUPP-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
HE115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
HE115SLEDR 1996	GEARCASE - 20 IN. MODELS
HE115SLEUA 1997	GEARCASE - 20 IN. MODELS
HE115SLEUC 1997	GEARCASE - 20 IN. MODELS
HE115TXADA 1996	GEARCASE
HE45RCLEDS 1996	GEARCASE
HE45RCLEUC 1997	GEARCASE
HE55RSLC 1997	GEARCASE
HE55RSLW 1996	GEARCASE
HE55WMLM 1996	GEARCASE
HE55WMLZ 1997	GEARCASE
HE70TXEDA 1996	GEARCASE
HE70TXEUM 1997	GEARCASE
HE88MSLEDC 1996	GEARCASE
HE90MLEDA 1996	GEARCASE
HE90TXADA 1996	GEARCASE
HJ115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
HJ115SLEDR 1996	GEARCASE - 20 IN. MODELS
HJ115SLEUA 1997	GEARCASE - 20 IN. MODELS
HJ115SLEUC 1997	GEARCASE - 20 IN. MODELS
HJ115TXADA 1996	GEARCASE
HJ45RCLEDS 1996	GEARCASE
HJ45RCLEUC 1997	GEARCASE
HJ55RSLC 1997	GEARCASE
HJ55RSLW 1996	GEARCASE
HJ55WMLM 1996	GEARCASE
HJ55WMLZ 1997	GEARCASE
HJ70TXEDA 1996	GEARCASE
HJ70TXEUM 1997	GEARCASE
HJ88MSLEDC 1996	GEARCASE
HJ90MLEDA 1996	GEARCASE
HJ90TXADA 1996	GEARCASE
HU-16C 1968	LOWER GEARCASE GROUP

HUE-16C 1968	LOWER GEARCASE GROUP
HUFM-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
HUFM-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUFM-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUFM-21C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
HUFM-21S 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
HUFM-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
HUFM-69M 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
HUFP-21C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
HUFR-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
HUFR-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUFR-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUFR-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
HUFR-69M 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
HUTM-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
HUTM-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUTM-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUTM-21C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
HUTM-21S 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
HUTM-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
HUTM-69M 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
HUTP-21C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
HUTR-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
HUTR-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUTR-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
HUTR-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
HUTR-69M 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
J100MLCSC 1980	GEARCASE
J100STLCCA 1988	GEARCASE
J100STLCEM 1989	GEARCASE
J100STLEIE 1991	GEARCASE
J100STLEND 1992	GEARCASE

J100STLERC 1994	GEARCASE
J100STLESB 1990	GEARCASE
J100STLETS 1993	GEARCASE
J100TRLCSC 1980	GEARCASE
J100TRXCSC 1980	GEARCASE
J100WQLECS 1998	GEARCASE -- 100WQL MODELS
J100WQXECS 1998	GEARCASE -- 100WQL MODELS
J110MLCCA 1988	GEARCASE
J110MLCDC 1986	GEARCASE
J110MLCEM 1989	GEARCASE
J110MLCUR 1987	GEARCASE
J110TLAEM 1989	GEARCASE
J110TLCCA 1988	GEARCASE
J110TLCDC 1986	GEARCASE
J110TLCDF 1986	GEARCASE
J110TLCEM 1989	GEARCASE
J110TLCUR 1987	GEARCASE
J110TXCCA 1988	GEARCASE
J110TXCEM 1989	GEARCASE
J110TXCUR 1987	GEARCASE
J112TSLEDR 1996	GEARCASE
J112TSLEOC 1995	GEARCASE
J112TSLERS 1994	GEARCASE
J112TSXEDR 1996	GEARCASE
J112TSXEOC 1995	GEARCASE
J112TSXERS 1994	GEARCASE
J115ELECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115ELEDR 1996	GEARCASE - 20 IN. MODELS
J115ELEOC 1995	GEARCASE - 20 IN. MODELS
J115ELEUA 1997	GEARCASE - 20 IN. MODELS
J115ELEUC 1997	GEARCASE - 20 IN. MODELS
J115FSLECS 1998	GEARCASE -- FSL, FTL MODELS
J115FSXECS 1998	GEARCASE -- FSL, FTL MODELS
J115FTLECS 1998	GEARCASE -- FSL, FTL MODELS
J115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS

J115GLEDR 1996	GEARCASE - 20 IN. MODELS
J115GLEOC 1995	GEARCASE - 20 IN. MODELS
J115GLEUA 1997	GEARCASE - 20 IN. MODELS
J115GLEUC 1997	GEARCASE - 20 IN. MODELS
J115GLSDE	GEARCASE - PL, GL MODELS
J115GLSDE - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J115GLSOB	GEARCASE - PL, GL MODELS
J115GLSOB - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115GLSRC	GEARCASE - PL, GL MODELS
J115GLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115GLSTA	GEARCASE - PL, GL MODELS
J115GLSTA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115JKLEOC 1995	GEARCASE
J115JKLERS 1994	GEARCASE
J115JLEDA 1996	GEARCASE
J115JLEIE 1991	GEARCASE
J115JLEND 1992	GEARCASE
J115JLEOR 1995	GEARCASE
J115JLERC 1994	GEARCASE
J115JLETS 1993	GEARCASE
J115JPLEEC 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115JPLSIA jet drive, elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115JPLSSR Jet Drive, Elec. Start,TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115JTLECS 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115MLCIH 1981	GEARCASE
J115MLCIM 1981	GEARCASE
J115MLCNB 1982	GEARCASE
J115MLCOS 1985	GEARCASE
J115MLCRD 1984	GEARCASE
J115MLCSA 1980	GEARCASE
J115MLCTE 1983	GEARCASE
J115MLEIE 1991	GEARCASE
J115MLEND 1992	GEARCASE
J115MLEOR 1995	GEARCASE
J115MLERS 1994	GEARCASE

J115MLESB 1990	GEARCASE
J115MLETS 1993	GEARCASE
J115PLEEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115PLSDA	GEARCASE - PL, GL MODELS
J115PLSDA - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J115PLSIE elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J115PLSOR	GEARCASE - PL, GL MODELS
J115PLSOR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115PLSRC	GEARCASE - PL, GL MODELS
J115PLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115PLSSB Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115PLSTS	GEARCASE - PL, GL MODELS
J115PLSTS - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115PXEEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115PXSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115PXSNF Carbureted, 25 in. shaft, White, Remote, Elec, TNT, 2002	GEARCASE - PLS, VLS MODELS
J115PXSSB Elec. Start, TNT, 25 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115PXSTS	GEARCASE - PL, GL MODELS
J115PXSTS - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115SLEDR 1996	GEARCASE - 20 IN. MODELS
J115SLEOC 1995	GEARCASE - 20 IN. MODELS
J115SLEUA 1997	GEARCASE - 20 IN. MODELS
J115SLEUC 1997	GEARCASE - 20 IN. MODELS
J115SPLEES 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115SPLSSC Elec. Start, TNT, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115SXEDR 1996	GEARCASE - 20 IN. MODELS
J115SXEOC 1995	GEARCASE - 20 IN. MODELS
J115SXEUA 1997	GEARCASE - 20 IN. MODELS
J115SXEUC 1997	GEARCASE - 20 IN. MODELS
J115TLAIE 1991	GEARCASE

J115TLAND 1992	GEARCASE
J115TLARC 1994	GEARCASE
J115TLASB 1990	GEARCASE
J115TLATS 1993	GEARCASE
J115TLCIH 1981	GEARCASE
J115TLCIM 1981	GEARCASE
J115TLCNB 1982	GEARCASE
J115TLCOS 1985	GEARCASE
J115TLCRD 1984	GEARCASE
J115TLCSA 1980	GEARCASE
J115TLCTE 1983	GEARCASE
J115TLEDA 1996	GEARCASE
J115TLEIE 1991	GEARCASE
J115TLEND 1992	GEARCASE
J115TLEOR 1995	GEARCASE
J115TLERC 1994	GEARCASE
J115TLESB 1990	GEARCASE
J115TLETS 1993	GEARCASE
J115TSLECM 1998	GEARCASE
J115TSLEUA 1997	GEARCASE
J115TSXECM 1998	GEARCASE
J115TSXEUA 1997	GEARCASE
J115TXADA 1996	GEARCASE
J115TXAOR 1995	GEARCASE
J115TXARS 1994	GEARCASE
J115TXATS 1993	GEARCASE
J115TXCIH 1981	GEARCASE
J115TXCIM 1981	GEARCASE
J115TXCNB 1982	GEARCASE
J115TXCRD 1984	GEARCASE
J115TXCSA 1980	GEARCASE
J115TXCTE 1983	GEARCASE
J115TXEIE 1991	GEARCASE
J115TXEND 1992	GEARCASE
J115TXESB 1990	GEARCASE

J115VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115VLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J115VLSSS Elec. Start, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115VXSIC elec start, TNT, 25 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115VXSIS Elec. Start, TNT, 25 IN. shaft, wht, 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J120TLAEM 1989	GEARCASE - 120TL & TX/140 TL
J120TLAIE 1991	GEARCASE - 120TL & TX/140 TL
J120TLAND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J120TLARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLASB 1990	GEARCASE - 120TL & TX/140 TL
J120TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TLATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TLCCA 1988	GEARCASE - 120TL & TX/140 TL
J120TLCDC 1986	GEARCASE
J120TLCEM 1989	GEARCASE - 120TL & TX/140 TL
J120TLCUR 1987	GEARCASE
J120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
J120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J120TLERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLESB 1990	GEARCASE - 120TL & TX/140 TL
J120TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXCCA 1988	GEARCASE - 120TL & TX/140 TL
J120TXCDC 1986	GEARCASE
J120TXCEM 1989	GEARCASE - 120TL & TX/140 TL

J120TXCUR 1987	GEARCASE
J120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
J120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J120TXERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXESB 1990	GEARCASE - 120TL & TX/140 TL
J120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J125ESXENR 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J125ESXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J125ESXESS 1990	GEARCASE - ESX MODELS ONLY
J125ESXETA 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J125ESXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J125ESXW 1989	GEARCASE - ESX MODELS ONLY
J140CXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140CXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140CXCCS 1988	GEARCASE - 120TL & TX/140 TL
J140CXCEC 1989	GEARCASE - 120TL & TX/140 TL
J140CXEIA 1991	GEARCASE - 120TL & TX/140 TL
J140CXENM 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140CXERE 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXESR 1990	GEARCASE - 120TL & TX/140 TL
J140CXETB 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140CXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140MLCIH 1981	GEARCASE
J140MLCIM 1981	GEARCASE
J140MLCNB 1982	GEARCASE
J140MLCSA 1980	GEARCASE

J140MLCTE 1983	GEARCASE
J140TLAEB 1989	GEARCASE - 120TL & TX/140 TL
J140TLANS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140TLARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLARR 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLASE 1990	GEARCASE - 120TL & TX/140 TL
J140TLATC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TLCCM 1988	GEARCASE - 120TL & TX/140 TL
J140TLCDC 1986	GEARCASE
J140TLCEB 1989	GEARCASE - 120TL & TX/140 TL
J140TLCIH 1981	GEARCASE
J140TLCIM 1981	GEARCASE
J140TLCNB 1982	GEARCASE
J140TLCRD 1984	GEARCASE
J140TLCSA 1980	GEARCASE
J140TLCTE 1983	GEARCASE
J140TLCUA 1987	GEARCASE
J140TLEID 1991	GEARCASE - 120TL & TX/140 TL
J140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLESE 1990	GEARCASE - 120TL & TX/140 TL
J140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXCCM 1988	GEARCASE - 120TL & TX/140 TL
J140TXCDC 1986	GEARCASE
J140TXCEB 1989	GEARCASE - 120TL & TX/140 TL

J140TXCIH 1981	GEARCASE
J140TXCIM 1981	GEARCASE
J140TXCNB 1982	GEARCASE
J140TXCRD 1984	GEARCASE
J140TXCSA 1980	GEARCASE
J140TXCTE 1983	GEARCASE
J140TXCUA 1987	GEARCASE
J140TXEID 1991	GEARCASE - 120TL & TX/140 TL
J140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXESE 1990	GEARCASE - 120TL & TX/140 TL
J140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J40AELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ARLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ATLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40JPLEEC 1999	GEARCASE
J40JPLSIA jet drive,elec start, TNT, 20 in shaft 2001	GEARCASE
J40JPLSSR Jet Drive, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE
J40JVLISIA jet drive,elec start, TNT, 20 in shaft, wht 2001	GEARCASE
J40RCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40RLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TTLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40WREES 1999	GEARCASE
J40WRLEES 1999	GEARCASE
J40WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
J40WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J40WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE

J40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J40WRYEES 1999	GEARCASE
J40WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
J40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
J45RCCDS 1986	GEARCASE
J45RCCUC 1987	GEARCASE
J45RCE 1989	GEARCASE
J45RCEIA 1991	GEARCASE
J45RCENM 1992	GEARCASE
J45RCEOD 1995	GEARCASE
J45RCERE 1994	GEARCASE
J45RCESR 1990	GEARCASE
J45RCETB 1993	GEARCASE
J45RCLCDS 1986	GEARCASE
J45RCLCUC 1987	GEARCASE
J45RCLE 1989	GEARCASE
J45RCLEDS 1996	GEARCASE
J45RCLEIA 1991	GEARCASE
J45RCLENM 1992	GEARCASE
J45RCLEOD 1995	GEARCASE
J45RCLERE 1994	GEARCASE
J45RCLESR 1990	GEARCASE
J45RCLETB 1993	GEARCASE
J45RCLEUC 1997	GEARCASE
J45WMLE 1989	GEARCASE
J45WMLEIA 1991	GEARCASE
J45WMLENM 1992	GEARCASE
J45WMLESR 1990	GEARCASE
J50BECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50BECIC 1981	GEARCASE, ROPE START
J50BELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50BELCIC 1981	GEARCASE, ROPE START
J50DTLECA 1998	GEARCASE
J50DTLEDC 1996	GEARCASE

J50DTLEOS 1995	GEARCASE
J50DTLEUR 1997	GEARCASE
J50ELED 1996	GEARCASE
J50ELEOS 1995	GEARCASE
J50ELEUR 1997	GEARCASE
J50TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50TTLECA 1998	GEARCASE
J50TTLEDC 1996	GEARCASE
J50TTLEOS 1995	GEARCASE
J50TTLEUR 1997	GEARCASE
J55APRL	GEARCASE & ROTOR HOUSING (APRL MODEL)
J55APRL - FR	27-6_BOÎTIER D'ENGRENAGES & BOÎTIER DE ROTOR - Modèles APRL
J55APRLSOM	GEARCASE & ROTOR HOUSING (APRL MODEL)
J55APRLSOM - FR	27-6_BOÎTIER D'ENGRENAGES ET BOÎTIER DE ROTOR - Modèles APRL
J55APRLSRA	GEARCASE & ROTOR HOUSING (APRL MODEL)
J55APRLSRA - FR	27-6_BOÎTIER D'ENGRENAGES ET BOÎTIER DE ROTOR - Modèles APRL
J55APRLSRG	GEARCASE & ROTOR HOUSING (APRL MODEL)
J55APRLSRG - FR	27-6_BOÎTIER D'ENGRENAGES ET BOÎTIER DE ROTOR - Modèles APRL
J55MLSOR	GEARCASE (ML MODEL)
J55MLSOR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55MLSRC	GEARCASE (ML MODEL)
J55MLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55MLSRG	GEARCASE (ML MODEL)
J55MLSRG - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55MRL	GEARCASE (ML MODEL)
J55MRL - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55RCIM 1981	GEARCASE, ROPE START
J55RLCIM 1981	GEARCASE, ROPE START
J55RLCSA 1980	GEARCASE,ROPE START
J55RSLC 1997	GEARCASE
J55RSLG 1995	GEARCASE
J55RSLN 1983	GEARCASE

J55RSLN-2 1983	GEARCASE
J55RSLW 1996	GEARCASE
J55RSN 1983	GEARCASE
J55RSN-2 1983	GEARCASE
J55RSYN 1983	GEARCASE
J55RSYN-2 1983	GEARCASE
J55RWLCDC 1986	GEARCASE
J55RWLCOS 1985	GEARCASE
J55RWLCRD 1984	GEARCASE
J55RWLCUC 1987	GEARCASE
J55RWLE 1989	GEARCASE
J55RWLEIA 1991	GEARCASE
J55RWLENM 1992	GEARCASE
J55RWLERE 1994	GEARCASE
J55RWLESR 1990	GEARCASE
J55RWLETB 1993	GEARCASE
J55WREES 1999	GEARCASE
J55WRLEES 1999	GEARCASE
J55WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
J55WRLSOE	GEARCASE
J55WRLSOE - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRLSRB	GEARCASE
J55WRLSRB - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRLSRG	GEARCASE
J55WRLSRG - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J55WRLSTM	GEARCASE
J55WRLSTM - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
J55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J55WRYEES 1999	GEARCASE
J55WRY SIR commercial, rope start, 25 in shaft 2001	GEARCASE
J55WRYSOB	GEARCASE
J55WRYSOB - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRYSRM	GEARCASE

J55WRYSRM - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
J60ECIA 1981	GEARCASE, ROPE START
J60ECIH 1981	GEARCASE, ROPE START
J60ECSR 1980	GEARCASE,ROPE START
J60ELCCR 1988	GEARCASE
J60ELCDS 1986	GEARCASE - 20" MODELS
J60ELCEA 1989	GEARCASE
J60ELCIA 1981	GEARCASE, ROPE START
J60ELCIH 1981	GEARCASE, ROPE START
J60ELCSR 1980	GEARCASE,ROPE START
J60ELCUC 1987	GEARCASE - 20" MODELS
J60ELED 1996	GEARCASE
J60ELEIB 1991	GEARCASE
J60ELENE 1992	GEARCASE
J60ELEOC 1995	GEARCASE
J60ELERS 1994	GEARCASE
J60ELERV 1994	GEARCASE
J60ELES 1990	GEARCASE
J60ELET 1993	GEARCASE
J60ELEUA 1997	GEARCASE
J60PLEEB 1999	GEARCASE
J60PLSID elec start, TNT, 20 in shaft 2001	GEARCASE
J60PLSSE Elec Start, TNT, 20 IN. shaft 2000	GEARCASE
J60TLCCR 1988	GEARCASE
J60TLCDS 1986	GEARCASE - 20" MODELS
J60TLCEA 1989	GEARCASE
J60TLCIA 1981	GEARCASE, ROPE START
J60TLCIH 1981	GEARCASE, ROPE START
J60TLCUC 1987	GEARCASE - 20" MODELS
J60TLECM 1998	GEARCASE
J60TLED 1996	GEARCASE
J60TLEIB 1991	GEARCASE
J60TLENE 1992	GEARCASE

J60TLEOC 1995	GEARCASE
J60TLERS 1994	GEARCASE
J60TLERV 1994	GEARCASE
J60TLESM 1990	GEARCASE
J60TLETD 1993	GEARCASE
J60TLEUA 1997	GEARCASE
J60TTLCCR 1988	GEARCASE
J60TTLCEA 1989	GEARCASE
J60TTLECM 1998	GEARCASE
J60TTLEDR 1996	GEARCASE
J60TTLEIB 1991	GEARCASE
J60TTLENE 1992	GEARCASE
J60TTLEOC 1995	GEARCASE
J60TTLERS 1994	GEARCASE
J60TTLERV 1994	GEARCASE
J60TTLESM 1990	GEARCASE
J60TTLETD 1993	GEARCASE
J60TTLEUA 1997	GEARCASE
J60VLSID elec start, TNT, 20 in shaft, wht 2001	GEARCASE
J65RSLC 1995	GEARCASE
J65RSLM 1996	GEARCASE
J65RSLZ2 1997	GEARCASE
J65RWLCDR 1986	GEARCASE
J65RWLCOC 1985	GEARCASE
J65RWLCRS 1984	GEARCASE
J65TELCDR 1986	GEARCASE
J65TELCOC 1985	GEARCASE
J65TELCRS 1984	GEARCASE
J65WELEES 1999	GEARCASE
J65WELSIR Commercial, elec start, 20 in shaft 2001	GEARCASE
J65WELSSC Commercial, Elec. Start, 20 IN. shaft 2000	GEARCASE
J65WMLCDR 1986	GEARCASE
J65WMLCOC 1985	GEARCASE
J65WMLCUA 1987	GEARCASE
J65WMLEIB 1991	GEARCASE

J65WMLENE 1992	GEARCASE
J65WMLEOC 1995	GEARCASE
J65WMLERS 1994	GEARCASE
J65WMLESM 1990	GEARCASE
J65WMLETD 1993	GEARCASE
J65WMLZ 1989	GEARCASE
J65WRLEEO 1999	GEARCASE
J65WRLEES 1999	GEARCASE
J65WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
J65WRLSSC Commercial, Rope Start, 20 IN. shaft 2000	GEARCASE
J65WRYEEO 1999	GEARCASE
J65WRYEES 1999	GEARCASE
J65WRYSIR commercial, rope start, 22.5 in shaft 2001	GEARCASE
J65WRYSSC Commercial, Rope Start, 22.5 IN. shaft 2000	GEARCASE
J65WTLCOC 1985	GEARCASE
J65WTLCRS 1984	GEARCASE
J70ELCCA 1988	GEARCASE
J70ELCDC 1986	GEARCASE
J70ELCEM 1989	GEARCASE
J70ELCIH 1981	GEARCASE - 20" TRANSOM
J70ELCIM 1981	GEARCASE - 20" TRANSOM
J70ELCNB 1982	GEARCASE - 20" TRANSOM
J70ELCOS 1985	GEARCASE - 20" MODELS
J70ELCRD 1984	GEARCASE - 20" MODELS
J70ELCSA 1980	GEARCASE-20"TRANSOM
J70ELCTE 1983	GEARCASE - 20" TRANSOM
J70ELCUR 1987	GEARCASE
J70ELEIE 1991	GEARCASE
J70ELEND 1992	GEARCASE
J70ELEOR 1995	GEARCASE
J70ELERC 1994	GEARCASE
J70ELERV 1994	GEARCASE
J70ELESB 1990	GEARCASE
J70ELETs 1993	GEARCASE
J70JLEOS 1995	GEARCASE

J70PLEEE 1999	GEARCASE
J70PLSIS elec start, TNT, 20 in shaft 2001	GEARCASE
J70PLSSD Elec Start, TNT, 20 IN. shaft 2000	GEARCASE
J70TLCCA 1988	GEARCASE
J70TLCDC 1986	GEARCASE
J70TLCEM 1989	GEARCASE
J70TLCIM 1981	GEARCASE - 20" TRANSOM
J70TLCNB 1982	GEARCASE - 20" TRANSOM
J70TLCOS 1985	GEARCASE - 20" MODELS
J70TLCRD 1984	GEARCASE - 20" MODELS
J70TLCTE 1983	GEARCASE - 20" TRANSOM
J70TLCUR 1987	GEARCASE
J70TLECB 1998	GEARCASE
J70TLEDA 1996	GEARCASE
J70TLEIE 1991	GEARCASE
J70TLEND 1992	GEARCASE
J70TLEOR 1995	GEARCASE
J70TLERC 1994	GEARCASE
J70TLERV 1994	GEARCASE
J70TLESB 1990	GEARCASE
J70TLETS 1993	GEARCASE
J70TLEUM 1997	GEARCASE
J70TTLEIE 1991	GEARCASE
J70TTLEND 1992	GEARCASE
J70TTLEOR 1995	GEARCASE
J70TTLERC 1994	GEARCASE
J70TTLERV 1994	GEARCASE
J70TTLETS 1993	GEARCASE
J70VLSIS elec start, TNT, 20 in shaft 2001	GEARCASE
J75ECDC 1986	GEARCASE - 20" MODELS
J75ECNB 1982	GEARCASE - 20" TRANSOM
J75ECOS 1985	GEARCASE - 20" MODELS
J75ECDRD 1984	GEARCASE - 20" MODELS
J75ECTE 1983	GEARCASE - 20" TRANSOM
J75ECUR 1987	GEARCASE - 20" MODELS

J75ELCNB 1982	GEARCASE - 20" TRANSOM
J75ELCRD 1984	GEARCASE - 20" MODELS
J75ELCTE 1983	GEARCASE - 20" TRANSOM
J75ERCIH 1981	GEARCASE - 20" TRANSOM
J75ERCIM 1981	GEARCASE - 20" TRANSOM
J75ERCSA 1980	GEARCASE-20"TRANSOM
J75ERLCIH 1981	GEARCASE - 20" TRANSOM
J75ERLCIM 1981	GEARCASE - 20" TRANSOM
J75ERLCSA 1980	GEARCASE-20"TRANSOM
J75TELCIM 1981	GEARCASE - 20" TRANSOM
J75TLCNB 1982	GEARCASE - 20" TRANSOM
J75TLCRD 1984	GEARCASE - 20" MODELS
J75TLCTE 1983	GEARCASE - 20" TRANSOM
J75TRLCIH 1981	GEARCASE - 20" TRANSOM
J75TRLCSA 1980	GEARCASE-20"TRANSOM
J85MLCSA 1980	GEARCASE
J85TLCSA 1980	GEARCASE
J85TTLEIE 1991	GEARCASE
J85TTLEND 1992	GEARCASE
J85TTLEOR 1995	GEARCASE
J85TTLERC 1994	GEARCASE
J85TTLETS 1993	GEARCASE
J85TXCSA 1980	GEARCASE
J88MSLCCC 1988	GEARCASE
J88MSLCER 1989	GEARCASE
J88MSLCUS 1987	GEARCASE
J88MSLEDC 1996	GEARCASE
J88MSLEIM 1991	GEARCASE
J88MSLENB 1992	GEARCASE
J88MSLEOS 1995	GEARCASE
J88MSLERD 1994	GEARCASE
J88MSLESA 1990	GEARCASE
J88MSLETE 1993	GEARCASE
J88TSLEDR 1996	GEARCASE
J88TSLEOC 1995	GEARCASE

J88TSLERS 1994	GEARCASE
J90ELECTM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J90ELEDOR 1996	GEARCASE - 20 IN. MODELS
J90ELEOC 1995	GEARCASE - 20 IN. MODELS
J90ELEUA 1997	GEARCASE - 20 IN. MODELS
J90ELEUC 1997	GEARCASE - 20 IN. MODELS
J90EXEOC 1995	GEARCASE - 20 IN. MODELS
J90FSLECS 1998	GEARCASE -- FSL, FTL MODELS
J90FTLECS 1998	GEARCASE -- FSL, FTL MODELS
J90GLSDE	GEARCASE - PL, GL MODELS
J90GLSDE - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J90GLSOB	GEARCASE - PL, GL MODELS
J90GLSOB - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90GLSRM	GEARCASE - PL, GL MODELS
J90GLSRM - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90GLSTA	GEARCASE - PL, GL MODELS
J90GLSTA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J90JLEIE 1991	GEARCASE
J90JLEND 1992	GEARCASE
J90JLEOR 1995	GEARCASE
J90JLERC 1994	GEARCASE
J90JLETS 1993	GEARCASE
J90MLCDC 1986	GEARCASE
J90MLCIH 1981	GEARCASE
J90MLCIM 1981	GEARCASE
J90MLCNB 1982	GEARCASE
J90MLCOS 1985	GEARCASE
J90MLCRD 1984	GEARCASE
J90MLCTE 1983	GEARCASE
J90MLCUR 1987	GEARCASE
J90MLEOR 1995	GEARCASE
J90MLERC 1994	GEARCASE
J90PLEEB 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J90PLSDM	GEARCASE - PL, GL MODELS
J90PLSDM - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES

J90PLSID elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J90PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J90PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J90PLSOA	GEARCASE - PL, GL MODELS
J90PLSOA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90PLSRR	GEARCASE - PL, GL MODELS
J90PLSRR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90PLSSE Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J90PLSTC	GEARCASE - PL, GL MODELS
J90PLSTC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J90SLEDR 1996	GEARCASE - 20 IN. MODELS
J90SLEOC 1995	GEARCASE - 20 IN. MODELS
J90SLEUA 1997	GEARCASE - 20 IN. MODELS
J90SLEUC 1997	GEARCASE - 20 IN. MODELS
J90SPLEES 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J90SPLSSC Elec. Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J90TLAEM 1989	GEARCASE
J90TLAIE 1991	GEARCASE
J90TLAND 1992	GEARCASE
J90TLARC 1994	GEARCASE
J90TLASB 1990	GEARCASE
J90TLATS 1993	GEARCASE
J90TLCCA 1988	GEARCASE
J90TLCDC 1986	GEARCASE
J90TLCEM 1989	GEARCASE
J90TLCIH 1981	GEARCASE
J90TLCIM 1981	GEARCASE
J90TLCNB 1982	GEARCASE
J90TLCOS 1985	GEARCASE
J90TLCRD 1984	GEARCASE
J90TLCTE 1983	GEARCASE
J90TLCUR 1987	GEARCASE
J90TLEDA 1996	GEARCASE

J90TLEIE 1991	GEARCASE
J90TLEND 1992	GEARCASE
J90TLEOR 1995	GEARCASE
J90TLERC 1994	GEARCASE
J90TLESB 1990	GEARCASE
J90TLETS 1993	GEARCASE
J90TSLECM 1998	GEARCASE
J90TSLEUA 1997	GEARCASE
J90TXARC 1994	GEARCASE
J90TXATS 1993	GEARCASE
J90TXCDC 1986	GEARCASE
J90TXCIH 1981	GEARCASE
J90TXCIM 1981	GEARCASE
J90TXCNB 1982	GEARCASE
J90TXCOS 1985	GEARCASE
J90TXCRD 1984	GEARCASE
J90TXCTE 1983	GEARCASE
J90VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J90VLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J90VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J90VLSSE Elec. Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
JUFM-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
JUFM-10S 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
JX-245 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
KU-16C 1968	LOWER GEARCASE GROUP
KUE-16C 1968	LOWER GEARCASE GROUP
L115GLECA 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
L115GLEDC 1996	GEARCASE - 20 IN. MODELS
L115GLEOS 1995	GEARCASE - 20 IN. MODELS
L115GLEUC 1997	GEARCASE - 20 IN. MODELS
L115GLEUR 1997	GEARCASE - 20 IN. MODELS
L90GLECS 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
LUFM-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE

LUFM-10S 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
LUFP-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
M55RWLR 1988	GEARCASE
N65WMLM 1988	GEARCASE
NU-10S 1969	LOWER GEARCASE GROUP 120,155,210 HP
NUE-10S 1969	LOWER GEARCASE GROUP 120,155,210 HP
NUFM-12A 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
NUFM-12AX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
NUFM-13M 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
NUFM-69R 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
NUFR-12A 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
NUFR-12AX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
NUFR-13M 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
NUFR-69R 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
R45RCLR 1988	GEARCASE
R45RCR 1988	GEARCASE
R55RWLR 1988	GEARCASE
RE115FLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FLSSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FLSSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FSSSH FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FSSSR FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FXSSH FFI, Elec Start, TNT, 25 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FXSSR FFI, Elec Start, TNT, 25 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RJ115PLSIE elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS

RJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115VLSSB Elec. Start, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115VXSIC elec start, TNT, 25 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ70PLSIS elec start, TNT, 20 in shaft 2001	GEARCASE
RJ70PLSSD Elec Start, TNT, 20 IN. shaft 2000	GEARCASE
RJ90PLSID elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ90VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ90VLSSS Elec. Start, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
S45RCLR 1988	GEARCASE
S45RCR 1988	GEARCASE
SE100WMPLM 1996	GEARCASE
SE100WMPLZ 1997	GEARCASE
SE100WTPLM 1996	GEARCASE
SE100WTPLZ 1997	GEARCASE
SE40RPB 1997	GEARCASE
SE40RPH 1996	GEARCASE
SE40RPLB 1997	GEARCASE
SE40RPLH 1996	GEARCASE
SE40RPLT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPLT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE40RPT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE40RPYB 1997	GEARCASE
SE40RPYH 1996	GEARCASE
SE40RPYT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPYT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE45RSLB 1997	GEARCASE
SE45RSLH 1996	GEARCASE
SE55RSC 1997	GEARCASE
SE55RSLC 1997	GEARCASE
SE55RSLM2 1998	GEARCASE -- T & M MODELS ONLY

SE55RSLM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSLW 1996	GEARCASE
SE55RSM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSW 1996	GEARCASE
SE55RSYC 1997	GEARCASE
SE55RSYM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSYM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSYW 1996	GEARCASE
SE65RSLD 1998	GEARCASE
SE65RSLM 1996	GEARCASE
SE65RSLZ2 1997	GEARCASE
SE65RSYD 1998	GEARCASE
SE65RSYM 1996	GEARCASE
SE65RSYZ2 1997	GEARCASE
SE65WMLD 1998	GEARCASE
SE65WMLM 1996	GEARCASE
SE65WMLZ2 1997	GEARCASE
SE65WMYD 1998	GEARCASE
SE65WMYM 1996	GEARCASE
SE65WMYZ2 1997	GEARCASE
SJ100WMPLM 1996	GEARCASE
SJ100WMPLZ 1997	GEARCASE
SJ100WTPLM 1996	GEARCASE
SJ100WTPLZ 1997	GEARCASE
SJ115ELED 1996	GEARCASE - 20 IN. MODELS
SJ40RPB 1997	GEARCASE
SJ40RPH 1996	GEARCASE
SJ40RPLB 1997	GEARCASE
SJ40RPLH 1996	GEARCASE
SJ40RPLT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPLT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ40RPT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ40RPYB 1997	GEARCASE

SJ40RPYH 1996	GEARCASE
SJ40RPYT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPYT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ45RSLB 1997	GEARCASE
SJ45RSLH 1996	GEARCASE
SJ55RSC 1997	GEARCASE
SJ55RSLC 1997	GEARCASE
SJ55RSLM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSLM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSLW 1996	GEARCASE
SJ55RSM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSW 1996	GEARCASE
SJ55RSYC 1997	GEARCASE
SJ55RSYM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSYM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSYW 1996	GEARCASE
SJ60TLEDR 1996	GEARCASE
SJ65RSLD 1998	GEARCASE
SJ65RSLM 1996	GEARCASE
SJ65RSLZ2 1997	GEARCASE
SJ65RSYD 1998	GEARCASE
SJ65RSYM 1996	GEARCASE
SJ65RSYZ2 1997	GEARCASE
SJ65WMLD 1998	GEARCASE
SJ65WMLM 1996	GEARCASE
SJ65WMLZ2 1997	GEARCASE
SJ65WMYD 1998	GEARCASE
SJ65WMYM 1996	GEARCASE
SJ65WMYZ2 1997	GEARCASE
SJ70TLEDA 1996	GEARCASE
SJ90ELEDR 1996	GEARCASE - 20 IN. MODELS
T65WMLM 1988	GEARCASE
TE110TLCEM 1989	GEARCASE
TE110TLESF 1989	GEARCASE

TE110TXCEM 1989	GEARCASE
TE115TLEIE 1991	GEARCASE
TE115TLEND 1992	GEARCASE
TE115TLESB 1990	GEARCASE
TE115TLETS 1993	GEARCASE
TE120TXCEM 1989	GEARCASE - 120TL & TX/140 TL
TE60TLCEA 1989	GEARCASE
TE60TLEIB 1991	GEARCASE
TE60TLENE 1992	GEARCASE
TE60TLESF 1989	GEARCASE
TE60TLESF 1990	GEARCASE
TE60TLESM 1990	GEARCASE
TE60TLETD 1993	GEARCASE
TE70TLCEM 1989	GEARCASE
TE70TLESB 1990	GEARCASE
TE70TLESF 1989	GEARCASE
TE70TLESF 1990	GEARCASE
TE90TLCEM 1989	GEARCASE
TE90TLEIE 1991	GEARCASE
TE90TLEND 1992	GEARCASE
TE90TLESB 1990	GEARCASE
TE90TLESF 1989	GEARCASE
TE90TLESF 1990	GEARCASE
TE90TLETS 1993	GEARCASE
TJ110TLCEM 1989	GEARCASE
TJ110TXCEM 1989	GEARCASE
TJ115TLEIE 1991	GEARCASE
TJ115TLEND 1992	GEARCASE
TJ115TLESB 1990	GEARCASE
TJ115TLETS 1993	GEARCASE
TJ120TXCEM 1989	GEARCASE - 120TL & TX/140 TL
TJ60TLCEA 1989	GEARCASE
TJ60TLEIB 1991	GEARCASE
TJ60TLENE 1992	GEARCASE
TJ60TLESF 1989	GEARCASE

TJ60TLESF 1990	GEARCASE
TJ60TLESM 1990	GEARCASE
TJ60TLETD 1993	GEARCASE
TJ70TLCEM 1989	GEARCASE
TJ70TLESB 1990	GEARCASE
TJ70TLESF 1989	GEARCASE
TJ70TLESF 1990	GEARCASE
TJ90TLCEM 1989	GEARCASE
TJ90TLEIE 1991	GEARCASE
TJ90TLEND 1992	GEARCASE
TJ90TLESB 1990	GEARCASE
TJ90TLETS 1993	GEARCASE
TU-16C 1968	LOWER GEARCASE GROUP
TU-17R 1968	LOWER GEARCASE GROUP
TUE-16C 1968	LOWER GEARCASE GROUP
TUE-17R 1968	LOWER GEARCASE GROUP
TUFM-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
TUFM-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
TUFM-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
TUFM-21C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
TUFM-21S 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
TUFM-69B 1969	LOWER GEARCASE GROUP 120,155,210 HP
TUFM-69B 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
TUFM-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
TUFP-21C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
TUFR-19E 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
TUFR-19EX 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
TUFR-20D 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
TUFR-69B 1969	LOWER GEARCASE GROUP 120,155,210 HP
TUFR-69B 1970	LOWER GEARCASE GROUP 120, 155, 210 HP
TUFR-69M 1969	LOWER GEARCASE GROUP 120,155,210 HP
V115SHLETS 1993	GEARCASE
V115SLEIE 1991	GEARCASE
V115SLEND 1992	GEARCASE

V115SLETS 1993	GEARCASE
V4T-14B 1968	GEARCASE GROUP
V4TL-14B 1968	GEARCASE GROUP
V90SLEIE 1991	GEARCASE
V90SLEND 1992	GEARCASE
V90SLETE 1993	GEARCASE
VE100SLEIE 1991	GEARCASE
VE100SLEND 1992	GEARCASE
VE100SLESB 1990	GEARCASE
VE100SLETS 1993	GEARCASE
VE115TLEIE 1991	GEARCASE
VE115TLESB 1990	GEARCASE
VE115TLETS 1993	GEARCASE
VE115TXEIE 1991	GEARCASE
VE115TXESB 1990	GEARCASE
VE120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
VE120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VE120TLESB 1990	GEARCASE - 120TL & TX/140 TL
VE120TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
VE120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VE120TXESB 1990	GEARCASE - 120TL & TX/140 TL
VE120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TLEID 1991	GEARCASE - 120TL & TX/140 TL
VE140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VE140TLESE 1990	GEARCASE - 120TL & TX/140 TL
VE140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TXEID 1991	GEARCASE - 120TL & TX/140 TL
VE140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL

VE140TXESE 1990	GEARCASE - 120TL & TX/140 TL
VE140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE60ELEIB 1991	GEARCASE
VE60ELENE 1992	GEARCASE
VE60ELESB 1990	GEARCASE
VE60ELETD 1993	GEARCASE
VE60TLEIB 1991	GEARCASE
VE60TLENE 1992	GEARCASE
VE60TLESB 1990	GEARCASE
VE70ELEIE 1991	GEARCASE
VE70ELEND 1992	GEARCASE
VE70ELESB 1990	GEARCASE
VE70ELETB 1993	GEARCASE
VE70TLEIE 1991	GEARCASE
VE70TLEND 1992	GEARCASE
VE70TLESB 1990	GEARCASE
VE70TLETB 1993	GEARCASE
VE88MSLCCC 1988	GEARCASE
VE88MSLCER 1989	GEARCASE
VE88MSLESA 1990	GEARCASE
VE90MLEIE 1991	GEARCASE
VE90MLEND 1992	GEARCASE
VE90MLESB 1990	GEARCASE
VE90MLETB 1993	GEARCASE
VE90TLEIE 1991	GEARCASE
VE90TLEND 1992	GEARCASE
VE90TLESB 1990	GEARCASE
VE90TLETB 1993	GEARCASE
VJ100SLEIE 1991	GEARCASE
VJ100SLEND 1992	GEARCASE
VJ100SLESB 1990	GEARCASE
VJ100SLETB 1993	GEARCASE
VJ115TLAIE 1991	GEARCASE

VJ115TLAND 1992	GEARCASE
VJ115TLASB 1990	GEARCASE
VJ115TLATS 1993	GEARCASE
VJ115TLEIE 1991	GEARCASE
VJ115TLESB 1990	GEARCASE
VJ115TLETS 1993	GEARCASE
VJ115TXEIE 1991	GEARCASE
VJ115TXESB 1990	GEARCASE
VJ120TLAIE 1991	GEARCASE - 120TL & TX/140 TL
VJ120TLAND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ120TLASB 1990	GEARCASE - 120TL & TX/140 TL
VJ120TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TLATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
VJ120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ120TLESB 1990	GEARCASE - 120TL & TX/140 TL
VJ120TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
VJ120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ120TXESB 1990	GEARCASE - 120TL & TX/140 TL
VJ120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ140TLAID 1991	GEARCASE - 120TL & TX/140 TL
VJ140TLANS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ140TLASE 1990	GEARCASE - 120TL & TX/140 TL
VJ140TLEID 1991	GEARCASE - 120TL & TX/140 TL
VJ140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ140TLESE 1990	GEARCASE - 120TL & TX/140 TL
VJ140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY

VJ140TXEID 1991	GEARCASE - 120TL & TX/140 TL
VJ140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ140TXESE 1990	GEARCASE - 120TL & TX/140 TL
VJ140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ60ELEIB 1991	GEARCASE
VJ60ELENE 1992	GEARCASE
VJ60ELESB 1990	GEARCASE
VJ60ELETB 1993	GEARCASE
VJ60TLEIB 1991	GEARCASE
VJ60TLENE 1992	GEARCASE
VJ60TLESB 1990	GEARCASE
VJ70ELEIE 1991	GEARCASE
VJ70ELEND 1992	GEARCASE
VJ70ELESB 1990	GEARCASE
VJ70ELETB 1993	GEARCASE
VJ70TLEIE 1991	GEARCASE
VJ70TLEND 1992	GEARCASE
VJ70TLESB 1990	GEARCASE
VJ70TLETB 1993	GEARCASE
VJ88MSLCCC 1988	GEARCASE
VJ88MSLCER 1989	GEARCASE
VJ88MSLESA 1990	GEARCASE
VJ90MLEIE 1991	GEARCASE
VJ90MLEND 1992	GEARCASE
VJ90MLESB 1990	GEARCASE
VJ90MLETB 1993	GEARCASE
VJ90TLAIE 1991	GEARCASE
VJ90TLAND 1992	GEARCASE
VJ90TLASB 1990	GEARCASE
VJ90TLATS 1993	GEARCASE
VJ90TLEIE 1991	GEARCASE
VJ90TLEND 1992	GEARCASE
VJ90TLESB 1990	GEARCASE

VJ90TLETS 1993	GEARCASE
VUFM-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
VUFM-10S 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
VUFP-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
WUFM-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
WUPM-10C 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
XE112TSLEDR 1996	GEARCASE
XE112TSLEOC 1995	GEARCASE
XE112TSLERS 1994	GEARCASE
XE112TSXEDR 1996	GEARCASE
XE112TSXEOC 1995	GEARCASE
XE112TSXERS 1994	GEARCASE
XE115HLECM 1998	GEARCASE
XE115HLEUA 1997	GEARCASE
XE115HXECM 1998	GEARCASE
XE115HXEUA 1997	GEARCASE
XE88TSLEDR 1996	GEARCASE
XE88TSLEOC 1995	GEARCASE
XE88TSLERS 1994	GEARCASE
XE90TSLECM 1998	GEARCASE
XE90TSLEUA 1997	GEARCASE
XJ112TSLEDR 1996	GEARCASE
XJ112TSLEOC 1995	GEARCASE
XJ112TSLERS 1994	GEARCASE
XJ112TSXEDR 1996	GEARCASE
XJ112TSXEOC 1995	GEARCASE
XJ112TSXERS 1994	GEARCASE
XJ115HLECM 1998	GEARCASE
XJ115HLEUA 1997	GEARCASE
XJ115HXECM 1998	GEARCASE
XJ115HXEUA 1997	GEARCASE
XJ88TSLEDR 1996	GEARCASE
XJ88TSLEOC 1995	GEARCASE

XJ88TSLERS 1994	GEARCASE
XJ90TSLECM 1998	GEARCASE
XJ90TSLEUA 1997	GEARCASE
XUFM-20C 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
XUFM-20S 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
XUFM-21A 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
XUFM-21R 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
XUFP-21A 1972	LOWER GEARCASE GROUP 100,120,155,165,225&245 HP STERN DRIVE
XUFR-20C 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP
XUFR-20S 1971	LOWER GEARCASE GROUP 120,155,215 & 235 HP