

Where Used: Part Number 0384195

Model Name	Diagram
100193A 1971	GEARCASE
100193C 1971	GEARCASE
100293R 1972	GEARCASE
100990S 1979	GEARCASE
100993S 1979	GEARCASE
100999S 1979	GEARCASE
100ESL71A 1971	GEARCASE
100ESL71C 1971	GEARCASE
100ESL72R 1972	GEARCASE
100ML79S 1979	GEARCASE
100TLR79S 1979	GEARCASE
100TXLR79S 1979	GEARCASE
115083D 1970	GEARCASE GROUP
115393M 1973	GEARCASE
115493B 1974	GEARCASE GROUP
115593 1975	GEARCASE
115693D 1976	GEARCASE
115693G 1976	GEARCASE
115699D 1976	GEARCASE
115699G 1976	GEARCASE
115790S 1977	GEARCASE
115793S 1977	GEARCASE
115799S 1977	GEARCASE
115890C 1978	GEARCASE
115893C 1978	GEARCASE
115899C 1978	GEARCASE
115983E 1969	GEARCASE GROUP
115983S 1969	GEARCASE GROUP
115990R 1979	GEARCASE
115993R 1979	GEARCASE
115999R 1979	GEARCASE
115EL77S 1977	GEARCASE
115ESL69E 1969	GEARCASE GROUP

115ESL69S 1969	GEARCASE GROUP
115ESL70D 1970	GEARCASE GROUP
115ESL73M 1973	GEARCASE
115ESL74B 1974	GEARCASE
115ESL75E 1975	GEARCASE
115ETL74B 1974	GEARCASE
115ETL75E 1975	GEARCASE
115ETL77 1977	GEARCASE
115ETZ78C 1978	GEARCASE
115ML78C 1978	GEARCASE
115ML79R 1979	GEARCASE
115TL79R 1979	GEARCASE
115TXL77S 1977	GEARCASE
115TXL78C 1978	GEARCASE
115TXL79R 1979	GEARCASE
120FTHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
120FTHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
125183C 1971	GEARCASE
125283R 1972	GEARCASE
125ESL71C 1971	GEARCASE
125ESL72R 1972	GEARCASE
135383M 1973	GEARCASE
135443B 1974	GEARCASE
135483B 1974	GEARCASE
135489B 1974	GEARCASE
135543E 1975	GEARCASE
135583E 1975	GEARCASE
135589E 1975	GEARCASE
135643D 1976	GEARCASE
135643G 1976	GEARCASE
135683D 1976	GEARCASE
135683G 1976	GEARCASE
135ESL73M 1973	GEARCASE
135ESL74B 1974	GEARCASE
135ESL75E 1975	GEARCASE

135ETL74B 1974	GEARCASE
135ETL75E 1975	GEARCASE
140740S 1977	GEARCASE
140743S 1977	GEARCASE
140783S 1977	GEARCASE
140840C 1978	GEARCASE
140843C 1978	GEARCASE
140883C 1978	GEARCASE
140940R 1979	GEARCASE
140943R 1979	GEARCASE
140983R 1979	GEARCASE
140FTHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140FTHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140ML77S 1977	GEARCASE
140ML78C 1978	GEARCASE
140ML79R 1979	GEARCASE
140SPHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140SPHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140STHRCIF 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140STHRCIS 1981	LOWER GEARCASE 120,140 MODELS STERN DRIVE
140TL77S 1977	GEARCASE
140TL78C 1978	GEARCASE
140TL79R 1979	GEARCASE
140TX78C 1978	GEARCASE
140TXL77S 1977	GEARCASE
140TXL79R 1979	GEARCASE
232AMFTC 1987	LOWER GEARCASE
232AMRGDE 1988	LOWER GEARCASE
232AMRGDP 1988	LOWER GEARCASE
232APFTC 1987	LOWER GEARCASE
232APRGDE 1988	LOWER GEARCASE
232APRGDP 1988	LOWER GEARCASE
232APSRC 1987	LOWER GEARCASE
232BMRMED 1989	LOWER GEARCASE
232BMRMEF 1989	LOWER GEARCASE

232BMRPWS 1990	LOWER GEARCASE
232BPRMED 1989	LOWER GEARCASE
232BPRMEF 1989	LOWER GEARCASE
232BPRPWS 1990	LOWER GEARCASE
252AMKWB 1986	LOWER GEARCASE
252APKWB 1986	LOWER GEARCASE
252FTHRCNC 1982	LOWER GEARCASE GROUP
252FTHRCNG 1982	LOWER GEARCASE GROUP
252FTHRCOM 1985	LOWER GEARCASE GROUP
252FTHRCRA 1984	LOWER GEARCASE GROUP
252FTHRCTR 1983	LOWER GEARCASE GROUP
252STHRCNC 1982	LOWER GEARCASE GROUP
252STHRCOM 1985	LOWER GEARCASE GROUP
252STHRCRA 1984	LOWER GEARCASE GROUP
252STHRCTR 1983	LOWER GEARCASE GROUP
302AMARJ 1987	LOWER GEARCASE
302AMARY 1987	LOWER GEARCASE
302AMFTC 1987	LOWER GEARCASE
302AMKWB 1986	LOWER GEARCASE
302AMRGDP 1988	LOWER GEARCASE
302AMRMED 1989	LOWER GEARCASE
302APARY 1987	LOWER GEARCASE
302APFTC 1987	LOWER GEARCASE
302APKWB 1986	LOWER GEARCASE
302APRGDP 1988	LOWER GEARCASE
302APRMED 1989	LOWER GEARCASE
302APSRC 1987	LOWER GEARCASE
302ARSRY 1987	LOWER GEARCASE
302FPHRCNC 1982	LOWER GEARCASE GROUP
302FPHRCNG 1982	LOWER GEARCASE GROUP
302FPHRCTR 1983	LOWER GEARCASE GROUP
302FTHRCNC 1982	LOWER GEARCASE GROUP
302FTHRCNG 1982	LOWER GEARCASE GROUP
302FTHRCOM 1985	LOWER GEARCASE GROUP
302FTHRCRA 1984	LOWER GEARCASE GROUP

302FTHRCTR 1983	LOWER GEARCASE GROUP
302SPHRCNC 1982	LOWER GEARCASE GROUP
302SPHRCNG 1982	LOWER GEARCASE GROUP
302SPHRCOM 1985	LOWER GEARCASE GROUP
302SPHRCRA 1984	LOWER GEARCASE GROUP
302SPHRCTR 1983	LOWER GEARCASE GROUP
302STHRCNC 1982	LOWER GEARCASE GROUP
302STHRCNG 1982	LOWER GEARCASE GROUP
302STHRCOM 1985	LOWER GEARCASE GROUP
302STHRCRA 1984	LOWER GEARCASE GROUP
302STHRCTR 1983	LOWER GEARCASE GROUP
85093B 1970	GEARCASE GROUP
85093D 1970	GEARCASE GROUP
85193A 1971	GEARCASE
85193H 1971	GEARCASE
85293R 1972	GEARCASE
85393M 1973	GEARCASE
85493B 1974	GEARCASE
85593E 1975	GEARCASE
85693D 1976	GEARCASE
85693G 1976	GEARCASE
85699G 1976	GEARCASE
85790S 1977	GEARCASE
85793S 1977	GEARCASE
85799S 1977	GEARCASE
85890C 1978	GEARCASE
85895C 1978	GEARCASE
85899C 1978	GEARCASE
85990R 1979	GEARCASE
85993E 1969	GEARCASE GROUP
85993M 1969	GEARCASE GROUP
85993S 1969	GEARCASE GROUP
85995R 1979	GEARCASE
85999R 1979	GEARCASE
85EL76D 1976	GEARCASE

85EL76G 1976	GEARCASE
85EL77S 1977	GEARCASE
85ESL69E 1969	GEARCASE GROUP
85ESL69M 1969	GEARCASE GROUP
85ESL69S 1969	GEARCASE GROUP
85ESL70B 1970	GEARCASE GROUP
85ESL70D 1970	GEARCASE GROUP
85ESL71A 1971	GEARCASE
85ESL71H 1971	GEARCASE
85ESL72R 1972	GEARCASE
85ESL73M 1973	GEARCASE
85ESL74B 1974	GEARCASE
85ESL75E 1975	GEARCASE
85ETLR76D 1976	GEARCASE
85ETLR76G 1976	GEARCASE
85ETLR77S 1977	GEARCASE
85ETLR78C 1978	GEARCASE
85ML78C 1978	GEARCASE
85ML79R 1979	GEARCASE
85TL79R 1979	GEARCASE
85TXL79R 1979	GEARCASE
85TXLR77S 1977	GEARCASE
85TXLR78C 1978	GEARCASE
990242C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990242C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990242D 1978	LOWER GEARCASE
990242H 1978	LOWER GEARCASE
990242H1 1978	LOWER GEARCASE
990242S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990242S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990243C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990243C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990243D 1978	LOWER GEARCASE
990243H 1978	LOWER GEARCASE
990243H1 1978	LOWER GEARCASE

990243S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990243S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990244C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990244C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990244D 1978	LOWER GEARCASE
990244H 1978	LOWER GEARCASE
990244H1 1978	LOWER GEARCASE
990244P 1978	LOWER GEARCASE
990244S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990244S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990245C 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990245C1 1980	LOWER GEARCASE 120,140 MODELS STERN DRIVE
990245D 1978	LOWER GEARCASE
990245H 1978	LOWER GEARCASE
990245H1 1978	LOWER GEARCASE
990245S 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
990245S1 1979	LOWER GEARCASE 120 & 140 MODELS STERN DRIVE
A115DGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115DSLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHlafH	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHlafI	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHlafK	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115GHlafL	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHlafH	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHlafI	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHlafK	07-1_GEARCASE, (0.42 Ratio) S2-Type
A115SHlafL	07-1_GEARCASE, (0.42 Ratio) S2-Type
BE115ELEDR 1996	GEARCASE - 20 IN. MODELS
BE115ELEUA 1997	GEARCASE - 20 IN. MODELS
BE115ELEUC 1997	GEARCASE - 20 IN. MODELS
BE115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BE115GLEDR 1996	GEARCASE - 20 IN. MODELS
BE115GLEUA 1997	GEARCASE - 20 IN. MODELS
BE115GLEUC 1997	GEARCASE - 20 IN. MODELS
BE115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS

BE115SXEDR 1996	GEARCASE - 20 IN. MODELS
BE115SXEU 1997	GEARCASE - 20 IN. MODELS
BE115SXEU 1997	GEARCASE - 20 IN. MODELS
BE115TLED 1996	GEARCASE
BE90ELED 1996	GEARCASE - 20 IN. MODELS
BE90EUE 1997	GEARCASE - 20 IN. MODELS
BE90EUE 1997	GEARCASE - 20 IN. MODELS
BE90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BE90SLED 1996	GEARCASE - 20 IN. MODELS
BE90SUE 1997	GEARCASE - 20 IN. MODELS
BE90SUE 1997	GEARCASE - 20 IN. MODELS
BE90SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BE90SXEU 1997	GEARCASE - 20 IN. MODELS
BE90SXEU 1997	GEARCASE - 20 IN. MODELS
BE90TLED 1996	GEARCASE
BJ115ELED 1996	GEARCASE - 20 IN. MODELS
BJ115EUE 1997	GEARCASE - 20 IN. MODELS
BJ115EUE 1997	GEARCASE - 20 IN. MODELS
BJ115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BJ115GLED 1996	GEARCASE - 20 IN. MODELS
BJ115GUE 1997	GEARCASE - 20 IN. MODELS
BJ115GUE 1997	GEARCASE - 20 IN. MODELS
BJ115PLEEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ115PLSIE elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ115PXEEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BJ115SXED 1996	GEARCASE - 20 IN. MODELS
BJ115SXEU 1997	GEARCASE - 20 IN. MODELS
BJ115SXEU 1997	GEARCASE - 20 IN. MODELS
BJ115TLED 1996	GEARCASE
BJ115VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90ELED 1996	GEARCASE - 20 IN. MODELS

BJ90ELEUA 1997	GEARCASE - 20 IN. MODELS
BJ90ELEUC 1997	GEARCASE - 20 IN. MODELS
BJ90PLEEB 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ90PLSID elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90PXEEB 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
BJ90PXSSSE Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
BJ90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BJ90SLEDR 1996	GEARCASE - 20 IN. MODELS
BJ90SLEUA 1997	GEARCASE - 20 IN. MODELS
BJ90SLEUC 1997	GEARCASE - 20 IN. MODELS
BJ90SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
BJ90SXEUA 1997	GEARCASE - 20 IN. MODELS
BJ90SXEUC 1997	GEARCASE - 20 IN. MODELS
BJ90TLEDA 1996	GEARCASE
BJ90VLSIC elec start, TNT, 20 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90VXSIC elec start, TNT, 25 in shaft, wht, n/a usa 2001	GEARCASE - 90 - 115 PL - VL MODELS
BJ90VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
E100FPLSOC	GEARCASE - FPL, FSL MODELS
E100FPLSOC - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E100FPLSRS	GEARCASE - FPL, FSL MODELS
E100FPLSRS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E100FSLSOC	GEARCASE - FPL, FSL MODELS
E100FSLSOC - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E100FSLSRS	GEARCASE - FPL, FSL MODELS
E100FSLSRS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E100MLCSC 1980	GEARCASE
E100STLCCA 1988	GEARCASE
E100STLCEM 1989	GEARCASE
E100STLEIE 1991	GEARCASE
E100STLEND 1992	GEARCASE
E100STLERC 1994	GEARCASE
E100STLESB 1990	GEARCASE
E100STLETS 1993	GEARCASE
E100TLCSC 1980	GEARCASE

E100TXCSC 1980	GEARCASE
E100WQLECS 1998	GEARCASE -- 100WQL MODELS
E100WQXECS 1998	GEARCASE -- 100WQL MODELS
E110MLCCA 1988	GEARCASE
E110MLCDC 1986	GEARCASE
E110MLCEM 1989	GEARCASE
E110MLCUR 1987	GEARCASE
E110TLCCA 1988	GEARCASE
E110TLCDC 1986	GEARCASE
E110TLCDF 1986	GEARCASE
E110TLCEM 1989	GEARCASE
E110TLCUR 1987	GEARCASE
E110TXCCA 1988	GEARCASE
E110TXCEM 1989	GEARCASE
E110TXCUR 1987	GEARCASE
E112TSLEDR 1996	GEARCASE
E112TSLEOC 1995	GEARCASE
E112TSLERS 1994	GEARCASE
E112TSXEDR 1996	GEARCASE
E112TSXEOC 1995	GEARCASE
E112TSXERS 1994	GEARCASE
E115DGLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFH	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFI	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFK	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DGLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DHIAAA	07-1_GEARCASE, S2-Type
E115DHIAAB	07-1_GEARCASE, S2-Type
E115DHILABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DHILABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DHILAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DHILAIR	GEARCASE, S2-Type
E115DHILAIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2

E115DHLINA	GEARCASE, S2-Type
E115DHLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DHLISC	GEARCASE
E115DHLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DHLISF	GEARCASE
E115DHLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DHLSES	GEARCASE
E115DHLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLAAA	07-1_GEARCASE, S2-Type
E115DPLAAB	07-1_GEARCASE, S2-Type
E115DPLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DPLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DPLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DPLIIB	GEARCASE, S2-Type
E115DPLIIB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLINE	GEARCASE, S2-Type
E115DPLINE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLISF	GEARCASE
E115DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLISM	GEARCASE
E115DPLISM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLSCR	GEARCASE
E115DPLSCR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLSEF	GEARCASE
E115DPLSEF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DPLSUC	GEARCASE
E115DPLSUC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E115DSLAAA	07-1_GEARCASE, S2-Type
E115DSLAAAB	07-1_GEARCASE, S2-Type
E115DSLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DSLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115DSLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFH	07-1_GEARCASE, (0.42 Ratio) S2-Type

E115DSLAFI	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFK	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLAFI	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115DSLIIIB	GEARCASE, S2-Type
E115DSLIIIB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLIIIB	GEARCASE, S2-Type
E115DSLIIIB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLISF	GEARCASE
E115DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLISM	GEARCASE
E115DSLISM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLSCR	GEARCASE
E115DSLSCR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DSLSEF	GEARCASE
E115DSLSEF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115DLSUC	GEARCASE
E115DLSUC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E115ELECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115ELED 1996	GEARCASE - 20 IN. MODELS
E115ELEOC 1995	GEARCASE - 20 IN. MODELS
E115ELEUA 1997	GEARCASE - 20 IN. MODELS
E115ELEUC 1997	GEARCASE - 20 IN. MODELS
E115FPLEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FPLEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FPLSDS	GEARCASE - PL, SL MODELS
E115FPLSDS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E115FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E115FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E115FPLSOD	GEARCASE - FPL, FSL MODELS
E115FPLSOD - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E115FPLSRE	GEARCASE - FPL, FSL MODELS
E115FPLSRE - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS

E115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPLSTB	GEARCASE - FPL, FSL MODELS
E115FPLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FPXEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FPXEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FPXSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E115FPXSNF Ficht Fuel Injection, 25 in., White, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E115FPXSSH FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPXSSR FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FPXSTB	GEARCASE - FPL, FSL MODELS
E115FPXSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FSLECS 1998	GEARCASE -- FSL, FTL MODELS
E115FSLEEC 1999	GEARCASE -- FPL, FSL MODELS
E115FSLEEN 1999	GEARCASE -- FPL, FSL MODELS
E115FSLSDS	GEARCASE - PL, SL MODELS
E115FSLSDS - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E115FSLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E115FSLSOD	GEARCASE - FPL, FSL MODELS
E115FSLSOD - FR	07-1_BOÎTIER D'ENGRENAGES - FPL, FSL MODELES
E115FSLSRE	GEARCASE - FPL, FSL MODELS
E115FSLSRE - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL et FSL
E115FSLSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FSLSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E115FSLSTB	GEARCASE - FPL, FSL MODELS
E115FSLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E115FSXECS 1998	GEARCASE -- FSL, FTL MODELS
E115FTLECS 1998	GEARCASE -- FSL, FTL MODELS
E115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115GLEDR 1996	GEARCASE - 20 IN. MODELS
E115GLEOC 1995	GEARCASE - 20 IN. MODELS
E115GLEUA 1997	GEARCASE - 20 IN. MODELS
E115GLEUC 1997	GEARCASE - 20 IN. MODELS
E115GNLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type

E115HGLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115HGLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLAAA	07-1_GEARCASE, S2-Type
E115HSLAAB	07-1_GEARCASE, S2-Type
E115HSLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115HSLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E115HSLIIR	GEARCASE, S2-Type
E115HSLIIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLINA	GEARCASE, S2-Type
E115HSLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLISC	GEARCASE
E115HSLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLISF	GEARCASE
E115HSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115HSLSES	GEARCASE
E115HSLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E115JKLEOC 1995	GEARCASE
E115JKLERS 1994	GEARCASE
E115JLEDA 1996	GEARCASE
E115JLEIE 1991	GEARCASE
E115JLEND 1992	GEARCASE
E115JLEOR 1995	GEARCASE
E115JLERC 1994	GEARCASE
E115JLETS 1993	GEARCASE
E115JTLECS 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115MLCIH 1981	GEARCASE
E115MLCIM 1981	GEARCASE
E115MLCNB 1982	GEARCASE
E115MLCOS 1985	GEARCASE
E115MLCRD 1984	GEARCASE
E115MLCSA 1980	GEARCASE
E115MLCTE 1983	GEARCASE
E115MLEIE 1991	GEARCASE

E115MLEND 1992	GEARCASE
E115MLEOR 1995	GEARCASE
E115MLERS 1994	GEARCASE
E115MLESB 1990	GEARCASE
E115MLETS 1993	GEARCASE
E115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115SLEDR 1996	GEARCASE - 20 IN. MODELS
E115SLEOC 1995	GEARCASE - 20 IN. MODELS
E115SLEUA 1997	GEARCASE - 20 IN. MODELS
E115SLEUC 1997	GEARCASE - 20 IN. MODELS
E115SNLAFL	07-1_GEARCASE, (0.42 Ratio) S2-Type
E115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E115SXEDR 1996	GEARCASE - 20 IN. MODELS
E115SXEOC 1995	GEARCASE - 20 IN. MODELS
E115SXEUA 1997	GEARCASE - 20 IN. MODELS
E115SXEUC 1997	GEARCASE - 20 IN. MODELS
E115TLCIH 1981	GEARCASE
E115TLCIM 1981	GEARCASE
E115TLCNB 1982	GEARCASE
E115TLCOS 1985	GEARCASE
E115TLCRD 1984	GEARCASE
E115TLCSA 1980	GEARCASE
E115TLCTE 1983	GEARCASE
E115TLEDA 1996	GEARCASE
E115TLEIE 1991	GEARCASE
E115TLEND 1992	GEARCASE
E115TLEOR 1995	GEARCASE
E115TLERC 1994	GEARCASE
E115TLESB 1990	GEARCASE
E115TLETS 1993	GEARCASE
E115TSLECM 1998	GEARCASE
E115TSLEUA 1997	GEARCASE
E115TSXECM 1998	GEARCASE
E115TSXEUA 1997	GEARCASE
E115TXADA 1996	GEARCASE

E115TXAOR 1995	GEARCASE
E115TXARS 1994	GEARCASE
E115TXATS 1993	GEARCASE
E115TXCIH 1981	GEARCASE
E115TXCIM 1981	GEARCASE
E115TXCNB 1982	GEARCASE
E115TXCRD 1984	GEARCASE
E115TXCSA 1980	GEARCASE
E115TXCTE 1983	GEARCASE
E115TXEIE 1991	GEARCASE
E115TXEND 1992	GEARCASE
E115TXESB 1990	GEARCASE
E120TLCCA 1988	GEARCASE - 120TL & TX/140 TL
E120TLCDC 1986	GEARCASE
E120TLCEM 1989	GEARCASE - 120TL & TX/140 TL
E120TLCUR 1987	GEARCASE
E120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
E120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E120TLERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TLESB 1990	GEARCASE - 120TL & TX/140 TL
E120TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXCCA 1988	GEARCASE - 120TL & TX/140 TL
E120TXCDC 1986	GEARCASE
E120TXCEM 1989	GEARCASE - 120TL & TX/140 TL
E120TXCUR 1987	GEARCASE
E120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
E120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL

E120TXERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E120TXESB 1990	GEARCASE - 120TL & TX/140 TL
E120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E125ESXENR 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E125ESXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E125ESXESS 1990	GEARCASE - ESX MODELS ONLY
E125ESXETA 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E125ESXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E125ESXW 1989	GEARCASE - ESX MODELS ONLY
E130DGLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DGLAFL	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DPLAAA	07-1_GEARCASE, S2-Type
E130DPLAAB	07-1_GEARCASE, S2-Type
E130DPLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DPLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DPLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DPLIIR	GEARCASE, S2-Type
E130DPLIIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLINA	GEARCASE, S2-Type
E130DPLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLISC	GEARCASE
E130DPLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLISF	GEARCASE
E130DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DPLSES	GEARCASE
E130DPLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLAAA	07-1_GEARCASE, S2-Type

E130DSLAAAB	07-1_GEARCASE, S2-Type
E130DSLABA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAF A	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAF F	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLAF L	07-1_GEARCASE, (0.50 Ratio) S2-Type
E130DSLIIR	GEARCASE, S2-Type
E130DSLIIR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLINA	GEARCASE, S2-Type
E130DSLINA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLISC	GEARCASE
E130DSLISC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLISF	GEARCASE
E130DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E130DSLSES	GEARCASE
E130DSLSES - FR	07-1_BOÎTIER D'ENGRENAGES, de type S2
E140CXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140CXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140CXCCS 1988	GEARCASE - 120TL & TX/140 TL
E140CXCEC 1989	GEARCASE - 120TL & TX/140 TL
E140CXEIA 1991	GEARCASE - 120TL & TX/140 TL
E140CXENM 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E140CXERE 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140CXESR 1990	GEARCASE - 120TL & TX/140 TL
E140CXETB 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140CXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140MLCIH 1981	GEARCASE

E140MLCIM 1981	GEARCASE
E140MLCNB 1982	GEARCASE
E140MLCSA 1980	GEARCASE
E140MLCTE 1983	GEARCASE
E140TLATC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TLCCM 1988	GEARCASE - 120TL & TX/140 TL
E140TLCDC 1986	GEARCASE
E140TLCEB 1989	GEARCASE - 120TL & TX/140 TL
E140TLCRD 1984	GEARCASE
E140TLCUA 1987	GEARCASE
E140TLEID 1991	GEARCASE - 120TL & TX/140 TL
E140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E140TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TLERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TLESE 1990	GEARCASE - 120TL & TX/140 TL
E140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TRLCIH 1981	GEARCASE
E140TRLCIM 1981	GEARCASE
E140TRLCNB 1982	GEARCASE
E140TRLCSA 1980	GEARCASE
E140TRLCTE 1983	GEARCASE
E140TRXCIH 1981	GEARCASE
E140TRXCIM 1981	GEARCASE
E140TRXCNB 1982	GEARCASE
E140TRXCSA 1980	GEARCASE
E140TRXCTE 1983	GEARCASE
E140TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY

E140TXCCM 1988	GEARCASE - 120TL & TX/140 TL
E140TXCDC 1986	GEARCASE
E140TXCEB 1989	GEARCASE - 120TL & TX/140 TL
E140TXCRD 1984	GEARCASE
E140TXCUA 1987	GEARCASE
E140TXEID 1991	GEARCASE - 120TL & TX/140 TL
E140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
E140TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
E140TXESE 1990	GEARCASE - 120TL & TX/140 TL
E140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
E60HGLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HGLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HGLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HSLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HSLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E60HSLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65GNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E65SNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E75DPGLAFA	07-1_GEARCASE, (0.50 Ratio) S-Type

E75DPGLAFB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFC	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFF	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPGLAFG	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DPLIIS	GEARCASE, S-Type
E75DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLINC	GEARCASE, S-Type
E75DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLISD	GEARCASE - PL, SL MODELS
E75DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLISF	GEARCASE - PL, SL MODELS
E75DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSCB	GEARCASE - PL, SL MODELS
E75DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSDA	GEARCASE - PL, SL MODELS
E75DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E75DPLSEE	GEARCASE - PL, SL MODELS
E75DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DPLSOR	GEARCASE PL & SL MODELS
E75DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E75DPLSRC	GEARCASE PL & SL MODELS
E75DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL
E75DPLSUM	GEARCASE - PL, SL MODELS
E75DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLafa	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFB	07-1_GEARCASE, (0.50 Ratio) S-Type

E75DSLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLAFD	07-1_GEARCASE, (0.50 Ratio) S-Type
E75DSLIIA	GEARCASE, S-Type
E75DSLIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLINM	GEARCASE, S-Type
E75DSLINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLISF	GEARCASE - PL, SL MODELS
E75DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLISR	GEARCASE - PL, SL MODELS
E75DSLISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLSCS	GEARCASE - PL, SL MODELS
E75DSLSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75DSLSEC	GEARCASE - PL, SL MODELS
E75DSLSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E75FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E75FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E75FPLSTA	GEARCASE - FPL, FSL MODELS
E75FPLSTA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E75FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E85MLCSA 1980	GEARCASE
E85STLCSA 1980	GEARCASE
E85STXCSEA 1980	GEARCASE
E85TTLEIE 1991	GEARCASE
E85TTLEND 1992	GEARCASE
E85TTLEOR 1995	GEARCASE
E85TTLERC 1994	GEARCASE
E85TTLETS 1993	GEARCASE
E88MSLCCC 1988	GEARCASE
E88MSLCER 1989	GEARCASE
E88MSLCUS 1987	GEARCASE

E88MSLEDC 1996	GEARCASE
E88MSLEIM 1991	GEARCASE
E88MSLENB 1992	GEARCASE
E88MSLEOS 1995	GEARCASE
E88MSLERD 1994	GEARCASE
E88MSLESA 1990	GEARCASE
E88MSLETE 1993	GEARCASE
E88TSLEDR 1996	GEARCASE
E88TSLEOC 1995	GEARCASE
E88TSLERS 1994	GEARCASE
E90DHLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90DHLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90DPGLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPGLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DPLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DPLIIS	GEARCASE, S-Type
E90DPLIIS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLINC	GEARCASE, S-Type
E90DPLINC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLISD	GEARCASE - PL, SL MODELS
E90DPLISD - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLISF	GEARCASE - PL, SL MODELS
E90DPLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSCB	GEARCASE - PL, SL MODELS
E90DPLSCB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSDA	GEARCASE - PL, SL MODELS
E90DPLSDA - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E90DPLSEE	GEARCASE - PL, SL MODELS

E90DPLSEE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DPLSOR	GEARCASE PL & SL MODELS
E90DPLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E90DPLSRC	GEARCASE PL & SL MODELS
E90DPLSRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL
E90DPLSUM	GEARCASE - PL, SL MODELS
E90DPLSUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLAAA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLAAA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLABA	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLABB	07-1_GEARCASE, (0.50 Ratio) S-Type
E90DSLafa	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFc	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFf	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLAFg	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90DSLIIID	GEARCASE, S-Type
E90DSLIIID - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLINS	GEARCASE, S-Type
E90DSLINS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLISE	GEARCASE - PL, SL MODELS
E90DSLISE - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLISF	GEARCASE - PL, SL MODELS
E90DSLISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLSCM	GEARCASE - PL, SL MODELS
E90DSLSCM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLSDR	GEARCASE - PL, SL MODELS
E90DSLSDR - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL, SL
E90DSLSEB	GEARCASE - PL, SL MODELS
E90DSLSEB - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90DSLsoc	GEARCASE PL & SL MODELS
E90DLSOR - FR	07-1_BOÎTIER D'ENGRENAGES PL & SL MODELES
E90DLSRC	GEARCASE PL & SL MODELS
E90DLSRC - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles PL et SL

E90DSLSUA	GEARCASE - PL, SL MODELS
E90DSL SUM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90ELECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E90ELED R 1996	GEARCASE - 20 IN. MODELS
E90ELEOC 1995	GEARCASE - 20 IN. MODELS
E90ELEUA 1997	GEARCASE - 20 IN. MODELS
E90ELEUC 1997	GEARCASE - 20 IN. MODELS
E90EXEOC 1995	GEARCASE - 20 IN. MODELS
E90FPLEEC 1999	GEARCASE -- FPL, FSL MODELS
E90FPLEEN 1999	GEARCASE -- FPL, FSL MODELS
E90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E90FPLSNF - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL
E90FPLSNF Ficht Fuel Injection, 20 in., Blue, Remote, Elec, TNT 2002	GEARCASE - FPL, MODELS
E90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
E90FPLSTB	GEARCASE - FPL, FSL MODELS
E90FPLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E90FSLECS 1998	GEARCASE -- FSL, FTL MODELS
E90FSLSTB	GEARCASE - FPL, FSL MODELS
E90FSLSTB - FR	07-1_BOÎTIER D'ENGRENAGES - Modèles FPL, FSL
E90FTLECS 1998	GEARCASE -- FSL, FTL MODELS
E90FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
E90GLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90GNLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90HGLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type

E90HGLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HGLAFL	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFA	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFB	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFF	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFH	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFI	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFK	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90HSLAFL	07-1_GEARCASE, (0.50 Ratio) S2-Type
E90JLEIE 1991	GEARCASE
E90JLEND 1992	GEARCASE
E90JLEOR 1995	GEARCASE
E90JLERC 1994	GEARCASE
E90JLETS 1993	GEARCASE
E90MLCDC 1986	GEARCASE
E90MLCIH 1981	GEARCASE
E90MLCIM 1981	GEARCASE
E90MLCNB 1982	GEARCASE
E90MLCOS 1985	GEARCASE
E90MLCRD 1984	GEARCASE
E90MLCTE 1983	GEARCASE
E90MLCUR 1987	GEARCASE
E90MLEOR 1995	GEARCASE
E90MLERC 1994	GEARCASE
E90SLABA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
E90SLEDR 1996	GEARCASE - 20 IN. MODELS
E90SLEOC 1995	GEARCASE - 20 IN. MODELS
E90SLEUA 1997	GEARCASE - 20 IN. MODELS
E90SLEUC 1997	GEARCASE - 20 IN. MODELS

E90SNLABA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLABB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFA	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFB	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFC	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFD	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFF	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90SNLAFG	07-1_GEARCASE, (0.42 Ratio) S2-Type
E90TLCCA 1988	GEARCASE
E90TLCDC 1986	GEARCASE
E90TLCEM 1989	GEARCASE
E90TLCIH 1981	GEARCASE
E90TLCIM 1981	GEARCASE
E90TLCNB 1982	GEARCASE
E90TLCOS 1985	GEARCASE
E90TLCRD 1984	GEARCASE
E90TLCTE 1983	GEARCASE
E90TLCUR 1987	GEARCASE
E90TLEDA 1996	GEARCASE
E90TLEIE 1991	GEARCASE
E90TLEND 1992	GEARCASE
E90TLEOR 1995	GEARCASE
E90TLERC 1994	GEARCASE
E90TLESB 1990	GEARCASE
E90TLETS 1993	GEARCASE
E90TSLECM 1998	GEARCASE
E90TSLEUA 1997	GEARCASE
E90TXARC 1994	GEARCASE
E90TXATS 1993	GEARCASE
E90TXCDC 1986	GEARCASE
E90TXCIH 1981	GEARCASE
E90TXCIM 1981	GEARCASE
E90TXCNB 1982	GEARCASE
E90TXCOS 1985	GEARCASE
E90TXCRD 1984	GEARCASE

E90TXCTE 1983	GEARCASE
E90WDELIIA	GEARCASE, S-Type
E90WDELIIA - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELINM	GEARCASE, S-Type
E90WDELINM - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELISF	GEARCASE - PL, SL MODELS
E90WDELISF - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELISR	GEARCASE - PL, SL MODELS
E90WDELISR - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELSCS	GEARCASE - PL, SL MODELS
E90WDELSCS - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
E90WDELSEC	GEARCASE - PL, SL MODELS
E90WDELSEC - FR	07-1_BOÎTIER D'ENGRENAGES, de type S
HE115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
HE115SLEDR 1996	GEARCASE - 20 IN. MODELS
HE115SLEUA 1997	GEARCASE - 20 IN. MODELS
HE115SLEUC 1997	GEARCASE - 20 IN. MODELS
HE115TXADA 1996	GEARCASE
HE88MSLEDC 1996	GEARCASE
HE90MLEDA 1996	GEARCASE
HE90TXADA 1996	GEARCASE
HJ115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
HJ115SLEDR 1996	GEARCASE - 20 IN. MODELS
HJ115SLEUA 1997	GEARCASE - 20 IN. MODELS
HJ115SLEUC 1997	GEARCASE - 20 IN. MODELS
HJ115TXADA 1996	GEARCASE
HJ88MSLEDC 1996	GEARCASE
HJ90MLEDA 1996	GEARCASE
HJ90TXADA 1996	GEARCASE
J100MLCSC 1980	GEARCASE
J100STLCCA 1988	GEARCASE
J100STLCEM 1989	GEARCASE
J100STLEIE 1991	GEARCASE
J100STLEND 1992	GEARCASE
J100STLERC 1994	GEARCASE

J100STLESB 1990	GEARCASE
J100STLETS 1993	GEARCASE
J100TRLCSC 1980	GEARCASE
J100TRXCSC 1980	GEARCASE
J100WQLECS 1998	GEARCASE -- 100WQL MODELS
J100WQXECS 1998	GEARCASE -- 100WQL MODELS
J110MLCCA 1988	GEARCASE
J110MLCDC 1986	GEARCASE
J110MLCEM 1989	GEARCASE
J110MLCUR 1987	GEARCASE
J110TLAEM 1989	GEARCASE
J110TLCCA 1988	GEARCASE
J110TLCDC 1986	GEARCASE
J110TLCDF 1986	GEARCASE
J110TLCEM 1989	GEARCASE
J110TLCUR 1987	GEARCASE
J110TXCCA 1988	GEARCASE
J110TXCEM 1989	GEARCASE
J110TXCUR 1987	GEARCASE
J112TSLEDR 1996	GEARCASE
J112TSLEOC 1995	GEARCASE
J112TSLERS 1994	GEARCASE
J112TSXEDR 1996	GEARCASE
J112TSXEOC 1995	GEARCASE
J112TSXERS 1994	GEARCASE
J115ELECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115ELEDR 1996	GEARCASE - 20 IN. MODELS
J115ELEOC 1995	GEARCASE - 20 IN. MODELS
J115ELEUA 1997	GEARCASE - 20 IN. MODELS
J115ELEUC 1997	GEARCASE - 20 IN. MODELS
J115FSLECS 1998	GEARCASE -- FSL, FTL MODELS
J115FSXECS 1998	GEARCASE -- FSL, FTL MODELS
J115FTLECS 1998	GEARCASE -- FSL, FTL MODELS
J115GLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115GLEDR 1996	GEARCASE - 20 IN. MODELS

J115GLEOC 1995	GEARCASE - 20 IN. MODELS
J115GLEUA 1997	GEARCASE - 20 IN. MODELS
J115GLEUC 1997	GEARCASE - 20 IN. MODELS
J115GLSDE	GEARCASE - PL, GL MODELS
J115GLSDE - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J115GLSOB	GEARCASE - PL, GL MODELS
J115GLSOB - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115GLSRC	GEARCASE - PL, GL MODELS
J115GLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115GLSTA	GEARCASE - PL, GL MODELS
J115GLSTA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115JKLEOC 1995	GEARCASE
J115JKLERS 1994	GEARCASE
J115JLEDA 1996	GEARCASE
J115JLEIE 1991	GEARCASE
J115JLEND 1992	GEARCASE
J115JLEOR 1995	GEARCASE
J115JLERC 1994	GEARCASE
J115JLETS 1993	GEARCASE
J115JPLEEC 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115JPLSIA jet drive, elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115JPLSSR Jet Drive, Elec. Start,TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115JTLECS 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115MLCIH 1981	GEARCASE
J115MLCIM 1981	GEARCASE
J115MLCNB 1982	GEARCASE
J115MLCOS 1985	GEARCASE
J115MLCRD 1984	GEARCASE
J115MLCSA 1980	GEARCASE
J115MLCTE 1983	GEARCASE
J115MLEIE 1991	GEARCASE
J115MLEND 1992	GEARCASE
J115MLEOR 1995	GEARCASE
J115MLERS 1994	GEARCASE
J115MLESB 1990	GEARCASE

J115MLETS 1993	GEARCASE
J115PLEEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115PLSDA	GEARCASE - PL, GL MODELS
J115PLSDA - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J115PLSIE elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J115PLSOR	GEARCASE - PL, GL MODELS
J115PLSOR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115PLSRC	GEARCASE - PL, GL MODELS
J115PLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J115PLSSB Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115PLSTS	GEARCASE - PL, GL MODELS
J115PLSTS - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115PXEEM 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115PXSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115PXSNF Carbureted, 25 in. shaft, White, Remote, Elec, TNT, 2002	GEARCASE - PLS, VLS MODELS
J115PXSSB Elec. Start, TNT, 25 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115PXSTS	GEARCASE - PL, GL MODELS
J115PXSTS - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J115SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115SLEDR 1996	GEARCASE - 20 IN. MODELS
J115SLEOC 1995	GEARCASE - 20 IN. MODELS
J115SLEUA 1997	GEARCASE - 20 IN. MODELS
J115SLEUC 1997	GEARCASE - 20 IN. MODELS
J115SPLEES 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J115SPLSSC Elec. Start, TNT, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115SXECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J115SXEDR 1996	GEARCASE - 20 IN. MODELS
J115SXEOC 1995	GEARCASE - 20 IN. MODELS
J115SXEUA 1997	GEARCASE - 20 IN. MODELS
J115SXEUC 1997	GEARCASE - 20 IN. MODELS
J115TLAIE 1991	GEARCASE
J115TLAND 1992	GEARCASE

J115TLARC 1994	GEARCASE
J115TLASB 1990	GEARCASE
J115TLATS 1993	GEARCASE
J115TLCIH 1981	GEARCASE
J115TLCIM 1981	GEARCASE
J115TLCNB 1982	GEARCASE
J115TLCOS 1985	GEARCASE
J115TLCRD 1984	GEARCASE
J115TLCSA 1980	GEARCASE
J115TLCTE 1983	GEARCASE
J115TLEDA 1996	GEARCASE
J115TLEIE 1991	GEARCASE
J115TLEND 1992	GEARCASE
J115TLEOR 1995	GEARCASE
J115TLERC 1994	GEARCASE
J115TLESB 1990	GEARCASE
J115TLETS 1993	GEARCASE
J115TSLECM 1998	GEARCASE
J115TSLEUA 1997	GEARCASE
J115TSXECM 1998	GEARCASE
J115TSXEUA 1997	GEARCASE
J115TXADA 1996	GEARCASE
J115TXAOR 1995	GEARCASE
J115TXARS 1994	GEARCASE
J115TXATS 1993	GEARCASE
J115TXCIH 1981	GEARCASE
J115TXCIM 1981	GEARCASE
J115TXCNB 1982	GEARCASE
J115TXCRD 1984	GEARCASE
J115TXCSA 1980	GEARCASE
J115TXCTE 1983	GEARCASE
J115TXEIE 1991	GEARCASE
J115TXEND 1992	GEARCASE
J115TXESB 1990	GEARCASE
J115VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS

J115VLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J115VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J115VLSSS Elec. Start, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J115VXSIC elec start, TNT, 25 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J120TLAEM 1989	GEARCASE - 120TL & TX/140 TL
J120TLAIE 1991	GEARCASE - 120TL & TX/140 TL
J120TLAND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J120TLARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLASB 1990	GEARCASE - 120TL & TX/140 TL
J120TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TLATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TLCCA 1988	GEARCASE - 120TL & TX/140 TL
J120TLCDC 1986	GEARCASE
J120TLCEM 1989	GEARCASE - 120TL & TX/140 TL
J120TLCUR 1987	GEARCASE
J120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
J120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J120TLERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TLESB 1990	GEARCASE - 120TL & TX/140 TL
J120TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXCCA 1988	GEARCASE - 120TL & TX/140 TL
J120TXCDC 1986	GEARCASE
J120TXCEM 1989	GEARCASE - 120TL & TX/140 TL
J120TXCUR 1987	GEARCASE

J120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
J120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J120TXERC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J120TXESB 1990	GEARCASE - 120TL & TX/140 TL
J120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J125ESXENR 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J125ESXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J125ESXESS 1990	GEARCASE - ESX MODELS ONLY
J125ESXETA 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J125ESXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J125ESXW 1989	GEARCASE - ESX MODELS ONLY
J140CXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140CXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140CXCCS 1988	GEARCASE - 120TL & TX/140 TL
J140CXCEC 1989	GEARCASE - 120TL & TX/140 TL
J140CXEIA 1991	GEARCASE - 120TL & TX/140 TL
J140CXENM 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140CXERE 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140CXESR 1990	GEARCASE - 120TL & TX/140 TL
J140CXETB 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140CXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140MLCIH 1981	GEARCASE
J140MLCIM 1981	GEARCASE
J140MLCNB 1982	GEARCASE
J140MLCSA 1980	GEARCASE
J140MLCTE 1983	GEARCASE

J140TLAEB 1989	GEARCASE - 120TL & TX/140 TL
J140TLANS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140TLARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLARR 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLASE 1990	GEARCASE - 120TL & TX/140 TL
J140TLATC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TLCCM 1988	GEARCASE - 120TL & TX/140 TL
J140TLCDC 1986	GEARCASE
J140TLCEB 1989	GEARCASE - 120TL & TX/140 TL
J140TLCIH 1981	GEARCASE
J140TLCIM 1981	GEARCASE
J140TLCNB 1982	GEARCASE
J140TLCRD 1984	GEARCASE
J140TLCSA 1980	GEARCASE
J140TLCTE 1983	GEARCASE
J140TLCUA 1987	GEARCASE
J140TLEID 1991	GEARCASE - 120TL & TX/140 TL
J140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140TLERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TLESE 1990	GEARCASE - 120TL & TX/140 TL
J140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXARC 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXARK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXCCM 1988	GEARCASE - 120TL & TX/140 TL
J140TXCDC 1986	GEARCASE
J140TXCEB 1989	GEARCASE - 120TL & TX/140 TL
J140TXCIH 1981	GEARCASE

J140TXCIM 1981	GEARCASE
J140TXCNB 1982	GEARCASE
J140TXCRD 1984	GEARCASE
J140TXCSA 1980	GEARCASE
J140TXCTE 1983	GEARCASE
J140TXCUA 1987	GEARCASE
J140TXEID 1991	GEARCASE - 120TL & TX/140 TL
J140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
J140TXERK 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXERR 1994	GEARCASE - 120TL, 125ESX, & 140TL
J140TXESE 1990	GEARCASE - 120TL & TX/140 TL
J140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
J85MLCSA 1980	GEARCASE
J85TLCSA 1980	GEARCASE
J85TTLEIE 1991	GEARCASE
J85TTLEND 1992	GEARCASE
J85TTLEOR 1995	GEARCASE
J85TTLERC 1994	GEARCASE
J85TTLETS 1993	GEARCASE
J85TXCSA 1980	GEARCASE
J88MSLCCC 1988	GEARCASE
J88MSLCER 1989	GEARCASE
J88MSLCUS 1987	GEARCASE
J88MSLEDC 1996	GEARCASE
J88MSLEIM 1991	GEARCASE
J88MSLENB 1992	GEARCASE
J88MSLEOS 1995	GEARCASE
J88MSLERD 1994	GEARCASE
J88MSLESA 1990	GEARCASE
J88MSLETE 1993	GEARCASE
J88TSLEDR 1996	GEARCASE
J88TSLEOC 1995	GEARCASE
J88TSLERS 1994	GEARCASE

J90ELECTM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J90ELEDOR 1996	GEARCASE - 20 IN. MODELS
J90ELEOC 1995	GEARCASE - 20 IN. MODELS
J90ELEUA 1997	GEARCASE - 20 IN. MODELS
J90ELEUC 1997	GEARCASE - 20 IN. MODELS
J90EXEOC 1995	GEARCASE - 20 IN. MODELS
J90FSLECS 1998	GEARCASE -- FSL, FTL MODELS
J90FTLECS 1998	GEARCASE -- FSL, FTL MODELS
J90GLSDE	GEARCASE - PL, GL MODELS
J90GLSDE - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J90GLSOB	GEARCASE - PL, GL MODELS
J90GLSOB - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90GLSRM	GEARCASE - PL, GL MODELS
J90GLSRM - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90GLSTA	GEARCASE - PL, GL MODELS
J90GLSTA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J90JLEIE 1991	GEARCASE
J90JLEND 1992	GEARCASE
J90JLEOR 1995	GEARCASE
J90JLERC 1994	GEARCASE
J90JLETS 1993	GEARCASE
J90MLCDC 1986	GEARCASE
J90MLCIH 1981	GEARCASE
J90MLCIM 1981	GEARCASE
J90MLCNB 1982	GEARCASE
J90MLCOS 1985	GEARCASE
J90MLCRD 1984	GEARCASE
J90MLCTE 1983	GEARCASE
J90MLCUR 1987	GEARCASE
J90MLEOR 1995	GEARCASE
J90MLERC 1994	GEARCASE
J90PLEEB 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J90PLSDM	GEARCASE - PL, GL MODELS
J90PLSDM - FR	17-1_BOÎTIER D'ENGRENAGES - PL, GL MODELES
J90PLSID elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS

J90PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J90PLSNF Carbureted, 20 in. shaft, Smoke, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J90PLSOA	GEARCASE - PL, GL MODELS
J90PLSOA - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90PLSRR	GEARCASE - PL, GL MODELS
J90PLSRR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles GL et PL
J90PLSSE Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J90PLSTC	GEARCASE - PL, GL MODELS
J90PLSTC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PL et GL
J90SLECM 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
J90SLEDR 1996	GEARCASE - 20 IN. MODELS
J90SLEOC 1995	GEARCASE - 20 IN. MODELS
J90SLEUA 1997	GEARCASE - 20 IN. MODELS
J90SLEUC 1997	GEARCASE - 20 IN. MODELS
J90SPLEES 1999	GEARCASE -- 90 & 115 PL AND 90 & 115 SPL MODELS
J90SPLSSC Elec. Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
J90TLAEM 1989	GEARCASE
J90TLAIE 1991	GEARCASE
J90TLAND 1992	GEARCASE
J90TLARC 1994	GEARCASE
J90TLASB 1990	GEARCASE
J90TLATS 1993	GEARCASE
J90TLCCA 1988	GEARCASE
J90TLCDC 1986	GEARCASE
J90TLCEM 1989	GEARCASE
J90TLCIH 1981	GEARCASE
J90TLCIM 1981	GEARCASE
J90TLCNB 1982	GEARCASE
J90TLCOS 1985	GEARCASE
J90TLCRD 1984	GEARCASE
J90TLCTE 1983	GEARCASE
J90TLCUR 1987	GEARCASE
J90TLEDA 1996	GEARCASE
J90TLEIE 1991	GEARCASE

J90TLEND 1992	GEARCASE
J90TLEOR 1995	GEARCASE
J90TLERC 1994	GEARCASE
J90TLESB 1990	GEARCASE
J90TLETS 1993	GEARCASE
J90TSLECM 1998	GEARCASE
J90TSLEUA 1997	GEARCASE
J90TXARC 1994	GEARCASE
J90TXATS 1993	GEARCASE
J90TXCDC 1986	GEARCASE
J90TXCIH 1981	GEARCASE
J90TXCIM 1981	GEARCASE
J90TXCNB 1982	GEARCASE
J90TXCOS 1985	GEARCASE
J90TXCRD 1984	GEARCASE
J90TXCTE 1983	GEARCASE
J90VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
J90VLSNF - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles PLS et VLS
J90VLSNF Carbureted, 20 in. shaft, White, Remote, Elec, TNT 2002	GEARCASE - PLS, VLS MODELS
J90VLSSE Elec. Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
L115GLECA 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
L115GLEDC 1996	GEARCASE - 20 IN. MODELS
L115GLEOS 1995	GEARCASE - 20 IN. MODELS
L115GLEUC 1997	GEARCASE - 20 IN. MODELS
L115GLEUR 1997	GEARCASE - 20 IN. MODELS
L90GLECS 1998	GEARCASE -- 90 & 115 EL, GL, SL MODELS
RE115FLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FLSSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FLSSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FSSSH FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FSSSR FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	GEARCASE - FPL, FSL, FL, FS MODELS

RE115FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE115FXSSH FFI, Elec Start, TNT, 25 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE115FXSSR FFI, Elec Start, TNT, 25 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	GEARCASE - FPL - FSL - FL - FVL - FSS MODELS
RE90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RE90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	GEARCASE - FPL, FSL, FL, FS MODELS
RJ115PLSIE elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115VLSSB Elec. Start, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ115VXSIC elec start, TNT, 25 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ90PLSID elec start, TNT, 20 in shaft 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
RJ90VLSIC elec start, TNT, 20 in shaft, wht 2001	GEARCASE - 90 - 115 PL - VL MODELS
RJ90VLSSS Elec. Start, 20 IN. shaft, wht, N/A USA 2000	GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS
SE100WMPLM 1996	GEARCASE
SE100WMPLZ 1997	GEARCASE
SE100WTPLM 1996	GEARCASE
SE100WTPLZ 1997	GEARCASE
SJ100WMPLM 1996	GEARCASE
SJ100WMPLZ 1997	GEARCASE
SJ100WTPLM 1996	GEARCASE
SJ100WTPLZ 1997	GEARCASE
SJ115ELED 1996	GEARCASE - 20 IN. MODELS
SJ90ELED 1996	GEARCASE - 20 IN. MODELS
TE110TLCEM 1989	GEARCASE
TE110TLESF 1989	GEARCASE
TE110TXCEM 1989	GEARCASE
TE115TLEIE 1991	GEARCASE
TE115TLEND 1992	GEARCASE
TE115TLESB 1990	GEARCASE

TE115TLETS 1993	GEARCASE
TE120TXCEM 1989	GEARCASE - 120TL & TX/140 TL
TE90TLCEM 1989	GEARCASE
TE90TLEIE 1991	GEARCASE
TE90TLEND 1992	GEARCASE
TE90TLESB 1990	GEARCASE
TE90TLESF 1989	GEARCASE
TE90TLESF 1990	GEARCASE
TE90TLETS 1993	GEARCASE
TJ110TLCEM 1989	GEARCASE
TJ110TXCEM 1989	GEARCASE
TJ115TLEIE 1991	GEARCASE
TJ115TLEND 1992	GEARCASE
TJ115TLESB 1990	GEARCASE
TJ115TLETS 1993	GEARCASE
TJ120TXCEM 1989	GEARCASE - 120TL & TX/140 TL
TJ90TLCEM 1989	GEARCASE
TJ90TLEIE 1991	GEARCASE
TJ90TLEND 1992	GEARCASE
TJ90TLESB 1990	GEARCASE
TJ90TLETS 1993	GEARCASE
V115SHLETS 1993	GEARCASE
V115SLEIE 1991	GEARCASE
V115SLEND 1992	GEARCASE
V115SLETS 1993	GEARCASE
V90SLEIE 1991	GEARCASE
V90SLEND 1992	GEARCASE
V90SLETE 1993	GEARCASE
VE100SLEIE 1991	GEARCASE
VE100SLEND 1992	GEARCASE
VE100SLESB 1990	GEARCASE
VE100SLETS 1993	GEARCASE
VE115TLEIE 1991	GEARCASE
VE115TLESB 1990	GEARCASE
VE115TLETS 1993	GEARCASE

VE115TXEIE 1991	GEARCASE
VE115TXESB 1990	GEARCASE
VE120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
VE120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VE120TLESB 1990	GEARCASE - 120TL & TX/140 TL
VE120TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
VE120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VE120TXESB 1990	GEARCASE - 120TL & TX/140 TL
VE120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TLEID 1991	GEARCASE - 120TL & TX/140 TL
VE140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VE140TLESE 1990	GEARCASE - 120TL & TX/140 TL
VE140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TXEID 1991	GEARCASE - 120TL & TX/140 TL
VE140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VE140TXESE 1990	GEARCASE - 120TL & TX/140 TL
VE140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VE88MSLCCC 1988	GEARCASE
VE88MSLCER 1989	GEARCASE
VE88MSLESA 1990	GEARCASE
VE90MLEIE 1991	GEARCASE
VE90MLEND 1992	GEARCASE
VE90MLESB 1990	GEARCASE
VE90MLETS 1993	GEARCASE
VE90TLEIE 1991	GEARCASE
VE90TLEND 1992	GEARCASE

VE90TLESB 1990	GEARCASE
VE90TLETS 1993	GEARCASE
VJ100SLEIE 1991	GEARCASE
VJ100SLEND 1992	GEARCASE
VJ100SLESB 1990	GEARCASE
VJ100SLETS 1993	GEARCASE
VJ115TLAIE 1991	GEARCASE
VJ115TLAND 1992	GEARCASE
VJ115TLASB 1990	GEARCASE
VJ115TLATS 1993	GEARCASE
VJ115TLEIE 1991	GEARCASE
VJ115TLESB 1990	GEARCASE
VJ115TLETS 1993	GEARCASE
VJ115TXEIE 1991	GEARCASE
VJ115TXESB 1990	GEARCASE
VJ120TLAIE 1991	GEARCASE - 120TL & TX/140 TL
VJ120TLAND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ120TLASB 1990	GEARCASE - 120TL & TX/140 TL
VJ120TLATF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TLATS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TLEIE 1991	GEARCASE - 120TL & TX/140 TL
VJ120TLEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ120TLESB 1990	GEARCASE - 120TL & TX/140 TL
VJ120TLETf 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TLETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TXEIE 1991	GEARCASE - 120TL & TX/140 TL
VJ120TXEND 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ120TXESB 1990	GEARCASE - 120TL & TX/140 TL
VJ120TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ120TXETS 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ140TLAID 1991	GEARCASE - 120TL & TX/140 TL
VJ140TLANS 1992	GEARCASE - 120TL & TX/125ESX/140 TL

VJ140TLASE 1990	GEARCASE - 120TL & TX/140 TL
VJ140TLEID 1991	GEARCASE - 120TL & TX/140 TL
VJ140TLENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ140TLESE 1990	GEARCASE - 120TL & TX/140 TL
VJ140TLETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ140TLETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ140TXEID 1991	GEARCASE - 120TL & TX/140 TL
VJ140TXENS 1992	GEARCASE - 120TL & TX/125ESX/140 TL
VJ140TXESE 1990	GEARCASE - 120TL & TX/140 TL
VJ140TXETC 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ140TXETF 1993	GEARCASE - 120TL & 140TL 120TX & 125ESX "S" SUFFIX ONLY
VJ88MSLCCC 1988	GEARCASE
VJ88MSLCER 1989	GEARCASE
VJ88MSLESA 1990	GEARCASE
VJ90MLEIE 1991	GEARCASE
VJ90MLEND 1992	GEARCASE
VJ90MLESB 1990	GEARCASE
VJ90MLETS 1993	GEARCASE
VJ90TLAIE 1991	GEARCASE
VJ90TLAND 1992	GEARCASE
VJ90TLASB 1990	GEARCASE
VJ90TLATS 1993	GEARCASE
VJ90TLEIE 1991	GEARCASE
VJ90TLEND 1992	GEARCASE
VJ90TLESB 1990	GEARCASE
VJ90TLETS 1993	GEARCASE
XE112TSLEDR 1996	GEARCASE
XE112TSLEOC 1995	GEARCASE
XE112TSLERS 1994	GEARCASE
XE112TSXEDR 1996	GEARCASE
XE112TSXEOC 1995	GEARCASE
XE112TSXERS 1994	GEARCASE
XE115HLECM 1998	GEARCASE

XE115HLEUA 1997	GEARCASE
XE115HXECM 1998	GEARCASE
XE115HXEUA 1997	GEARCASE
XE88TSLEDR 1996	GEARCASE
XE88TSLEOC 1995	GEARCASE
XE88TSLERS 1994	GEARCASE
XE90TSLECM 1998	GEARCASE
XE90TSLEUA 1997	GEARCASE
XJ112TSLEDR 1996	GEARCASE
XJ112TSLEOC 1995	GEARCASE
XJ112TSLERS 1994	GEARCASE
XJ112TSXEDR 1996	GEARCASE
XJ112TSXEOC 1995	GEARCASE
XJ112TSXERS 1994	GEARCASE
XJ115HLECM 1998	GEARCASE
XJ115HLEUA 1997	GEARCASE
XJ115HXECM 1998	GEARCASE
XJ115HXEUA 1997	GEARCASE
XJ88TSLEDR 1996	GEARCASE
XJ88TSLEOC 1995	GEARCASE
XJ88TSLERS 1994	GEARCASE
XJ90TSLECM 1998	GEARCASE
XJ90TSLEUA 1997	GEARCASE