

Where Used: Part Number 0388684

Model Name	Diagram
4706B 1977	FUEL PUMP
4736B 1977	FUEL PUMP
4R77B 1977	FUEL PUMP
4W77B 1977	FUEL PUMP
BE5DREDS 1996	FUEL PUMP
BE5DREUC 1997	FUEL PUMP
BE5DRLEDS 1996	FUEL PUMP
BE5DRLEUC 1997	FUEL PUMP
BE6DRECR 1998	FUEL PUMP
BE6DREDS 1996	FUEL PUMP
BE6DREUC 1997	FUEL PUMP
BE6DRLECR 1998	FUEL PUMP
BE6DRLEDS 1996	FUEL PUMP
BE6DRLEUC 1997	FUEL PUMP
BE6REDS 1996	FUEL PUMP
BE6RLEDS 1996	FUEL PUMP
BE8RCB 1997	FUEL PUMP
BE8RCH 1996	FUEL PUMP
BE8RCLB 1997	FUEL PUMP
BE8RCLH 1996	FUEL PUMP
BE8RCLT 1998	FUEL PUMP
BE8RCT 1998	FUEL PUMP
BE8REDS 1996	FUEL PUMP
BE8RLEDS 1996	FUEL PUMP
BE8SRLEDS 1996	FUEL PUMP
BJ5DREDS 1996	FUEL PUMP
BJ5DREUC 1997	FUEL PUMP
BJ5DRLEDS 1996	FUEL PUMP
BJ5DRLEUC 1997	FUEL PUMP
BJ6DRECR 1998	FUEL PUMP
BJ6DREDS 1996	FUEL PUMP
BJ6DREUC 1997	FUEL PUMP
BJ6DRLECR 1998	FUEL PUMP

BJ6DRLEDS 1996	FUEL PUMP
BJ6DRLEUC 1997	FUEL PUMP
BJ6REDS 1996	FUEL PUMP
BJ6RLEDS 1996	FUEL PUMP
BJ8RCB 1997	FUEL PUMP
BJ8RCH 1996	FUEL PUMP
BJ8RCLB 1997	FUEL PUMP
BJ8RCLH 1996	FUEL PUMP
BJ8RCLT 1998	FUEL PUMP
BJ8RCT 1998	FUEL PUMP
BJ8REDS 1996	FUEL PUMP
BJ8RLEDS 1996	FUEL PUMP
BJ8SRLEDS 1996	FUEL PUMP
E5DRECR 1998	FUEL PUMP
E5DRLECR 1998	FUEL PUMP
E6RECR 1998	FUEL PUMP
E6REDS 1996	FUEL PUMP
E6RENM 1992	FUEL PUMP
E6REOD 1995	FUEL PUMP
E6RERE 1994	FUEL PUMP
E6RETB 1993	FUEL PUMP
E6REUC 1997	FUEL PUMP
E6RLECR 1998	FUEL PUMP
E6RLEDS 1996	FUEL PUMP
E6RLENM 1992	FUEL PUMP
E6RLEOD 1995	FUEL PUMP
E6RLERE 1994	FUEL PUMP
E6RLETB 1993	FUEL PUMP
E6RLEUC 1997	FUEL PUMP
E6SLEDS 1996	FUEL PUMP
E6SLENM 1992	FUEL PUMP
E6SLEOD 1995	FUEL PUMP
E6SLERE 1994	FUEL PUMP
E6SLETB 1993	FUEL PUMP
E8DREEA 1999	FUEL PUMP

E8DRSSM Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	FUEL PUMP
E8RECR 1998	FUEL PUMP
E8REDS 1996	FUEL PUMP
E8RENM 1992	FUEL PUMP
E8REOD 1995	FUEL PUMP
E8RERE 1994	FUEL PUMP
E8RETB 1993	FUEL PUMP
E8REUC 1997	FUEL PUMP
E8RLECR 1998	FUEL PUMP
E8RLEDS 1996	FUEL PUMP
E8RLENM 1992	FUEL PUMP
E8RLEOD 1995	FUEL PUMP
E8RLERE 1994	FUEL PUMP
E8RLETB 1993	FUEL PUMP
E8RLEUC 1997	FUEL PUMP
E8SRLECA 1998	FUEL PUMP
E8SRLEDS 1996	FUEL PUMP
E8SRLENM 1992	FUEL PUMP
E8SRLEOD 1995	FUEL PUMP
E8SRLERE 1994	FUEL PUMP
E8SRLETB 1993	FUEL PUMP
E8SRLEUC 1997	FUEL PUMP
E8WREES 1999	FUEL PUMP
E8WRLEES 1999	FUEL PUMP
E8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
E8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP
E8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J5DRECR 1998	FUEL PUMP
J5DRLECR 1998	FUEL PUMP
J6RECR 1998	FUEL PUMP
J6REDS 1996	FUEL PUMP
J6REEA 1999	FUEL PUMP
J6RENM 1992	FUEL PUMP
J6REOD 1995	FUEL PUMP

J6RERE 1994	FUEL PUMP
J6RETB 1993	FUEL PUMP
J6REUC 1997	FUEL PUMP
J6RLECR 1998	FUEL PUMP
J6RLEDS 1996	FUEL PUMP
J6RLEEA 1999	FUEL PUMP
J6RLENM 1992	FUEL PUMP
J6RLEOD 1995	FUEL PUMP
J6RLERE 1994	FUEL PUMP
J6RLETB 1993	FUEL PUMP
J6RLEUC 1997	FUEL PUMP
J6RLSIB rope start, tiller, 20 in shaft 2001	FUEL PUMP
J6RLSOC	FUEL PUMP
J6RLSOC - FR	23-2_POMPE À CARBURANT
J6RLSRS	FUEL PUMP
J6RLSRS - FR	23-2_POMPE À CARBURANT
J6RLSSM Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J6RLSTD	FUEL PUMP
J6RLSTD - FR	23-2_POMPE À CARBURANT
J6RLVSIB rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J6RSIB rope start, tiller, 15 in shaft 2001	FUEL PUMP
J6RSOC	FUEL PUMP
J6RSOC - FR	23-2_POMPE À CARBURANT
J6RSRS	FUEL PUMP
J6RSRS - FR	23-2_POMPE À CARBURANT
J6RSSM Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J6RSTD	FUEL PUMP
J6RSTD - FR	23-2_POMPE À CARBURANT
J6RVSIB rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP
J6SLEDS 1996	FUEL PUMP
J6SLENM 1992	FUEL PUMP
J6SLEOD 1995	FUEL PUMP
J6SLERE 1994	FUEL PUMP
J6SLETB 1993	FUEL PUMP
J8DREEA 1999	FUEL PUMP

J8RECR 1998	FUEL PUMP
J8REDS 1996	FUEL PUMP
J8REEM 1999	FUEL PUMP
J8RENM 1992	FUEL PUMP
J8REOD 1995	FUEL PUMP
J8RERE 1994	FUEL PUMP
J8RETB 1993	FUEL PUMP
J8REUC 1997	FUEL PUMP
J8RLECR 1998	FUEL PUMP
J8RLEDs 1996	FUEL PUMP
J8RLEEM 1999	FUEL PUMP
J8RLENM 1992	FUEL PUMP
J8RLEOD 1995	FUEL PUMP
J8RLERE 1994	FUEL PUMP
J8RLETB 1993	FUEL PUMP
J8RLEUC 1997	FUEL PUMP
J8RLSIE rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8RLSOR	FUEL PUMP
J8RLSOR - FR	23-2_POMPE À CARBURANT
J8RLSRC	FUEL PUMP
J8RLSRC - FR	23-2_POMPE À CARBURANT
J8RLSSB Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8RLSTS	FUEL PUMP
J8RLSTS - FR	23-2_POMPE À CARBURANT
J8RLVSIE rope start, tiller, 20 in shaft, wht 2001	FUEL PUMP
J8RLXSIE rope start, tiller, 25 in shaft, wht 2001	FUEL PUMP
J8RSIE rope start, tiller, 15 in shaft 2001	FUEL PUMP
J8RSOR	FUEL PUMP
J8RSOR - FR	23-2_POMPE À CARBURANT
J8RSRC	FUEL PUMP
J8RSRC - FR	23-2_POMPE À CARBURANT
J8RSSB Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
J8RSTD	FUEL PUMP
J8RSTD - FR	23-2_POMPE À CARBURANT
J8RVSIE rope start, tiller, 15 in shaft, wht 2001	FUEL PUMP

J8RXEEM 1999	FUEL PUMP
J8RXSIE rope start, tiller, 25 in shaft 2001	FUEL PUMP
J8RXSSB Rope Start, Tiller, 25 IN. shaft 2000	FUEL PUMP
J8SRLECA 1998	FUEL PUMP
J8SRLEDS 1996	FUEL PUMP
J8SRLENM 1992	FUEL PUMP
J8SRLEOD 1995	FUEL PUMP
J8SRLERE 1994	FUEL PUMP
J8SRLETB 1993	FUEL PUMP
J8SRLEUC 1997	FUEL PUMP
J8WREES 1999	FUEL PUMP
J8WRLEES 1999	FUEL PUMP
J8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	FUEL PUMP
J8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
J8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	FUEL PUMP
J8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
SJ6REDS 1996	FUEL PUMP
SJ6RLEDS 1996	FUEL PUMP
SJ8REDS 1996	FUEL PUMP
SJ8RLEDS 1996	FUEL PUMP