

Where Used: Part Number 0392461

Model Name	Diagram
AM55RSLD 1999	GEARCASE
E35AELCDE 1986	GEARCASE
E35AELCUD 1987	GEARCASE
E35ARLCDE 1986	GEARCASE
E35ARLCUD 1987	GEARCASE
E40AELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40AELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ARLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ARLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ATLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ATLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ECDE 1986	GEARCASE
E40ECOB 1985	GEARCASE
E40ECRM 1984	GEARCASE
E40ECUD 1987	GEARCASE
E40ELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40ELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40ELCDE 1986	GEARCASE
E40ELCOB 1985	GEARCASE
E40ELCRM 1984	GEARCASE
E40ELCUD 1987	GEARCASE
E40RCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40RCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40RCDE 1986	GEARCASE
E40RCOB 1985	GEARCASE
E40RCRM 1984	GEARCASE
E40RCUD 1987	GEARCASE
E40RLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40RLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40RLCDE 1986	GEARCASE
E40RLCOB 1985	GEARCASE

E40RLCRM 1984	GEARCASE
E40RLCUD 1987	GEARCASE
E40TECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TECDE 1986	GEARCASE
E40TECOB 1985	GEARCASE
E40TECRM 1984	GEARCASE
E40TECUD 1987	GEARCASE
E40TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TELCDE 1986	GEARCASE
E40TELCOB 1985	GEARCASE
E40TELCRM 1984	GEARCASE
E40TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40TLCDE 1986	GEARCASE
E40TLCUD 1987	GEARCASE
E40TTLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E40TTLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E40WREES 1999	GEARCASE
E40WRLEES 1999	GEARCASE
E40WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
E40WRLSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E40WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
E40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E40WRYEES 1999	GEARCASE
E40WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
E40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
E45RCCDS 1986	GEARCASE
E45RCCUC 1987	GEARCASE
E45RCE 1989	GEARCASE
E45RCEIA 1991	GEARCASE
E45RCENM 1992	GEARCASE
E45RCEOD 1995	GEARCASE
E45RCERE 1994	GEARCASE

E45RCESR 1990	GEARCASE
E45RCETB 1993	GEARCASE
E45RCLCDS 1986	GEARCASE
E45RCLCUC 1987	GEARCASE
E45RCLE 1989	GEARCASE
E45RCLEDS 1996	GEARCASE
E45RCLEIA 1991	GEARCASE
E45RCLENM 1992	GEARCASE
E45RCLEOD 1995	GEARCASE
E45RCLERE 1994	GEARCASE
E45RCLESR 1990	GEARCASE
E45RCLETB 1993	GEARCASE
E45RCLEUC 1997	GEARCASE
E45WMLE 1989	GEARCASE
E45WMLEIA 1991	GEARCASE
E45WMLENM 1992	GEARCASE
E45WMLESR 1990	GEARCASE
E48ESLCCC 1988	GEARCASE
E48ESLCUS 1987	GEARCASE
E50BECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50BECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50BECDE 1986	GEARCASE
E50BECNR 1982	GEARCASE
E50BECOB 1985	GEARCASE
E50BECRM 1984	GEARCASE
E50BECTA 1983	GEARCASE
E50BECUD 1987	GEARCASE
E50BELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50BELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50BELCDE 1986	GEARCASE
E50BELCNR 1982	GEARCASE
E50BELCOB 1985	GEARCASE
E50BELCRM 1984	GEARCASE
E50BELCTA 1983	GEARCASE
E50BELCUD 1987	GEARCASE

E50TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50TELCDE 1986	GEARCASE
E50TELCOB 1985	GEARCASE
E50TELCRM 1984	GEARCASE
E50TELCTA 1983	GEARCASE
E50TELCUD 1987	GEARCASE
E50TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
E50TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
E50TLCDE 1986	GEARCASE
E50TLCOB 1985	GEARCASE
E50TLCRM 1984	GEARCASE
E50TLCUD 1987	GEARCASE
E55RSLC 1997	GEARCASE
E55RSLG 1995	GEARCASE
E55RSLW 1996	GEARCASE
E55RWLDCD 1986	GEARCASE
E55RWLCOS 1985	GEARCASE
E55RWLCUC 1987	GEARCASE
E55RWLE 1989	GEARCASE
E55RWLEIA 1991	GEARCASE
E55RWLENM 1992	GEARCASE
E55RWLERE 1994	GEARCASE
E55RWLESR 1990	GEARCASE
E55RWLETB 1993	GEARCASE
E55WREES 1999	GEARCASE
E55WRLEES 1999	GEARCASE
E55WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
E55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
E55WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
E55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E55WRYEES 1999	GEARCASE
E55WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
E55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
E60ECNM 1982	GEARCASE

E60ECTB 1983	GEARCASE
E60ELCDS 1986	GEARCASE - 15" TRANSOM
E60ELCDS 1986	GEARCASE - 20" MODELS
E60ELCNM 1982	GEARCASE
E60ELCOD 1985	GEARCASE
E60ELCRE 1984	GEARCASE
E60ELCTB 1983	GEARCASE
E60ELCUC 1987	GEARCASE - 15" TRANSOM
E60ELCUC 1987	GEARCASE - 20" MODELS
E60TLCDS 1986	GEARCASE - 15" TRANSOM
E60TLCDS 1986	GEARCASE - 20" MODELS
E60TLCNM 1982	GEARCASE
E60TLCOD 1985	GEARCASE
E60TLCRE 1984	GEARCASE
E60TLCTB 1983	GEARCASE
E60TLCUC 1987	GEARCASE - 15" TRANSOM
E60TLCUC 1987	GEARCASE - 20" MODELS
E65RWLCDR 1986	GEARCASE
E65RWLCOC 1985	GEARCASE
E65RWLCRS 1984	GEARCASE
E65TELCDR 1986	GEARCASE
E65TELCOC 1985	GEARCASE
E65TELCRS 1984	GEARCASE
E65WMLCDR 1986	GEARCASE
E65WMLCOC 1985	GEARCASE
E65WMLCUA 1987	GEARCASE
E65WTLCOC 1985	GEARCASE
E65WTLCRS 1984	GEARCASE
E70ELCDC 1986	GEARCASE
E70ELCNB 1982	GEARCASE - 15" TRANSOM
E70ELCNB 1982	GEARCASE - 20" TRANSOM
E70ELCOS 1985	GEARCASE - 15" TRANSOM
E70ELCOS 1985	GEARCASE - 20" MODELS
E70ELCRD 1984	GEARCASE - 15" TRANSOM
E70ELCRD 1984	GEARCASE - 20" MODELS

E70ELCTE 1983	GEARCASE-15" TRANSOM
E70ELCTE 1983	GEARCASE - 20" TRANSOM
E70ELCUR 1987	GEARCASE
E70TLCDC 1986	GEARCASE
E70TLCNB 1982	GEARCASE - 15" TRANSOM
E70TLCNB 1982	GEARCASE - 20" TRANSOM
E70TLCOS 1985	GEARCASE - 15" TRANSOM
E70TLCOS 1985	GEARCASE - 20" MODELS
E70TLCRD 1984	GEARCASE - 15" TRANSOM
E70TLCRD 1984	GEARCASE - 20" MODELS
E70TLCTE 1983	GEARCASE-15" TRANSOM
E70TLCTE 1983	GEARCASE - 20" TRANSOM
E70TLCUR 1987	GEARCASE
E75ECDC 1986	GEARCASE - 15" TRANSOM
E75ECDC 1986	GEARCASE - 20" MODELS
E75ECOS 1985	GEARCASE - 15" TRANSOM
E75ECOS 1985	GEARCASE - 20" MODELS
E75ECDR 1984	GEARCASE - 15" TRANSOM
E75ECDR 1984	GEARCASE - 20" MODELS
E75ECUR 1987	GEARCASE - 15" TRANSOM
E75ECUR 1987	GEARCASE - 20" MODELS
E75ELCRD 1984	GEARCASE - 15" TRANSOM
E75ELCRD 1984	GEARCASE - 20" MODELS
E75ERCNB 1982	GEARCASE - 15" TRANSOM
E75ERCNB 1982	GEARCASE - 20" TRANSOM
E75ERCTE 1983	GEARCASE-15" TRANSOM
E75ERCTE 1983	GEARCASE - 20" TRANSOM
E75ERLCNB 1982	GEARCASE - 15" TRANSOM
E75ERLCNB 1982	GEARCASE - 20" TRANSOM
E75ERLCTE 1983	GEARCASE-15" TRANSOM
E75ERLCTE 1983	GEARCASE - 20" TRANSOM
E75TLCRD 1984	GEARCASE - 15" TRANSOM
E75TLCRD 1984	GEARCASE - 20" MODELS
E75TRLCNB 1982	GEARCASE - 15" TRANSOM
E75TRLCNB 1982	GEARCASE - 20" TRANSOM

E75TRLCTE 1983	GEARCASE-15" TRANSOM
E75TRLCTE 1983	GEARCASE - 20" TRANSOM
ELECTRICAL 1982	ZINC ANODE KIT 50 - 75
ELECTRICAL 1983	ZINC ANODE KIT 50-75
ELECTRICAL 1984	ZINC ANODE KIT 40 THRU 75
ELECTRICAL 1985	ZINC ANODE KIT 40 THRU 75
ELECTRICAL 1986	ZINC ANODE KIT 40 THRU 75
ELECTRICAL 1987	ZINC ANODE KIT 40 THRU 75
ELECTRICAL 1988	ZINC ANODE KIT 40 THRU 75
ELECTRICAL 1989	ZINC ANODE KIT 45, 55, 60, 65 & 70
HE45RCLEDS 1996	GEARCASE
HE45RCLEUC 1997	GEARCASE
HE55RSLC 1997	GEARCASE
HE55RSLW 1996	GEARCASE
HE55WMLM 1996	GEARCASE
HE55WMLZ 1997	GEARCASE
HJ45RCLEDS 1996	GEARCASE
HJ45RCLEUC 1997	GEARCASE
HJ55RSLC 1997	GEARCASE
HJ55RSLW 1996	GEARCASE
HJ55WMLM 1996	GEARCASE
HJ55WMLZ 1997	GEARCASE
J35AELCDE 1986	GEARCASE
J35AELCUD 1987	GEARCASE
J35ARLCDE 1986	GEARCASE
J35ARLCUD 1987	GEARCASE
J40AELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40AELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ARLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ARLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ATLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ATLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ECDE 1986	GEARCASE

J40ECOB 1985	GEARCASE
J40ECRM 1984	GEARCASE
J40ECUD 1987	GEARCASE
J40ELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40ELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40ELCDE 1986	GEARCASE
J40ELCOB 1985	GEARCASE
J40ELCRM 1984	GEARCASE
J40ELCUD 1987	GEARCASE
J40RCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40RCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40RCDE 1986	GEARCASE
J40RCOB 1985	GEARCASE
J40RCRM 1984	GEARCASE
J40RCUD 1987	GEARCASE
J40RLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40RLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40RLCDE 1986	GEARCASE
J40RLCOB 1985	GEARCASE
J40RLCRM 1984	GEARCASE
J40RLCUD 1987	GEARCASE
J40TECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TECDE 1986	GEARCASE
J40TECOB 1985	GEARCASE
J40TECRM 1984	GEARCASE
J40TECUD 1987	GEARCASE
J40TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TELCDE 1986	GEARCASE
J40TELCOB 1985	GEARCASE
J40TELCRM 1984	GEARCASE
J40TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40TLCDE 1986	GEARCASE



J40TLCUD 1987	GEARCASE
J40TTLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J40TTLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J40WREES 1999	GEARCASE
J40WRLEES 1999	GEARCASE
J40WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
J40WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J40WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
J40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J40WRYEES 1999	GEARCASE
J40WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
J40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
J45RCCDS 1986	GEARCASE
J45RCCUC 1987	GEARCASE
J45RCE 1989	GEARCASE
J45RCEIA 1991	GEARCASE
J45RCENM 1992	GEARCASE
J45RCEOD 1995	GEARCASE
J45RCERE 1994	GEARCASE
J45RCESR 1990	GEARCASE
J45RCETB 1993	GEARCASE
J45RCLCDS 1986	GEARCASE
J45RCLCUC 1987	GEARCASE
J45RCLE 1989	GEARCASE
J45RCLEDS 1996	GEARCASE
J45RCLEIA 1991	GEARCASE
J45RCLENM 1992	GEARCASE
J45RCLEOD 1995	GEARCASE
J45RCLERE 1994	GEARCASE
J45RCLESR 1990	GEARCASE
J45RCLETB 1993	GEARCASE
J45RCLEUC 1997	GEARCASE
J45WMLE 1989	GEARCASE
J45WMLEIA 1991	GEARCASE
J45WMLENM 1992	GEARCASE

J45WMLESR 1990	GEARCASE
J48ESLCCC 1988	GEARCASE
J48ESLCUS 1987	GEARCASE
J50BECCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50BECCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50BECDE 1986	GEARCASE
J50BECNR 1982	GEARCASE
J50BECOB 1985	GEARCASE
J50BECRM 1984	GEARCASE
J50BECTA 1983	GEARCASE
J50BECUD 1987	GEARCASE
J50BELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50BELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50BELCDE 1986	GEARCASE
J50BELCNR 1982	GEARCASE
J50BELCOB 1985	GEARCASE
J50BELCRM 1984	GEARCASE
J50BELCTA 1983	GEARCASE
J50BELCUD 1987	GEARCASE
J50TELCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50TELCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50TELCDE 1986	GEARCASE
J50TELCOB 1985	GEARCASE
J50TELCRM 1984	GEARCASE
J50TELCTA 1983	GEARCASE
J50TELCUD 1987	GEARCASE
J50TLCCS 1988	GEARCASE - 40AR, 40AE, 40AT MODELS ONLY
J50TLCCS 1988	GEARCASE-ALL MODELS EXCEPT 40AR, 40AE, 40AT
J50TLCDE 1986	GEARCASE
J50TLCOB 1985	GEARCASE
J50TLCRM 1984	GEARCASE
J50TLCUD 1987	GEARCASE
J55MLSOR	GEARCASE (ML MODEL)
J55MLSOR - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55MLSRC	GEARCASE (ML MODEL)

J55MLSRC - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55MLSRG	GEARCASE (ML MODEL)
J55MLSRG - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55MRL	GEARCASE (ML MODEL)
J55MRL - FR	27-1_BOÎTIER D'ENGRENAGES - Modèles ML
J55RSLC 1997	GEARCASE
J55RSLG 1995	GEARCASE
J55RSLW 1996	GEARCASE
J55RWLCDC 1986	GEARCASE
J55RWLCOS 1985	GEARCASE
J55RWLCUC 1987	GEARCASE
J55RWLE 1989	GEARCASE
J55RWLEIA 1991	GEARCASE
J55RWLENM 1992	GEARCASE
J55RWLERE 1994	GEARCASE
J55RWLESR 1990	GEARCASE
J55RWLETB 1993	GEARCASE
J55WREES 1999	GEARCASE
J55WRLEES 1999	GEARCASE
J55WRLSIR commercial, rope start, 20 in shaft 2001	GEARCASE
J55WRLSOE	GEARCASE
J55WRLSOE - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRLSRB	GEARCASE
J55WRLSRB - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRLSRG	GEARCASE
J55WRLSRG - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J55WRLSTM	GEARCASE
J55WRLSTM - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRSIR commercial, rope start, 15 in shaft 2001	GEARCASE
J55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J55WRYEES 1999	GEARCASE
J55WRYSIR commercial, rope start, 25 in shaft 2001	GEARCASE
J55WRYSOB	GEARCASE
J55WRYSOB - FR	27-1_BOÎTIER D'ENGRENAGES

J55WRYSRM	GEARCASE
J55WRYSRM - FR	27-1_BOÎTIER D'ENGRENAGES
J55WRYSRC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	GEARCASE
J60ECNM 1982	GEARCASE
J60ECTB 1983	GEARCASE
J60ELCDS 1986	GEARCASE - 15" TRANSOM
J60ELCDS 1986	GEARCASE - 20" MODELS
J60ELCNM 1982	GEARCASE
J60ELCOD 1985	GEARCASE
J60ELCRE 1984	GEARCASE
J60ELCTB 1983	GEARCASE
J60ELCUC 1987	GEARCASE - 15" TRANSOM
J60ELCUC 1987	GEARCASE - 20" MODELS
J60TLCDS 1986	GEARCASE - 15" TRANSOM
J60TLCDS 1986	GEARCASE - 20" MODELS
J60TLCNM 1982	GEARCASE
J60TLCOD 1985	GEARCASE
J60TLCRE 1984	GEARCASE
J60TLCTB 1983	GEARCASE
J60TLCUC 1987	GEARCASE - 15" TRANSOM
J60TLCUC 1987	GEARCASE - 20" MODELS
J65RWLCDR 1986	GEARCASE
J65RWLCOC 1985	GEARCASE
J65RWLCRS 1984	GEARCASE
J65TELCDR 1986	GEARCASE
J65TELCOC 1985	GEARCASE
J65TELCRS 1984	GEARCASE
J65WMLCDR 1986	GEARCASE
J65WMLCOC 1985	GEARCASE
J65WMLCUA 1987	GEARCASE
J65WTLCOA 1985	GEARCASE
J65WTLCRS 1984	GEARCASE
J70ELCDC 1986	GEARCASE
J70ELCNB 1982	GEARCASE - 15" TRANSOM
J70ELCNB 1982	GEARCASE - 20" TRANSOM

J70ELCOS 1985	GEARCASE - 15" TRANSOM
J70ELCOS 1985	GEARCASE - 20" MODELS
J70ELCRD 1984	GEARCASE - 15" TRANSOM
J70ELCRD 1984	GEARCASE - 20" MODELS
J70ELCTE 1983	GEARCASE-15" TRANSOM
J70ELCTE 1983	GEARCASE - 20" TRANSOM
J70ELCUR 1987	GEARCASE
J70TLCDC 1986	GEARCASE
J70TLCNB 1982	GEARCASE - 15" TRANSOM
J70TLCNB 1982	GEARCASE - 20" TRANSOM
J70TLCOS 1985	GEARCASE - 15" TRANSOM
J70TLCOS 1985	GEARCASE - 20" MODELS
J70TLCRD 1984	GEARCASE - 15" TRANSOM
J70TLCRD 1984	GEARCASE - 20" MODELS
J70TLCTE 1983	GEARCASE-15" TRANSOM
J70TLCTE 1983	GEARCASE - 20" TRANSOM
J70TLCUR 1987	GEARCASE
J75ECDC 1986	GEARCASE - 15" TRANSOM
J75ECDC 1986	GEARCASE - 20" MODELS
J75ECNB 1982	GEARCASE - 15" TRANSOM
J75ECNB 1982	GEARCASE - 20" TRANSOM
J75ECOS 1985	GEARCASE - 15" TRANSOM
J75ECOS 1985	GEARCASE - 20" MODELS
J75ECDR 1984	GEARCASE - 15" TRANSOM
J75ECDR 1984	GEARCASE - 20" MODELS
J75ECTE 1983	GEARCASE-15" TRANSOM
J75ECTE 1983	GEARCASE - 20" TRANSOM
J75ECCR 1987	GEARCASE - 15" TRANSOM
J75ECCR 1987	GEARCASE - 20" MODELS
J75ELCNB 1982	GEARCASE - 15" TRANSOM
J75ELCNB 1982	GEARCASE - 20" TRANSOM
J75ELCRD 1984	GEARCASE - 15" TRANSOM
J75ELCRD 1984	GEARCASE - 20" MODELS
J75ELCTE 1983	GEARCASE-15" TRANSOM
J75ELCTE 1983	GEARCASE - 20" TRANSOM

J75TLCNB 1982	GEARCASE - 15" TRANSOM
J75TLCNB 1982	GEARCASE - 20" TRANSOM
J75TLCRD 1984	GEARCASE - 15" TRANSOM
J75TLCRD 1984	GEARCASE - 20" MODELS
J75TLCTE 1983	GEARCASE-15" TRANSOM
J75TLCTE 1983	GEARCASE - 20" TRANSOM
SE40RPB 1997	GEARCASE
SE40RPH 1996	GEARCASE
SE40RPLB 1997	GEARCASE
SE40RPLH 1996	GEARCASE
SE40RPLT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPLT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE40RPT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE40RPYB 1997	GEARCASE
SE40RPYH 1996	GEARCASE
SE40RPYT2 1998	GEARCASE -- T & M MODELS ONLY
SE40RPYT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE45RSLB 1997	GEARCASE
SE45RSLH 1996	GEARCASE
SE55RSC 1997	GEARCASE
SE55RSLC 1997	GEARCASE
SE55RSLM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSLM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSLW 1996	GEARCASE
SE55RSM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSW 1996	GEARCASE
SE55RSYC 1997	GEARCASE
SE55RSYM2 1998	GEARCASE -- T & M MODELS ONLY
SE55RSYM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SE55RSYW 1996	GEARCASE
SJ40RPB 1997	GEARCASE
SJ40RPH 1996	GEARCASE
SJ40RPLB 1997	GEARCASE

SJ40RPLH 1996	GEARCASE
SJ40RPLT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPLT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ40RPT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ40RPYB 1997	GEARCASE
SJ40RPYH 1996	GEARCASE
SJ40RPYT2 1998	GEARCASE -- T & M MODELS ONLY
SJ40RPYT2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ45RSLB 1997	GEARCASE
SJ45RSLH 1996	GEARCASE
SJ55RSC 1997	GEARCASE
SJ55RSLC 1997	GEARCASE
SJ55RSLM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSLM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSLW 1996	GEARCASE
SJ55RSM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSW 1996	GEARCASE
SJ55RSYC 1997	GEARCASE
SJ55RSYM2 1998	GEARCASE -- T & M MODELS ONLY
SJ55RSYM2 1998	GEARCASE -- T2 & M2 MODELS ONLY
SJ55RSYW 1996	GEARCASE
VE48ESLCCC 1988	GEARCASE
VJ48ESLCCC 1988	GEARCASE