Model Name	where used: Part Number 0392885 Diagram
E25ECIB 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25ECIB 1981	EXHAUST HOUSING - ROPE START ONLY
E25ECIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25ECIM 1981	EXHAUST HOUSING - ROPE START ONLY
E25ELCIB 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25ELCIB 1981	EXHAUST HOUSING - ROPE START ONLY
E25ELCIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25ELCIM 1981	EXHAUST HOUSING - ROPE START ONLY
E25RCIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25RCIM 1981	EXHAUST HOUSING - ROPE START ONLY
E25RLCIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25RLCIM 1981	EXHAUST HOUSING - ROPE START ONLY
E25RSA 1981	EXHAUST HOUSING
E25RSLA 1981	EXHAUST HOUSING
E25RWCIM 1981	EXHAUST HOUSING
E25RWCUR 1987	MIDSECTION
E25RWLCIM 1981	EXHAUST HOUSING
E25RWLCUR 1987	MIDSECTION
E25TECIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25TECIM 1981	EXHAUST HOUSING - ROPE START ONLY
E25TELCIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY
E25TELCIM 1981	EXHAUST HOUSING - ROPE START ONLY
E35ECIG 1981	EXHAUST HOUSING
E35ELCIG 1981	EXHAUST HOUSING
E35RCIG 1981	EXHAUST HOUSING
E35RLCIG 1981	EXHAUST HOUSING
J25ECIB 1981	EXHAUST HOUSING - ELECTRIC START ONLY
J25ECIB 1981	EXHAUST HOUSING - ROPE START ONLY
J25ECIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY
J25ECIM 1981	EXHAUST HOUSING - ROPE START ONLY
J25ELCIB 1981	EXHAUST HOUSING - ELECTRIC START ONLY
J25ELCIB 1981	EXHAUST HOUSING - ROPE START ONLY
J25ELCIM 1981	EXHAUST HOUSING - ELECTRIC START ONLY

J25ELCIM 1981 EXHAUST HOUSING - ROPE START ONLY

J25RCIM 1981 EXHAUST HOUSING - ELECTRIC START ONLY

J25RCIM 1981 EXHAUST HOUSING - ROPE START ONLY

J25RLCIM 1981 EXHAUST HOUSING - ELECTRIC START ONLY

J25RLCIM 1981 EXHAUST HOUSING - ROPE START ONLY

J25RSA 1981 EXHAUST HOUSING

J25RSLA 1981 EXHAUST HOUSING

J25RWCIM 1981 EXHAUST HOUSING

J25RWCUR 1987 MIDSECTION

J25RWLCIM 1981 EXHAUST HOUSING

J25RWLCUR 1987 MIDSECTION

J25TECIM 1981 EXHAUST HOUSING - ELECTRIC START ONLY

J25TECIM 1981 EXHAUST HOUSING - ROPE START ONLY

J25TELCIM 1981 EXHAUST HOUSING - ELECTRIC START ONLY

J25TELCIM 1981 EXHAUST HOUSING - ROPE START ONLY

J35ECIG 1981 EXHAUST HOUSING

J35ELCIG 1981 EXHAUST HOUSING

J35RCIG 1981 EXHAUST HOUSING

J35RLCIG 1981 EXHAUST HOUSING