

Where Used: Part Number 0393103

Model Name	Diagram
E115MLCNB 1982	FUEL PUMP
E115MLCTE 1983	FUEL PUMP
E115TLCNB 1982	FUEL PUMP
E115TLCTE 1983	FUEL PUMP
E115TXCNB 1982	FUEL PUMP
E115TXCTE 1983	FUEL PUMP
E140MLCNB 1982	FUEL PUMP
E140MLCTE 1983	FUEL PUMP
E140TRLCNB 1982	FUEL PUMP
E140TRLCTE 1983	FUEL PUMP
E140TRXCNB 1982	FUEL PUMP
E140TRXCTE 1983	FUEL PUMP
E150TRLCNM 1982	FUEL PUMP
E150TRLCTB 1983	FUEL PUMP
E150TRLCTE 1983	FUEL PUMP
E150TRXCNM 1982	FUEL PUMP
E150TRXCTB 1983	FUEL PUMP
E150TRXCTE 1983	FUEL PUMP
E175TRLCNB 1982	FUEL PUMP
E175TRLCTD 1983	FUEL PUMP
E175TRLCTE 1983	FUEL PUMP
E175TRXCNB 1982	FUEL PUMP
E175TRXCTD 1983	FUEL PUMP
E175TRXCTE 1983	FUEL PUMP
E200TRLCNE 1982	FUEL PUMP
E200TRLCTD 1983	FUEL PUMP
E200TRLCTS 1983	FUEL PUMP
E200TRXCNE 1982	FUEL PUMP
E200TRXCTD 1983	FUEL PUMP
E200TRXCTS 1983	FUEL PUMP
E235TRLCNE 1982	FUEL PUMP
E235TRLCTD 1983	FUEL PUMP
E235TRLCTS 1983	FUEL PUMP

E235TRXCNE 1982	FUEL PUMP
E235TRXCTD 1983	FUEL PUMP
E235TRXCTS 1983	FUEL PUMP
E25CNE 1982	FUEL PUMP
E25E CRS 1984	FUEL PUMP
E25ECTD 1983	FUEL PUMP
E25ELCNE 1982	FUEL PUMP
E25ELCRS 1984	FUEL PUMP
E25ELCTD 1983	FUEL PUMP
E25RCNB 1982	FUEL PUMP
E25RCRD 1984	FUEL PUMP
E25RCTE 1983	FUEL PUMP
E25RLCNB 1982	FUEL PUMP
E25RLCRD 1984	FUEL PUMP
E25RLCTE 1983	FUEL PUMP
E25RSLS 1983	FUEL PUMP
E25RSS 1983	FUEL PUMP
E25RWCRD 1984	FUEL PUMP
E25RWCTE 1983	FUEL PUMP
E25RWLCRD 1984	FUEL PUMP
E25RWLCTE 1983	FUEL PUMP
E25TECNB 1982	FUEL PUMP
E25TECRD 1984	FUEL PUMP
E25TECTE 1983	FUEL PUMP
E25TELCNB 1982	FUEL PUMP
E25TELCRD 1984	FUEL PUMP
E25TELCTE 1983	FUEL PUMP
E30ECRR 1984	FUEL PUMP
E30ELCRR 1984	FUEL PUMP
E35ECND 1982	FUEL PUMP
E35ECRR 1984	FUEL PUMP
E35ECTS 1983	FUEL PUMP
E35ELCND 1982	FUEL PUMP
E35ELCRR 1984	FUEL PUMP
E35ELCTS 1983	FUEL PUMP

E35RCND 1982	FUEL PUMP
E35RCRR 1984	FUEL PUMP
E35RCTS 1983	FUEL PUMP
E35RLCND 1982	FUEL PUMP
E35RLCRR 1984	FUEL PUMP
E35RLCTS 1983	FUEL PUMP
E35TELCNB 1982	FUEL PUMP
E35TELCRR 1984	FUEL PUMP
E35TELCTS 1983	FUEL PUMP
E40ECRM 1984	FUEL PUMP AND FILTER
E40ELCRM 1984	FUEL PUMP AND FILTER
E40RCRM 1984	FUEL PUMP AND FILTER
E40RLCRM 1984	FUEL PUMP AND FILTER
E40RSLR 1983	FUEL PUMP
E40RSR 1983	FUEL PUMP
E40RWCRA 1984	FUEL PUMP
E40RWLCRA 1984	FUEL PUMP
E40RWLCTR 1983	FUEL PUMP
E40RWLTR 1983	FUEL PUMP
E40TECRM 1984	FUEL PUMP AND FILTER
E40TELCRM 1984	FUEL PUMP AND FILTER
E50BECNR 1982	FUEL PUMP AND FILTER
E50BECRM 1984	FUEL PUMP AND FILTER
E50BECTA 1983	FUEL PUMP AND FILTER
E50BELCNR 1982	FUEL PUMP AND FILTER
E50BELCRM 1984	FUEL PUMP AND FILTER
E50BELCTA 1983	FUEL PUMP AND FILTER
E50TELCRM 1984	FUEL PUMP AND FILTER
E50TELCTA 1983	FUEL PUMP AND FILTER
E50TLCRM 1984	FUEL PUMP AND FILTER
E55RSLN 1983	FUEL PUMP AND FILTER
E55RSLN-2 1983	FUEL PUMP AND FILTER
E55RSN 1983	FUEL PUMP AND FILTER
E55RSN-2 1983	FUEL PUMP AND FILTER
E55RSYN 1983	FUEL PUMP AND FILTER

E55RSYN-2 1983	FUEL PUMP AND FILTER
E55RWLCRD 1984	FUEL PUMP AND FILTER
E60ECNM 1982	FUEL PUMP AND FILTER
E60ECTB 1983	FUEL PUMP AND FILTER
E60ELCNM 1982	FUEL PUMP AND FILTER
E60ELCRE 1984	FUEL PUMP AND FILTER
E60ELCTB 1983	FUEL PUMP AND FILTER
E60TLCNM 1982	FUEL PUMP AND FILTER
E60TLCRE 1984	FUEL PUMP AND FILTER
E60TLCTB 1983	FUEL PUMP AND FILTER
E65RWLCRS 1984	FUEL PUMP AND FILTER
E65TELCRS 1984	FUEL PUMP AND FILTER
E65WMLCOC 1985	FUEL PUMP & FILTER - WMLP & WMYP MODELS ONLY
E65WTLCOC 1985	FUEL PUMP & FILTER - WMLP & WMYP MODELS ONLY
E65WTLCRS 1984	FUEL PUMP AND FILTER
E70ELCNB 1982	FUEL PUMP
E70ELCRD 1984	FUEL PUMP
E70ELCTE 1983	FUEL PUMP
E70TLCNB 1982	FUEL PUMP
E70TLCRD 1984	FUEL PUMP
E70TLCTE 1983	FUEL PUMP
E75ECDRD 1984	FUEL PUMP
E75ELCRD 1984	FUEL PUMP
E75ERCNB 1982	FUEL PUMP
E75ERCTE 1983	FUEL PUMP
E75ERLCNB 1982	FUEL PUMP
E75ERLCTE 1983	FUEL PUMP
E75TLCRD 1984	FUEL PUMP
E75TRLCNB 1982	FUEL PUMP
E75TRLCTE 1983	FUEL PUMP
E90MLCNB 1982	FUEL PUMP
E90MLCTE 1983	FUEL PUMP
E90TLCNB 1982	FUEL PUMP
E90TLCTE 1983	FUEL PUMP
E90TXCNB 1982	FUEL PUMP

E90TXCTE 1983	FUEL PUMP
J115MLCNB 1982	FUEL PUMP
J115MLCTE 1983	FUEL PUMP
J115TLCNB 1982	FUEL PUMP
J115TLCTE 1983	FUEL PUMP
J115TXCNB 1982	FUEL PUMP
J115TXCTE 1983	FUEL PUMP
J140MLCNB 1982	FUEL PUMP
J140MLCTE 1983	FUEL PUMP
J140TLCNB 1982	FUEL PUMP
J140TLCTE 1983	FUEL PUMP
J140TXCNB 1982	FUEL PUMP
J140TXCTE 1983	FUEL PUMP
J150TLCNM 1982	FUEL PUMP
J150TLCTB 1983	FUEL PUMP
J150TLCTE 1983	FUEL PUMP
J150TXCNM 1982	FUEL PUMP
J150TXCTB 1983	FUEL PUMP
J150TXCTE 1983	FUEL PUMP
J175TLCNB 1982	FUEL PUMP
J175TLCTD 1983	FUEL PUMP
J175TLCTE 1983	FUEL PUMP
J175TXCNB 1982	FUEL PUMP
J175TXCTD 1983	FUEL PUMP
J175TXCTE 1983	FUEL PUMP
J200TLCNE 1982	FUEL PUMP
J200TLCTD 1983	FUEL PUMP
J200TLCTS 1983	FUEL PUMP
J200TXCNE 1982	FUEL PUMP
J200TXCTD 1983	FUEL PUMP
J200TXCTS 1983	FUEL PUMP
J235TLCNE 1982	FUEL PUMP
J235TLCTD 1983	FUEL PUMP
J235TLCTS 1983	FUEL PUMP
J235TXCNE 1982	FUEL PUMP

J235TXCTD 1983	FUEL PUMP
J235TXCTS 1983	FUEL PUMP
J25ECNE 1982	FUEL PUMP
J25ECRS 1984	FUEL PUMP
J25ECTD 1983	FUEL PUMP
J25ELCNE 1982	FUEL PUMP
J25ELCRS 1984	FUEL PUMP
J25ELCTD 1983	FUEL PUMP
J25RCNB 1982	FUEL PUMP
J25RCRD 1984	FUEL PUMP
J25RCTE 1983	FUEL PUMP
J25RELCNB 1982	FUEL PUMP
J25RLCNB 1982	FUEL PUMP
J25RLCRD 1984	FUEL PUMP
J25RLCTE 1983	FUEL PUMP
J25RSLS 1983	FUEL PUMP
J25RSS 1983	FUEL PUMP
J25RWCRD 1984	FUEL PUMP
J25RWCTE 1983	FUEL PUMP
J25RWLCRD 1984	FUEL PUMP
J25RWLCTE 1983	FUEL PUMP
J25TECNB 1982	FUEL PUMP
J25TECRD 1984	FUEL PUMP
J25TECTE 1983	FUEL PUMP
J25TELCRD 1984	FUEL PUMP
J25TELCTE 1983	FUEL PUMP
J30ECRR 1984	FUEL PUMP
J30ELCRR 1984	FUEL PUMP
J35ECND 1982	FUEL PUMP
J35ECRR 1984	FUEL PUMP
J35ECTS 1983	FUEL PUMP
J35ELCND 1982	FUEL PUMP
J35ELCRR 1984	FUEL PUMP
J35ELCTS 1983	FUEL PUMP
J35RCND 1982	FUEL PUMP

J35RCRR 1984	FUEL PUMP
J35RCTS 1983	FUEL PUMP
J35RLCND 1982	FUEL PUMP
J35RLCRR 1984	FUEL PUMP
J35RLCTS 1983	FUEL PUMP
J35TELCNB 1982	FUEL PUMP
J35TELCRR 1984	FUEL PUMP
J35TELCRS 1983	FUEL PUMP
J40ECRM 1984	FUEL PUMP AND FILTER
J40ELCRM 1984	FUEL PUMP AND FILTER
J40RCRM 1984	FUEL PUMP AND FILTER
J40RLCRM 1984	FUEL PUMP AND FILTER
J40RSLR 1983	FUEL PUMP
J40RSR 1983	FUEL PUMP
J40RWCRA 1984	FUEL PUMP
J40RWCTR 1983	FUEL PUMP
J40RWLCRA 1984	FUEL PUMP
J40RWLCTR 1983	FUEL PUMP
J40TECRM 1984	FUEL PUMP AND FILTER
J40TELCRM 1984	FUEL PUMP AND FILTER
J50BECNR 1982	FUEL PUMP AND FILTER
J50BECRM 1984	FUEL PUMP AND FILTER
J50BECTA 1983	FUEL PUMP AND FILTER
J50BELCNR 1982	FUEL PUMP AND FILTER
J50BELCRM 1984	FUEL PUMP AND FILTER
J50BELCTA 1983	FUEL PUMP AND FILTER
J50TELCRM 1984	FUEL PUMP AND FILTER
J50TELCTA 1983	FUEL PUMP AND FILTER
J50TLCRM 1984	FUEL PUMP AND FILTER
J55RSLN 1983	FUEL PUMP AND FILTER
J55RSLN-2 1983	FUEL PUMP AND FILTER
J55RSN 1983	FUEL PUMP AND FILTER
J55RSN-2 1983	FUEL PUMP AND FILTER
J55RSYN 1983	FUEL PUMP AND FILTER
J55RSYN-2 1983	FUEL PUMP AND FILTER

J55RWLCRD 1984	FUEL PUMP AND FILTER
J60ECNM 1982	FUEL PUMP AND FILTER
J60ECTB 1983	FUEL PUMP AND FILTER
J60ELCNM 1982	FUEL PUMP AND FILTER
J60ELCRE 1984	FUEL PUMP AND FILTER
J60ELCTB 1983	FUEL PUMP AND FILTER
J60TLCNM 1982	FUEL PUMP AND FILTER
J60TLCRE 1984	FUEL PUMP AND FILTER
J60TLCTB 1983	FUEL PUMP AND FILTER
J65RWLCRS 1984	FUEL PUMP AND FILTER
J65TELCRS 1984	FUEL PUMP AND FILTER
J65WMLCOC 1985	FUEL PUMP & FILTER - WMLP & WMYP MODELS ONLY
J65WTLCOC 1985	FUEL PUMP & FILTER - WMLP & WMYP MODELS ONLY
J65WTLCRS 1984	FUEL PUMP AND FILTER
J70ELCNB 1982	FUEL PUMP
J70ELCRD 1984	FUEL PUMP
J70ELCTE 1983	FUEL PUMP
J70TLCNB 1982	FUEL PUMP
J70TLCRD 1984	FUEL PUMP
J70TLCTE 1983	FUEL PUMP
J75ECNB 1982	FUEL PUMP
J75ECRD 1984	FUEL PUMP
J75ECTE 1983	FUEL PUMP
J75ELCNB 1982	FUEL PUMP
J75ELCRD 1984	FUEL PUMP
J75ELCTE 1983	FUEL PUMP
J75TLCNB 1982	FUEL PUMP
J75TLCRD 1984	FUEL PUMP
J75TLCTE 1983	FUEL PUMP
J90MLCNB 1982	FUEL PUMP
J90MLCTE 1983	FUEL PUMP
J90TLCNB 1982	FUEL PUMP
J90TLCTE 1983	FUEL PUMP
J90TXCNB 1982	FUEL PUMP
J90TXCTE 1983	FUEL PUMP

