

## Where Used: Part Number 0398692

Model Name	Diagram
D25RWA 1988	MIDSECTION
D25RWLA 1988	MIDSECTION
E10ECCD 1988	STEERING HANDLE & THROTTLE CONTROL
E10ECES 1989	STEERING HANDLE & THROTTLE CONTROL
E10ECUE 1987	STEERING HANDLE & THROTTLE CONTROL
E10ELCCD 1988	STEERING HANDLE & THROTTLE CONTROL
E10ELCES 1989	STEERING HANDLE & THROTTLE CONTROL
E10ELCUE 1987	STEERING HANDLE & THROTTLE CONTROL
E10RCCD 1988	STEERING HANDLE & THROTTLE CONTROL
E10RCES 1989	STEERING HANDLE & THROTTLE CONTROL
E10RCUE 1987	STEERING HANDLE & THROTTLE CONTROL
E10RLCCD 1988	STEERING HANDLE & THROTTLE CONTROL
E10RLCES 1989	STEERING HANDLE & THROTTLE CONTROL
E10RLCUE 1987	STEERING HANDLE & THROTTLE CONTROL
E10SELCCD 1988	STEERING HANDLE & THROTTLE CONTROL
E10SELCES 1989	STEERING HANDLE & THROTTLE CONTROL
E10SELCUE 1987	STEERING HANDLE & THROTTLE CONTROL
E15ECCS 1988	STEERING HANDLE & THROTTLE CONTROL
E15ECEC 1989	STEERING HANDLE & THROTTLE CONTROL
E15ECUD 1987	STEERING HANDLE & THROTTLE CONTROL
E15ELCCS 1988	STEERING HANDLE & THROTTLE CONTROL
E15ELCEC 1989	STEERING HANDLE & THROTTLE CONTROL
E15ELCUD 1987	STEERING HANDLE & THROTTLE CONTROL
E15RCCS 1988	STEERING HANDLE & THROTTLE CONTROL
E15RCEC 1989	STEERING HANDLE & THROTTLE CONTROL
E15RCUD 1987	STEERING HANDLE & THROTTLE CONTROL
E15RLCCS 1988	STEERING HANDLE & THROTTLE CONTROL
E15RLCEC 1989	STEERING HANDLE & THROTTLE CONTROL
E15RLCUD 1987	STEERING HANDLE & THROTTLE CONTROL
E20CRCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E20CRCEM 1989	STEERING HANDLE
E20CRCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E20CRLCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC

E20CRLCEM 1989	STEERING HANDLE
E20CRLCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E20ECCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E20ECUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E20ELCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E20ELCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25ECCM 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25ECUA 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25ELCCM 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25ELCUA 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25RCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25RCEM 1989	STEERING HANDLE
E25RCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25RLCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25RLCEM 1989	STEERING HANDLE
E25RLCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25RWCUR 1987	MIDSECTION
E25RWK 1989	MIDSECTION
E25RWLCUR 1987	MIDSECTION
E25RWLK 1989	MIDSECTION
E25TECCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25TECEM 1989	STEERING HANDLE
E25TECUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25TELCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
E25TELCEM 1989	STEERING HANDLE
E25TELCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
E30ECCE 1988	STEERING HANDLE
E30ECUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E30ELCCE 1988	STEERING HANDLE
E30ELCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E30RCCE 1988	STEERING HANDLE
E30RCED 1989	STEERING HANDLE
E30RCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E30RLCCE 1988	STEERING HANDLE
E30RLCED 1989	STEERING HANDLE

E30RLCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E30TECCE 1988	STEERING HANDLE
E30TECED 1989	STEERING HANDLE
E30TECUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E30TELCCE 1988	STEERING HANDLE
E30TELCED 1989	STEERING HANDLE
E30TELCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E35AELCUD 1987	STEERING HANDLE
E35ARLCUD 1987	STEERING HANDLE
E35RCCE 1988	STEERING HANDLE
E35RCED 1989	STEERING HANDLE
E35RCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E35RLCCE 1988	STEERING HANDLE
E35RLCED 1989	STEERING HANDLE
E35RLCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
E40AELCCS 1988	STEERING HANDLE
E40ARLCCS 1988	STEERING HANDLE
E40ATLCCS 1988	STEERING HANDLE
E40ECCS 1988	STEERING HANDLE
E40ECEC 1989	STEERING HANDLE
E40ECUD 1987	STEERING HANDLE
E40ELCCS 1988	STEERING HANDLE
E40ELCEC 1989	STEERING HANDLE
E40ELCUD 1987	STEERING HANDLE
E40RCCS 1988	STEERING HANDLE
E40RCEC 1989	STEERING HANDLE
E40RCUD 1987	STEERING HANDLE
E40RLCCS 1988	STEERING HANDLE
E40RLCEC 1989	STEERING HANDLE
E40RLCUD 1987	STEERING HANDLE
E40TECCS 1988	STEERING HANDLE
E40TECEC 1989	STEERING HANDLE
E40TECUD 1987	STEERING HANDLE
E40TELCCS 1988	STEERING HANDLE
E40TELCEC 1989	STEERING HANDLE

E40TLCCS 1988	STEERING HANDLE
E40TLCEC 1989	STEERING HANDLE
E40TLCUD 1987	STEERING HANDLE
E40TTLCCS 1988	STEERING HANDLE
E40TTLCEC 1989	STEERING HANDLE
E45RCCUC 1987	STEERING HANDLE
E45RCE 1989	STEERING HANDLE
E45RCLCUC 1987	STEERING HANDLE
E45RCLE 1989	STEERING HANDLE
E45WMLE 1989	STEERING HANDLE
E4RDHCCS 1988	MIDSECTION
E4RDHCEC 1989	MIDSECTION
E4RDHCUD 1987	MIDSECTION
E4RDHLCCS 1988	MIDSECTION
E4RDHLCEC 1989	MIDSECTION
E4RDHLCUD 1987	MIDSECTION
E50BECCS 1988	STEERING HANDLE
E50BECEC 1989	STEERING HANDLE
E50BECUD 1987	STEERING HANDLE
E50BELCCS 1988	STEERING HANDLE
E50BELCEC 1989	STEERING HANDLE
E50BELCUD 1987	STEERING HANDLE
E50TELCCS 1988	STEERING HANDLE
E50TELCEC 1989	STEERING HANDLE
E50TELCUD 1987	STEERING HANDLE
E50TLCCS 1988	STEERING HANDLE
E50TLCEC 1989	STEERING HANDLE
E50TLCUD 1987	STEERING HANDLE
E55RWLCUC 1987	STEERING HANDLE
E55RWLE 1989	STEERING HANDLE
E60ELCCR 1988	STEERING HANDLE
E60TLCCR 1988	STEERING HANDLE
E60TTLCCR 1988	STEERING HANDLE
E6RCCS 1988	MIDSECTION
E6RCUD 1987	MIDSECTION

E6RLCCS 1988	MIDSECTION
E6RLCUD 1987	MIDSECTION
E6SLCCS 1988	MIDSECTION
E6SLCUD 1987	MIDSECTION
E8RCCS 1988	MIDSECTION
E8RCUD 1987	MIDSECTION
E8RLCCS 1988	MIDSECTION
E8RLCUD 1987	MIDSECTION
E8SRLCCS 1988	MIDSECTION
E8SRLCUD 1987	MIDSECTION
J10ECCD 1988	STEERING HANDLE & THROTTLE CONTROL
J10ECES 1989	STEERING HANDLE & THROTTLE CONTROL
J10ECUE 1987	STEERING HANDLE & THROTTLE CONTROL
J10ELCCD 1988	STEERING HANDLE & THROTTLE CONTROL
J10ELCES 1989	STEERING HANDLE & THROTTLE CONTROL
J10ELCUE 1987	STEERING HANDLE & THROTTLE CONTROL
J10RCCD 1988	STEERING HANDLE & THROTTLE CONTROL
J10RCES 1989	STEERING HANDLE & THROTTLE CONTROL
J10RCUE 1987	STEERING HANDLE & THROTTLE CONTROL
J10RLCCD 1988	STEERING HANDLE & THROTTLE CONTROL
J10RLCES 1989	STEERING HANDLE & THROTTLE CONTROL
J10RLCUE 1987	STEERING HANDLE & THROTTLE CONTROL
J10SELCCD 1988	STEERING HANDLE & THROTTLE CONTROL
J10SELCES 1989	STEERING HANDLE & THROTTLE CONTROL
J10SELCUE 1987	STEERING HANDLE & THROTTLE CONTROL
J15ECCS 1988	STEERING HANDLE & THROTTLE CONTROL
J15ECEC 1989	STEERING HANDLE & THROTTLE CONTROL
J15ECUD 1987	STEERING HANDLE & THROTTLE CONTROL
J15ELCCS 1988	STEERING HANDLE & THROTTLE CONTROL
J15ELCEC 1989	STEERING HANDLE & THROTTLE CONTROL
J15ELCUD 1987	STEERING HANDLE & THROTTLE CONTROL
J15RCCS 1988	STEERING HANDLE & THROTTLE CONTROL
J15RCEC 1989	STEERING HANDLE & THROTTLE CONTROL
J15RCUD 1987	STEERING HANDLE & THROTTLE CONTROL
J15RLCCS 1988	STEERING HANDLE & THROTTLE CONTROL

J15RLCEC 1989	STEERING HANDLE & THROTTLE CONTROL
J15RLCUD 1987	STEERING HANDLE & THROTTLE CONTROL
J20CRCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J20CRCEM 1989	STEERING HANDLE
J20CRCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J20CRLCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J20CRLCEM 1989	STEERING HANDLE
J20CRLCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J20ECCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J20ECUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J20ELCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J20ELCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25ECCM 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25ECUA 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25ELCCM 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25ELCUA 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25RCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25RCCEM 1989	STEERING HANDLE
J25RCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25RLCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25RLCEM 1989	STEERING HANDLE
J25RLCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25RWCUR 1987	MIDSECTION
J25RWK 1989	MIDSECTION
J25RWLCUR 1987	MIDSECTION
J25RWLK 1989	MIDSECTION
J25TECCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25TECEM 1989	STEERING HANDLE
J25TECUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25TELCCA 1988	MIDSECTION - ROPE START AND TILLER ELECTRIC
J25TELCEM 1989	STEERING HANDLE
J25TELCUR 1987	MIDSECTION - ROPE START AND TILLER ELECTRIC
J30ECCE 1988	STEERING HANDLE
J30ECUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J30ELCCE 1988	STEERING HANDLE

J30ELCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J30RCCE 1988	STEERING HANDLE
J30RCED 1989	STEERING HANDLE
J30RCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J30RLCCE 1988	STEERING HANDLE
J30RLCED 1989	STEERING HANDLE
J30RLCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J30TECCE 1988	STEERING HANDLE
J30TECED 1989	STEERING HANDLE
J30TECUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J30TELCCE 1988	STEERING HANDLE
J30TELCED 1989	STEERING HANDLE
J30TELCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J35AELCUD 1987	STEERING HANDLE
J35ARLCUD 1987	STEERING HANDLE
J35RCCE 1988	STEERING HANDLE
J35RCED 1989	STEERING HANDLE
J35RCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J35RLCCE 1988	STEERING HANDLE
J35RLCED 1989	STEERING HANDLE
J35RLCUB 1987	STEERING HANDLE-ROPE START & TILLER ELECTRIC MODELS ONLY
J40AELCCS 1988	STEERING HANDLE
J40ARLCCS 1988	STEERING HANDLE
J40ATLCCS 1988	STEERING HANDLE
J40ECCS 1988	STEERING HANDLE
J40ECEC 1989	STEERING HANDLE
J40ECUD 1987	STEERING HANDLE
J40ELCCS 1988	STEERING HANDLE
J40ELCEC 1989	STEERING HANDLE
J40ELCUD 1987	STEERING HANDLE
J40RCCS 1988	STEERING HANDLE
J40RCEC 1989	STEERING HANDLE
J40RCUD 1987	STEERING HANDLE
J40RLCCS 1988	STEERING HANDLE
J40RLCEC 1989	STEERING HANDLE

J40RLCUD 1987	STEERING HANDLE
J40TECCS 1988	STEERING HANDLE
J40TECEC 1989	STEERING HANDLE
J40TECUD 1987	STEERING HANDLE
J40TELCCS 1988	STEERING HANDLE
J40TELCEC 1989	STEERING HANDLE
J40TLCCS 1988	STEERING HANDLE
J40TLCEC 1989	STEERING HANDLE
J40TLCUD 1987	STEERING HANDLE
J40TTLCCS 1988	STEERING HANDLE
J40TTLCEC 1989	STEERING HANDLE
J45RCCUC 1987	STEERING HANDLE
J45RCE 1989	STEERING HANDLE
J45RCLCUC 1987	STEERING HANDLE
J45RCLE 1989	STEERING HANDLE
J45WMLE 1989	STEERING HANDLE
J4RDHCCS 1988	MIDSECTION
J4RDHCEC 1989	MIDSECTION
J4RDHCUD 1987	MIDSECTION
J4RDHLCCS 1988	MIDSECTION
J4RDHLCEC 1989	MIDSECTION
J4RDHLCUD 1987	MIDSECTION
J50BECCS 1988	STEERING HANDLE
J50BECEC 1989	STEERING HANDLE
J50BECUD 1987	STEERING HANDLE
J50BELCCS 1988	STEERING HANDLE
J50BELCEC 1989	STEERING HANDLE
J50BELCUD 1987	STEERING HANDLE
J50TELCCS 1988	STEERING HANDLE
J50TELCEC 1989	STEERING HANDLE
J50TELCUD 1987	STEERING HANDLE
J50TLCCS 1988	STEERING HANDLE
J50TLCEC 1989	STEERING HANDLE
J50TLCUD 1987	STEERING HANDLE
J55RWLCUC 1987	STEERING HANDLE



J55RWLE 1989	STEERING HANDLE
J60ELCCR 1988	STEERING HANDLE
J60TLCCR 1988	STEERING HANDLE
J60TTLCCR 1988	STEERING HANDLE
J6RCCS 1988	MIDSECTION
J6RCUD 1987	MIDSECTION
J6RLCCS 1988	MIDSECTION
J6RLCUD 1987	MIDSECTION
J6SLCCS 1988	MIDSECTION
J6SLCUD 1987	MIDSECTION
J8RCCS 1988	MIDSECTION
J8RCUD 1987	MIDSECTION
J8RLCCS 1988	MIDSECTION
J8RLCUD 1987	MIDSECTION
J8SRLCCS 1988	MIDSECTION
J8SRLCUD 1987	MIDSECTION
M55RWLR 1988	STEERING HANDLE
R45RCLR 1988	STEERING HANDLE
R45RCR 1988	STEERING HANDLE
R55RWLR 1988	STEERING HANDLE
S45RCLR 1988	STEERING HANDLE
S45RCR 1988	STEERING HANDLE
TE10ELCES 1989	STEERING HANDLE & THROTTLE CONTROL
TE10RLCES 1989	STEERING HANDLE & THROTTLE CONTROL
TE15RLCEC 1989	STEERING HANDLE & THROTTLE CONTROL
TE20CRCEM 1989	STEERING HANDLE
TE20CRLCEM 1989	STEERING HANDLE
TE20CRLESF 1989	STEERING HANDLE
TE40ELCEC 1989	STEERING HANDLE
TE50TLCEC 1989	STEERING HANDLE
TE50TLESF 1989	STEERING HANDLE
TJ10ELCES 1989	STEERING HANDLE & THROTTLE CONTROL
TJ10RLCES 1989	STEERING HANDLE & THROTTLE CONTROL
TJ15RLCEC 1989	STEERING HANDLE & THROTTLE CONTROL
TJ20CRCEM 1989	STEERING HANDLE

TJ20CRLCEM 1989	STEERING HANDLE
TJ20CRLESF 1989	STEERING HANDLE
TJ40ELCEC 1989	STEERING HANDLE
TJ50TLCEC 1989	STEERING HANDLE
TJ50TLESF 1989	STEERING HANDLE
U25RWA 1988	MIDSECTION
U25RWLA 1988	MIDSECTION
VE14RCCS 1988	MIDSECTION
VE14RCEC 1989	MIDSECTION
VJ14RCCS 1988	MIDSECTION
VJ14RCEC 1989	MIDSECTION