

Where Used: Part Number 0438592

Model Name	Diagram
BE40EECR 1998	GEARCASE
BE40EEUC 1997	GEARCASE
BE40EEUC 1997	JET DRIVE UNIT
BE40ELECR 1998	GEARCASE
BE40ELEUC 1997	GEARCASE
BE40ELEUC 1997	JET DRIVE UNIT
BE40TLECR 1998	GEARCASE
BE40TLEUC 1997	GEARCASE
BE40TLEUC 1997	JET DRIVE UNIT
BE50ESECC 1998	GEARCASE
BE50RLECR 1998	GEARCASE
BE50RLEUC 1997	GEARCASE
BE50RLEUC 1997	JET DRIVE UNIT
BE50TLECR 1998	GEARCASE
BE50TLEUC 1997	GEARCASE
BE50TLEUC 1997	JET DRIVE UNIT
BE50TSLECC 1998	GEARCASE
BE50TSLEUS 1997	GEARCASE
BE50TSLEUS 1997	JET DRIVE UNIT
BJ40EECR 1998	GEARCASE
BJ40EEEA 1999	GEARCASE
BJ40EEUC 1997	GEARCASE
BJ40EEUC 1997	JET DRIVE UNIT
BJ40ELECR 1998	GEARCASE
BJ40ELEEA 1999	GEARCASE
BJ40ELEUC 1997	GEARCASE
BJ40ELEUC 1997	JET DRIVE UNIT
BJ40ELSIF elec start, 20 in shaft, n/a usa 2001	GEARCASE
BJ40ELSSM Elec. Start, 20 IN. shaft, N/A USA 2000	GEARCASE
BJ40ESIF elec start, 15 in shaft, n/a usa 2001	GEARCASE
BJ40ESSM Elec. Start, 15 IN. shaft, N/A USA 2000	GEARCASE
BJ40PLEEA 1999	GEARCASE
BJ40PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE

BJ40PLSSM Elec. Start, TNT, 15 IN. shaft, N/A USA 2000	GEARCASE
BJ40TLECR 1998	GEARCASE
BJ40TLEUC 1997	GEARCASE
BJ40TLEUC 1997	JET DRIVE UNIT
BJ50EEER 1999	GEARCASE
BJ50ELEER 1999	GEARCASE
BJ50ELSIF elec start, 20 in shaft, n/a usa 2001	GEARCASE
BJ50ELSSA Elec. Start, 20 IN. shaft, N/A USA 2000	GEARCASE
BJ50ESECC 1998	GEARCASE
BJ50ESIF elec start, 15 in shaft, n/a usa 2001	GEARCASE
BJ50ESSA Elec Start, 15 IN. shaft, N/A USA 2000	GEARCASE
BJ50PLEEA 1999	GEARCASE
BJ50PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	GEARCASE
BJ50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft, N/A USA 2000	GEARCASE
BJ50RLECR 1998	GEARCASE
BJ50RLEEA 1999	GEARCASE
BJ50RLEUC 1997	GEARCASE
BJ50RLEUC 1997	JET DRIVE UNIT
BJ50RLSIF elec start, 20 in shaft, n/a usa 2001	GEARCASE
BJ50RLSSM Rope Start, 20 IN. shaft, N/A USA 2000	GEARCASE
BJ50TLECR 1998	GEARCASE
BJ50TLEUC 1997	GEARCASE
BJ50TLEUC 1997	JET DRIVE UNIT
BJ50TSLECC 1998	GEARCASE
BJ50TSLEUS 1997	GEARCASE
BJ50TSLEUS 1997	JET DRIVE UNIT
E40ELECR 1998	GEARCASE
E40ELEUC 1997	GEARCASE
E40ELEUC 1997	JET DRIVE UNIT
E40JRECA 1998	JET DRIVE UNIT
E40JREUR 1997	JET DRIVE UNIT
E40RECR 1998	GEARCASE
E40REUC 1997	GEARCASE
E40REUC 1997	JET DRIVE UNIT
E40RLECR 1998	GEARCASE

E40RLEUC 1997	GEARCASE
E40RLEUC 1997	JET DRIVE UNIT
E40TEECR 1998	GEARCASE
E40TEEUC 1997	GEARCASE
E40TEEUC 1997	JET DRIVE UNIT
E40TELECR 1998	GEARCASE
E40TELEUC 1997	GEARCASE
E40TELEUC 1997	JET DRIVE UNIT
E40TLECR 1998	GEARCASE
E40TLEUC 1997	GEARCASE
E40TLEUC 1997	JET DRIVE UNIT
E40TTLECR 1998	GEARCASE
E40TTLEUC 1997	GEARCASE
E40TTLEUC 1997	JET DRIVE UNIT
E50ESLECC 1998	GEARCASE
E50ESLEUR 1997	GEARCASE
E50ESLEUR 1997	JET DRIVE UNIT
E50JEUC 1997	GEARCASE
E50JEUC 1997	JET DRIVE UNIT
E50TLECR 1998	GEARCASE
E50TLEUC 1997	GEARCASE
E50TLEUC 1997	JET DRIVE UNIT
E50TSLECC 1998	GEARCASE
E50TSLEUS 1997	GEARCASE
E50TSLEUS 1997	JET DRIVE UNIT
HE40REUC 1997	GEARCASE
HE40REUC 1997	JET DRIVE UNIT
HE40RLEUC 1997	GEARCASE
HE40RLEUC 1997	JET DRIVE UNIT
HJ40REUC 1997	GEARCASE
HJ40REUC 1997	JET DRIVE UNIT
HJ40RLEUC 1997	GEARCASE
HJ40RLEUC 1997	JET DRIVE UNIT
J25JRTSSS Jet Drive, Rope Start, Tiller, 15 IN. shaft 2000	JET DRIVE UNIT
J30JREEM 1999	JET DRIVE UNIT

J30JRSIE jet drive, rope start, 15 in shaft 2001	STEERING HANDLE
J30JRSIE jet drive, rope start, 15 in shaft 2001	JET DRIVE UNIT
J30JRSSB Jet Drive, Rope Start, Tiller, 15 IN. shaft 2000	JET DRIVE UNIT
J40ELECR 1998	GEARCASE
J40ELEUC 1997	GEARCASE
J40ELEUC 1997	JET DRIVE UNIT
J40JRECA 1998	JET DRIVE UNIT
J40JREUR 1997	JET DRIVE UNIT
J40PLEEA 1999	GEARCASE
J40PLSIF elec start, TNT, 20 in shaft 2001	GEARCASE
J40PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES
J40PLSNF Oil Injection, 20 in., White, Remote, Elec, TNT, 2002	GEARCASE
J40PLSOC	GEARCASE
J40PLSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J40PLSRS	GEARCASE
J40PLSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J40PLSSM Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE
J40PLSTD	GEARCASE
J40PLSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J40RECR 1998	GEARCASE
J40REEA 1999	GEARCASE
J40REUC 1997	GEARCASE
J40REUC 1997	JET DRIVE UNIT
J40RELECR 1998	GEARCASE
J40RLEEA 1999	GEARCASE
J40RLEUC 1997	GEARCASE
J40RLEUC 1997	JET DRIVE UNIT
J40RLSIF rope start, 20 in shaft 2001	GEARCASE
J40RLSNF - FR	27-1_BOÎTIER D'ENGRENAGES
J40RLSNF 20 in. shaft, White, Tiller, Rope, Touch Trim 2002	GEARCASE
J40RLSOC	GEARCASE
J40RLSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J40RLSRS	GEARCASE
J40RLSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J40RLSSM Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE

J40RLSTD	GEARCASE
J40RLSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J40RSIF rope start, 15 in shaft 2001	GEARCASE
J40RSNF - FR	27-1_BOÎTIER D'ENGRENAGES
J40RSNF 15 in. shaft, White, Tiller, Rope, Touch Trim 2002	GEARCASE
J40RSOC	GEARCASE
J40RSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J40RSRS	GEARCASE
J40RSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J40RSSM Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J40RSTD	GEARCASE
J40RSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J40TEECR 1998	GEARCASE
J40TEEUC 1997	GEARCASE
J40TEEUC 1997	JET DRIVE UNIT
J40TELECR 1998	GEARCASE
J40TELEUC 1997	GEARCASE
J40TELEUC 1997	JET DRIVE UNIT
J40TLECR 1998	GEARCASE
J40TLEUC 1997	GEARCASE
J40TLEUC 1997	JET DRIVE UNIT
J40TPLEEA 1999	GEARCASE
J40TPLSIF elec start, tiller, TNT, 20 in shaft 2001	GEARCASE
J40TPLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	GEARCASE
J40TTLECR 1998	GEARCASE
J40TTLEUC 1997	GEARCASE
J40TTLEUC 1997	JET DRIVE UNIT
J50ELEER 1999	GEARCASE
J50ELSIF elec start, 20 in shaft 2001	GEARCASE
J50ELSSA Elec. Start, Tiller, 15 IN. shaft 2000	GEARCASE
J50ESLECC 1998	GEARCASE
J50ESLEUR 1997	GEARCASE
J50ESLEUR 1997	JET DRIVE UNIT
J50JEUC 1997	GEARCASE
J50JEUC 1997	JET DRIVE UNIT

J50PLEEA 1999	GEARCASE
J50PLSIF elec start, TNT, 20 in shaft 2001	GEARCASE
J50PLSNF - FR	27-1_BOÎTIER D'ENGRENAGES
J50PLSNF Oil Injection, 20 in., White, Remote, Elec, TNT, 2002	GEARCASE
J50PLSOC	GEARCASE
J50PLSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J50PLSRS	GEARCASE
J50PLSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	GEARCASE
J50PLSTD	GEARCASE
J50PLSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J50TLECR 1998	GEARCASE
J50TLEUC 1997	GEARCASE
J50TLEUC 1997	JET DRIVE UNIT
J50TSLECC 1998	GEARCASE
J50TSLEUS 1997	GEARCASE
J50TSLEUS 1997	JET DRIVE UNIT
RJ50ELSIF elec start, TNT, 20 in shaft 2001	GEARCASE
X50ESLECC 1998	GEARCASE