

Where Used: Part Number 0438966

Model Name	Diagram
BE5DREUC 1997	GEARCASE
BE5DRLEUC 1997	GEARCASE
BE5FRBECC 1998	GEARCASE
BE5FRBEUS 1997	GEARCASE
BE5FRBLECC 1998	GEARCASE
BE5FRBLEUS 1997	GEARCASE
BE6DRECR 1998	GEARCASE
BE6DREUC 1997	GEARCASE
BE6DRLECR 1998	GEARCASE
BE6DRLEUC 1997	GEARCASE
BE8RCB 1997	GEARCASE
BE8RCLB 1997	GEARCASE
BE8RCLT 1998	GEARCASE
BE8RCT 1998	GEARCASE
BJ5DREUC 1997	GEARCASE
BJ5DRLEUC 1997	GEARCASE
BJ5FRBECC 1998	GEARCASE
BJ5FRBEUS 1997	GEARCASE
BJ5FRBLECC 1998	GEARCASE
BJ5FRBLEUS 1997	GEARCASE
BJ6DRECR 1998	GEARCASE
BJ6DREUC 1997	GEARCASE
BJ6DRLECR 1998	GEARCASE
BJ6DRLEUC 1997	GEARCASE
BJ8RCB 1997	GEARCASE
BJ8RCLB 1997	GEARCASE
BJ8RCLT 1998	GEARCASE
BJ8RCT 1998	GEARCASE
E5DRECR 1998	GEARCASE
E5DRLECR 1998	GEARCASE
E5R4EEM 1999	GEARCASE
E5R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	GEARCASE
E5R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. Shaft 2000	GEARCASE

E5RB4EER 1999	GEARCASE
E5RBL4EER 1999	GEARCASE
E5RL4EEM 1999	GEARCASE
E5RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	GEARCASE
E5RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. Shaft 2000	GEARCASE
E6R4EEM 1999	GEARCASE
E6R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	GEARCASE
E6R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. Shaft 2000	GEARCASE
E6RECR 1998	GEARCASE
E6REUC 1997	GEARCASE
E6RL4EEM 1999	GEARCASE
E6RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	GEARCASE
E6RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. Shaft 2000	GEARCASE
E6RLECR 1998	GEARCASE
E6RLEUC 1997	GEARCASE
E8DREEA 1999	GEARCASE
E8DRSSM Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	GEARCASE
E8RECR 1998	GEARCASE
E8REUC 1997	GEARCASE
E8RLECR 1998	GEARCASE
E8RLEUC 1997	GEARCASE
E8SRLECA 1998	GEARCASE
E8SRLEUC 1997	GEARCASE
E8WREES 1999	GEARCASE
E8WRLEES 1999	GEARCASE
E8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	GEARCASE
E8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
E8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	GEARCASE
E8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
HE5FRECA 1998	GEARCASE
HE5FREUR 1997	GEARCASE
HE5FRLECA 1998	GEARCASE
HE5FRLEUR 1997	GEARCASE
HE6FRECA 1998	GEARCASE
HE6FREUR 1997	GEARCASE

HE6FRLECA 1998	GEARCASE
HE6FRLEUR 1997	GEARCASE
HJ5FRECA 1998	GEARCASE
HJ5FREUR 1997	GEARCASE
HJ5FRLECA 1998	GEARCASE
HJ5FRLEUR 1997	GEARCASE
HJ6FRECA 1998	GEARCASE
HJ6FREUR 1997	GEARCASE
HJ6FRLECA 1998	GEARCASE
HJ6FRLEUR 1997	GEARCASE
J5DRECR 1998	GEARCASE
J5DRLECR 1998	GEARCASE
J6R4SRC	GEARCASE
J6R4SRC - FR	17-1_BOÎTIER D'ENGRENAGES
J6R4STS	GEARCASE
J6R4STS - FR	17-1_BOÎTIER D'ENGRENAGES
J6RECR 1998	GEARCASE
J6REEA 1999	GEARCASE
J6REUC 1997	GEARCASE
J6RL4SRC	GEARCASE
J6RL4SRC - FR	17-1_BOÎTIER D'ENGRENAGES
J6RL4STS	GEARCASE
J6RL4STS - FR	17-1_BOÎTIER D'ENGRENAGES
J6RLECR 1998	GEARCASE
J6RLEEA 1999	GEARCASE
J6RLEUC 1997	GEARCASE
J6RLSIB rope start, tiller, 20 in shaft 2001	GEARCASE
J6RLSOC	GEARCASE
J6RLSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J6RLSRS	GEARCASE
J6RLSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J6RLSSM Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J6RLSTD	GEARCASE
J6RLSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J6RLVSIB rope start, tiller, 20 in shaft, wht 2001	GEARCASE

J6RSIB rope start, tiller, 15 in shaft 2001	GEARCASE
J6RSOC	GEARCASE
J6RSOC - FR	27-1_BOÎTIER D'ENGRENAGES
J6RSRS	GEARCASE
J6RSRS - FR	27-1_BOÎTIER D'ENGRENAGES
J6RSSM Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J6RSTD	GEARCASE
J6RSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J6RVSIB rope start, tiller, 15 in shaft, wht 2001	GEARCASE
J8DREEA 1999	GEARCASE
J8RECR 1998	GEARCASE
J8REEM 1999	GEARCASE
J8REUC 1997	GEARCASE
J8RLECR 1998	GEARCASE
J8RLEEM 1999	GEARCASE
J8RLEUC 1997	GEARCASE
J8RLSIE rope start, tiller, 20 in shaft 2001	GEARCASE
J8RLSOR	GEARCASE
J8RLSOR - FR	27-1_BOÎTIER D'ENGRENAGES
J8RLSRC	GEARCASE
J8RLSRC - FR	27-1_BOÎTIER D'ENGRENAGES
J8RLSSB Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J8RLSTS	GEARCASE
J8RLSTS - FR	27-1_BOÎTIER D'ENGRENAGES
J8RLVSIE rope start, tiller, 20 in shaft, wht 2001	GEARCASE
J8RLXSIE rope start, tiller, 25 in shaft, wht 2001	GEARCASE
J8RSIE rope start, tiller, 15 in shaft 2001	GEARCASE
J8RSOR	GEARCASE
J8RSOR - FR	27-1_BOÎTIER D'ENGRENAGES
J8RSRC	GEARCASE
J8RSRC - FR	27-1_BOÎTIER D'ENGRENAGES
J8RSSB Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
J8RSTD	GEARCASE
J8RSTD - FR	27-1_BOÎTIER D'ENGRENAGES
J8RVSIE rope start, tiller, 15 in shaft, wht 2001	GEARCASE

J8RXEEM 1999	GEARCASE
J8RXSIE rope start, tiller, 25 in shaft 2001	GEARCASE
J8RXSSB Rope Start, Tiller, 25 IN. shaft 2000	GEARCASE
J8SRLECA 1998	GEARCASE
J8SRLEUC 1997	GEARCASE
J8WREES 1999	GEARCASE
J8WRLEES 1999	GEARCASE
J8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	GEARCASE
J8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
J8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	GEARCASE
J8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE