

Where Used: Part Number 0441118

Model Name	Diagram
BE5FRBECC 1998	EXHAUST HOUSING
BE5FRBEUS 1997	EXHAUST HOUSING
BE5FRBLECC 1998	EXHAUST HOUSING
BE5FRBLEUS 1997	EXHAUST HOUSING
BJ5FRBECC 1998	EXHAUST HOUSING
BJ5FRBEUS 1997	EXHAUST HOUSING
BJ5FRBLECC 1998	EXHAUST HOUSING
BJ5FRBLEUS 1997	EXHAUST HOUSING
E5R4EEM 1999	EXHAUST HOUSING
E5R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	EXHAUST HOUSING
E5R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. Shaft 2000	EXHAUST HOUSING
E5RB4EER 1999	EXHAUST HOUSING
E5RBL4EER 1999	EXHAUST HOUSING
E5RL4EEM 1999	EXHAUST HOUSING
E5RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	EXHAUST HOUSING
E5RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. Shaft 2000	EXHAUST HOUSING
E6R4EEM 1999	EXHAUST HOUSING
E6R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	EXHAUST HOUSING
E6R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. Shaft 2000	EXHAUST HOUSING
E6RL4EEM 1999	EXHAUST HOUSING
E6RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	EXHAUST HOUSING
E6RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. Shaft 2000	EXHAUST HOUSING
HE5FRECA 1998	EXHAUST HOUSING
HE5FREUR 1997	EXHAUST HOUSING
HE5FRLECA 1998	EXHAUST HOUSING
HE5FRLEUR 1997	EXHAUST HOUSING
HE6FRECA 1998	EXHAUST HOUSING
HE6FREUR 1997	EXHAUST HOUSING
HE6FRLECA 1998	EXHAUST HOUSING
HE6FRLEUR 1997	EXHAUST HOUSING
HJ5FRECA 1998	EXHAUST HOUSING
HJ5FREUR 1997	EXHAUST HOUSING
HJ5FRLECA 1998	EXHAUST HOUSING

HJ5FRLEUR 1997	EXHAUST HOUSING
HJ6FRECA 1998	EXHAUST HOUSING
HJ6FREUR 1997	EXHAUST HOUSING
HJ6FRLECA 1998	EXHAUST HOUSING
HJ6FRLEUR 1997	EXHAUST HOUSING
J6R4SRC	EXHAUST HOUSING
J6R4SRC - FR	16-1_BOÎTIER D'ÉCHAPPEMENT
J6R4STS	EXHAUST HOUSING
J6R4STS - FR	16-1_BOÎTIER D'ÉCHAPPEMENT
J6RL4SRC	EXHAUST HOUSING
J6RL4SRC - FR	16-1_BOÎTIER D'ÉCHAPPEMENT
J6RL4STS	EXHAUST HOUSING
J6RL4STS - FR	16-1_BOÎTIER D'ÉCHAPPEMENT