

**Where Used: Part Number 0445037**

<b>Model Name</b>	<b>Diagram</b>
BE10FAEDC 1996	CYLINDER & CRANKCASE
BE10FAEUR 1997	CYLINDER & CRANKCASE
BE10FCLEDC 1996	CYLINDER & CRANKCASE
BE10FCLEUR 1997	CYLINDER & CRANKCASE
BE10FDLECM 1998	CYLINDER & CRANKCASE
BE10FDLEDR 1996	CYLINDER & CRANKCASE
BE10FDLEUA 1997	CYLINDER & CRANKCASE
BE10FPXEDC 1996	CYLINDER & CRANKCASE
BE10FPXEUR 1997	CYLINDER & CRANKCASE
BE10FRELDR 1996	CYLINDER & CRANKCASE
BE10FRELUA 1997	CYLINDER & CRANKCASE
BE10FWEDC 1996	CYLINDER & CRANKCASE
BE10FWEUR 1997	CYLINDER & CRANKCASE
BE10FWLEDC 1996	CYLINDER & CRANKCASE
BE10FWLEUR 1997	CYLINDER & CRANKCASE
BE15FAEDR 1996	CYLINDER & CRANKCASE
BE15FAEUA 1997	CYLINDER & CRANKCASE
BE15FDLECM 1998	CYLINDER & CRANKCASE
BE15FDLEDR 1996	CYLINDER & CRANKCASE
BE15FDLEUA 1997	CYLINDER & CRANKCASE
BE15FKEDR 1996	CYLINDER & CRANKCASE
BE15FKEUA 1997	CYLINDER & CRANKCASE
BE15FREDR 1996	CYLINDER & CRANKCASE
BE15FRELEDR 1996	CYLINDER & CRANKCASE
BE15FRELUA 1997	CYLINDER & CRANKCASE
BE15FREUA 1997	CYLINDER & CRANKCASE
BE15FWECA 1998	CYLINDER & CRANKCASE
BE15FWEDC 1996	CYLINDER & CRANKCASE
BE15FWEUR 1997	CYLINDER & CRANKCASE
BE15FWLECA 1998	CYLINDER & CRANKCASE
BE15FWLEDC 1996	CYLINDER & CRANKCASE
BE15FWLEUR 1997	CYLINDER & CRANKCASE
BE5FRBECC 1998	CYLINDER & CRANKCASE

BE5FRBEUS 1997	CYLINDER & CRANKCASE
BE5FRBLECC 1998	CYLINDER & CRANKCASE
BE5FRBLEUS 1997	CYLINDER & CRANKCASE
BE8FRBEC A 1998	CYLINDER & CRANKCASE
BE8FRBEDC 1996	CYLINDER & CRANKCASE
BE8FRBEUR 1997	CYLINDER & CRANKCASE
BE8FRBLECA 1998	CYLINDER & CRANKCASE
BE8FRBLEDC 1996	CYLINDER & CRANKCASE
BE8FRBLEUR 1997	CYLINDER & CRANKCASE
BE8FRBXEDC 1996	CYLINDER & CRANKCASE
BE8FRBXEUR 1997	CYLINDER & CRANKCASE
BJ10FAEDC 1996	CYLINDER & CRANKCASE
BJ10FAEUR 1997	CYLINDER & CRANKCASE
BJ10FCLEDC 1996	CYLINDER & CRANKCASE
BJ10FCLEUR 1997	CYLINDER & CRANKCASE
BJ10FDLECM 1998	CYLINDER & CRANKCASE
BJ10FDLEDR 1996	CYLINDER & CRANKCASE
BJ10FDLEUA 1997	CYLINDER & CRANKCASE
BJ10FPXEDC 1996	CYLINDER & CRANKCASE
BJ10FPXEUR 1997	CYLINDER & CRANKCASE
BJ10FRELDR 1996	CYLINDER & CRANKCASE
BJ10FRELUA 1997	CYLINDER & CRANKCASE
BJ10FWEDC 1996	CYLINDER & CRANKCASE
BJ10FWEUR 1997	CYLINDER & CRANKCASE
BJ10FWLEDC 1996	CYLINDER & CRANKCASE
BJ10FWLEUR 1997	CYLINDER & CRANKCASE
BJ15FAEDR 1996	CYLINDER & CRANKCASE
BJ15FAEUA 1997	CYLINDER & CRANKCASE
BJ15FDLECM 1998	CYLINDER & CRANKCASE
BJ15FDLEDR 1996	CYLINDER & CRANKCASE
BJ15FDLEUA 1997	CYLINDER & CRANKCASE
BJ15FKEDR 1996	CYLINDER & CRANKCASE
BJ15FKEUA 1997	CYLINDER & CRANKCASE
BJ15FREDR 1996	CYLINDER & CRANKCASE
BJ15FRELEDR 1996	CYLINDER & CRANKCASE

BJ15FRELUA 1997	CYLINDER & CRANKCASE
BJ15FREUA 1997	CYLINDER & CRANKCASE
BJ15FWECA 1998	CYLINDER & CRANKCASE
BJ15FWEDC 1996	CYLINDER & CRANKCASE
BJ15FWEUR 1997	CYLINDER & CRANKCASE
BJ15FWLECA 1998	CYLINDER & CRANKCASE
BJ15FWLEDC 1996	CYLINDER & CRANKCASE
BJ15FWLEUR 1997	CYLINDER & CRANKCASE
BJ5FRBECC 1998	CYLINDER & CRANKCASE
BJ5FRBEUS 1997	CYLINDER & CRANKCASE
BJ5FRBLECC 1998	CYLINDER & CRANKCASE
BJ5FRBLEUS 1997	CYLINDER & CRANKCASE
BJ8FRBECA 1998	CYLINDER & CRANKCASE
BJ8FRBEDC 1996	CYLINDER & CRANKCASE
BJ8FRBEUR 1997	CYLINDER & CRANKCASE
BJ8FRBLECA 1998	CYLINDER & CRANKCASE
BJ8FRBLEDC 1996	CYLINDER & CRANKCASE
BJ8FRBLEUR 1997	CYLINDER & CRANKCASE
BJ8FRBXEDC 1996	CYLINDER & CRANKCASE
BJ8FRBXEUR 1997	CYLINDER & CRANKCASE
E10EBL4EEB 1999	CYLINDER & CRANKCASE
E10EL4EEB 1999	CYLINDER & CRANKCASE
E10EL4SID 4-stroke, elec start, remote, 20 in shaft 2001	CYLINDER & CRANKCASE
E10EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	CYLINDER & CRANKCASE
E10EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	CYLINDER & CRANKCASE
E10EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	CYLINDER & CRANKCASE
E10FEXECM 1998	CYLINDER & CRANKCASE
E10FEXEDR 1996	CYLINDER & CRANKCASE
E10FEXEO 1995	CYLINDER & CRANKCASE
E10FEXEUA 1997	CYLINDER & CRANKCASE
E10FOECA 1998	CYLINDER & CRANKCASE
E10FOLECA 1998	CYLINDER & CRANKCASE
E10FRECM 1998	CYLINDER & CRANKCASE
E10FREDR 1996	CYLINDER & CRANKCASE
E10FRELCM 1998	CYLINDER & CRANKCASE

E10FRELEDR 1996	CYLINDER & CRANKCASE
E10FRELEOC 1995	CYLINDER & CRANKCASE
E10FRELEUA 1997	CYLINDER & CRANKCASE
E10FREOC 1995	CYLINDER & CRANKCASE
E10FREUA 1997	CYLINDER & CRANKCASE
E10FRLECM 1998	CYLINDER & CRANKCASE
E10FRLEDR 1996	CYLINDER & CRANKCASE
E10FRLEO 1995	CYLINDER & CRANKCASE
E10FRLEUA 1997	CYLINDER & CRANKCASE
E10R4EEB 1999	CYLINDER & CRANKCASE
E10R4SID 4-stroke, rope start, tiller, 15 in shaft 2001	CYLINDER & CRANKCASE
E10R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	CYLINDER & CRANKCASE
E10RL4EEB 1999	CYLINDER & CRANKCASE
E10RL4SID 4-stroke, rope start, tiller, 20 in shaft 2001	CYLINDER & CRANKCASE
E10RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	CYLINDER & CRANKCASE
E10RV4SIC 4-stroke, rope start, tiller, 15 in shaft, wht 2001	CYLINDER & CRANKCASE
E10RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	CYLINDER & CRANKCASE
E10RVL4SIC 4-stroke, rope start, tiller, 20 in shaft, wht 2001	CYLINDER & CRANKCASE
E10RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	CYLINDER & CRANKCASE
E10TEX4EEB 1999	CYLINDER & CRANKCASE
E10TEX4SID 4-stroke, elec start, tiller, 25 in shaft 2001	CYLINDER & CRANKCASE
E10TEX4SSE 4-Stroke, Elec. Start, Tiller, 25 IN shaft 2000	CYLINDER & CRANKCASE
E10TVX4SIC 4-stroke, elec start, tiller, 25 in shaft, wht 2001	CYLINDER & CRANKCASE
E10TVX4SSS 4-Stroke, Elec. Start, Tiller, 25 IN shaft, wht 2000	CYLINDER & CRANKCASE
E115FPLEEC 1999	OIL COMPONENTS
E115FPLEEN 1999	OIL COMPONENTS
E115FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E115FPXEEC 1999	OIL COMPONENTS
E115FPXEEN 1999	OIL COMPONENTS
E115FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
E115FPXSSH FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	OIL COMPONENTS
E115FPXSSR FFI, Elec Start, TNT, 25 IN.shaft, wht 2000	OIL COMPONENTS
E115FSLECS 1998	OIL COMPONENTS

E115FSLEEC 1999	OIL COMPONENTS
E115FSLEEN 1999	OIL COMPONENTS
E115FSLSI FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
E115FSLSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	OIL COMPONENTS
E115FSLSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	OIL COMPONENTS
E115FSXECS 1998	OIL COMPONENTS
E115FTLECS 1998	OIL COMPONENTS
E135FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E135FCXSSS FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
E135FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E135FPLSSS FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E135FSLSI FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
E135FSLSSS FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
E135FSXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
E135FSXSSS FFI, Elec Start, TNT, 25 IN. shaft, wht 2000	OIL COMPONENTS
E150FCXECR 1998	OIL COMPONENTS
E150FCXEEA 1999	OIL COMPONENTS
E150FCXEEN 1999	OIL COMPONENTS
E150FCXEEO 1999	OIL COMPONENTS
E150FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E150FCXSSM FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
E150FCXSSV FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
E150FPLEEA 1999	OIL COMPONENTS
E150FPLEEO 1999	OIL COMPONENTS
E150FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E150FPLSSM FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E150FPLSSV FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E150FPXEEA 1999	OIL COMPONENTS
E150FPXEEN 1999	OIL COMPONENTS
E150FPXEEO 1999	OIL COMPONENTS
E150FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
E150FPXSSM FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
E150FPXSSV FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
E150FSLECR 1998	OIL COMPONENTS
E150FSLEEA 1999	OIL COMPONENTS

E150FSLEEO 1999	OIL COMPONENTS
E150FSLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
E150FSLSSM FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
E150FSLSSV FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
E150FSXECR 1998	OIL COMPONENTS
E150ICXEUC 1997	OIL COMPONENTS
E150ILECR 1998	OIL COMPONENTS
E150ILEUC 1997	OIL COMPONENTS
E150IXEUC 1997	OIL COMPONENTS
E150PLEUC 1997	OIL COMPONENTS
E15DLEOC 1995	CYLINDER & CRANKCASE
E15EBL4EEB 1999	CYLINDER & CRANKCASE
E15EL4EEB 1999	CYLINDER & CRANKCASE
E15EL4SID 4-stroke, elec start, 20 in shaft 2001	CYLINDER & CRANKCASE
E15EL4SSE 4-Stroke, Elec. Start, 20 IN shaft 2000	CYLINDER & CRANKCASE
E15EVL4SIC 4-stroke, elec start, 20 in shaft, wht 2001	CYLINDER & CRANKCASE
E15EVL4SSS 4-Stroke, Elec. Start, 20 IN shaft, wht 2000	CYLINDER & CRANKCASE
E15FKEDR 1996	CYLINDER & CRANKCASE
E15FKEUA 1997	CYLINDER & CRANKCASE
E15FRECM 1998	CYLINDER & CRANKCASE
E15FREDR 1996	CYLINDER & CRANKCASE
E15FRELECM 1998	CYLINDER & CRANKCASE
E15FRELEDR 1996	CYLINDER & CRANKCASE
E15FRELEUA 1997	CYLINDER & CRANKCASE
E15FREOC 1995	CYLINDER & CRANKCASE
E15FREUA 1997	CYLINDER & CRANKCASE
E15FRLECM 1998	CYLINDER & CRANKCASE
E15FRLEDR 1996	CYLINDER & CRANKCASE
E15FRLEOC 1995	CYLINDER & CRANKCASE
E15FRLEUA 1997	CYLINDER & CRANKCASE
E15KEOC 1995	CYLINDER & CRANKCASE
E15R4EEB 1999	CYLINDER & CRANKCASE
E15R4SID 4-stroke, rope start, 15 in shaft 2001	CYLINDER & CRANKCASE
E15R4SSE 4-Stroke, Rope Start, Tiller, 15 IN shaft 2000	CYLINDER & CRANKCASE
E15RB4EEB 1999	CYLINDER & CRANKCASE

E15RBL4EEB 1999	CYLINDER & CRANKCASE
E15RL4EEB 1999	CYLINDER & CRANKCASE
E15RL4SID 4-stroke, rope start, 20 in shaft 2001	CYLINDER & CRANKCASE
E15RL4SSE 4-Stroke, Rope Start, Tiller, 20 IN shaft 2000	CYLINDER & CRANKCASE
E15RV4SIC 4-stroke,rope start, 15 in shaft, wht 2001	CYLINDER & CRANKCASE
E15RV4SSS 4-Stroke, Rope Start, Tiller, 15 IN shaft, wht 2000	CYLINDER & CRANKCASE
E15RVL4SIC 4-stroke, elec start, 15 in shaft, wht 2001	CYLINDER & CRANKCASE
E15RVL4SSS 4-Stroke, Rope Start, Tiller, 20 IN shaft, wht 2000	CYLINDER & CRANKCASE
E175FCXECS 1998	OIL COMPONENTS
E175FCXEEC 1999	OIL COMPONENTS
E175FCXEEN 1999	OIL COMPONENTS
E175FCXEOO 1999	OIL COMPONENTS
E175FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E175FCXSSR FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
E175FCXSSV FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
E175FPLEEC 1999	OIL COMPONENTS
E175FPLEEO 1999	OIL COMPONENTS
E175FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E175FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E175FPLSSV FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E175FPXEEC 1999	OIL COMPONENTS
E175FPXEEN 1999	OIL COMPONENTS
E175FPXEOO 1999	OIL COMPONENTS
E175FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
E175FPXSSR FFI, Elec Start, TNT, 25 IN. shaft, wht 2000	OIL COMPONENTS
E175FPXSSV FFI, Elec Start, TNT, 25 IN. shaft, wht 2000	OIL COMPONENTS
E175FSLECS 1998	OIL COMPONENTS
E175FSLEEO 1999	OIL COMPONENTS
E175FSLEES 1999	OIL COMPONENTS
E175FSLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
E175FSLSSC FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
E175FSLSSV FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
E175FSXECS 1998	OIL COMPONENTS
E175FTLECS 1998	OIL COMPONENTS
E200FCSSSC FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS

E200FCSSSH FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E200FCXEEN 1999	OIL COMPONENTS
E200FCXEEES 1999	OIL COMPONENTS
E200FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E200FCXSSC FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E200FCXSSH FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E200FPLEEN 1999	OIL COMPONENTS
E200FPLEES 1999	OIL COMPONENTS
E200FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E200FPLSSC FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
E200FPLSSH FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
E200FPXEEN 1999	OIL COMPONENTS
E200FPXEEES 1999	OIL COMPONENTS
E200FPXSIF FFI, elec start, TNT, 25 in shaft 2001	OIL COMPONENTS
E200FPXSSC FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
E200FPXSSH FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
E200FSLEEN 1999	OIL COMPONENTS
E200FSLEES 1999	OIL COMPONENTS
E200FSLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
E200FSLSSC FFI, Elec Start, TNT, 20 IN shaft, wht 2000	OIL COMPONENTS
E200FSLSSH FFI, Elec Start, TNT, 20 IN shaft, wht 2000	OIL COMPONENTS
E225FCXEEN 1999	OIL COMPONENTS
E225FCXEEO 1999	OIL COMPONENTS
E225FCXEEES 1999	OIL COMPONENTS
E225FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E225FCXSSC FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E225FCXSSH FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E225FCZEEN 1999	OIL COMPONENTS
E225FCZEEO 1999	OIL COMPONENTS
E225FCZEES 1999	OIL COMPONENTS
E225FCZSIF FFI, elec start, TNT, 30 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E225FCZSSC FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E225FCZSSH FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E225FGLSSC FFI, Elec Start, TNT, 20 IN shaft, hs gc 2000	OIL COMPONENTS
E225FGLSSH FFI, Elec Start, TNT, 20 IN shaft, hs gc 2000	OIL COMPONENTS

E225FHLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E225FHLSSS FFI, Elec Start, TNT, 20 IN shaft, hs gc, HO 2000	OIL COMPONENTS
E225FPLEEN 1999	OIL COMPONENTS
E225FPLEO 1999	OIL COMPONENTS
E225FPLEES 1999	OIL COMPONENTS
E225FPLSIF FFI	OIL COMPONENTS
E225FPLSSC FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
E225FPLSSH FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
E225FPXEEEN 1999	OIL COMPONENTS
E225FPXEEO 1999	OIL COMPONENTS
E225FPXEEES 1999	OIL COMPONENTS
E225FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
E225FPXSSC FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
E225FPXSSH FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
E225FPZEEN 1999	OIL COMPONENTS
E225FPZEEO 1999	OIL COMPONENTS
E225FPZEES 1999	OIL COMPONENTS
E225FPZSIF FFI, elec start, TNT, 30 in shaft, wht 2001	OIL COMPONENTS
E225FPZSSC FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
E225FPZSSH FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
E250FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E250FCXSSS FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E250FCZSIF FFI, elec start, TNT, 30 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
E250FCZSSS FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
E250FGLSSS FFI, Elec Start, TNT, 20 IN shaft, hs gc 2000	OIL COMPONENTS
E250FPLSSS FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
E250FPXSIF FFI, elec start, TNT, 25 in shaft 2001	OIL COMPONENTS
E250FPXSSS FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
E250FPZSIF FFI, elec start, TNT, 30 in shaft 2001	OIL COMPONENTS
E250FPZSSS FFI, Elec Start, TNT, 30 IN shaft, wht 2000	OIL COMPONENTS
E5R4EEM 1999	CYLINDER & CRANKCASE
E5R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	CYLINDER & CRANKCASE
E5R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. Shaft 2000	CYLINDER AND CRANKCASE
E5RB4EER 1999	CYLINDER & CRANKCASE
E5RBL4EER 1999	CYLINDER & CRANKCASE

E5RL4EEM 1999	CYLINDER & CRANKCASE
E5RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	CYLINDER & CRANKCASE
E5RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. Shaft 2000	CYLINDER AND CRANKCASE
E6R4EEM 1999	CYLINDER & CRANKCASE
E6R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	CYLINDER & CRANKCASE
E6R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. Shaft 2000	CYLINDER AND CRANKCASE
E6RL4EEM 1999	CYLINDER & CRANKCASE
E6RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	CYLINDER & CRANKCASE
E6RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. Shaft 2000	CYLINDER AND CRANKCASE
E75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E75FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
E8FRECA 1998	CYLINDER & CRANKCASE
E8FREDC 1996	CYLINDER & CRANKCASE
E8FREUR 1997	CYLINDER & CRANKCASE
E8FRLECA 1998	CYLINDER & CRANKCASE
E8FRXECA 1998	CYLINDER & CRANKCASE
E8FRXEDC 1996	CYLINDER & CRANKCASE
E8FRXEUR 1997	CYLINDER & CRANKCASE
E8R4EEM 1999	CYLINDER & CRANKCASE
E8R4SIE 4-stroke, rope start, tiller, 15 in shaft 2001	CYLINDER HEAD & CRANKSHAFT
E8R4SSB 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	CYLINDER AND CRANKCASE
E8RB4EEM 1999	CYLINDER & CRANKCASE
E8RBL4EEM 1999	CYLINDER & CRANKCASE
E8RL4EEM 1999	CYLINDER & CRANKCASE
E8RL4SIE 4-stroke, rope start, tiller, 20 in shaft 2001	CYLINDER HEAD & CRANKSHAFT
E8RL4SSB 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	CYLINDER AND CRANKCASE
E8RVL4SIC 4-stroke, rope start, tiller, 20 in shaft, wht 2001	CYLINDER HEAD & CRANKSHAFT
E8RVL4SSB 4-Stroke, Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	CYLINDER AND CRANKCASE
E90FPLEEC 1999	OIL COMPONENTS
E90FPLEEN 1999	OIL COMPONENTS
E90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
E90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
E90FSLECS 1998	OIL COMPONENTS

E90FTLECS 1998	OIL COMPONENTS
E90FVLSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
HE10FDEDC 1996	CYLINDER & CRANKCASE
HE10FDLEDCA 1996	CYLINDER & CRANKCASE
HE10FELECA 1998	CYLINDER & CRANKCASE
HE10FELEDC 1996	CYLINDER & CRANKCASE
HE10FELEUR 1997	CYLINDER & CRANKCASE
HE10FOEUR 1997	CYLINDER & CRANKCASE
HE10FOLEUR 1997	CYLINDER & CRANKCASE
HE10FTEDC 1996	CYLINDER & CRANKCASE
HE10FTEUR 1997	CYLINDER & CRANKCASE
HE10FTLEDC 1996	CYLINDER & CRANKCASE
HE10FTLEUR 1997	CYLINDER & CRANKCASE
HE5FRECA 1998	CYLINDER & CRANKCASE
HE5FREUR 1997	CYLINDER & CRANKCASE
HE5FRLECA 1998	CYLINDER & CRANKCASE
HE5FRLEUR 1997	CYLINDER & CRANKCASE
HE6FRECA 1998	CYLINDER & CRANKCASE
HE6FREUR 1997	CYLINDER & CRANKCASE
HE6FRLECA 1998	CYLINDER & CRANKCASE
HE6FRLEUR 1997	CYLINDER & CRANKCASE
HE8FREDC 1996	CYLINDER & CRANKCASE
HE8FREUR 1997	CYLINDER & CRANKCASE
HE8FRLEDCA 1996	CYLINDER & CRANKCASE
HE8FRLEUR 1997	CYLINDER & CRANKCASE
HJ10FDEDC 1996	CYLINDER & CRANKCASE
HJ10FDLEDCA 1996	CYLINDER & CRANKCASE
HJ10FELECA 1998	CYLINDER & CRANKCASE
HJ10FELEDC 1996	CYLINDER & CRANKCASE
HJ10FELEUR 1997	CYLINDER & CRANKCASE
HJ10FOEUR 1997	CYLINDER & CRANKCASE
HJ10FOLEUR 1997	CYLINDER & CRANKCASE
HJ10FTEDC 1996	CYLINDER & CRANKCASE
HJ10FTEUR 1997	CYLINDER & CRANKCASE
HJ10FTLEDC 1996	CYLINDER & CRANKCASE

HJ10FTLEUR 1997	CYLINDER & CRANKCASE
HJ5FRECA 1998	CYLINDER & CRANKCASE
HJ5FREUR 1997	CYLINDER & CRANKCASE
HJ5FRLECA 1998	CYLINDER & CRANKCASE
HJ5FRLEUR 1997	CYLINDER & CRANKCASE
HJ6FRECA 1998	CYLINDER & CRANKCASE
HJ6FREUR 1997	CYLINDER & CRANKCASE
HJ6FRLECA 1998	CYLINDER & CRANKCASE
HJ6FRLEUR 1997	CYLINDER & CRANKCASE
HJ8FREDC 1996	CYLINDER & CRANKCASE
HJ8FREUR 1997	CYLINDER & CRANKCASE
HJ8FRLEDC 1996	CYLINDER & CRANKCASE
HJ8FRLEUR 1997	CYLINDER & CRANKCASE
J10FEXECM 1998	CYLINDER & CRANKCASE
J10FEXEDR 1996	CYLINDER & CRANKCASE
J10FEXEO 1995	CYLINDER & CRANKCASE
J10FEXEUA 1997	CYLINDER & CRANKCASE
J10FOECA 1998	CYLINDER & CRANKCASE
J10FOLECA 1998	CYLINDER & CRANKCASE
J10FRECM 1998	CYLINDER & CRANKCASE
J10FREDR 1996	CYLINDER & CRANKCASE
J10FRELECM 1998	CYLINDER & CRANKCASE
J10FRELEDR 1996	CYLINDER & CRANKCASE
J10FRELEOC 1995	CYLINDER & CRANKCASE
J10FRELEUA 1997	CYLINDER & CRANKCASE
J10FREOC 1995	CYLINDER & CRANKCASE
J10FREUA 1997	CYLINDER & CRANKCASE
J10FRLECM 1998	CYLINDER & CRANKCASE
J10FRLEDR 1996	CYLINDER & CRANKCASE
J10FRLEO 1995	CYLINDER & CRANKCASE
J10FRLEUA 1997	CYLINDER & CRANKCASE
J115FSLECS 1998	OIL COMPONENTS
J115FSXECs 1998	OIL COMPONENTS
J115FTLECS 1998	OIL COMPONENTS
J150FCXECR 1998	OIL COMPONENTS

J150FSLECR 1998	OIL COMPONENTS
J150FSXECR 1998	OIL COMPONENTS
J150ICXEUC 1997	OIL COMPONENTS
J150ILECR 1998	OIL COMPONENTS
J150ILEUC 1997	OIL COMPONENTS
J150IXEUC 1997	OIL COMPONENTS
J150PLEUC 1997	OIL COMPONENTS
J15DLEOC 1995	CYLINDER & CRANKCASE
J15FKEDR 1996	CYLINDER & CRANKCASE
J15FKEUA 1997	CYLINDER & CRANKCASE
J15FRECM 1998	CYLINDER & CRANKCASE
J15FREDR 1996	CYLINDER & CRANKCASE
J15FRELECM 1998	CYLINDER & CRANKCASE
J15FRELEDR 1996	CYLINDER & CRANKCASE
J15FRELEUA 1997	CYLINDER & CRANKCASE
J15FREOC 1995	CYLINDER & CRANKCASE
J15FREUA 1997	CYLINDER & CRANKCASE
J15FRLECM 1998	CYLINDER & CRANKCASE
J15FRLEDR 1996	CYLINDER & CRANKCASE
J15FRLEOC 1995	CYLINDER & CRANKCASE
J15FRLEUA 1997	CYLINDER & CRANKCASE
J15KEOC 1995	CYLINDER & CRANKCASE
J175FCXECS 1998	OIL COMPONENTS
J175FSLECS 1998	OIL COMPONENTS
J175FSXECS 1998	OIL COMPONENTS
J175FTLECS 1998	OIL COMPONENTS
J6R4SRC	CYLINDER HEAD & CRANKCASE
J6R4SRC - FR	15-7_CULASSE ET CARTER-MOTEUR
J6R4STS	CYLINDER HEAD & CRANKCASE
J6R4STS - FR	15-7_CULASSE ET CARTER-MOTEUR
J6RL4SRC	CYLINDER HEAD & CRANKCASE
J6RL4SRC - FR	15-7_CULASSE ET CARTER-MOTEUR
J6RL4STS	CYLINDER HEAD & CRANKCASE
J6RL4STS - FR	15-7_CULASSE ET CARTER-MOTEUR
J8FRECA 1998	CYLINDER & CRANKCASE

J8FREDC 1996	CYLINDER & CRANKCASE
J8FREUR 1997	CYLINDER & CRANKCASE
J8FRLECA 1998	CYLINDER & CRANKCASE
J8FRXECA 1998	CYLINDER & CRANKCASE
J8FRXEDC 1996	CYLINDER & CRANKCASE
J8FRXEUR 1997	CYLINDER & CRANKCASE
J8R4SRC	CYLINDER HEAD & CRANKCASE
J8R4SRC - FR	15-7_CULASSE ET CARTER-MOTEUR
J8R4STS	CYLINDER & CRANKCASE
J8R4STS - FR	15-6_CYLINDRES ET CARTER-MOTEUR
J8RL4SRC	CYLINDER HEAD & CRANKCASE
J8RL4SRC - FR	15-7_CULASSE ET CARTER-MOTEUR
J8RL4STS	CYLINDER & CRANKCASE
J8RL4STS - FR	15-6_CYLINDRES ET CARTER-MOTEUR
J90FSLECS 1998	OIL COMPONENTS
J90FTLECS 1998	OIL COMPONENTS
L10FRELECM 1998	CYLINDER & CRANKCASE
L10FRELEDR 1996	CYLINDER & CRANKCASE
L10FRELEUA 1997	CYLINDER & CRANKCASE
RE115FLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE115FLSSSH FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	OIL COMPONENTS
RE115FLSSSR FFI, Elec Start, TNT, 20 IN.shaft, wht 2000	OIL COMPONENTS
RE115FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE115FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE115FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
RE115FSSSH FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
RE115FSSSR FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
RE115FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
RE115FXSSH FFI, Elec Start, TNT, 25 IN. shaft 2000	OIL COMPONENTS
RE115FXSSR FFI, Elec Start, TNT, 25 IN. shaft 2000	OIL COMPONENTS
RE135FCSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
RE135FCSSS FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
RE135FLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE135FLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE135FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS

RE135FXSSS FFI, Elec Start, TNT, 25 IN. shaft, wht 2000	OIL COMPONENTS
RE150FCSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
RE150FCSSM FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
RE150FCSSV FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
RE150FLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE150FLSSM FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE150FLSSV FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE150FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
RE150FSSM FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
RE150FSSV FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
RE150FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
RE150FXSSM FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE150FXSSV FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE175FCSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
RE175FCSSR FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
RE175FCSSV FFI, Elec Start, TNT, 25 IN. shaft, wht, cntr rotate 2000	OIL COMPONENTS
RE175FLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE175FLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE175FLSSV FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE175FSSC FFI, Elec Start, TNT, 20 IN. shaft, wht 2000	OIL COMPONENTS
RE175FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
RE175FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
RE175FXSSR FFI, Elec Start, TNT, 25 IN. shaft, wht 2000	OIL COMPONENTS
RE175FXSSV FFI, Elec Start, TNT, 25 IN. shaft, wht 2000	OIL COMPONENTS
RE200FCSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
RE200FLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE200FLSSC FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
RE200FLSSH FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
RE200FSSH FFI, Elec Start, TNT, 20 IN shaft, wht 2000	OIL COMPONENTS
RE200FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001	OIL COMPONENTS
RE200FXSIF FFI, elec start, TNT, 25 in shaft 2001	OIL COMPONENTS
RE200FXSSC FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
RE200FXSSH FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
RE225FCSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001	OIL COMPONENTS
RE225FCSSC FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS

RE225FCSSH FFI, Elec Start, TNT, 25 IN shaft, wht, cntr rotate 2000	OIL COMPONENTS
RE225FGSSC FFI, Elec Start, TNT, 20 IN shaft, hs gc 2000	OIL COMPONENTS
RE225FGSSH FFI, Elec Start, TNT, 20 IN shaft, hs gc 2000	OIL COMPONENTS
RE225FHSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE225FHSSS FFI, Elec Start, TNT, 20 IN shaft, hs gc, HO 2000	OIL COMPONENTS
RE225FLSSC FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
RE225FLSSH FFI, Elec Start, TNT, 20 IN shaft 2000	OIL COMPONENTS
RE225FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001	OIL COMPONENTS
RE225FXSSC FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
RE225FXSSH FFI, Elec Start, TNT, 25 IN shaft, wht 2000	OIL COMPONENTS
RE225FZSIF FFI, elec start, TNT, 30 in shaft, wht 2001	OIL COMPONENTS
RE225FZSSH FFI, Elec Start, TNT, 30 IN shaft, wht 2000	OIL COMPONENTS
RE75FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE75FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE90FPLSIF FFI, elec start, TNT, 20 in shaft 2001	OIL COMPONENTS
RE90FPLSSH FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS
RE90FPLSSR FFI, Elec Start, TNT, 20 IN. shaft 2000	OIL COMPONENTS