

Where Used: Part Number 5001594

| Model Name | Diagram |
|--|--|
| 150940C 1979 | GEARCASE |
| 150949C 1979 | GEARCASE |
| 150TL79C 1979 | GEARCASE |
| 150TXL79C 1979 | GEARCASE |
| 175940R 1979 | GEARCASE |
| 175949R 1979 | GEARCASE |
| 175TL79R 1979 | GEARCASE |
| 175TXL79R 1979 | GEARCASE |
| 200490A 1979 | GEARCASE |
| 200940A 1979 | GEARCASE |
| 200949A 1979 | GEARCASE |
| 200TL79A 1979 | GEARCASE |
| 200TXL79A 1979 | GEARCASE |
| 235940A 1979 | GEARCASE |
| 235949A 1979 | GEARCASE |
| 235TL70A 1979 | GEARCASE |
| 235TXL79A 1979 | GEARCASE |
| BJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | JET DRIVE UNIT |
| BJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | JET DRIVE UNIT |
| BJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |
| BJ130PLSSS Elec. Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| BJ130PXSSS Elec. Start, TNT, 25 IN. shaft 2000 | GEARCASE |
| BJ135PLSIF elec start, TNT, 20 in shaft, n/a usa 2001 | GEARCASE |
| BJ135VXSIF elec start, TNT, 25 in shaft, wht, n/a usa 2001 | GEARCASE |
| BJ175PLSIF elec start, TNT, 20 in shaft, n/a usa 2001 | JET DRIVE UNIT |
| BJ175PLSSC Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| BJ175PXSSC Elec. Start, TNT, 20 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |
| BJ175VXSIF elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | JET DRIVE UNIT |
| BJ175VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |
| BJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |

| | |
|---|--|
| BJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | JET DRIVE UNIT |
| BJ90PXSSSE Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ90PXSSSE Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | JET DRIVE UNIT |
| BJ90VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| BJ90VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |
| E200FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E200FPLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E200FPXSIF FFI, elec start, TNT, 25 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E200FSLISIF FFI, elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E225FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E225FCZSIF FFI, elec start, TNT, 30 in shaft, wht, cntr rotate 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E225FHLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E225FHLSSS FFI, Elec Start, TNT, 20 IN shaft, hs gc, HO 2000 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E225FPXSIF FFI, elec start, TNT, 25 in shaft, wht 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E225FPZSIF FFI, elec start, TNT, 30 in shaft, wht 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E250FCXSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E250FCZSIF FFI, elec start, TNT, 30 in shaft, wht, cntr rotate 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E250FPXSIF FFI, elec start, TNT, 25 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| E250FPZSIF FFI, elec start, TNT, 30 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| J115JPLSSR Jet Drive, Elec. Start,TNT, 20 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115JPLSSR Jet Drive, Elec. Start,TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J115PLSSB Elec. Start, TNT, 20 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115PLSSB Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J115PXSSB Elec. Start, TNT, 25 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115PXSSB Elec. Start, TNT, 25 IN. shaft 2000 | JET DRIVE UNIT |
| J115SPLSSC Elec. Start, TNT, 20 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115SPLSSC Elec. Start, TNT, 20 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |
| J115VLSSS Elec. Start, 20 IN. shaft, wht 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |

| | |
|--|--|
| J115VLSSS Elec. Start, 20 IN. shaft, wht 2000 | JET DRIVE UNIT |
| J115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, 2000 | JET DRIVE UNIT |
| J130PLSSS Elec. Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| J130PXSSS Elec. Start, TNT, 25 IN. shaft 2000 | GEARCASE |
| J130VXSSS Elec. Start, TNT, 25 IN. shaft, wht 2000 | GEARCASE |
| J135PLSIF elec start, TNT, 20 in shaft 2001 | GEARCASE |
| J135VLSIF elec start, TNT, 20 in shaft, wht 2001 | GEARCASE |
| J135VXSIF elec start, TNT, 25 in shaft, wht 2001 | GEARCASE |
| J150CXSSC Elec. Start, TNT, 25 IN. shaft, cntr. Rotate 2000 | JET DRIVE UNIT |
| J150JPLSIF jet drive, elec start, TNT, 20 in shaft 2001 | JET DRIVE UNIT |
| J150JPLSSC Jet Drive, Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J150MXSSD Military, Elec. Start, TNT, 25 IN. shaft 2000 | JET DRIVE UNIT |
| J150PLSIF elec start, TNT, 20 in shaft 2001 | JET DRIVE UNIT |
| J150PLSSC Military, Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J150PXSSC Elec. Start, TNT, 25 IN. shaft 2000 | JET DRIVE UNIT |
| J150SPLSSC Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J150VCSSS Elec. Start, TNT, 25 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| J150VCXSIF elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | JET DRIVE UNIT |
| J150VLSIF elec start, TNT, 20 in shaft, wht 2001 | JET DRIVE UNIT |
| J150VLSSS Elec. Start, TNT, 20 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| J150VXSIF elec start, TNT, 25 in shaft, wht 2001 | JET DRIVE UNIT |
| J150VXSSS Elec. Start, TNT, 25 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| J175CXSSS Elec. Start, TNT, 25 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| J175PLSIF elec start, TNT, 20 in shaft 2001 | JET DRIVE UNIT |
| J175PLSSC Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J175PXSSC Elec. Start, TNT, 25 IN. shaft, wht 2000 | JET DRIVE UNIT |
| J175SPLSSC Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J175VCXSIF elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | JET DRIVE UNIT |
| J175VCXSSS Elec. Start, TNT, 25 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| J175VLSIF elec start, TNT, 20 in shaft, wht 2001 | JET DRIVE UNIT |
| J175VLSSS Elec. Start, TNT, 20 IN. shaft, wht 2000 | JET DRIVE UNIT |
| J175VXSIF elec start, TNT, 25 in shaft, wht 2001 | JET DRIVE UNIT |
| J175VXSSS Elec. Start, TNT, 25 IN. shaft, wht 2000 | JET DRIVE UNIT |
| J90PLSSE Elec. Start, TNT, 20 IN. shaft 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |

| | |
|---|--|
| J90PLSSE Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| J90SPLSSC Elec. Start, TNT, 20 IN. shaft, wht 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J90SPLSSC Elec. Start, TNT, 20 IN. shaft, wht 2000 | JET DRIVE UNIT |
| J90VLSSE Elec. Start, TNT, 20 IN. shaft, wht 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| J90VLSSE Elec. Start, TNT, 20 IN. shaft, wht 2000 | JET DRIVE UNIT |
| RE200FCSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE200FLSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE200FSSIF FFI, elec start, TNT, 20 in shaft, wht 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE200FXSIF FFI, elec start, TNT, 25 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE225FCSIF FFI, elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE225FHSIF FFI, elec start, TNT, 20 in shaft 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE225FHSSS FFI, Elec Start, TNT, 20 IN shaft, hs gc, HO 2000 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE225FXSIF FFI, elec start, TNT, 25 in shaft, wht 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RE225FZSIF FFI, elec start, TNT, 30 in shaft, wht 2001 | GEARCASE - STANDARD ROTATION - FH - FHL MODELS |
| RJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ115PLSSB Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | JET DRIVE UNIT |
| RJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ115PXSSB Elec. Start, TNT, 25 IN. shaft, N/A USA 2000 | JET DRIVE UNIT |
| RJ115VLSSB Elec. Start, 20 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ115VLSSB Elec. Start, 20 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |
| RJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ115VXSSS Elec. Start, TNT, 25 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |
| RJ130PLSSS Elec. Start, TNT, 20 IN. shaft 2000 | GEARCASE |
| RJ130PXSSS Elec. Start, TNT, 25 IN. shaft 2000 | GEARCASE |
| RJ130VXSSS Elec. Start, TNT, 25 IN. shaft, wht 2000 | GEARCASE |
| RJ135PLSIF elec start, TNT, 20 in shaft 2001 | GEARCASE |
| RJ135VXSIF elec start, TNT, 20 in shaft, wht 2001 | GEARCASE |
| RJ150CXSSC Elec. Start, TNT, 25 IN. shaft, cntr. Rotate 2000 | JET DRIVE UNIT |
| RJ150PLSIF elec start, TNT, 20 in shaft 2001 | JET DRIVE UNIT |
| RJ150PLSSC Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| RJ150PXSSC Elec. Start, TNT, 25 IN. shaft 2000 | JET DRIVE UNIT |

| | |
|--|--|
| RJ150VCSIF elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | JET DRIVE UNIT |
| RJ150VCSSS Elec. Start, TNT, 25 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| RJ150VLSIF elec start, TNT, 20 in shaft, wht 2001 | JET DRIVE UNIT |
| RJ150VLSSS Elec. Start, TNT, 20 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| RJ150VXSIF elec start, TNT, 25 in shaft, wht 2001 | JET DRIVE UNIT |
| RJ150VXSSS Elec. Start, TNT, 25 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| RJ175CXSF elec start, TNT, 25 in shaft, wht, cntr rotate 2001 | JET DRIVE UNIT |
| RJ175CXSSS Elec. Start, TNT, 25 IN. shaft, wht, cntr rotate 2000 | JET DRIVE UNIT |
| RJ175PLSIF elec start, TNT, 20 in shaft 2001 | JET DRIVE UNIT |
| RJ175PLSSC Elec. Start, TNT, 20 IN. shaft 2000 | JET DRIVE UNIT |
| RJ175VXSIF elec start, TNT, 25 in shaft, wht 2001 | JET DRIVE UNIT |
| RJ175VXSSS Elec. Start, TNT, 25 IN. shaft, wht 2000 | JET DRIVE UNIT |
| RJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ90PLSSE Elec. Start, TNT, 20 IN. shaft, N/A USA 2000 | JET DRIVE UNIT |
| RJ90VLSSS Elec. Start, 20 IN. shaft, wht, N/A USA 2000 | GEARCASE - 90 AND 115 PL, SPL, AND VL MODELS |
| RJ90VLSSS Elec. Start, 20 IN. shaft, wht, N/A USA 2000 | JET DRIVE UNIT |