

Where Used: Part Number 5008605

Model Name	Diagram
0C_CARBURANT ET HUILE	0C-2_POIRE D'AMORÇAGE ET FLEXIBLE À DÉCONNEXION RAPIDE, dia. int. 5/16 po
B10EGL4ABA	19-8_FUEL TANK ASSEMBLY
B10EGL4ABB	19-8_FUEL TANK ASSEMBLY
B10EGL4AFA	19-8_FUEL TANK ASSEMBLY
B10EL4AAA	19-8_FUEL TANK ASSEMBLY
B10EL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10EL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B10EL4INS	19-8_FUEL TANK ASSEMBLY
B10EL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10PL4AAA	19-8_FUEL TANK ASSEMBLY
B10PL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10PL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B10PL4INS	19-8_FUEL TANK ASSEMBLY
B10PL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10PX4AAA	19-8_FUEL TANK ASSEMBLY
B10PX4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10PX4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B10PX4INS	19-8_FUEL TANK ASSEMBLY
B10PX4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10R4AAA	19-8_FUEL TANK ASSEMBLY
B10R4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10R4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B10R4INS	19-8_FUEL TANK ASSEMBLY
B10R4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10RG4ABA	19-8_FUEL TANK ASSEMBLY
B10RG4ABB	19-8_FUEL TANK ASSEMBLY
B10RG4AFA	19-8_FUEL TANK ASSEMBLY
B10RGL4ABA	19-8_FUEL TANK ASSEMBLY
B10RGL4ABB	19-8_FUEL TANK ASSEMBLY
B10RGL4AFA	19-8_FUEL TANK ASSEMBLY
B10RL4AAA	19-8_FUEL TANK ASSEMBLY
B10RL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10RL4AAB & AAC	19-8_FUEL TANK ASSEMBLY

B10RL4INS	19-8_FUEL TANK ASSEMBLY
B10RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10TEL4AAA	19-8_FUEL TANK ASSEMBLY
B10TEL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10TEL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B10TEL4INS	19-8_FUEL TANK ASSEMBLY
B10TEL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10TPL4AAA	19-8_FUEL TANK ASSEMBLY
B10TPL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10TPL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B10TPL4INS	19-8_FUEL TANK ASSEMBLY
B10TPL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10TPX4AAA	19-8_FUEL TANK ASSEMBLY
B10TPX4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B10TPX4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B10TPX4INS	19-8_FUEL TANK ASSEMBLY
B10TPX4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15PL4AAA	19-8_FUEL TANK ASSEMBLY
B15PL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15PL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B15PL4INS	19-8_FUEL TANK ASSEMBLY
B15PL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15R4AAA	19-8_FUEL TANK ASSEMBLY
B15R4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15R4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B15R4INS	19-8_FUEL TANK ASSEMBLY
B15R4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15RG4ABA	19-8_FUEL TANK ASSEMBLY
B15RG4ABB	19-8_FUEL TANK ASSEMBLY
B15RGL4ABA	19-8_FUEL TANK ASSEMBLY
B15RGL4ABB	19-8_FUEL TANK ASSEMBLY
B15RL4AAA	19-8_FUEL TANK ASSEMBLY
B15RL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15RL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B15RL4INS	19-8_FUEL TANK ASSEMBLY

B15RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15TE4AAA	19-8_FUEL TANK ASSEMBLY
B15TE4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15TE4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B15TE4INS	19-8_FUEL TANK ASSEMBLY
B15TE4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15TEL4AAA	19-8_FUEL TANK ASSEMBLY
B15TEL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B15TEL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B15TEL4INS	19-8_FUEL TANK ASSEMBLY
B15TEL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B30MRLABA	03-0_FUEL HOSE & PRIMER BULB ASSY
B30MRLABB	03-0_FUEL HOSE & PRIMER BULB ASSY
B30MRLAFA	03-0_FUEL HOSE & PRIMER BULB ASSY
B30MRLAFB	03-0_FUEL HOSE & PRIMER BULB ASSY
B30MRLAFC	03-0_FUEL HOSE & PRIMER BULB ASSY
B30MRLAFD	03-0_FUEL HOSE & PRIMER BULB ASSY
B6R4AAA	19-8_FUEL TANK ASSEMBLY
B6R4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B6R4INS	19-8_FUEL TANK ASSEMBLY
B6R4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B6RG4ABA	19-8_FUEL TANK ASSEMBLY
B6RG4ABB	19-8_FUEL TANK ASSEMBLY
B6RGL4ABA	19-8_FUEL TANK ASSEMBLY
B6RGL4ABB	19-8_FUEL TANK ASSEMBLY
B6RL4AAA	19-8_FUEL TANK ASSEMBLY
B6RL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B6RL4INS	19-8_FUEL TANK ASSEMBLY
B6RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
B6RX4AAA	19-8_FUEL TANK ASSEMBLY
B6RX4AAB & AAC	19-8_FUEL TANK ASSEMBLY
B6RX4INS	19-8_FUEL TANK ASSEMBLY
B6RX4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10EL4AAA	19-8_FUEL TANK ASSEMBLY
E10EL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE

E10EL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E10EL4INS	19-8_FUEL TANK ASSEMBLY
E10EL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10PGL4ABA	19-8_FUEL TANK ASSEMBLY
E10PGL4ABB	19-8_FUEL TANK ASSEMBLY
E10PGL4AFA	19-8_FUEL TANK ASSEMBLY
E10PL4AAA	19-8_FUEL TANK ASSEMBLY
E10PL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10PL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E10PL4INS	19-8_FUEL TANK ASSEMBLY
E10PL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10PX4AAA	19-8_FUEL TANK ASSEMBLY
E10PX4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10PX4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E10PX4INS	19-8_FUEL TANK ASSEMBLY
E10PX4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10R4AAA	19-8_FUEL TANK ASSEMBLY
E10R4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10R4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E10R4INS	19-8_FUEL TANK ASSEMBLY
E10R4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10RG4ABA	19-8_FUEL TANK ASSEMBLY
E10RG4ABB	19-8_FUEL TANK ASSEMBLY
E10RG4AFA	19-8_FUEL TANK ASSEMBLY
E10RGL4ABB	19-8_FUEL TANK ASSEMBLY
E10RGL4AFA	19-8_FUEL TANK ASSEMBLY
E10RGLABA	19-8_FUEL TANK ASSEMBLY
E10RL4AAA	19-8_FUEL TANK ASSEMBLY
E10RL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10RL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E10RL4INS	19-8_FUEL TANK ASSEMBLY
E10RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10TEL4AAA	19-8_FUEL TANK ASSEMBLY
E10TEL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10TEL4AAB & AAC	19-8_FUEL TANK ASSEMBLY

E10TEL4INS	19-8_FUEL TANK ASSEMBLY
E10TEL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10TPL4AAA	19-8_FUEL TANK ASSEMBLY
E10TPL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10TPL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E10TPL4ABA	19-8_FUEL TANK ASSEMBLY
E10TPL4ABB	19-8_FUEL TANK ASSEMBLY
E10TPL4AFA	19-8_FUEL TANK ASSEMBLY
E10TPL4INS	19-8_FUEL TANK ASSEMBLY
E10TPL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10TPX4AAA	19-8_FUEL TANK ASSEMBLY
E10TPX4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E10TPX4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E10TPX4INS	19-8_FUEL TANK ASSEMBLY
E10TPX4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15PGL4ABA	19-8_FUEL TANK ASSEMBLY
E15PGL4ABB	19-8_FUEL TANK ASSEMBLY
E15PL4AAA	19-8_FUEL TANK ASSEMBLY
E15PL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15PL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E15PL4INS	19-8_FUEL TANK ASSEMBLY
E15PL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15R4AAA	19-8_FUEL TANK ASSEMBLY
E15R4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15R4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E15R4INS	19-8_FUEL TANK ASSEMBLY
E15R4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15RG4ABA	19-8_FUEL TANK ASSEMBLY
E15RG4ABB	19-8_FUEL TANK ASSEMBLY
E15RGL4ABA	19-8_FUEL TANK ASSEMBLY
E15RGL4ABB	19-8_FUEL TANK ASSEMBLY
E15RL4AAA	19-8_FUEL TANK ASSEMBLY
E15RL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15RL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E15RL4INS	19-8_FUEL TANK ASSEMBLY

E15RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15TE4AAA	19-8_FUEL TANK ASSEMBLY
E15TE4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15TE4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E15TE4INS	19-8_FUEL TANK ASSEMBLY
E15TE4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15TEG4ABA	19-8_FUEL TANK ASSEMBLY
E15TEG4ABB	19-8_FUEL TANK ASSEMBLY
E15TEL4AAA	19-8_FUEL TANK ASSEMBLY
E15TEL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E15TEL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E15TEL4INS	19-8_FUEL TANK ASSEMBLY
E15TEL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E30MALABA	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MALABB	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MALAFA	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MALAFB	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MALAFC	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MALAFD	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MRLAAB	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MRLABA	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MRLABB	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MRLAFA	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MRLAFB	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MRLAFC	03-0_FUEL HOSE & PRIMER BULB ASSY
E30MRLAFD	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLAAA	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLAAA - FR	03-0_FLEXIBLE DE CARBURANT ET POIRE DAMORÇAGE
E55MJRLABA	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLABB	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLABF	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLAFA	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLAFB	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLAFC	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLAFD	03-0_FUEL HOSE & PRIMER BULB ASSY

E55MJRLAFF	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MJRLINB - FR	03-0_FLEXIBLE DE CARBURANT ET POIRE DAMORÇAGE
E55MRLAAA	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLAAA - FR	03-0_FLEXIBLE DE CARBURANT ET POIRE DAMORÇAGE
E55MRLABA	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLABB	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLABF	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLAFA	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLAFB	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLAFC	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLAFD	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLAFF	03-0_FUEL HOSE & PRIMER BULB ASSY
E55MRLINB - FR	03-0_FLEXIBLE DE CARBURANT ET POIRE DAMORÇAGE
E6R4AAA	19-8_FUEL TANK ASSEMBLY
E6R4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E6R4INS	19-8_FUEL TANK ASSEMBLY
E6R4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E6RG4ABA	19-8_FUEL TANK ASSEMBLY
E6RG4ABB	19-8_FUEL TANK ASSEMBLY
E6RGL4ABA	19-8_FUEL TANK ASSEMBLY
E6RGLABB	19-8_FUEL TANK ASSEMBLY
E6RL4AAA	19-8_FUEL TANK ASSEMBLY
E6RL4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E6RL4INS	19-8_FUEL TANK ASSEMBLY
E6RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
E6RX4AAA	19-8_FUEL TANK ASSEMBLY
E6RX4AAB & AAC	19-8_FUEL TANK ASSEMBLY
E6RX4INS	19-8_FUEL TANK ASSEMBLY
E6RX4INS - FR	13-1_RÉSERVOIR DE CARBURANT PORTABLE
FUEL/OIL	PRIMER BULB & HOSE WITH QUICK DISCONNECT -5/16 IN. I.D. (FUEL)
FUEL/OIL	PRIMER BULB & HOSE WITH QUICK DISCONNECT -5/16 IN. I.D. (FUEL)