

Where Used: Part Number 5010220

Model Name	Diagram
B30MRLAFA	03-5_FUEL INJECTOR
B30MRLAFB	03-5_FUEL INJECTOR
B30MRLAFC	03-5_FUEL INJECTOR
B30MRLAFD	03-5_FUEL INJECTOR
E15HPGLAFA	03-5_FUEL INJECTOR
E15HPGLAFB	03-5_FUEL INJECTOR
E15HPGLAFC	03-5_FUEL INJECTOR
E15HPGLAFD	03-5_FUEL INJECTOR
E15HPGXAFA	03-5_FUEL INJECTOR
E15HPGXAFB	03-5_FUEL INJECTOR
E15HPGX AFC	03-5_FUEL INJECTOR
E15HPGXAFD	03-5_FUEL INJECTOR
E15HPSLAFA	03-5_FUEL INJECTOR
E15HPSLAFB	03-5_FUEL INJECTOR
E15HPSLAFC	03-5_FUEL INJECTOR
E15HPSLAFD	03-5_FUEL INJECTOR
E15HPSXAFA	03-5_FUEL INJECTOR
E15HPSXAFB	03-5_FUEL INJECTOR
E15HPSXAFC	03-5_FUEL INJECTOR
E15HPSXAFD	03-5_FUEL INJECTOR
E15HTGLAFA	03-5_FUEL INJECTOR
E15HTGLAFB	03-5_FUEL INJECTOR
E15HTGLAFC	03-5_FUEL INJECTOR
E15HTGLAFD	03-5_FUEL INJECTOR
E15HTGX AFA	03-5_FUEL INJECTOR
E15HTGXAFB	03-5_FUEL INJECTOR
E15HTGX AFC	03-5_FUEL INJECTOR
E15HTGXAFD	03-5_FUEL INJECTOR
E15HTSLAFA	03-5_FUEL INJECTOR
E15HTSLAFB	03-5_FUEL INJECTOR
E15HTSLAFC	03-5_FUEL INJECTOR
E15HTSLAFD	03-5_FUEL INJECTOR
E15HTSX AFA	03-5_FUEL INJECTOR

E15HTSXAFB	03-5_FUEL INJECTOR
E15HTSX AFC	03-5_FUEL INJECTOR
E15HTSXAFD	03-5_FUEL INJECTOR
E25DGELAFB	03-5_FUEL INJECTOR
E25DGTEAFB	03-5_FUEL INJECTOR
E25DGTEAFC	03-5_FUEL INJECTOR
E25DGTEAFD	03-5_FUEL INJECTOR
E25DGT LAFB	03-5_FUEL INJECTOR
E25DGT LAFD	03-5_FUEL INJECTOR
E25DPGLAFB	03-5_FUEL INJECTOR
E25DPGLAFC	03-5_FUEL INJECTOR
E25DPGLAFD	03-5_FUEL INJECTOR
E25DPSLAFB	03-5_FUEL INJECTOR
E25DPSLAFC	03-5_FUEL INJECTOR
E25DPSLAFD	03-5_FUEL INJECTOR
E25DRGAFB	03-5_FUEL INJECTOR
E25DRGAFC	03-5_FUEL INJECTOR
E25DRGAFD	03-5_FUEL INJECTOR
E25DRGLAFB	03-5_FUEL INJECTOR
E25DRGLAFC	03-5_FUEL INJECTOR
E25DRGLAFD	03-5_FUEL INJECTOR
E25DRSAFB	03-5_FUEL INJECTOR
E25DRSAFC	03-5_FUEL INJECTOR
E25DRSAFD	03-5_FUEL INJECTOR
E25DRSLAFB	03-5_FUEL INJECTOR
E25DRSLAFC	03-5_FUEL INJECTOR
E25DRSLAFD	03-5_FUEL INJECTOR
E25DTSLAFB	03-5_FUEL INJECTOR
E25DTSLAFC	03-5_FUEL INJECTOR
E25DTSLAFD	03-5_FUEL INJECTOR
E25GTELAFB	03-5_FUEL INJECTOR
E25GTELAFC	03-5_FUEL INJECTOR
E25GTELAFD	03-5_FUEL INJECTOR
E25TESLAFB	03-5_FUEL INJECTOR
E30DGELAFB	03-5_FUEL INJECTOR

E30DGTAFB	03-5_FUEL INJECTOR
E30DGT AFC	03-5_FUEL INJECTOR
E30DGTAFD	03-5_FUEL INJECTOR
E30DPGLAFB	03-5_FUEL INJECTOR
E30DPGL AFC	03-5_FUEL INJECTOR
E30DPGLAFD	03-5_FUEL INJECTOR
E30DPSLAFB	03-5_FUEL INJECTOR
E30DPSL AFC	03-5_FUEL INJECTOR
E30DPSLAFD	03-5_FUEL INJECTOR
E30DRGAFB	03-5_FUEL INJECTOR
E30DRG AFC	03-5_FUEL INJECTOR
E30DRGAFD	03-5_FUEL INJECTOR
E30DRGLAFB	03-5_FUEL INJECTOR
E30DRGL AFC	03-5_FUEL INJECTOR
E30DRGLAFD	03-5_FUEL INJECTOR
E30DRSAFB	03-5_FUEL INJECTOR
E30DRSAFC	03-5_FUEL INJECTOR
E30DRSAFD	03-5_FUEL INJECTOR
E30DRSLAFB	03-5_FUEL INJECTOR
E30DRSL AFC	03-5_FUEL INJECTOR
E30DRSLAFD	03-5_FUEL INJECTOR
E30DTSLAFB	03-5_FUEL INJECTOR
E30DTSL AFC	03-5_FUEL INJECTOR
E30DTSLAFD	03-5_FUEL INJECTOR
E30GTEAFB	03-5_FUEL INJECTOR
E30GTE AFC	03-5_FUEL INJECTOR
E30GTEAFD	03-5_FUEL INJECTOR
E30MALAFA	03-5_FUEL INJECTOR
E30MALAFB	03-5_FUEL INJECTOR
E30MALAFC	03-5_FUEL INJECTOR
E30MALAFD	03-5_FUEL INJECTOR
E30MRLAFA	03-5_FUEL INJECTOR
E30MRLAFB	03-5_FUEL INJECTOR
E30MRLAFC	03-5_FUEL INJECTOR
E30MRLAFD	03-5_FUEL INJECTOR

E30TESLAFB

03-5_FUEL INJECTOR