

Where Used: Part Number 5030714

Model Name	Diagram
BJ60PL4SDM	OIL PUMP
BJ60PL4SDM - FR	13-6_POMPE À HUILE
BJ60PL4SOA	OIL PUMP
BJ60PL4SOA - FR	13-6_POMPE À HUILE
BJ60PL4SRR	OIL PUMP
BJ60PL4SRR - FR	13-6_POMPE À HUILE
BJ60PL4STC	OIL PUMP
BJ60PL4STC - FR	13-6_POMPE À HUILE
BJ70PL4SDM	OIL PUMP
BJ70PL4SDM - FR	13-6_POMPE À HUILE
BJ70PL4SOA	OIL PUMP
BJ70PL4SOA - FR	13-6_POMPE À HUILE
BJ70PL4SRR	OIL PUMP
BJ70PL4SRR - FR	13-6_POMPE À HUILE
BJ70PL4STC	OIL PUMP
BJ70PL4STC - FR	13-6_POMPE À HUILE
E25EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E25EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E25PL4SIC 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E25PL4SSS 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E25R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E25R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E25RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E25RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E25TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E25TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E25TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E25TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E30EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E30EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E30PL4SIC 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E30PL4SSS 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E30R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	MIDSECTION & OIL SYSTEM

E30R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E30RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E30RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E30TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E30TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E30TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E30TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E70 PL4SSR 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E70FLTLECS 1998	MIDSECTION & OIL SYSTEM
E70PL4EEC 1999	MIDSECTION & OIL SYSTEM
E70PL4SIA 4-Stroke, Elec. Start, TNT, Blue, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
J25PL4SOC	OIL PUMP
J25PL4SOC - FR	13-6_POMPE À HUILE
J25PL4SRS, J25TEL4SRS	OIL PUMP
J25PL4SRS, J25TEL4SRS - FR	13-6_POMPE À HUILE
J25TEL4SOC	OIL PUMP
J25TEL4SOC - FR	13-6_POMPE À HUILE
J30PL4SDR	OIL PUMP
J30PL4SDR - FR	13-6_POMPE À HUILE
J30PL4SOC	OIL PUMP
J30PL4SOC - FR	13-6_POMPE À HUILE
J30PL4SRS, J30TEL4SRS	OIL PUMP
J30PL4SRS, J30TEL4SRS - FR	13-6_POMPE À HUILE
J30PL4SUA	OIL PUMP
J30PL4SUA	13-6_POMPE À HUILE
J30TEL4SDR	OIL PUMP
J30TEL4SDR - FR	13-6_POMPE À HUILE
J30TEL4SOC	OIL PUMP
J30TEL4SOC - FR	13-6_POMPE À HUILE
J30TEL4SUA	OIL PUMP
J30TEL4SUA	13-6_POMPE À HUILE
J60PL4SDM	OIL PUMP
J60PL4SDM - FR	13-6_POMPE À HUILE
J60PL4SNF - FR	13-6_POMPE À HUILE
J60PL4SNF 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2002	OIL PUMP

J60PL4SOA	OIL PUMP
J60PL4SOA - FR	13-6_POMPE À HUILE
J60PL4SRR	OIL PUMP
J60PL4SRR - FR	13-6_POMPE À HUILE
J60PL4STC	OIL PUMP
J60PL4STC - FR	13-6_POMPE À HUILE
J70FLTLECS 1998	MIDSECTION & OIL SYSTEM
J70PL4SDM	OIL PUMP
J70PL4SDM - FR	13-6_POMPE À HUILE
J70PL4SNF - FR	13-6_POMPE À HUILE
J70PL4SNF 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2002	OIL PUMP
J70PL4SOA	OIL PUMP
J70PL4SOA - FR	13-6_POMPE À HUILE
J70PL4SRR	OIL PUMP
J70PL4SRR - FR	13-6_POMPE À HUILE
J70PL4STC	OIL PUMP
J70PL4STC - FR	13-6_POMPE À HUILE