

Where Used: Part Number 5031670

Model Name	Diagram
BJ40PL4SDR	OIL PUMP
BJ40PL4SDR - FR	13-6_POMPE À HUILE
BJ40PL4SOC	OIL PUMP
BJ40PL4SOC - FR	13-6_POMPE À HUILE
BJ40PL4SRS	OIL PUMP
BJ40PL4SRS - FR	13-6_POMPE À HUILE
BJ50PL4SDR	OIL PUMP
BJ50PL4SDR - FR	13-6_POMPE À HUILE
BJ50PL4SOC	OIL PUMP
BJ50PL4SOC - FR	13-6_POMPE À HUILE
BJ50PL4SRS	OIL PUMP
BJ50PL4SRS - FR	13-6_POMPE À HUILE
E40PL4EES 1999	MIDSECTION & OIL SYSTEM
E40PL4SIR 4-Stroke, Elec Start, TNT, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E40PL4SSC 4-Stroke, Elec Start, TNT, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
E50PL4EES 1999	MIDSECTION & OIL SYSTEM
E50PL4SIR 4-Stroke, Elec Start, TNT, 20 IN. shaft 2001	MIDSECTION & OIL SYSTEM
E50PL4SSC 4-Stroke, Elec Start, TNT, 20 IN. shaft 2000	MIDSECTION & OIL SYSTEM
J40PL4SDE	OIL PUMP
J40PL4SDE - FR	13-6_POMPE À HUILE
J40PL4SNF - FR	13-6_POMPE À HUILE
J40PL4SNF 4-Stroke, Remote, White, 20 in. shaft, Power Trim&Tilt 2002	OIL PUMP
J40PL4SOB	OIL PUMP
J40PL4SOB - FR	13-6_POMPE À HUILE
J40PL4SRM	OIL PUMP
J40PL4SRM - FR	13-6_POMPE À HUILE
J40PL4STC	OIL PUMP
J40PL4STC - FR	13-6_POMPE À HUILE
J50PL4SDE	OIL PUMP
J50PL4SDE - FR	13-6_POMPE À HUILE
J50PL4SNF - FR	13-6_POMPE À HUILE
J50PL4SNF 4-Stroke, Remote, White, 20 in. shaft, Power Trim&Tilt 2002	OIL PUMP
J50PL4SOB	OIL PUMP

J50PL4SOB - FR

13-6\_POMPE À HUILE

J50PL4SRM

OIL PUMP

J50PL4SRM - FR

13-6\_POMPE À HUILE

J50PL4STC

OIL PUMP

J50PL4STC - FR

13-6\_POMPE À HUILE