

Where Used: Part Number 5031699

Model Name	Diagram
BJ40PL4SOC	TRANSMISSION
BJ40PL4SOC - FR	17-3_ENGRENAGES
BJ40PL4SRS	TRANSMISSION
BJ40PL4SRS - FR	17-3_ENGRENAGES
BJ50PL4SOC	TRANSMISSION
BJ50PL4SOC - FR	17-3_ENGRENAGES
BJ50PL4SRS	TRANSMISSION
BJ50PL4SRS - FR	17-3_ENGRENAGES
E40PL4EES 1999	DRIVESHAFT & PROPELLER SHAFT
E40PL4SIR 4-Stroke, Elec Start, TNT, 20 IN. shaft 2001	DRIVESHAFT & PROPELLER SHAFT
E40PL4SSC 4-Stroke, Elec Start, TNT, 20 IN. shaft 2000	DRIVESHAFT & PROPELLER SHAFT
E50PL4EES 1999	DRIVESHAFT & PROPELLER SHAFT
E50PL4SIR 4-Stroke, Elec Start, TNT, 20 IN. shaft 2001	DRIVESHAFT & PROPELLER SHAFT
E50PL4SSC 4-Stroke, Elec Start, TNT, 20 IN. shaft 2000	DRIVESHAFT & PROPELLER SHAFT
J40PL4SOB	TRANSMISSION
J40PL4SOB - FR	17-3_ENGRENAGES
J40PL4SRM	TRANSMISSION
J40PL4SRM - FR	17-3_ENGRENAGES
J40PL4STC	TRANSMISSION
J40PL4STC - FR	17-3_ENGRENAGES
J50PL4SOB	TRANSMISSION
J50PL4SOB - FR	17-3_ENGRENAGES
J50PL4SRM	TRANSMISSION
J50PL4SRM - FR	17-3_ENGRENAGES
J50PL4STC	TRANSMISSION
J50PL4STC - FR	17-3_ENGRENAGES