

Where Used: Part Number 5031916

Model Name	Diagram
E25EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	CYLINDER & CRANKCASE
E25EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	CYLINDER & CRANKCASE
E25PL4SIC 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2001	CYLINDER & CRANKCASE
E25PL4SSS 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2000	CYLINDER & CRANKCASE
E25R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	CYLINDER & CRANKCASE
E25R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	CYLINDER & CRANKCASE
E25RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	CYLINDER & CRANKCASE
E25RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	CYLINDER & CRANKCASE
E25TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	CYLINDER & CRANKCASE
E25TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	CYLINDER & CRANKCASE
E25TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	CYLINDER & CRANKCASE
E25TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	CYLINDER & CRANKCASE
E30EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	CYLINDER & CRANKCASE
E30EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	CYLINDER & CRANKCASE
E30PL4SIC 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2001	CYLINDER & CRANKCASE
E30PL4SSS 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2000	CYLINDER & CRANKCASE
E30R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	CYLINDER & CRANKCASE
E30R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	CYLINDER & CRANKCASE
E30RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	CYLINDER & CRANKCASE
E30RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	CYLINDER & CRANKCASE
E30TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	CYLINDER & CRANKCASE
E30TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	CYLINDER & CRANKCASE
E30TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	CYLINDER & CRANKCASE
E30TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	CYLINDER & CRANKCASE
J25PL4SOC	CYLINDER HEAD
J25PL4SOC - FR	15-7_CULASSE
J25PL4SRS, J25TEL4SRS	CYLINDER HEAD
J25PL4SRS, J25TEL4SRS - FR	15-7_CULASSE
J25TEL4SOC	CYLINDER HEAD
J25TEL4SOC - FR	15-7_CULASSE
J30PL4SDR	CYLINDER HEAD
J30PL4SDR - FR	15-7_CULASSE
J30PL4SOC	CYLINDER HEAD

J30PL4SOC - FR	15-7_CULASSE
J30PL4SRS, J30TEL4SRS	CYLINDER HEAD
J30PL4SRS, J30TEL4SRS - FR	15-7_CULASSE
J30PL4SUA	CYLINDER HEAD
J30PL4SUA	15-7_CULASSE
J30TEL4SDR	CYLINDER HEAD
J30TEL4SDR - FR	15-7_CULASSE
J30TEL4SOC	CYLINDER HEAD
J30TEL4SOC - FR	15-7_CULASSE
J30TEL4SUA	CYLINDER HEAD
J30TEL4SUA	15-7_CULASSE