

Where Used: Part Number 5032091

Model Name	Diagram
BJ25E4SDS	GEARCASE
BJ25E4SDS - FR	17-1_BOÎTIER D'ENGRENAGES
BJ25E4SUC	GEARCASE
BJ25E4SUC	17-1_BOÎTIER D'ENGRENAGES
BJ25EL4SDS	GEARCASE
BJ25EL4SDS - FR	17-1_BOÎTIER D'ENGRENAGES
BJ25EL4SUC	GEARCASE
BJ25EL4SUC	17-1_BOÎTIER D'ENGRENAGES
BJ25R4SDS	GEARCASE
BJ25R4SDS - FR	17-1_BOÎTIER D'ENGRENAGES
BJ25R4SUC	GEARCASE
BJ25R4SUC	17-1_BOÎTIER D'ENGRENAGES
BJ25RL4SDS	GEARCASE
BJ25RL4SDS - FR	17-1_BOÎTIER D'ENGRENAGES
BJ25RL4SUC	GEARCASE
BJ25RL4SUC	17-1_BOÎTIER D'ENGRENAGES
BJ25TE4SDS	GEARCASE
BJ25TE4SDS - FR	17-1_BOÎTIER D'ENGRENAGES
BJ25TE4SUC	GEARCASE
BJ25TE4SUC	17-1_BOÎTIER D'ENGRENAGES
BJ25TEL4SDS	GEARCASE
BJ25TEL4SDS - FR	17-1_BOÎTIER D'ENGRENAGES
BJ25TL4SUC	GEARCASE
BJ25TL4SUC	17-1_BOÎTIER D'ENGRENAGES
E25EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	GEARCASE
E25EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	GEARCASE
E25PL4SIC 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2001	GEARCASE
E25PL4SSS 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2000	GEARCASE
E25R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	GEARCASE
E25R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E25RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	GEARCASE
E25RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
E25TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	GEARCASE

E25TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	GEARCASE
E25TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	GEARCASE
E25TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	GEARCASE
E30EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	GEARCASE
E30EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	GEARCASE
E30PL4SIC 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2001	GEARCASE
E30PL4SSS 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2000	GEARCASE
E30R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	GEARCASE
E30R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	GEARCASE
E30RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	GEARCASE
E30RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	GEARCASE
E30TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	GEARCASE
E30TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	GEARCASE
E30TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	GEARCASE
E30TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	GEARCASE
J25E4SDC	GEARCASE
J25E4SDC - FR	17-1_BOÎTIER D'ENGRENAGES
J25E4SUR	GEARCASE
J25E4SUR	17-1_BOÎTIER D'ENGRENAGES
J25EL4SDC	GEARCASE
J25EL4SDC - FR	17-1_BOÎTIER D'ENGRENAGES
J25EL4SUR	GEARCASE
J25EL4SUR	17-1_BOÎTIER D'ENGRENAGES
J25PL4SOC	GEARCASE
J25PL4SOC - FR	17-1_BOÎTIER D'ENGRENAGES
J25PL4SRS, J25TEL4SRS	GEARCASE
J25PL4SRS, J25TEL4SRS - FR	17-1_BOÎTIER D'ENGRENAGES
J25R4SDC	GEARCASE
J25R4SDC - FR	17-1_BOÎTIER D'ENGRENAGES
J25R4SUR	GEARCASE
J25R4SUR	17-1_BOÎTIER D'ENGRENAGES
J25RL4SDC	GEARCASE
J25RL4SDC - FR	17-1_BOÎTIER D'ENGRENAGES
J25RL4SUR	GEARCASE
J25RL4SUR	17-1_BOÎTIER D'ENGRENAGES

J25TE4SDC	GEARCASE
J25TE4SDC - FR	17-1_BOÎTIER D'ENGRENAGES
J25TE4SUR	GEARCASE
J25TE4SUR	17-1_BOÎTIER D'ENGRENAGES
J25TEL4SDC	GEARCASE
J25TEL4SDC - FR	17-1_BOÎTIER D'ENGRENAGES
J25TEL4SOC	GEARCASE
J25TEL4SOC - FR	17-1_BOÎTIER D'ENGRENAGES
J25TEL4SUR	GEARCASE
J25TEL4SUR	17-1_BOÎTIER D'ENGRENAGES
J30PL4SDR	GEARCASE
J30PL4SDR - FR	17-1_BOÎTIER D'ENGRENAGES
J30PL4SOC	GEARCASE
J30PL4SOC - FR	17-1_BOÎTIER D'ENGRENAGES
J30PL4SRS, J30TEL4SRS	GEARCASE
J30PL4SRS, J30TEL4SRS - FR	17-1_BOÎTIER D'ENGRENAGES
J30PL4SUA	GEARCASE
J30PL4SUA	17-1_BOÎTIER D'ENGRENAGES
J30TEL4SDR	GEARCASE
J30TEL4SDR - FR	17-1_BOÎTIER D'ENGRENAGES
J30TEL4SOC	GEARCASE
J30TEL4SOC - FR	17-1_BOÎTIER D'ENGRENAGES
J30TEL4SUA	GEARCASE
J30TEL4SUA	17-1_BOÎTIER D'ENGRENAGES