

Where Used: Part Number 5032323

Model Name	Diagram
BJ115L4SRC	FUEL PUMP
BJ115L4SRC - FR	13-2_POMPE À CARBURANT
BJ115L4STS	FUEL PUMP
BJ115L4STS - FR	13-2_POMPE À CARBURANT
BJ115PL4SDA	FUEL PUMP Up to SN 032266
BJ115PL4SDA - FR	13-2_POMPE À CARBURANT JUSQU AU SN 032266
BJ115PX4SDA	FUEL PUMP Up to SN 032266
BJ115PX4SDA - FR	13-2_POMPE À CARBURANT JUSQU AU SN 032266
BJ115X4SRC	FUEL PUMP
BJ115X4SRC - FR	13-2_POMPE À CARBURANT
BJ115X4STS	FUEL PUMP
BJ115X4STS - FR	13-2_POMPE À CARBURANT
BJ140CX4DR	FUEL PUMP Up to SN 032312
BJ140CX4DR - FR	13-2_POMPE À CARBURANT, jusqu'au SN 032312
BJ140CX4SRS	FUEL PUMP
BJ140CX4SRS - FR	13-2_POMPE À CARBURANT
BJ140L4SDR	FUEL PUMP Up to SN 032312
BJ140L4SDR - FR	13-2_POMPE À CARBURANT, jusqu'au SN 032312
BJ140PL4SRS	FUEL PUMP
BJ140PL4SRS - FR	13-2_POMPE À CARBURANT
BJ140PX4SRS	FUEL PUMP
BJ140PX4SRS - FR	13-2_POMPE À CARBURANT
BJ140X4SDR	FUEL PUMP Up to SN 032312
BJ140X4SDR - FR	13-2_POMPE À CARBURANT, jusqu'au SN 032312
BJ40PL4SDR	FUEL PUMP
BJ40PL4SDR - FR	13-2_POMPE À CARBURANT
BJ40PL4SOC	FUEL PUMP
BJ40PL4SOC - FR	13-2_POMPE À CARBURANT
BJ40PL4SRS	FUEL PUMP
BJ40PL4SRS - FR	13-2_POMPE À CARBURANT
BJ50PL4SDR	FUEL PUMP
BJ50PL4SDR - FR	13-2_POMPE À CARBURANT

BJ50PL4SOC	FUEL PUMP
BJ50PL4SOC - FR	13-2_POMPE À CARBURANT
BJ50PL4SRS	FUEL PUMP
BJ50PL4SRS - FR	13-2_POMPE À CARBURANT
BJ60PL4SDM	FUEL PUMP
BJ60PL4SDM - FR	13-2_POMPE À CARBURANT
BJ60PL4SRR	FUEL PUMP
BJ60PL4SRR - FR	13-2_POMPE À CARBURANT
BJ60PL4STC	FUEL PUMP
BJ60PL4STC - FR	13-2_POMPE À CARBURANT
BJ70PL4SDM	FUEL PUMP
BJ70PL4SDM - FR	13-2_POMPE À CARBURANT
BJ70PL4SRR	FUEL PUMP
BJ70PL4SRR - FR	13-2_POMPE À CARBURANT
BJ70PL4STC	FUEL PUMP
BJ70PL4STC - FR	13-2_POMPE À CARBURANT
BJ90PL4SDA	FUEL PUMP Up to SN 029194
BJ90PL4SDA - FR	13-2_POMPE CARBURANT 90 CV JUSQ AU SN 029194
BJ90PL4SRC	FUEL PUMP
BJ90PL4SRC - FR	13-2_POMPE À CARBURANT
BJ90PL4STS	FUEL PUMP
BJ90PL4STS - FR	13-2_POMPE À CARBURANT
BJ90PX4SDA	FUEL PUMP Up to SN 029194
BJ90PX4SRC	FUEL PUMP
BJ90PX4SRC - FR	13-2_POMPE À CARBURANT
BJ90PX4STS	FUEL PUMP
BJ90PX4STS - FR	13-2_POMPE À CARBURANT
E25EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	FUEL PUMP
E25EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	FUEL PUMP
E25PL4SIC 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2001	FUEL PUMP
E25PL4SSS 4-Stroke, Elec. Start, TNT, 15 IN. shaft 2000	FUEL PUMP
E25R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	FUEL PUMP
E25R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
E25RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	FUEL PUMP

E25RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E25TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	FUEL PUMP
E25TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
E25TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	FUEL PUMP
E25TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E30EL4SIC 4-Stroke, Elec. Start, 20 IN. shaft 2001	FUEL PUMP
E30EL4SSS 4-Stroke, Elec. Start, 20 IN. shaft 2000	FUEL PUMP
E30PL4SIC 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2001	FUEL PUMP
E30PL4SSS 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2000	FUEL PUMP
E30R4SIC 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2001	FUEL PUMP
E30R4SSS 4-Stroke, Rope Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
E30RL4SIC 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2001	FUEL PUMP
E30RL4SSS 4-Stroke, Rope Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E30TE4SIC 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2001	FUEL PUMP
E30TE4SSS 4-Stroke, Elec. Start, Tiller, 15 IN. shaft 2000	FUEL PUMP
E30TEL4SIC 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2001	FUEL PUMP
E30TEL4SSS 4-Stroke, Elec. Start, Tiller, 20 IN. shaft 2000	FUEL PUMP
E40PL4SIR 4-Stroke, Elec Start, TNT, 20 IN. shaft 2001	FUEL PUMP & SEPERATOR
E40PL4SSC 4-Stroke, Elec Start, TNT, 20 IN. shaft 2000	FUEL PUMP & SEPERATOR
E50PL4SIR 4-Stroke, Elec Start, TNT, 20 IN. shaft 2001	FUEL PUMP & SEPERATOR
E50PL4SSC 4-Stroke, Elec Start, TNT, 20 IN. shaft 2000	FUEL PUMP & SEPERATOR
E70 PL4SSR 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2000	FUEL PUMP & SEPARATOR
E70PL4SIA 4-Stroke, Elec. Start, TNT, Blue, 20 IN. shaft 2001	FUEL PUMP & SEPARATOR
J115PL4SDA	FUEL PUMP Up to SN 032266
J115PL4SDA - FR	13-2_POMPE À CARBURANT JUSQU AU SN 032266
J115PL4SRC	FUEL PUMP
J115PL4SRC - FR	13-2_POMPE À CARBURANT
J115PL4STS	FUEL PUMP
J115PL4STS - FR	13-2_POMPE À CARBURANT
J115PX4SDA	FUEL PUMP Up to SN 032266
J115PX4SDA - FR	13-2_POMPE À CARBURANT JUSQU AU SN 032266
J115PX4SRC	FUEL PUMP
J115PX4SRC - FR	13-2_POMPE À CARBURANT
J115PX4STS	FUEL PUMP

J115PX4STS - FR	13-2_POMPE À CARBURANT
J140CX4SDA	FUEL PUMP Up to SN 032312
J140CX4SDA - FR	13-2_POMPE À CARBURANT, jusqu'au SN 032312
J140CX4SRC	FUEL PUMP
J140CX4SRC - FR	13-2_POMPE À CARBURANT
J140CX4STS	FUEL PUMP
J140CX4STS - FR	13-2_POMPE À CARBURANT
J140PL4SDA	FUEL PUMP Up to SN 032312
J140PL4SDA - FR	13-2_POMPE À CARBURANT, jusqu'au SN 032312
J140PL4SRC	FUEL PUMP
J140PL4SRC - FR	13-2_POMPE À CARBURANT
J140PL4STS	FUEL PUMP
J140PL4STS - FR	13-2_POMPE À CARBURANT
J140PX4SDA	FUEL PUMP Up to SN 032312
J140PX4SDA - FR	13-2_POMPE À CARBURANT, jusqu'au SN 032312
J140PX4SRS	FUEL PUMP
J140PX4SRS - FR	13-2_POMPE À CARBURANT
J140PX4STS	FUEL PUMP
J140PX4STS - FR	13-2_POMPE À CARBURANT
J25PL4SOC	FUEL PUMP
J25PL4SOC - FR	13-2_POMPE À CARBURANT
J25PL4SRS, J25TEL4SRS	FUEL PUMP
J25PL4SRS, J25TEL4SRS - FR	13-2_POMPE À CARBURANT
J25TEL4SOC	FUEL PUMP
J25TEL4SOC - FR	13-2_POMPE À CARBURANT
J30PL4SDR	FUEL PUMP
J30PL4SDR - FR	13-2_POMPE À CARBURANT
J30PL4SOC	FUEL PUMP
J30PL4SOC - FR	13-2_POMPE À CARBURANT
J30PL4SRS, J30TEL4SRS	FUEL PUMP
J30PL4SRS, J30TEL4SRS - FR	13-2_POMPE À CARBURANT
J30PL4SUA	FUEL PUMP
J30PL4SUA	13-2_POMPE À CARBURANT
J30TEL4SDR	FUEL PUMP
J30TEL4SDR - FR	13-2_POMPE À CARBURANT

J30TEL4SOC	FUEL PUMP
J30TEL4SOC - FR	13-2_POMPE À CARBURANT
J30TEL4SUA	FUEL PUMP
J30TEL4SUA	13-2_POMPE À CARBURANT
J40PL4SDE	FUEL PUMP
J40PL4SDE - FR	13-2_POMPE À CARBURANT
J40PL4SNF - FR	13-2_POMPE À CARBURANT
J40PL4SNF 4-Stroke, Remote, White, 20 in. shaft, Power Trim&Tilt 2002	FUEL PUMP
J40PL4SOB	FUEL PUMP
J40PL4SOB - FR	13-2_POMPE À CARBURANT
J40PL4SRM	FUEL PUMP
J40PL4SRM - FR	13-2_POMPE À CARBURANT
J40PL4STC	FUEL PUMP
J40PL4STC - FR	13-2_POMPE À CARBURANT
J50PL4SDE	FUEL PUMP
J50PL4SDE - FR	13-2_POMPE À CARBURANT
J50PL4SNF - FR	13-2_POMPE À CARBURANT
J50PL4SNF 4-Stroke, Remote, White, 20 in. shaft, Power Trim&Tilt 2002	FUEL PUMP
J50PL4SOB	FUEL PUMP
J50PL4SOB - FR	13-2_POMPE À CARBURANT
J50PL4SRM	FUEL PUMP
J50PL4SRM - FR	13-2_POMPE À CARBURANT
J50PL4STC	FUEL PUMP
J50PL4STC - FR	13-2_POMPE À CARBURANT
J60PL4SDM	FUEL PUMP
J60PL4SDM - FR	13-2_POMPE À CARBURANT
J60PL4SNF - FR	13-2_POMPE À CARBURANT
J60PL4SNF 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2002	FUEL PUMP
J60PL4SRR	FUEL PUMP
J60PL4SRR - FR	13-2_POMPE À CARBURANT
J60PL4STC	FUEL PUMP
J60PL4STC - FR	13-2_POMPE À CARBURANT
J70PL4SDM	FUEL PUMP
J70PL4SDM - FR	13-2_POMPE À CARBURANT
J70PL4SNF - FR	13-2_POMPE À CARBURANT

J70PL4SNF 4-Stroke, Elec. Start, TNT, 20 IN. shaft 2002	FUEL PUMP
J70PL4SRR	FUEL PUMP
J70PL4SRR - FR	13-2_POMPE À CARBURANT
J70PL4STC	FUEL PUMP
J70PL4STC - FR	13-2_POMPE À CARBURANT
J90PL4SDA	FUEL PUMP Up to SN 029194
J90PL4SDA - FR	13-2_POMPE CARBURANT 90 CV JUSQ AU SN 029194
J90PL4SRC	FUEL PUMP
J90PL4SRC - FR	13-2_POMPE À CARBURANT
J90PL4STS	FUEL PUMP
J90PL4STS - FR	13-2_POMPE À CARBURANT
J90PX4SDA	FUEL PUMP Up to SN 029194
J90PX4SDA - FR	13-2_POMPE CARBURANT 90 CV JUSQ AU SN 029194
J90PX4SRC	FUEL PUMP
J90PX4SRC - FR	13-2_POMPE À CARBURANT
J90PX4STS	FUEL PUMP
J90PX4STS - FR	13-2_POMPE À CARBURANT