

Where Used: Part Number 5034866

Model Name	Diagram
BJ115PL4SDA	CYLINDER HEAD
BJ115PL4SDA - FR	15-7_CULASSE
BJ115PX4SDA	CYLINDER HEAD
BJ115PX4SDA - FR	15-7_CULASSE
BJ140CX4DR	CYLINDER HEAD
BJ140CX4DR - FR	15-7_CULASSE
BJ140L4SDR	CYLINDER HEAD
BJ140L4SDR - FR	15-7_CULASSE
BJ140X4SDR	CYLINDER HEAD
BJ140X4SDR - FR	15-7_CULASSE
BJ200CX4DC	EXHAUST COVER
BJ200CX4DC	CYLINDER HEAD
BJ200CX4DC - FR	15-7_CULASSE
BJ200CX4DC - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ200CX4SO	CYLINDER HEAD
BJ200CX4SO	EXHAUST COVER
BJ200CX4SO - FR	15-7_CULASSE
BJ200CX4SO - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ200PX4SO	CYLINDER HEAD
BJ200PX4SO	EXHAUST COVER
BJ200PX4SO - FR	15-7_CULASSE
BJ200PX4SO - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ200X4SDC	EXHAUST COVER
BJ200X4SDC	CYLINDER HEAD
BJ200X4SDC - FR	15-7_CULASSE
BJ200X4SDC - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ225CX4DC	EXHAUST COVER
BJ225CX4DC	CYLINDER HEAD
BJ225CX4DC - FR	15-7_CULASSE
BJ225CX4DC - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ225CX4SO	CYLINDER HEAD
BJ225CX4SO	EXHAUST COVER
BJ225CX4SO - FR	15-7_CULASSE

BJ225CX4SO - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ225PX4SO - FR	15-7_CULASSE
BJ225PX4SO - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ225X4SDC	EXHAUST COVER
BJ225X4SDC	CYLINDER HEAD
BJ225X4SDC - FR	15-7_CULASSE
BJ225X4SDC - FR	16-1_ECHAPPEMENT DE COUVERTURE
BJ225X4SO	CYLINDER HEAD
BJ225X4SO	EXHAUST COVER
BJ25E4SDS	OIL PAN
BJ25E4SDS - FR	15-5_CARTER D'HUILE
BJ25E4SUC	OIL PAN
BJ25E4SUC	15-5_CARTER D'HUILE
BJ25EL4SDS	OIL PAN
BJ25EL4SDS - FR	15-5_CARTER D'HUILE
BJ25EL4SUC	OIL PAN
BJ25EL4SUC	15-5_CARTER D'HUILE
BJ25R4SDS	OIL PAN
BJ25R4SDS - FR	15-5_CARTER D'HUILE
BJ25R4SUC	OIL PAN
BJ25R4SUC	15-5_CARTER D'HUILE
BJ25RL4SDS	OIL PAN
BJ25RL4SDS - FR	15-5_CARTER D'HUILE
BJ25RL4SUC	OIL PAN
BJ25RL4SUC	15-5_CARTER D'HUILE
BJ25TE4SDS	OIL PAN
BJ25TE4SDS - FR	15-5_CARTER D'HUILE
BJ25TE4SUC	OIL PAN
BJ25TE4SUC	15-5_CARTER D'HUILE
BJ25TEL4SDS	OIL PAN
BJ25TEL4SDS - FR	15-5_CARTER D'HUILE
BJ25TL4SUC	OIL PAN
BJ25TL4SUC	15-5_CARTER D'HUILE
BJ40PL4SDR	CYLINDER HEAD
BJ40PL4SDR - FR	15-7_CULASSE

BJ40PL4SOC	CYLINDER HEAD
BJ40PL4SOC - FR	15-7_CULASSE
BJ50PL4SDR	CYLINDER HEAD
BJ50PL4SDR - FR	15-7_CULASSE
BJ50PL4SOC	CYLINDER HEAD
BJ50PL4SOC - FR	15-7_CULASSE
BJ90PL4SDA	CYLINDER HEAD
BJ90PL4SDA - FR	15-7_CULASSE
BJ90PX4SDA	CYLINDER HEAD
BJ90PX4SDA - FR	15-7_CULASSE
J115PL4SDA	CYLINDER HEAD
J115PL4SDA - FR	15-7_CULASSE
J115PX4SDA	CYLINDER HEAD
J115PX4SDA - FR	15-7_CULASSE
J140CX4SDA	CYLINDER HEAD
J140CX4SDA - FR	15-7_CULASSE
J140CX4SOR, BJ140CX4SOC	CYLINDER HEAD
J140CX4SOR, BJ140CX4SOC - FR	15-7_CULASSE
J140PL4SDA	CYLINDER HEAD
J140PL4SDA - FR	15-7_CULASSE
J140PL4SOR, BJ140PL4SOC	CYLINDER HEAD
J140PL4SOR, BJ140PL4SOC - FR	15-7_CULASSE
J140PX4SDA	CYLINDER HEAD
J140PX4SDA - FR	15-7_CULASSE
J140PX4SOR, BJ140PX4SOC	CYLINDER HEAD
J140PX4SOR, BJ140PX4SOC - FR	15-7_CULASSE
J200CX4SOC	CYLINDER HEAD
J200CX4SOC	EXHAUST COVER
J200CX4SOC - FR	15-7_CULASSE
J200CX4SOC - FR	16-1_ECHAPPEMENT DE COUVERTURE
J200CX4SRS	EXHAUST COVER
J200CX4SRS	CYLINDER HEAD
J200CX4SRS - FR	15-7_CULASSE
J200CX4SRS - FR	16-1_ECHAPPEMENT DE COUVERTURE
J200PX4SOC	CYLINDER HEAD

J200PX4SOC	EXHAUST COVER
J200PX4SOC - FR	15-7_CULASSE
J200PX4SOC - FR	16-1_ECHAPPEMENT DE COUVERTURE
J200PX4SRS	EXHAUST COVER
J200PX4SRS	CYLINDER HEAD
J200PX4SRS - FR	15-7_CULASSE
J200PX4SRS - FR	16-1_ECHAPPEMENT DE COUVERTURE
J225CX4SOC	CYLINDER HEAD
J225CX4SOC	EXHAUST COVER
J225CX4SOC - FR	15-7_CULASSE
J225CX4SOC - FR	16-1_ECHAPPEMENT DE COUVERTURE
J225CX4SRS	EXHAUST COVER
J225CX4SRS	CYLINDER HEAD
J225CX4SRS - FR	15-7_CULASSE
J225CX4SRS - FR	16-1_ECHAPPEMENT DE COUVERTURE
J225CZ4SOS	CYLINDER HEAD
J225CZ4SOS	EXHAUST COVER
J225CZ4SOS - FR	15-7_CULASSE
J225CZ4SOS - FR	16-1_ECHAPPEMENT DE COUVERTURE
J225PX4SOC	CYLINDER HEAD
J225PX4SOC	EXHAUST COVER
J225PX4SOC - FR	15-7_CULASSE
J225PX4SOC - FR	16-1_ECHAPPEMENT DE COUVERTURE
J225PX4SRS	EXHAUST COVER
J225PX4SRS	CYLINDER HEAD
J225PX4SRS - FR	15-7_CULASSE
J225PX4SRS - FR	16-1_ECHAPPEMENT DE COUVERTURE
J225PZ4SOS	CYLINDER HEAD
J225PZ4SOS	EXHAUST COVER
J225PZ4SOS - FR	15-7_CULASSE
J225PZ4SOS - FR	16-1_ECHAPPEMENT DE COUVERTURE
J25E4SDC	OIL PAN
J25E4SDC - FR	15-5_CARTER D'HUILE
J25E4SUR	OIL PAN
J25E4SUR	15-5_CARTER D'HUILE

J25EL4SDC	OIL PAN
J25EL4SDC - FR	15-5_CARTER D'HUILE
J25EL4SUR	OIL PAN
J25EL4SUR	15-5_CARTER D'HUILE
J25R4SDC	OIL PAN
J25R4SDC - FR	15-5_CARTER D'HUILE
J25R4SUR	OIL PAN
J25R4SUR	15-5_CARTER D'HUILE
J25RL4SDC	OIL PAN
J25RL4SDC - FR	15-5_CARTER D'HUILE
J25RL4SUR	OIL PAN
J25RL4SUR	15-5_CARTER D'HUILE
J25TE4SDC	OIL PAN
J25TE4SDC - FR	15-5_CARTER D'HUILE
J25TE4SUR	OIL PAN
J25TE4SUR	15-5_CARTER D'HUILE
J25TEL4SDC	OIL PAN
J25TEL4SDC - FR	15-5_CARTER D'HUILE
J25TEL4SUR	OIL PAN
J25TEL4SUR	15-5_CARTER D'HUILE
J40PL4SDE	CYLINDER HEAD
J40PL4SDE - FR	15-7_CULASSE
J40PL4SOB	CYLINDER HEAD
J40PL4SOB - FR	15-7_CULASSE
J50PL4SDE	CYLINDER HEAD
J50PL4SDE - FR	15-7_CULASSE
J50PL4SOB	CYLINDER HEAD
J50PL4SOB - FR	15-7_CULASSE
J90PL4SDA	CYLINDER HEAD
J90PL4SDA - FR	15-7_CULASSE
J90PX4SDA	CYLINDER HEAD
J90PX4SDA - FR	15-7_CULASSE