

Where Used: Part Number 5036701

Model Name	Diagram
BJ115PL4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
BJ115PL4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ115PX4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
BJ115PX4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ140CX4DR	ENGINE CONTROL UNIT & POWER TRIM SWITCH
BJ140CX4DR - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ140L4SDR	ENGINE CONTROL UNIT & POWER TRIM SWITCH
BJ140L4SDR - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ140X4SDR	ENGINE CONTROL UNIT & POWER TRIM SWITCH
BJ140X4SDR - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ200CX4DC	ENGINE CONTROL MODULE, POWER TRIM/TILT RELAY & SWITCH
BJ200CX4DC - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ200X4SDC	ENGINE CONTROL MODULE, POWER TRIM/TILT RELAY & SWITCH
BJ200X4SDC - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ225CX4DC	ENGINE CONTROL MODULE, POWER TRIM/TILT RELAY & SWITCH
BJ225CX4DC - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ225X4SDC	ENGINE CONTROL MODULE, POWER TRIM/TILT RELAY & SWITCH
BJ225X4SDC - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ40PL4SDR	IGNITION COIL
BJ40PL4SDR - FR	12-5_BOBINE D'ALLUMAGE
BJ50PL4SDR	IGNITION COIL
BJ50PL4SDR - FR	12-5_BOBINE D'ALLUMAGE
BJ60PL4SDM	ENGINE CONTROL UNIT
BJ60PL4SDM - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ70PL4SDM	ENGINE CONTROL UNIT
BJ70PL4SDM - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ90PL4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
BJ90PL4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
BJ90PX4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
BJ90PX4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
J115PL4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
J115PL4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
J115PX4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH

J115PX4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
J140CX4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
J140CX4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
J140PL4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
J140PL4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
J140PX4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
J140PX4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
J40PL4SDE	IGNITION COIL
J40PL4SDE - FR	12-5_BOBINE D'ALLUMAGE
J50PL4SDE	IGNITION COIL
J50PL4SDE - FR	12-5_BOBINE D'ALLUMAGE
J60PL4SDM	ENGINE CONTROL UNIT
J60PL4SDM - FR	12-4_MODULE DE COMMANDE MOTEUR
J70PL4SDM	ENGINE CONTROL UNIT
J70PL4SDM - FR	12-4_MODULE DE COMMANDE MOTEUR
J90PL4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
J90PL4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR
J90PX4SDA	ENGINE CONTROL UNIT & POWER TRIM SWITCH
J90PX4SDA - FR	12-4_MODULE DE COMMANDE MOTEUR