

Where Used: Part Number 5041041

Model Name	Diagram
B10EGL4ABA	11-3_LOWER ENGINE COVER
B10EGL4ABB	11-3_LOWER ENGINE COVER
B10EGL4AFA	11-3_LOWER ENGINE COVER
B10EL4AAA	11-3_LOWER ENGINE COVER
B10EL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10EL4AAB & AAC	11-3_LOWER ENGINE COVER
B10EL4INS	11-1_LOWER ENGINE COVER
B10EL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B10PL4AAA	11-3_LOWER ENGINE COVER
B10PL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10PL4AAB & AAC	11-3_LOWER ENGINE COVER
B10PL4INS	11-1_LOWER ENGINE COVER
B10PL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B10PX4AAA	11-3_LOWER ENGINE COVER
B10PX4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10PX4AAB & AAC	11-3_LOWER ENGINE COVER
B10PX4INS	11-1_LOWER ENGINE COVER
B10PX4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B10R4AAA	11-3_LOWER ENGINE COVER
B10R4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10R4AAB & AAC	11-3_LOWER ENGINE COVER
B10R4INS	11-1_LOWER ENGINE COVER
B10R4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B10RG4ABA	11-3_LOWER ENGINE COVER
B10RG4ABB	11-3_LOWER ENGINE COVER
B10RG4AFA	11-3_LOWER ENGINE COVER
B10RGL4ABA	11-3_LOWER ENGINE COVER
B10RGL4ABB	11-3_LOWER ENGINE COVER
B10RGL4AFA	11-3_LOWER ENGINE COVER
B10RL4AAA	11-3_LOWER ENGINE COVER
B10RL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10RL4AAB & AAC	11-3_LOWER ENGINE COVER
B10RL4INS	11-1_LOWER ENGINE COVER

B10RL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B10TEL4AAA	11-3_LOWER ENGINE COVER
B10TEL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10TEL4AAB & AAC	11-3_LOWER ENGINE COVER
B10TEL4INS	11-1_LOWER ENGINE COVER
B10TEL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B10TPL4AAA	11-3_LOWER ENGINE COVER
B10TPL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10TPL4AAB & AAC	11-3_LOWER ENGINE COVER
B10TPL4INS	11-1_LOWER ENGINE COVER
B10TPL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B10TPX4AAA	11-3_LOWER ENGINE COVER
B10TPX4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B10TPX4AAB & AAC	11-3_LOWER ENGINE COVER
B10TPX4INS	11-1_LOWER ENGINE COVER
B10TPX4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B15PL4AAA	11-3_LOWER ENGINE COVER
B15PL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B15PL4AAB & AAC	11-3_LOWER ENGINE COVER
B15PL4INS	11-1_LOWER ENGINE COVER
B15PL4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B15R4AAA	11-3_LOWER ENGINE COVER
B15R4AAB & AAC	11-3_LOWER ENGINE COVER
B15R4INS	11-1_LOWER ENGINE COVER
B15R4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B15RG4ABA	11-3_LOWER ENGINE COVER
B15RG4ABB	11-3_LOWER ENGINE COVER
B15RGL4ABA	11-3_LOWER ENGINE COVER
B15RGL4ABB	11-3_LOWER ENGINE COVER
B15RL4AAA	11-3_LOWER ENGINE COVER
B15RL4AAB & AAC	11-3_LOWER ENGINE COVER
B15RL4INS	11-1_LOWER ENGINE COVER
B15RL4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B15TE4AAA	11-3_LOWER ENGINE COVER
B15TE4AAB & AAC	11-3_LOWER ENGINE COVER

B15TE4INS	11-1_LOWER ENGINE COVER
B15TE4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B15TEL4AAA	11-3_LOWER ENGINE COVER
B15TEL4AAB & AAC	11-3_LOWER ENGINE COVER
B15TEL4INS	11-1_LOWER ENGINE COVER
B15TEL4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B4R4AAA	13-3_CARBURETOR & FUEL PUMP
B4R4AAA	13-1_INTEGRAL FUEL TANK
B4R4AAA	11-3_LOWER ENGINE COVER
B4R4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B4R4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
B4R4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B4R4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
B4R4AAB & AAC	13-1_INTEGRAL FUEL TANK
B4R4AAB & AAC	11-3_LOWER ENGINE COVER
B4R4INS	13-3_CARBURETOR & FUEL PUMP
B4R4INS	11-1_LOWER ENGINE COVER
B4R4INS	13-1_INTEGRAL FUEL TANK
B4R4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B4R4INS - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
B4R4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
B4RG4ABA	13-1_INTEGRAL FUEL TANK
B4RG4ABA	11-3_LOWER ENGINE COVER
B4RG4ABA	13-3_CARBURETOR & FUEL PUMP
B4RG4ABB	13-1_INTEGRAL FUEL TANK
B4RG4ABB	11-3_LOWER ENGINE COVER
B4RG4ABB	13-3_CARBURETOR & FUEL PUMP
B4RGL4ABA	13-1_INTEGRAL FUEL TANK
B4RGL4ABA	11-3_LOWER ENGINE COVER
B4RGL4ABA	13-3_CARBURETOR & FUEL PUMP
B4RGL4ABB	13-1_INTEGRAL FUEL TANK
B4RGL4ABB	11-3_LOWER ENGINE COVER
B4RGL4ABB	13-3_CARBURETOR & FUEL PUMP
B4RL4AAA	13-3_CARBURETOR & FUEL PUMP
B4RL4AAA	13-1_INTEGRAL FUEL TANK

B4RL4AAA	11-3_LOWER ENGINE COVER
B4RL4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B4RL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
B4RL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B4RL4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
B4RL4AAB & AAC	13-1_INTEGRAL FUEL TANK
B4RL4AAB & AAC	11-3_LOWER ENGINE COVER
B4RL4INS	13-3_CARBURETOR & FUEL PUMP
B4RL4INS	11-1_LOWER ENGINE COVER
B4RL4INS	13-1_INTEGRAL FUEL TANK
B4RL4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B4RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
B4RL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B6R4AAA	13-3_CARBURETOR & FUEL PUMP
B6R4AAA	11-3_LOWER ENGINE COVER
B6R4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B6R4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B6R4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
B6R4AAB & AAC	11-3_LOWER ENGINE COVER
B6R4INS	13-3_CARBURETOR & FUEL PUMP
B6R4INS	11-1_LOWER ENGINE COVER
B6R4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B6R4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B6RG4ABA	11-3_LOWER ENGINE COVER
B6RG4ABA	13-3_CARBURETOR & FUEL PUMP
B6RG4ABB	11-3_LOWER ENGINE COVER
B6RG4ABB	13-3_CARBURETOR & FUEL PUMP
B6RGL4ABA	11-3_LOWER ENGINE COVER
B6RGL4ABA	13-3_CARBURETOR & FUEL PUMP
B6RGL4ABB	11-3_LOWER ENGINE COVER
B6RGL4ABB	13-3_CARBURETOR & FUEL PUMP
B6RL4AAA	13-3_CARBURETOR & FUEL PUMP
B6RL4AAA	11-3_LOWER ENGINE COVER
B6RL4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B6RL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR

B6RL4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
B6RL4AAB & AAC	11-3_LOWER ENGINE COVER
B6RL4INS	13-3_CARBURETOR & FUEL PUMP
B6RL4INS	11-1_LOWER ENGINE COVER
B6RL4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B6RL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
B6RX4AAA	13-3_CARBURETOR & FUEL PUMP
B6RX4AAA	11-3_LOWER ENGINE COVER
B6RX4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B6RX4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
B6RX4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
B6RX4AAB & AAC	11-3_LOWER ENGINE COVER
B6RX4INS	13-3_CARBURETOR & FUEL PUMP
B6RX4INS	11-1_LOWER ENGINE COVER
B6RX4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
B6RX4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10EL4AAA	11-3_LOWER ENGINE COVER
E10EL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10EL4AAB & AAC	11-3_LOWER ENGINE COVER
E10EL4INS	11-1_LOWER ENGINE COVER
E10EL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10PGL4ABA	11-3_LOWER ENGINE COVER
E10PGL4ABB	11-3_LOWER ENGINE COVER
E10PGL4AFA	11-3_LOWER ENGINE COVER
E10PL4AAA	11-3_LOWER ENGINE COVER
E10PL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10PL4AAB & AAC	11-3_LOWER ENGINE COVER
E10PL4INS	11-1_LOWER ENGINE COVER
E10PL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10PX4AAA	11-3_LOWER ENGINE COVER
E10PX4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10PX4AAB & AAC	11-3_LOWER ENGINE COVER
E10PX4INS	11-1_LOWER ENGINE COVER
E10PX4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10R4AAA	11-3_LOWER ENGINE COVER

E10R4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10R4AAB & AAC	11-3_LOWER ENGINE COVER
E10R4INS	11-1_LOWER ENGINE COVER
E10R4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10RG4ABA	11-3_LOWER ENGINE COVER
E10RG4ABB	11-3_LOWER ENGINE COVER
E10RG4AFA	11-3_LOWER ENGINE COVER
E10RGL4ABB	11-3_LOWER ENGINE COVER
E10RGL4AFA	11-3_LOWER ENGINE COVER
E10RGLABA	11-3_LOWER ENGINE COVER
E10RL4AAA	11-3_LOWER ENGINE COVER
E10RL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10RL4AAB & AAC	11-3_LOWER ENGINE COVER
E10RL4INS	11-1_LOWER ENGINE COVER
E10RL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10TEL4AAA	11-3_LOWER ENGINE COVER
E10TEL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10TEL4AAB & AAC	11-3_LOWER ENGINE COVER
E10TEL4INS	11-1_LOWER ENGINE COVER
E10TEL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10TPL4AAA	11-3_LOWER ENGINE COVER
E10TPL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10TPL4AAB & AAC	11-3_LOWER ENGINE COVER
E10TPL4ABA	11-3_LOWER ENGINE COVER
E10TPL4ABB	11-3_LOWER ENGINE COVER
E10TPL4AFA	11-3_LOWER ENGINE COVER
E10TPL4INS	11-1_LOWER ENGINE COVER
E10TPL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E10TPX4AAA	11-3_LOWER ENGINE COVER
E10TPX4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E10TPX4AAB & AAC	11-3_LOWER ENGINE COVER
E10TPX4INS	11-1_LOWER ENGINE COVER
E10TPX4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E15PGL4ABA	11-3_LOWER ENGINE COVER
E15PGL4ABB	11-3_LOWER ENGINE COVER

E15PL4AAA	11-3_LOWER ENGINE COVER
E15PL4AAB & AAC	11-3_LOWER ENGINE COVER
E15PL4INS	11-1_LOWER ENGINE COVER
E15PL4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
E15R4AAA	11-3_LOWER ENGINE COVER
E15R4AAB & AAC	11-3_LOWER ENGINE COVER
E15R4INS	11-1_LOWER ENGINE COVER
E15R4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
E15RG4ABA	11-3_LOWER ENGINE COVER
E15RG4ABB	11-3_LOWER ENGINE COVER
E15RGL4ABA	11-3_LOWER ENGINE COVER
E15RGL4ABB	11-3_LOWER ENGINE COVER
E15RL4AAA	11-3_LOWER ENGINE COVER
E15RL4AAB & AAC	11-3_LOWER ENGINE COVER
E15RL4INS	11-1_LOWER ENGINE COVER
E15RL4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
E15TE4AAA	11-3_LOWER ENGINE COVER
E15TE4AAB & AAC	11-3_LOWER ENGINE COVER
E15TE4INS	11-1_LOWER ENGINE COVER
E15TE4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
E15TEG4ABA	11-3_LOWER ENGINE COVER
E15TEG4ABB	11-3_LOWER ENGINE COVER
E15TEL4AAA	11-3_LOWER ENGINE COVER
E15TEL4AAB & AAC	11-3_LOWER ENGINE COVER
E15TEL4INS	11-1_LOWER ENGINE COVER
E15TEL4INS - FR	11-3_CAPOT MOTEUR INFÉRIEUR
E4R4AAA	13-3_CARBURETOR & FUEL PUMP
E4R4AAA	13-1_INTEGRAL FUEL TANK
E4R4AAA	11-3_LOWER ENGINE COVER
E4R4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E4R4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
E4R4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E4R4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
E4R4AAB & AAC	13-1_INTEGRAL FUEL TANK
E4R4AAB & AAC	11-3_LOWER ENGINE COVER

E4R4INS	13-3_CARBURETOR & FUEL PUMP
E4R4INS	11-1_LOWER ENGINE COVER
E4R4INS	13-1_INTEGRAL FUEL TANK
E4R4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E4R4INS - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
E4R4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E4RL4AAA	13-3_CARBURETOR & FUEL PUMP
E4RL4AAA	13-1_INTEGRAL FUEL TANK
E4RL4AAA	11-3_LOWER ENGINE COVER
E4RL4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E4RL4AAA, AAB & AAC - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
E4RL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E4RL4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
E4RL4AAB & AAC	13-1_INTEGRAL FUEL TANK
E4RL4AAB & AAC	11-3_LOWER ENGINE COVER
E4RL4INS	13-3_CARBURETOR & FUEL PUMP
E4RL4INS	11-1_LOWER ENGINE COVER
E4RL4INS	13-1_INTEGRAL FUEL TANK
E4RL4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E4RL4INS - FR	13-1_RÉSERVOIR DE CARBURANT INTÉGRÉ
E4RL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E6R4AAA	13-3_CARBURETOR & FUEL PUMP
E6R4AAA	11-3_LOWER ENGINE COVER
E6R4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E6R4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E6R4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
E6R4AAB & AAC	11-3_LOWER ENGINE COVER
E6R4INS	13-3_CARBURETOR & FUEL PUMP
E6R4INS	11-1_LOWER ENGINE COVER
E6R4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E6R4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E6RG4ABA	11-3_LOWER ENGINE COVER
E6RG4ABA	13-3_CARBURETOR & FUEL PUMP
E6RG4ABB	11-3_LOWER ENGINE COVER
E6RG4ABB	13-3_CARBURETOR & FUEL PUMP

E6RGL4ABA	11-3_LOWER ENGINE COVER
E6RGL4ABA	13-3_CARBURETOR & FUEL PUMP
E6RGLABB	11-3_LOWER ENGINE COVER
E6RGLABB	13-3_CARBURETOR & FUEL PUMP
E6RL4AAA	13-3_CARBURETOR & FUEL PUMP
E6RL4AAA	11-3_LOWER ENGINE COVER
E6RL4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E6RL4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E6RL4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
E6RL4AAB & AAC	11-3_LOWER ENGINE COVER
E6RL4INS	13-3_CARBURETOR & FUEL PUMP
E6RL4INS	11-1_LOWER ENGINE COVER
E6RL4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E6RL4INS - FR	11-3_CAPOT MOTEUR INFERIEUR
E6RX4AAA	13-3_CARBURETOR & FUEL PUMP
E6RX4AAA	11-3_LOWER ENGINE COVER
E6RX4AAA, AAB & AAC - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E6RX4AAA, AAB & AAC - FR	11-3_CAPOT MOTEUR INFERIEUR
E6RX4AAB & AAC	13-3_CARBURETOR & FUEL PUMP
E6RX4AAB & AAC	11-3_LOWER ENGINE COVER
E6RX4INS	13-3_CARBURETOR & FUEL PUMP
E6RX4INS	11-1_LOWER ENGINE COVER
E6RX4INS - FR	13-3_CARBURATEUR ET POMPE À CARBURANT
E6RX4INS - FR	11-3_CAPOT MOTEUR INFERIEUR