

Where Used: Part Number 0581670

Model Name	Diagram
D25RWA 1988	MAGNETO
D25RWLA 1988	MAGNETO
E10ECCD 1988	IGNITION
E10ECDB 1986	IGNITION
E10ECOM 1985	IGNITION
E10ECUE 1987	IGNITION
E10ELCCD 1988	IGNITION
E10ELCDB 1986	IGNITION
E10ELCOM 1985	IGNITION
E10ELCRA 1984	MAGNETO
E10ELCTC 1983	MAGNETO
E10ELCUE 1987	IGNITION
E10RCCD 1988	IGNITION
E10RCDB 1986	IGNITION
E10RCOM 1985	IGNITION
E10RCRA 1984	MAGNETO
E10RCTC 1983	MAGNETO
E10RCTR 1983	MAGNETO
E10RCUE 1987	IGNITION
E10RLCCD 1988	IGNITION
E10RLCDB 1986	IGNITION
E10RLCOM 1985	IGNITION
E10RLCRA 1984	MAGNETO
E10RLCTC 1983	MAGNETO
E10RLCUE 1987	IGNITION
E10SELCCD 1988	IGNITION
E10SELCDB 1986	IGNITION
E10SELCOM 1985	IGNITION
E10SELCRA 1984	MAGNETO
E10SELCTC 1983	MAGNETO
E10SELCUE 1987	IGNITION
E15ECCS 1988	IGNITION
E15ECDE 1986	IGNITION

E15ECOB 1985	IGNITION
E15ECRM 1984	MAGNETO
E15ECTR 1983	MAGNETO
E15ECUD 1987	IGNITION
E15ELCCS 1988	IGNITION
E15ELCDE 1986	IGNITION
E15ELCOB 1985	IGNITION
E15ELCRM 1984	MAGNETO
E15ELCTR 1983	MAGNETO
E15ELCUD 1987	IGNITION
E15RCCS 1988	IGNITION
E15RCDE 1986	IGNITION
E15RCOB 1985	IGNITION
E15RCRM 1984	MAGNETO
E15RCTA 1983	MAGNETO
E15RCTR 1983	MAGNETO
E15RCUD 1987	IGNITION
E15RLCCS 1988	IGNITION
E15RLCDE 1986	IGNITION
E15RLCOB 1985	IGNITION
E15RLCRM 1984	MAGNETO
E15RLCTA 1983	MAGNETO
E15RLCTR 1983	MAGNETO
E15RLCUD 1987	IGNITION
E20CRCCA 1988	IGNITION
E20CRCDC 1986	IGNITION
E20CRCOS 1985	IGNITION
E20CRCUR 1987	IGNITION
E20CRLCCA 1988	IGNITION
E20CRLCDC 1986	IGNITION
E20CRLCOS 1985	IGNITION
E20CRLCUR 1987	IGNITION
E20ECCA 1988	IGNITION
E20ECDC 1986	IGNITION
E20ECOS 1985	IGNITION

E20ECUR 1987	IGNITION
E20ELCCA 1988	IGNITION
E20ELCDC 1986	IGNITION
E20ELCOS 1985	IGNITION
E20ELCUR 1987	IGNITION
E20TECDC 1986	IGNITION
E25ECCM 1988	IGNITION
E25ECDR 1986	IGNITION
E25ECOC 1985	IGNITION
E25ECRS 1984	IGNITION
E25ECTD 1983	MAGNETO
E25ECUA 1987	IGNITION
E25ELCCM 1988	IGNITION
E25ELCDR 1986	IGNITION
E25ELCOC 1985	IGNITION
E25ELCRS 1984	IGNITION
E25ELCTD 1983	MAGNETO
E25ELCUA 1987	IGNITION
E25RCCA 1988	IGNITION
E25RCDC 1986	IGNITION
E25RCOS 1985	IGNITION
E25RCRD 1984	IGNITION
E25RCTE 1983	MAGNETO
E25RCUR 1987	IGNITION
E25RLCCA 1988	IGNITION
E25RLCDC 1986	IGNITION
E25RLCOS 1985	IGNITION
E25RLCRD 1984	IGNITION
E25RLCTE 1983	MAGNETO
E25RLCUR 1987	IGNITION
E25RSLs 1983	MAGNETO
E25RSS 1983	MAGNETO
E25RWDC 1986	MAGNETO
E25RWCOS 1985	MAGNETO
E25RWCRD 1984	MAGNETO

E25RWCTE 1983	MAGNETO
E25RWCUR 1987	MAGNETO
E25RWLDC 1986	MAGNETO
E25RWLCOS 1985	MAGNETO
E25RWLCRD 1984	MAGNETO
E25RWLCTE 1983	MAGNETO
E25RWLCUR 1987	MAGNETO
E25TECCA 1988	IGNITION
E25TECDC 1986	IGNITION
E25TECOS 1985	IGNITION
E25TECRD 1984	IGNITION
E25TECTE 1983	MAGNETO
E25TECUR 1987	IGNITION
E25TELCCA 1988	IGNITION
E25TELCDC 1986	IGNITION
E25TELCOS 1985	IGNITION
E25TELCRD 1984	IGNITION
E25TELCCTE 1983	MAGNETO
E25TELCUR 1987	IGNITION
E28ELCDS 1986	MAGNETO
E28ESLCCR 1988	IGNITION
E28ESLCUC 1987	MAGNETO
E30ECCE 1988	IGNITION
E30ECDM 1986	IGNITION
E30EOA 1985	IGNITION
E30ECRR 1984	IGNITION
E30ECUB 1987	IGNITION
E30ELCCE 1988	IGNITION
E30ELCDM 1986	IGNITION
E30ELCOA 1985	IGNITION
E30ELCRR 1984	IGNITION
E30ELCUB 1987	IGNITION
E30RCCE 1988	IGNITION
E30RCDM 1986	IGNITION
E30ROA 1985	IGNITION

E30RCUB 1987	IGNITION
E30RLCCE 1988	IGNITION
E30RLCDM 1986	IGNITION
E30RLCOA 1985	IGNITION
E30RLCUB 1987	IGNITION
E30TECCE 1988	IGNITION
E30TECDM 1986	IGNITION
E30TECOA 1985	IGNITION
E30TECUB 1987	IGNITION
E30TELCCE 1988	IGNITION
E30TELCDM 1986	IGNITION
E30TELCOA 1985	IGNITION
E30TELCUB 1987	IGNITION
E35AELCDE 1986	IGNITION SYSTEM
E35AELCUD 1987	IGNITION SYSTEM
E35ARLCDE 1986	IGNITION SYSTEM
E35ARLCUD 1987	IGNITION SYSTEM
E35ECRR 1984	IGNITION
E35ECTS 1983	MAGNETO
E35ELCRR 1984	IGNITION
E35ELCTS 1983	MAGNETO
E35RCCE 1988	IGNITION
E35RCDM 1986	IGNITION
E35RCRR 1984	IGNITION
E35RCTS 1983	MAGNETO
E35RCUB 1987	IGNITION
E35RLCCE 1988	IGNITION
E35RLCDM 1986	IGNITION
E35RLCRR 1984	IGNITION
E35RLCTS 1983	MAGNETO
E35RLCUB 1987	IGNITION
E35TELCRR 1984	IGNITION
E35TELCTS 1983	MAGNETO
E40AELCCS 1988	IGNITION SYSTEM
E40ARLCCS 1988	IGNITION SYSTEM

E40ATLCCS 1988	IGNITION SYSTEM
E40ECCS 1988	IGNITION SYSTEM
E40ECDE 1986	IGNITION SYSTEM
E40ECOB 1985	IGNITION SYSTEM
E40ECRM 1984	IGNITION SYSTEM
E40ECUD 1987	IGNITION SYSTEM
E40ELCCS 1988	IGNITION SYSTEM
E40ELCDE 1986	IGNITION SYSTEM
E40ELCOB 1985	IGNITION SYSTEM
E40ELCRM 1984	IGNITION SYSTEM
E40ELCUD 1987	IGNITION SYSTEM
E40RCCS 1988	IGNITION SYSTEM
E40RCDE 1986	IGNITION SYSTEM
E40RCOB 1985	IGNITION SYSTEM
E40RCRM 1984	IGNITION SYSTEM
E40RCUD 1987	IGNITION SYSTEM
E40RLCCS 1988	IGNITION SYSTEM
E40RLCDE 1986	IGNITION SYSTEM
E40RLCOB 1985	IGNITION SYSTEM
E40RLCRM 1984	IGNITION SYSTEM
E40RLCUD 1987	IGNITION SYSTEM
E40RWADB 1986	IGNITION
E40RWCOM 1985	IGNITION
E40RWCRA 1984	IGNITION
E40RWLCDB 1986	IGNITION
E40RWLCOM 1985	IGNITION
E40RWLCRA 1984	IGNITION
E40TECCS 1988	IGNITION SYSTEM
E40TECDE 1986	IGNITION SYSTEM
E40TECOB 1985	IGNITION SYSTEM
E40TECRM 1984	IGNITION SYSTEM
E40TECUD 1987	IGNITION SYSTEM
E40TELCCS 1988	IGNITION SYSTEM
E40TELCDE 1986	IGNITION SYSTEM
E40TELCOB 1985	IGNITION SYSTEM

E40TELCRM 1984	IGNITION SYSTEM
E40TLCCS 1988	IGNITION SYSTEM
E40TLCDE 1986	IGNITION SYSTEM
E40TLCUD 1987	IGNITION SYSTEM
E40TTLCCS 1988	IGNITION SYSTEM
E45RCCUC 1987	IGNITION SYSTEM
E45RCLCUC 1987	IGNITION SYSTEM
E48ESLCCC 1988	IGNITION SYSTEM
E48ESLCUS 1987	IGNITION SYSTEM
E4RDHCCS 1988	MAGNETO
E4RDHCDE 1986	MAGNETO
E4RDHCUD 1987	MAGNETO
E4RDHLCCS 1988	MAGNETO
E4RDHLHUD 1987	MAGNETO
E50BECCS 1988	IGNITION SYSTEM
E50BECDE 1986	IGNITION SYSTEM
E50BECOB 1985	IGNITION SYSTEM
E50BECRM 1984	IGNITION SYSTEM
E50BECUD 1987	IGNITION SYSTEM
E50BELCCS 1988	IGNITION SYSTEM
E50BELCDE 1986	IGNITION SYSTEM
E50BELCOB 1985	IGNITION SYSTEM
E50BELCRM 1984	IGNITION SYSTEM
E50BELHUD 1987	IGNITION SYSTEM
E50TELCCS 1988	IGNITION SYSTEM
E50TELCDE 1986	IGNITION SYSTEM
E50TELCOB 1985	IGNITION SYSTEM
E50TELCRM 1984	IGNITION SYSTEM
E50TELCUD 1987	IGNITION SYSTEM
E50TLCCS 1988	IGNITION SYSTEM
E50TLCDE 1986	IGNITION SYSTEM
E50TLCOB 1985	IGNITION SYSTEM
E50TLCRM 1984	IGNITION SYSTEM
E50TLCUD 1987	IGNITION SYSTEM
E55RWLCUC 1987	IGNITION SYSTEM

E5RHCTA 1983	MAGNETO-4.5
E5RHCTA 1983	MAGNETO-7.5
E5RHLCTA 1983	MAGNETO-4.5
E5RHLCTA 1983	MAGNETO-7.5
E60ELCOD 1985	IGNITION SYSTEM
E60ELCRE 1984	IGNITION SYSTEM
E60TLCOD 1985	IGNITION SYSTEM
E60TLCRE 1984	IGNITION SYSTEM
E6RCCS 1988	IGNITION
E6RCDE 1986	MAGNETO
E6RCOB 1985	MAGNETO
E6RCRM 1984	MAGNETO - 6/8
E6RCUD 1987	IGNITION
E6RLCCS 1988	IGNITION
E6RLCDE 1986	MAGNETO
E6RLCOB 1985	MAGNETO
E6RLCRM 1984	MAGNETO - 6/8
E6RLCUD 1987	IGNITION
E6SLCCS 1988	IGNITION
E6SLCDE 1986	MAGNETO
E6SLCOB 1985	MAGNETO
E6SLCRM 1984	MAGNETO - 6/8
E6SLCUD 1987	IGNITION
E8RCCS 1988	IGNITION
E8RCDE 1986	MAGNETO
E8RCOB 1985	MAGNETO
E8RCRM 1984	MAGNETO - 6/8
E8RCTA 1983	MAGNETO-4.5
E8RCTA 1983	MAGNETO-7.5
E8RCUD 1987	IGNITION
E8RLCCS 1988	IGNITION
E8RLCDE 1986	MAGNETO
E8RLCOB 1985	MAGNETO
E8RLCRM 1984	MAGNETO - 6/8
E8RLCTA 1983	MAGNETO-4.5

E8RLCTA 1983	MAGNETO-7.5
E8RLCUD 1987	IGNITION
E8SRLCCS 1988	IGNITION
E8SRLCDE 1986	MAGNETO
E8SRLCOB 1985	MAGNETO
E8SRLCRM 1984	MAGNETO - 6/8
E8SRLCTA 1983	MAGNETO-4.5
E8SRLCTA 1983	MAGNETO-7.5
E8SRLCUD 1987	IGNITION
ELECTRICAL 1983	ELECTRIC START KIT 55
ELECTRICAL 1984	ELECTRIC STARTING KIT 40, 55
J10ECCD 1988	IGNITION
J10ECDB 1986	IGNITION
J10ECOM 1985	IGNITION
J10ECUE 1987	IGNITION
J10ELCCD 1988	IGNITION
J10ELCDB 1986	IGNITION
J10ELCOM 1985	IGNITION
J10ELCRA 1984	MAGNETO
J10ELCTC 1983	MAGNETO
J10ELCUE 1987	IGNITION
J10RCCD 1988	IGNITION
J10RCDB 1986	IGNITION
J10RCOM 1985	IGNITION
J10RCRA 1984	MAGNETO
J10RCTC 1983	MAGNETO
J10RCTR 1983	MAGNETO
J10RCUE 1987	IGNITION
J10RLCCD 1988	IGNITION
J10RLCDB 1986	IGNITION
J10RLCOM 1985	IGNITION
J10RLCRA 1984	MAGNETO
J10RLCTC 1983	MAGNETO
J10RLCTR 1983	MAGNETO
J10RLCUE 1987	IGNITION

J10SELCCD 1988	IGNITION
J10SELCDB 1986	IGNITION
J10SELCOM 1985	IGNITION
J10SELCRA 1984	MAGNETO
J10SELCTC 1983	MAGNETO
J10SELCUE 1987	IGNITION
J15ECCS 1988	IGNITION
J15ECDE 1986	IGNITION
J15ECOB 1985	IGNITION
J15ECRM 1984	MAGNETO
J15ECTR 1983	MAGNETO
J15ECUD 1987	IGNITION
J15ELCCS 1988	IGNITION
J15ELCDE 1986	IGNITION
J15ELCOB 1985	IGNITION
J15ELCRM 1984	MAGNETO
J15ELCTR 1983	MAGNETO
J15ELCUD 1987	IGNITION
J15RCCS 1988	IGNITION
J15RCDE 1986	IGNITION
J15RCOB 1985	IGNITION
J15RCRM 1984	MAGNETO
J15RCTA 1983	MAGNETO
J15RCTR 1983	MAGNETO
J15RCUD 1987	IGNITION
J15RLCCS 1988	IGNITION
J15RLCDE 1986	IGNITION
J15RLCOB 1985	IGNITION
J15RLCRM 1984	MAGNETO
J15RLCTA 1983	MAGNETO
J15RLCTR 1983	MAGNETO
J15RLCUD 1987	IGNITION
J20CRCCA 1988	IGNITION
J20CRCDC 1986	IGNITION
J20CRCOS 1985	IGNITION

J20CRCUR 1987	IGNITION
J20CRLCCA 1988	IGNITION
J20CRLCDC 1986	IGNITION
J20CRLCOS 1985	IGNITION
J20CRLCUR 1987	IGNITION
J20ECCA 1988	IGNITION
J20ECDC 1986	IGNITION
J20ECOS 1985	IGNITION
J20ECUR 1987	IGNITION
J20ELCCA 1988	IGNITION
J20ELCDC 1986	IGNITION
J20ELCOS 1985	IGNITION
J20ELCUR 1987	IGNITION
J20TECDC 1986	IGNITION
J25ECCM 1988	IGNITION
J25ECDR 1986	IGNITION
J25ECOC 1985	IGNITION
J25ECRS 1984	IGNITION
J25ECTD 1983	MAGNETO
J25ECUA 1987	IGNITION
J25ELCCM 1988	IGNITION
J25ELCDR 1986	IGNITION
J25ELCOC 1985	IGNITION
J25ELCRS 1984	IGNITION
J25ELCTD 1983	MAGNETO
J25ELCUA 1987	IGNITION
J25RCCA 1988	IGNITION
J25RCDC 1986	IGNITION
J25RCOS 1985	IGNITION
J25RCRD 1984	IGNITION
J25RCTE 1983	MAGNETO
J25RCUR 1987	IGNITION
J25RLCCA 1988	IGNITION
J25RLCDC 1986	IGNITION
J25RLCOS 1985	IGNITION

J25RLCRD 1984	IGNITION
J25RLCTE 1983	MAGNETO
J25RLCUR 1987	IGNITION
J25RSLS 1983	MAGNETO
J25RSS 1983	MAGNETO
J25RWDC 1986	MAGNETO
J25RWCOS 1985	MAGNETO
J25RWCRD 1984	MAGNETO
J25RWCTE 1983	MAGNETO
J25RWCUR 1987	MAGNETO
J25RWLDC 1986	MAGNETO
J25RWLCOS 1985	MAGNETO
J25RWLCRD 1984	MAGNETO
J25RWLCTE 1983	MAGNETO
J25RWLCUR 1987	MAGNETO
J25TECCA 1988	IGNITION
J25TECDC 1986	IGNITION
J25TECOS 1985	IGNITION
J25TECRD 1984	IGNITION
J25TECTE 1983	MAGNETO
J25TECUR 1987	IGNITION
J25TELCCA 1988	IGNITION
J25TELCDC 1986	IGNITION
J25TELCOS 1985	IGNITION
J25TELCRD 1984	IGNITION
J25TELCTE 1983	MAGNETO
J25TELCUR 1987	IGNITION
J28ELCDS 1986	MAGNETO
J28ESLCCR 1988	IGNITION
J28ESLCUC 1987	MAGNETO
J30ECCE 1988	IGNITION
J30ECDM 1986	IGNITION
J30EOA 1985	IGNITION
J30ECRR 1984	IGNITION
J30ECUB 1987	IGNITION

J30ELCCE 1988	IGNITION
J30ELCDM 1986	IGNITION
J30ELCOA 1985	IGNITION
J30ELCRR 1984	IGNITION
J30ELCUB 1987	IGNITION
J30RCCE 1988	IGNITION
J30RCDM 1986	IGNITION
J30RCOA 1985	IGNITION
J30RCUB 1987	IGNITION
J30RLCCE 1988	IGNITION
J30RLCDM 1986	IGNITION
J30RLCOA 1985	IGNITION
J30RLCUB 1987	IGNITION
J30TECCE 1988	IGNITION
J30TECDM 1986	IGNITION
J30TECOA 1985	IGNITION
J30TECUB 1987	IGNITION
J30TELCCE 1988	IGNITION
J30TELCDM 1986	IGNITION
J30TELCOA 1985	IGNITION
J30TELCUB 1987	IGNITION
J35AELCDE 1986	IGNITION SYSTEM
J35AELCUD 1987	IGNITION SYSTEM
J35ARLCDE 1986	IGNITION SYSTEM
J35ARLCUD 1987	IGNITION SYSTEM
J35ECRR 1984	IGNITION
J35ECTS 1983	MAGNETO
J35ELCRR 1984	IGNITION
J35ELCTS 1983	MAGNETO
J35RCCE 1988	IGNITION
J35RCDM 1986	IGNITION
J35RCRR 1984	IGNITION
J35RCTS 1983	MAGNETO
J35RCUB 1987	IGNITION
J35RLCCE 1988	IGNITION

J35RLCDM 1986	IGNITION
J35RLCRR 1984	IGNITION
J35RLCTS 1983	MAGNETO
J35RLCUB 1987	IGNITION
J35TELCRR 1984	IGNITION
J35TELCTS 1983	MAGNETO
J40AELCCS 1988	IGNITION SYSTEM
J40ARLCCS 1988	IGNITION SYSTEM
J40ATLCCS 1988	IGNITION SYSTEM
J40ECCS 1988	IGNITION SYSTEM
J40ECDE 1986	IGNITION SYSTEM
J40ECOB 1985	IGNITION SYSTEM
J40ECRM 1984	IGNITION SYSTEM
J40ECUD 1987	IGNITION SYSTEM
J40ELCCS 1988	IGNITION SYSTEM
J40ELCDE 1986	IGNITION SYSTEM
J40ELCOB 1985	IGNITION SYSTEM
J40ELCRM 1984	IGNITION SYSTEM
J40ELCUD 1987	IGNITION SYSTEM
J40RCCS 1988	IGNITION SYSTEM
J40RCDE 1986	IGNITION SYSTEM
J40RCOB 1985	IGNITION SYSTEM
J40RCRM 1984	IGNITION SYSTEM
J40RCUD 1987	IGNITION SYSTEM
J40RLCCS 1988	IGNITION SYSTEM
J40RLCDE 1986	IGNITION SYSTEM
J40RLCOB 1985	IGNITION SYSTEM
J40RLCRM 1984	IGNITION SYSTEM
J40RLCUD 1987	IGNITION SYSTEM
J40RWCDB 1986	IGNITION
J40RWCOM 1985	IGNITION
J40RWCRA 1984	IGNITION
J40RWLCDB 1986	IGNITION
J40RWLCOM 1985	IGNITION
J40RWLCRA 1984	IGNITION

J40TECCS 1988	IGNITION SYSTEM
J40TECDE 1986	IGNITION SYSTEM
J40TECOB 1985	IGNITION SYSTEM
J40TECRM 1984	IGNITION SYSTEM
J40TECUD 1987	IGNITION SYSTEM
J40TELCCS 1988	IGNITION SYSTEM
J40TELCDE 1986	IGNITION SYSTEM
J40TELCOB 1985	IGNITION SYSTEM
J40TELCRM 1984	IGNITION SYSTEM
J40TLCCS 1988	IGNITION SYSTEM
J40TLCDE 1986	IGNITION SYSTEM
J40TLCUD 1987	IGNITION SYSTEM
J40TTLCCS 1988	IGNITION SYSTEM
J45RCCUC 1987	IGNITION SYSTEM
J45RCLCUC 1987	IGNITION SYSTEM
J48ESLCCC 1988	IGNITION SYSTEM
J48ESLCUS 1987	IGNITION SYSTEM
J4RDHCCS 1988	MAGNETO
J4RDHCDE 1986	MAGNETO
J4RDHCUD 1987	MAGNETO
J4RDHLCCS 1988	MAGNETO
J4RDHLCUD 1987	MAGNETO
J50BECCS 1988	IGNITION SYSTEM
J50BECDE 1986	IGNITION SYSTEM
J50BECOB 1985	IGNITION SYSTEM
J50BECRM 1984	IGNITION SYSTEM
J50BECUD 1987	IGNITION SYSTEM
J50BELCCS 1988	IGNITION SYSTEM
J50BELCDE 1986	IGNITION SYSTEM
J50BELCOB 1985	IGNITION SYSTEM
J50BELCRM 1984	IGNITION SYSTEM
J50BELCUD 1987	IGNITION SYSTEM
J50TELCCS 1988	IGNITION SYSTEM
J50TELCDE 1986	IGNITION SYSTEM
J50TELCOB 1985	IGNITION SYSTEM

J50TELCRM 1984	IGNITION SYSTEM
J50TELCUD 1987	IGNITION SYSTEM
J50TLCCS 1988	IGNITION SYSTEM
J50TLCDE 1986	IGNITION SYSTEM
J50TLCOB 1985	IGNITION SYSTEM
J50TLCRM 1984	IGNITION SYSTEM
J50TLCUD 1987	IGNITION SYSTEM
J55RWLCUC 1987	IGNITION SYSTEM
J5RHCTA 1983	MAGNETO-4.5
J5RHCTA 1983	MAGNETO-7.5
J5RHLCTA 1983	MAGNETO-4.5
J5RHLCTA 1983	MAGNETO-7.5
J60ELCOD 1985	IGNITION SYSTEM
J60ELCRE 1984	IGNITION SYSTEM
J60TLCOD 1985	IGNITION SYSTEM
J60TLCRE 1984	IGNITION SYSTEM
J6RCCS 1988	IGNITION
J6RCDE 1986	MAGNETO
J6RCOB 1985	MAGNETO
J6RCRM 1984	MAGNETO - 6/8
J6RCUD 1987	IGNITION
J6RLCCS 1988	IGNITION
J6RLCDE 1986	MAGNETO
J6RLCOB 1985	MAGNETO
J6RLCRM 1984	MAGNETO - 6/8
J6RLCUD 1987	IGNITION
J6SLCCS 1988	IGNITION
J6SLCDE 1986	MAGNETO
J6SLCOB 1985	MAGNETO
J6SLCRM 1984	MAGNETO - 6/8
J6SLCUD 1987	IGNITION
J8RCCS 1988	IGNITION
J8RCDE 1986	MAGNETO
J8RCOB 1985	MAGNETO
J8RCRM 1984	MAGNETO - 6/8

J8RCTA 1983	MAGNETO-4.5
J8RCTA 1983	MAGNETO-7.5
J8RCUD 1987	IGNITION
J8RLCCS 1988	IGNITION
J8RLCDE 1986	MAGNETO
J8RLCOB 1985	MAGNETO
J8RLCRM 1984	MAGNETO - 6/8
J8RLCTA 1983	MAGNETO-4.5
J8RLCTA 1983	MAGNETO-7.5
J8RLCUD 1987	IGNITION
J8SRLCCS 1988	IGNITION
J8SRLCDE 1986	MAGNETO
J8SRLCOB 1985	MAGNETO
J8SRLCRM 1984	MAGNETO - 6/8
J8SRLCTA 1983	MAGNETO-4.5
J8SRLCTA 1983	MAGNETO-7.5
J8SRLCUD 1987	IGNITION
M55RWLR 1988	IGNITION SYSTEM
R45RCLR 1988	IGNITION SYSTEM
R45RCR 1988	IGNITION SYSTEM
R55RWLR 1988	IGNITION SYSTEM
S45RCLR 1988	IGNITION SYSTEM
S45RCR 1988	IGNITION SYSTEM
U25RWA 1988	MAGNETO
U25RWLA 1988	MAGNETO
VE14RCCS 1988	MAGNETO
VE28ESLCCR 1988	IGNITION
VE48ESLCCC 1988	IGNITION SYSTEM
VJ14RCCS 1988	MAGNETO
VJ28ESLCCR 1988	IGNITION
VJ48ESLCCC 1988	IGNITION SYSTEM