

Where Used: Part Number 0582417

Model Name	Diagram
AM55RSLD 1999	IGNITION SYSTEM
BE10EEDD 1996	IGNITION - ROPE
BE10ELEDD 1996	IGNITION - ROPE
BE10REDD 1996	IGNITION - ROPE
BE10RELEDD 1996	IGNITION - ROPE
BE10RELEUS 1997	IGNITION - ROPE
BE10RLEDD 1996	IGNITION - ROPE
BE10SELEDD 1996	IGNITION - ROPE
BE15EEDS 1996	IGNITION - ROPE
BE15ELEDS 1996	IGNITION - ROPE
BE15REDS 1996	IGNITION - ROPE
BE15RELEUC 1997	IGNITION - ROPE
BE15RLEDS 1996	IGNITION - ROPE
BE40EECR 1998	IGNITION SYSTEM -- ROPE START
BE40EEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE40EEUC 1997	IGNITION SYSTEM - ROPE START
BE40ELECR 1998	IGNITION SYSTEM -- ROPE START
BE40ELEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE40ELEUC 1997	IGNITION SYSTEM - ROPE START
BE40TLECR 1998	IGNITION SYSTEM -- ROPE START
BE40TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE40TLEUC 1997	IGNITION SYSTEM - ROPE START
BE4RDHEDS 1996	MAGNETO
BE4RDHLEDS 1996	MAGNETO
BE50BEEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE50BELEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE50ESECC 1998	IGNITION SYSTEM -- ROPE START
BE50RLECR 1998	IGNITION SYSTEM -- ROPE START
BE50RLEUC 1997	IGNITION SYSTEM - ROPE START
BE50TLECR 1998	IGNITION SYSTEM -- ROPE START
BE50TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
BE50TLEUC 1997	IGNITION SYSTEM - ROPE START
BE50TSLECC 1998	IGNITION SYSTEM -- ROPE START

BE50TSLEUS 1997	IGNITION SYSTEM - ROPE START
BE5DREDS 1996	IGNITION
BE5DREUC 1997	IGNITION
BE5DRLEDS 1996	IGNITION
BE5DRLEUC 1997	IGNITION
BE6DRECR 1998	IGNITION
BE6DREDS 1996	IGNITION
BE6DREUC 1997	IGNITION
BE6DRLECR 1998	IGNITION
BE6DRLEDS 1996	IGNITION
BE6DRLEUC 1997	IGNITION
BE6REDS 1996	IGNITION
BE6RLEDS 1996	IGNITION
BE8RCB 1997	IGNITION
BE8RCH 1996	IGNITION
BE8RCLB 1997	IGNITION
BE8RCLH 1996	IGNITION
BE8RCLT 1998	IGNITION
BE8RCT 1998	IGNITION
BE8REDS 1996	IGNITION
BE8RLEDS 1996	IGNITION
BE8SRLEDS 1996	IGNITION
BJ10EEDD 1996	IGNITION - ROPE
BJ10ELEDD 1996	IGNITION - ROPE
BJ10REDD 1996	IGNITION - ROPE
BJ10RELEDD 1996	IGNITION - ROPE
BJ10RELEUS 1997	IGNITION - ROPE
BJ10RHLSDA	IGNITION
BJ10RHLSDA - FR	22-5_SYSTÈME D'ALLUMAGE
BJ10RHLSOR	IGNITION
BJ10RHLSOR - FR	22-5_SYSTÈME D'ALLUMAGE
BJ10RHLSRC	IGNITION
BJ10RHLSRC - FR	22-5_SYSTÈME D'ALLUMAGE
BJ10RHLSTS	IGNITION
BJ10RHLSTS - FR	22-5_SYSTÈME D'ALLUMAGE

BJ10RHSDA	IGNITION
BJ10RHSDA - FR	22-5_SYSTÈME D'ALLUMAGE
BJ10RHSOR	IGNITION
BJ10RHSOR - FR	22-5_SYSTÈME D'ALLUMAGE
BJ10RHSRC	IGNITION
BJ10RHSRC - FR	22-5_SYSTÈME D'ALLUMAGE
BJ10RHSTS	IGNITION
BJ10RHSTS - FR	22-5_SYSTÈME D'ALLUMAGE
BJ10RLEDD 1996	IGNITION - ROPE
BJ10SELEDD 1996	IGNITION - ROPE
BJ15EEDS 1996	IGNITION - ROPE
BJ15ELEDS 1996	IGNITION - ROPE
BJ15REDS 1996	IGNITION - ROPE
BJ15RELEUC 1997	IGNITION - ROPE
BJ15RLEDS 1996	IGNITION - ROPE
BJ40EECR 1998	IGNITION SYSTEM -- ROPE START
BJ40EEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ40EEEAA 1999	IGNITION SYSTEM -- ROPE START
BJ40EEUC 1997	IGNITION SYSTEM - ROPE START
BJ40ELECR 1998	IGNITION SYSTEM -- ROPE START
BJ40ELEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ40ELEEA 1999	IGNITION SYSTEM -- ROPE START
BJ40ELEUC 1997	IGNITION SYSTEM - ROPE START
BJ40ELSIF elec start, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ40ELSSM Elec. Start, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ40ESIF elec start, 15 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ40ESSM Elec. Start, 15 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ40PLEEA 1999	IGNITION SYSTEM -- ROPE START
BJ40PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ40PLSSM Elec. Start, TNT, 15 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ40TLECR 1998	IGNITION SYSTEM -- ROPE START
BJ40TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ40TLEUC 1997	IGNITION SYSTEM - ROPE START
BJ4RDHEDS 1996	MAGNETO
BJ4RDHLEDS 1996	MAGNETO

BJ50BEEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ50BELEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ50EEER 1999	IGNITION SYSTEM -- ROPE START
BJ50ELEER 1999	IGNITION SYSTEM -- ROPE START
BJ50ELSIF elec start, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50ELSSA Elec. Start, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50ESECC 1998	IGNITION SYSTEM -- ROPE START
BJ50ESIF elec start, 15 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50ESSA Elec Start, 15 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50PLEEA 1999	IGNITION SYSTEM -- ROPE START
BJ50PLSIF elec start, TNT, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50RLECR 1998	IGNITION SYSTEM -- ROPE START
BJ50RLEEA 1999	IGNITION SYSTEM -- ROPE START
BJ50RLEUC 1997	IGNITION SYSTEM - ROPE START
BJ50RLSIF elec start, 20 in shaft, n/a usa 2001	IGNITION SYSTEM - ROPE START
BJ50RLSSM Rope Start, 20 IN. shaft, N/A USA 2000	IGNITION SYSTEM - ROPE START
BJ50TLECR 1998	IGNITION SYSTEM -- ROPE START
BJ50TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
BJ50TLEUC 1997	IGNITION SYSTEM - ROPE START
BJ50TSLECC 1998	IGNITION SYSTEM -- ROPE START
BJ50TSLEUS 1997	IGNITION SYSTEM - ROPE START
BJ5DREDS 1996	IGNITION
BJ5DREUC 1997	IGNITION
BJ5DRLEDS 1996	IGNITION
BJ5DRLEUC 1997	IGNITION
BJ6DRECR 1998	IGNITION
BJ6DREDS 1996	IGNITION
BJ6DREUC 1997	IGNITION
BJ6DRLECR 1998	IGNITION
BJ6DRLEDS 1996	IGNITION
BJ6DRLEUC 1997	IGNITION
BJ6REDS 1996	IGNITION
BJ6RLEDS 1996	IGNITION

BJ8RCB 1997	IGNITION
BJ8RCH 1996	IGNITION
BJ8RCLB 1997	IGNITION
BJ8RCLH 1996	IGNITION
BJ8RCLT 1998	IGNITION
BJ8RCT 1998	IGNITION
BJ8REDS 1996	IGNITION
BJ8RLEDS 1996	IGNITION
BJ8SRLEDS 1996	IGNITION
D25RWA 1988	MAGNETO
D25RWLA 1988	MAGNETO
E10ECCD 1988	IGNITION
E10ECDB 1986	IGNITION
E10ECOM 1985	IGNITION
E10ECUE 1987	IGNITION
E10EECC 1998	IGNITION -- ROPE
E10EEDD 1996	IGNITION - ROPE
E10EEOE 1995	IGNITION - ROPE
E10EERB 1994	IGNITION - ROPE
E10EETM 1993	IGNITION - ROPE
E10EEUS 1997	IGNITION - ROPE
E10ELCCD 1988	IGNITION
E10ELCDB 1986	IGNITION
E10ELCOM 1985	IGNITION
E10ELCRA 1984	MAGNETO
E10ELCTC 1983	MAGNETO
E10ELCUE 1987	IGNITION
E10ELECC 1998	IGNITION -- ROPE
E10ELEDD 1996	IGNITION - ROPE
E10ELEOE 1995	IGNITION - ROPE
E10ELERB 1994	IGNITION - ROPE
E10ELETM 1993	IGNITION - ROPE
E10ELEUS 1997	IGNITION - ROPE
E10RCCD 1988	IGNITION
E10RCDB 1986	IGNITION

E10RCOM 1985	IGNITION
E10RCRA 1984	MAGNETO
E10RCTC 1983	MAGNETO
E10RCTR 1983	MAGNETO
E10RCUE 1987	IGNITION
E10RECC 1998	IGNITION -- ROPE
E10REDD 1996	IGNITION - ROPE
E10RELECC 1998	IGNITION -- ROPE
E10RELEDD 1996	IGNITION - ROPE
E10RELEOE 1995	IGNITION - ROPE
E10RELEROB 1994	IGNITION - ROPE
E10RELETM 1993	IGNITION - ROPE
E10RELEUS 1997	IGNITION - ROPE
E10REOE 1995	IGNITION - ROPE
E10RERB 1994	IGNITION - ROPE
E10RETM 1993	IGNITION - ROPE
E10REUS 1997	IGNITION - ROPE
E10RLCCD 1988	IGNITION
E10RLCDB 1986	IGNITION
E10RLCOM 1985	IGNITION
E10RLCRA 1984	MAGNETO
E10RLCTC 1983	MAGNETO
E10RLCUE 1987	IGNITION
E10RLECC 1998	IGNITION -- ROPE
E10RLEDD 1996	IGNITION - ROPE
E10RLEOE 1995	IGNITION - ROPE
E10RLEROB 1994	IGNITION - ROPE
E10RELETM 1993	IGNITION - ROPE
E10RLEUS 1997	IGNITION - ROPE
E10SELCCD 1988	IGNITION
E10SELCDB 1986	IGNITION
E10SELCOM 1985	IGNITION
E10SELCRA 1984	MAGNETO
E10SELCTC 1983	MAGNETO
E10SELCUE 1987	IGNITION

E10SELECC 1998	IGNITION -- ROPE
E10SELEDD 1996	IGNITION - ROPE
E10SELEOE 1995	IGNITION - ROPE
E10SELERB 1994	IGNITION - ROPE
E10SELETM 1993	IGNITION - ROPE
E10SELEUS 1997	IGNITION - ROPE
E15ECCS 1988	IGNITION
E15ECDE 1986	IGNITION
E15ECOB 1985	IGNITION
E15ECRM 1984	MAGNETO
E15ECTR 1983	MAGNETO
E15ECUD 1987	IGNITION
E15EECR 1998	IGNITION -- ROPE
E15EEDS 1996	IGNITION - ROPE
E15EEOD 1995	IGNITION - ROPE
E15EEERE 1994	IGNITION - ROPE
E15EETB 1993	IGNITION - ROPE
E15EEUC 1997	IGNITION - ROPE
E15ELCCS 1988	IGNITION
E15ELCDE 1986	IGNITION
E15ELCOB 1985	IGNITION
E15ELCRM 1984	MAGNETO
E15ELCTR 1983	MAGNETO
E15ELCUD 1987	IGNITION
E15ELECR 1998	IGNITION -- ROPE
E15ELEDS 1996	IGNITION - ROPE
E15ELEOD 1995	IGNITION - ROPE
E15ELERE 1994	IGNITION - ROPE
E15ELETB 1993	IGNITION - ROPE
E15ELEUC 1997	IGNITION - ROPE
E15RCCS 1988	IGNITION
E15RCDE 1986	IGNITION
E15RCOB 1985	IGNITION
E15RCRM 1984	MAGNETO
E15RCTA 1983	MAGNETO

E15RCTR 1983	MAGNETO
E15RCUD 1987	IGNITION
E15RECR 1998	IGNITION -- ROPE
E15REDS 1996	IGNITION - ROPE
E15RELECR 1998	IGNITION -- ROPE
E15RELEDS 1996	IGNITION - ROPE
E15RELEOD 1995	IGNITION - ROPE
E15RELERE 1994	IGNITION - ROPE
E15RELETB 1993	IGNITION - ROPE
E15RELEUC 1997	IGNITION - ROPE
E15REOD 1995	IGNITION - ROPE
E15RERE 1994	IGNITION - ROPE
E15RETB 1993	IGNITION - ROPE
E15REUC 1997	IGNITION - ROPE
E15RLCCS 1988	IGNITION
E15RLCDE 1986	IGNITION
E15RLCOB 1985	IGNITION
E15RLCRM 1984	MAGNETO
E15RLCTA 1983	MAGNETO
E15RLCTR 1983	MAGNETO
E15RLCUD 1987	IGNITION
E15RLECR 1998	IGNITION -- ROPE
E15RLEDS 1996	IGNITION - ROPE
E15RLEOD 1995	IGNITION - ROPE
E15RELERE 1994	IGNITION - ROPE
E15RLETB 1993	IGNITION - ROPE
E15RLEUC 1997	IGNITION - ROPE
E15WREES 1999	IGNITION
E15WRLEES 1999	IGNITION
E15WRLSIR commercial, rope start, tiller, 20 in shaft 2001	IGNITION
E15WRLSSC Commercial, Rope Start, Tiller, 20 IN shaft 2000	IGNITION
E15WRSIR commercial, rope start, tiller, 15 in shaft 2001	IGNITION
E15WRSSC Commercial, Rope Start, Tiller, 15 IN shaft 2000	IGNITION
E20CRCCA 1988	IGNITION
E20CRCDC 1986	IGNITION

E20CRCOS 1985	IGNITION
E20CRCUR 1987	IGNITION
E20CRLCCA 1988	IGNITION
E20CRLCDC 1986	IGNITION
E20CRLCOS 1985	IGNITION
E20CRLCUR 1987	IGNITION
E20ECCA 1988	IGNITION
E20ECDC 1986	IGNITION
E20ECOS 1985	IGNITION
E20ECUR 1987	IGNITION
E20ELCCA 1988	IGNITION
E20ELCDC 1986	IGNITION
E20ELCOS 1985	IGNITION
E20ELCUR 1987	IGNITION
E20TECDC 1986	IGNITION
E25ECCM 1988	IGNITION
E25ECDR 1986	IGNITION
E25ECOC 1985	IGNITION
E25ECRS 1984	IGNITION
E25ECTD 1983	MAGNETO
E25ECUA 1987	IGNITION
E25ELCCM 1988	IGNITION
E25ELCDR 1986	IGNITION
E25ELCOC 1985	IGNITION
E25ELCRS 1984	IGNITION
E25ELCTD 1983	MAGNETO
E25ELCUA 1987	IGNITION
E25RCCA 1988	IGNITION
E25RCDC 1986	IGNITION
E25RCOS 1985	IGNITION
E25RCRD 1984	IGNITION
E25RCTE 1983	MAGNETO
E25RCUR 1987	IGNITION
E25RLCCA 1988	IGNITION
E25RLCDC 1986	IGNITION

E25RLCOS 1985	IGNITION
E25RLCRD 1984	IGNITION
E25RLCTE 1983	MAGNETO
E25RLCUR 1987	IGNITION
E25RSLS 1983	MAGNETO
E25RSS 1983	MAGNETO
E25RWCDC 1986	MAGNETO
E25RWCO5 1985	MAGNETO
E25RWCRD 1984	MAGNETO
E25RWCTE 1983	MAGNETO
E25RWCUR 1987	MAGNETO
E25RWENB 1992	IGNITION
E25RWLCDC 1986	MAGNETO
E25RWLCOS 1985	MAGNETO
E25RWLCRD 1984	MAGNETO
E25RWLCTE 1983	MAGNETO
E25RWLCUR 1987	MAGNETO
E25RWLENB 1992	IGNITION
E25TECCA 1988	IGNITION
E25TECDC 1986	IGNITION
E25TECOS 1985	IGNITION
E25TECRD 1984	IGNITION
E25TECTE 1983	MAGNETO
E25TECUR 1987	IGNITION
E25TELCCA 1988	IGNITION
E25TELCDC 1986	IGNITION
E25TELCO5 1985	IGNITION
E25TELCRD 1984	IGNITION
E25TELCTE 1983	MAGNETO
E25TEL CUR 1987	IGNITION
E25WREEN 1999	IGNITION
E25WREES 1999	IGNITION
E25WRLEEN 1999	IGNITION
E25WRLEES 1999	IGNITION
E25WRLSIR commercial, rope start, tiller, 20 in shaft 2001	IGNITION

E25WRLSSC Commercial, Rope Start, 20 IN. shaft 2000	IGNITION
E25WRSIR commercial, rope start, tiller, 15 in shaft 2001	IGNITION
E25WRSSC Commercial, Rope Start, 15 IN. shaft 2000	IGNITION
E28ELCDS 1986	MAGNETO
E28ESLCCR 1988	IGNITION
E28ESLCUC 1987	MAGNETO
E30ECCE 1988	IGNITION
E30ECDM 1986	IGNITION
E30ECOA 1985	IGNITION
E30ECRR 1984	IGNITION
E30ECUB 1987	IGNITION
E30ELCCE 1988	IGNITION
E30ELCDM 1986	IGNITION
E30ELCOA 1985	IGNITION
E30ELCRR 1984	IGNITION
E30ELCUB 1987	IGNITION
E30RCCE 1988	IGNITION
E30RCDM 1986	IGNITION
E30RCOA 1985	IGNITION
E30RCUB 1987	IGNITION
E30RLCCE 1988	IGNITION
E30RLCDM 1986	IGNITION
E30RLCOA 1985	IGNITION
E30RLCUB 1987	IGNITION
E30TECCE 1988	IGNITION
E30TECDM 1986	IGNITION
E30TECOA 1985	IGNITION
E30TECUB 1987	IGNITION
E30TELCEE 1988	IGNITION
E30TELCDM 1986	IGNITION
E30TELCOA 1985	IGNITION
E30TELCUB 1987	IGNITION
E35AELCDE 1986	IGNITION SYSTEM
E35AELCUD 1987	IGNITION SYSTEM
E35ARLCDE 1986	IGNITION SYSTEM

E35ARLCUD 1987	IGNITION SYSTEM
E35ECRR 1984	IGNITION
E35ECTS 1983	MAGNETO
E35ELCRR 1984	IGNITION
E35ELCTS 1983	MAGNETO
E35RCCE 1988	IGNITION
E35RCDM 1986	IGNITION
E35RCRR 1984	IGNITION
E35RCTS 1983	MAGNETO
E35RCUB 1987	IGNITION
E35RLCCE 1988	IGNITION
E35RLCDM 1986	IGNITION
E35RLCRR 1984	IGNITION
E35RLCTS 1983	MAGNETO
E35RLCUB 1987	IGNITION
E35TELCRR 1984	IGNITION
E35TELCTS 1983	MAGNETO
E40AELCCS 1988	IGNITION SYSTEM
E40ARLCCS 1988	IGNITION SYSTEM
E40ATLCCS 1988	IGNITION SYSTEM
E40ECCS 1988	IGNITION SYSTEM
E40ECDE 1986	IGNITION SYSTEM
E40ECOB 1985	IGNITION SYSTEM
E40ECRM 1984	IGNITION SYSTEM
E40ECUD 1987	IGNITION SYSTEM
E40EEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40EEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40EERE 1994	IGNITION SYSTEM - 40 ROPE START
E40EERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40EETB 1993	IGNITION SYSTEM - 40 ROPE START
E40ELCCS 1988	IGNITION SYSTEM
E40ELCDE 1986	IGNITION SYSTEM
E40ELCOB 1985	IGNITION SYSTEM
E40ELCRM 1984	IGNITION SYSTEM

E40ELCUD 1987	IGNITION SYSTEM
E40ELECR 1998	IGNITION SYSTEM -- ROPE START
E40ELEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40ELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40ELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40ELERE 1994	IGNITION SYSTEM - 40 ROPE START
E40ELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
E40ELEUC 1997	IGNITION SYSTEM - ROPE START
E40JRECA 1998	IGNITION SYSTEM
E40JREDC 1996	IGNITION SYSTEM
E40JREOS 1995	IGNITION SYSTEM
E40JREUR 1997	IGNITION SYSTEM
E40RCCS 1988	IGNITION SYSTEM
E40RCDE 1986	IGNITION SYSTEM
E40RCOB 1985	IGNITION SYSTEM
E40RCRM 1984	IGNITION SYSTEM
E40RCUD 1987	IGNITION SYSTEM
E40RECR 1998	IGNITION SYSTEM -- ROPE START
E40REDS 1996	IGNITION SYSTEM - 40 ROPE START
E40REOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40REOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40RERE 1994	IGNITION SYSTEM - 40 ROPE START
E40RERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40RETB 1993	IGNITION SYSTEM - 40 ROPE START
E40REUC 1997	IGNITION SYSTEM - ROPE START
E40RLCCS 1988	IGNITION SYSTEM
E40RLCDE 1986	IGNITION SYSTEM
E40RLCOB 1985	IGNITION SYSTEM
E40RLCRM 1984	IGNITION SYSTEM
E40RLCUD 1987	IGNITION SYSTEM
E40RLECR 1998	IGNITION SYSTEM -- ROPE START
E40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START

E40RLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40RLEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40RLERE 1994	IGNITION SYSTEM - 40 ROPE START
E40RLERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40RLETB 1993	IGNITION SYSTEM - 40 ROPE START
E40RLEUC 1997	IGNITION SYSTEM - ROPE START
E40TECCS 1988	IGNITION SYSTEM
E40TECDE 1986	IGNITION SYSTEM
E40TECOB 1985	IGNITION SYSTEM
E40TECRM 1984	IGNITION SYSTEM
E40TECUD 1987	IGNITION SYSTEM
E40TEECR 1998	IGNITION SYSTEM -- ROPE START
E40TEEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40TEEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40TEERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TEERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TEETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TEEUC 1997	IGNITION SYSTEM - ROPE START
E40TELCCS 1988	IGNITION SYSTEM
E40TELCDDE 1986	IGNITION SYSTEM
E40TELCOB 1985	IGNITION SYSTEM
E40TELCRM 1984	IGNITION SYSTEM
E40TELECR 1998	IGNITION SYSTEM -- ROPE START
E40TELEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40TELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40TELERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TELEUC 1997	IGNITION SYSTEM - ROPE START
E40TLCCS 1988	IGNITION SYSTEM

E40TLCDE 1986	IGNITION SYSTEM
E40TLCUD 1987	IGNITION SYSTEM
E40TLECR 1998	IGNITION SYSTEM -- ROPE START
E40TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40TLEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40TLERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TLERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TLETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TLETF 1993	IGNITION SYSTEM - 40 ROPE START
E40TLEUC 1997	IGNITION SYSTEM - ROPE START
E40TLLCCS 1988	IGNITION SYSTEM
E40TTLECR 1998	IGNITION SYSTEM -- ROPE START
E40TTLEDS 1996	IGNITION SYSTEM - 40 ROPE START
E40TTLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E40TTLEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E40TTLERE 1994	IGNITION SYSTEM - 40 ROPE START
E40TTLERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TTLETB 1993	IGNITION SYSTEM - 40 ROPE START
E40TTLETF 1993	IGNITION SYSTEM - 40 ROPE START
E40TTLEUC 1997	IGNITION SYSTEM - ROPE START
E40WREES 1999	IGNITION SYSTEM
E40WRLEES 1999	IGNITION SYSTEM
E40WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM
E40WRLSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
E40WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
E40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
E40WRYEES 1999	IGNITION SYSTEM
E40WRYSIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
E40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
E45RCCDS 1986	IGNITION SYSTEM
E45RCCUC 1987	IGNITION SYSTEM
E45RCENM 1992	IGNITION SYSTEM - ROPE START

E45RCEOD 1995	IGNITION SYSTEM
E45RCERE 1994	IGNITION SYSTEM
E45RCETB 1993	IGNITION SYSTEM
E45RCLCDS 1986	IGNITION SYSTEM
E45RCLCUC 1987	IGNITION SYSTEM
E45RCLEDS 1996	IGNITION SYSTEM
E45RCLENM 1992	IGNITION SYSTEM - ROPE START
E45RCLEOD 1995	IGNITION SYSTEM
E45RCLERE 1994	IGNITION SYSTEM
E45RCLETB 1993	IGNITION SYSTEM
E45RCLEUC 1997	IGNITION SYSTEM
E45WMLENM 1992	IGNITION SYSTEM - ROPE START
E48ESLCCC 1988	IGNITION SYSTEM
E48ESLCUS 1987	IGNITION SYSTEM
E48ESLEDC 1996	IGNITION SYSTEM
E48ESLEOS 1995	IGNITION SYSTEM
E48ESLERD 1994	IGNITION SYSTEM
E4RDHCCS 1988	MAGNETO
E4RDHCDE 1986	MAGNETO
E4RDHCUD 1987	MAGNETO
E4RDHEOD 1995	MAGNETO
E4RDHERE 1994	MAGNETO
E4RDHLCCS 1988	MAGNETO
E4RDHLCUD 1987	MAGNETO
E4RDHLEOD 1995	MAGNETO
E4RDHLERE 1994	MAGNETO
E50BECCS 1988	IGNITION SYSTEM
E50BECDE 1986	IGNITION SYSTEM
E50BECOB 1985	IGNITION SYSTEM
E50BECRM 1984	IGNITION SYSTEM
E50BECUD 1987	IGNITION SYSTEM
E50BEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50BEEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E50BEERE 1994	IGNITION SYSTEM - 40 ROPE START

E50BEERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
E50BELCCS 1988	IGNITION SYSTEM
E50BELCDE 1986	IGNITION SYSTEM
E50BELCOB 1985	IGNITION SYSTEM
E50BELCRM 1984	IGNITION SYSTEM
E50BELCUD 1987	IGNITION SYSTEM
E50BELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50BELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E50BELERE 1994	IGNITION SYSTEM - 40 ROPE START
E50BELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
E50ESLECC 1998	IGNITION SYSTEM -- ROPE START
E50ESLEUR 1997	IGNITION SYSTEM - ROPE START
E50JEDS 1996	IGNITION SYSTEM - 40 ROPE START
E50JEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50JEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E50JERE 1994	IGNITION SYSTEM - 40 ROPE START
E50JERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50JETB 1993	IGNITION SYSTEM - 40 ROPE START
E50JEUC 1997	IGNITION SYSTEM - ROPE START
E50TELCCS 1988	IGNITION SYSTEM
E50TELCDE 1986	IGNITION SYSTEM
E50TELCOB 1985	IGNITION SYSTEM
E50TELCRM 1984	IGNITION SYSTEM
E50TELCU 1987	IGNITION SYSTEM
E50TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50TELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E50TELERE 1994	IGNITION SYSTEM - 40 ROPE START
E50TELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50TELETB 1993	IGNITION SYSTEM - 40 ROPE START
E50TLCCS 1988	IGNITION SYSTEM

E50TLCDE 1986	IGNITION SYSTEM
E50TLCOB 1985	IGNITION SYSTEM
E50TLCRM 1984	IGNITION SYSTEM
E50TLCUD 1987	IGNITION SYSTEM
E50TLECR 1998	IGNITION SYSTEM -- ROPE START
E50TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
E50TLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
E50TLEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
E50TLERE 1994	IGNITION SYSTEM - 40 ROPE START
E50TLERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50TLETB 1993	IGNITION SYSTEM - 40 ROPE START
E50TLETF 1993	IGNITION SYSTEM - 40 ROPE START
E50TLEUC 1997	IGNITION SYSTEM - ROPE START
E50TSLECC 1998	IGNITION SYSTEM -- ROPE START
E50TSLEUS 1997	IGNITION SYSTEM - ROPE START
E55RSLC 1997	IGNITION SYSTEM
E55RSLG 1995	IGNITION SYSTEM
E55RSLN 1983	IGNITION SYSTEM
E55RSLN-2 1983	IGNITION SYSTEM
E55RSLW 1996	IGNITION SYSTEM
E55RSN 1983	IGNITION SYSTEM
E55RSN-2 1983	IGNITION SYSTEM
E55RSYN 1983	IGNITION SYSTEM
E55RSYN-2 1983	IGNITION SYSTEM
E55RWLCDC 1986	IGNITION SYSTEM
E55RWLCOS 1985	IGNITION SYSTEM
E55RWLCRD 1984	IGNITION SYSTEM
E55RWLCUC 1987	IGNITION SYSTEM
E55RWLENM 1992	IGNITION SYSTEM - ROPE START
E55RWLERE 1994	IGNITION SYSTEM
E55RWLETB 1993	IGNITION SYSTEM
E55WREES 1999	IGNITION SYSTEM
E55WRLEES 1999	IGNITION SYSTEM
E55WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM

E55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM
E55WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
E55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
E55WRYEES 1999	IGNITION SYSTEM
E55WRYSIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
E55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
E5DRECR 1998	IGNITION
E5DRLECR 1998	IGNITION
E5RHCTA 1983	MAGNETO-4.5
E5RHCTA 1983	MAGNETO-7.5
E5RHLCTA 1983	MAGNETO-4.5
E5RHLCTA 1983	MAGNETO-7.5
E60ELCOD 1985	IGNITION SYSTEM
E60ELCRE 1984	IGNITION SYSTEM
E60TLCOD 1985	IGNITION SYSTEM
E60TLCRE 1984	IGNITION SYSTEM
E6RCCS 1988	IGNITION
E6RCDE 1986	MAGNETO
E6RCOB 1985	MAGNETO
E6RCRM 1984	MAGNETO - 6/8
E6RCUD 1987	IGNITION
E6RECR 1998	IGNITION
E6REDS 1996	IGNITION
E6REOD 1995	IGNITION
E6RERE 1994	IGNITION
E6RETB 1993	IGNITION
E6REUC 1997	IGNITION
E6RLCCS 1988	IGNITION
E6RLCDE 1986	MAGNETO
E6RLCOB 1985	MAGNETO
E6RLCRM 1984	MAGNETO - 6/8
E6RLCUD 1987	IGNITION
E6RLECR 1998	IGNITION
E6RLEDS 1996	IGNITION

E6RLEOD 1995	IGNITION
E6RLERE 1994	IGNITION
E6RLETB 1993	IGNITION
E6RLEUC 1997	IGNITION
E6SLCCS 1988	IGNITION
E6SLCDE 1986	MAGNETO
E6SLCOB 1985	MAGNETO
E6SLCRM 1984	MAGNETO - 6/8
E6SLCUD 1987	IGNITION
E6SLEDS 1996	IGNITION
E6SLEOD 1995	IGNITION
E6SLERE 1994	IGNITION
E6SLETB 1993	IGNITION
E8DREEA 1999	IGNITION
E8DRSSM Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION
E8RCCS 1988	IGNITION
E8RCDE 1986	MAGNETO
E8RCOB 1985	MAGNETO
E8RCRM 1984	MAGNETO - 6/8
E8RCTA 1983	MAGNETO-4.5
E8RCTA 1983	MAGNETO-7.5
E8RCUD 1987	IGNITION
E8RECR 1998	IGNITION
E8REDS 1996	IGNITION
E8REOD 1995	IGNITION
E8RERE 1994	IGNITION
E8RETB 1993	IGNITION
E8REUC 1997	IGNITION
E8RLCCS 1988	IGNITION
E8RLCDE 1986	MAGNETO
E8RLCOB 1985	MAGNETO
E8RLCRM 1984	MAGNETO - 6/8
E8RLCTA 1983	MAGNETO-4.5
E8RLCTA 1983	MAGNETO-7.5
E8RLCUD 1987	IGNITION

E8RLECR 1998	IGNITION
E8RLEDS 1996	IGNITION
E8RLEOD 1995	IGNITION
E8RLERE 1994	IGNITION
E8RLETB 1993	IGNITION
E8RLEUC 1997	IGNITION
E8SRLCCS 1988	IGNITION
E8SRLCDE 1986	MAGNETO
E8SRLCOB 1985	MAGNETO
E8SRLCRM 1984	MAGNETO - 6/8
E8SRLCTA 1983	MAGNETO-4.5
E8SRLCTA 1983	MAGNETO-7.5
E8SRLCUD 1987	IGNITION
E8SRLECA 1998	IGNITION
E8SRLEDS 1996	IGNITION
E8SRLEOD 1995	IGNITION
E8SRLERE 1994	IGNITION
E8SRLTB 1993	IGNITION
E8SRLEUC 1997	IGNITION
E8WREES 1999	IGNITION
E8WRLEES 1999	IGNITION
E8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	IGNITION
E8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
E8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	IGNITION
E8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
ELECTRICAL 1983	ELECTRIC START KIT 55
ELECTRICAL 1984	ELECTRIC STARTING KIT 40, 55
HE15KCF 1997	IGNITION
HE15KCLF 1997	IGNITION
HE15KCLN 1996	IGNITION
HE15KCLO 1998	IGNITION
HE15KCN 1996	IGNITION
HE15KCO 1998	IGNITION
HE15RPLW 1997	IGNITION
HE15RPW 1997	IGNITION

HE40REDS 1996	IGNITION SYSTEM - 40 ROPE START
HE40REUC 1997	IGNITION SYSTEM - ROPE START
HE40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START
HE40RLEUC 1997	IGNITION SYSTEM - ROPE START
HE45RCLEDS 1996	IGNITION SYSTEM
HE45RCLEUC 1997	IGNITION SYSTEM
HE55RSCLC 1997	IGNITION SYSTEM
HE55RSLW 1996	IGNITION SYSTEM
HE55WMLM 1996	IGNITION SYSTEM
HE55WMLZ 1997	IGNITION SYSTEM
HJ15KCF 1997	IGNITION
HJ15KCLF 1997	IGNITION
HJ15KCLN 1996	IGNITION
HJ15KCLO 1998	IGNITION
HJ15KCN 1996	IGNITION
HJ15KCO 1998	IGNITION
HJ15RPLW 1997	IGNITION
HJ15RPW 1997	IGNITION
HJ40REDS 1996	IGNITION SYSTEM - 40 ROPE START
HJ40REUC 1997	IGNITION SYSTEM - ROPE START
HJ40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START
HJ40RLEUC 1997	IGNITION SYSTEM - ROPE START
HJ45RCLEDS 1996	IGNITION SYSTEM
HJ45RCLEUC 1997	IGNITION SYSTEM
HJ55RSCLC 1997	IGNITION SYSTEM
HJ55RSLW 1996	IGNITION SYSTEM
HJ55WMLM 1996	IGNITION SYSTEM
HJ55WMLZ 1997	IGNITION SYSTEM
J10ECCD 1988	IGNITION
J10ECDB 1986	IGNITION
J10ECOM 1985	IGNITION
J10ECUE 1987	IGNITION
J10EECC 1998	IGNITION -- ROPE
J10EEDD 1996	IGNITION - ROPE
J10EEOE 1995	IGNITION - ROPE

J10EERB 1994	IGNITION - ROPE
J10EETM 1993	IGNITION - ROPE
J10EEUS 1997	IGNITION - ROPE
J10ELCCD 1988	IGNITION
J10ELCDB 1986	IGNITION
J10ELCOM 1985	IGNITION
J10ELCRA 1984	MAGNETO
J10ELCTC 1983	MAGNETO
J10ELCUE 1987	IGNITION
J10ELECC 1998	IGNITION -- ROPE
J10ELEDD 1996	IGNITION - ROPE
J10ELEER 1999	IGNITION -- ROPE
J10ELEOE 1995	IGNITION - ROPE
J10ELERB 1994	IGNITION - ROPE
J10ELETM 1993	IGNITION - ROPE
J10ELEUS 1997	IGNITION - ROPE
J10ELSIM elec start, remote, 20 in shaft 2001	IGNITION - ROPE
J10ELSSA Electric Start, 15 IN. shaft 2000	IGNITION - ROPE
J10EVLSIC elec start, 20 in shaft, wht 2001	IGNITION - ROPE
J10EVLSSS Electric Start, 20 IN. shaft, wht 2000	IGNITION - ROPE
J10RCCD 1988	IGNITION
J10RCDB 1986	IGNITION
J10RCOM 1985	IGNITION
J10RCRA 1984	MAGNETO
J10RCTC 1983	MAGNETO
J10RCTR 1983	MAGNETO
J10RCUE 1987	IGNITION
J10RECC 1998	IGNITION -- ROPE
J10REDD 1996	IGNITION - ROPE
J10REER 1999	IGNITION -- ROPE
J10RELECC 1998	IGNITION -- ROPE
J10RELEDD 1996	IGNITION - ROPE
J10RELEOE 1995	IGNITION - ROPE
J10RELERB 1994	IGNITION - ROPE
J10RELETM 1993	IGNITION - ROPE

J10RELEUS 1997	IGNITION - ROPE
J10REOE 1995	IGNITION - ROPE
J10RERB 1994	IGNITION - ROPE
J10RETM 1993	IGNITION - ROPE
J10REUS 1997	IGNITION - ROPE
J10RGTSIC elec start,15 in shaft, wht 2001	IGNITION - ROPE
J10RGTSSS Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION - ROPE
J10RLCDD 1988	IGNITION
J10RLCDB 1986	IGNITION
J10RLCOM 1985	IGNITION
J10RLCRA 1984	MAGNETO
J10RLCTC 1983	MAGNETO
J10RLCTR 1983	MAGNETO
J10RLCUE 1987	IGNITION
J10RLECC 1998	IGNITION -- ROPE
J10RLEDD 1996	IGNITION - ROPE
J10RLEER 1999	IGNITION -- ROPE
J10RLEOE 1995	IGNITION - ROPE
J10RLERB 1994	IGNITION - ROPE
J10RLETM 1993	IGNITION - ROPE
J10RLEUS 1997	IGNITION - ROPE
J10RLGTSIC elec start,20 in shaft, wht 2001	IGNITION - ROPE
J10RLGTSSS Rope Start, Tiller, 20 IN. shaft, N/A USA 2000	IGNITION - ROPE
J10RLSDC	IGNITION
J10RLSDC - FR	22-5_SYSTÈME D'ALLUMAGE
J10RLSIM rope start, tiller, 20 in shaft 2001	IGNITION - ROPE
J10RLSOS	IGNITION
J10RLSOS - FR	22-5_SYSTÈME D'ALLUMAGE
J10RLSRD	IGNITION
J10RLSRD - FR	22-5_SYSTÈME D'ALLUMAGE
J10RLSSA Rope Start, Tiller, 20 IN. shaft 2000	IGNITION - ROPE
J10RLSTE	IGNITION
J10RLSTE - FR	22-5_SYSTÈME D'ALLUMAGE
J10RLSUR	IGNITION
J10RLSUR - FR	02-5_SYSTÈME D'ALLUMAGE

J10RSDC	IGNITION
J10RSDC - FR	22-5_SYSTÈME D'ALLUMAGE
J10RSIM rope start, tiller, 15 in shaft 2001	IGNITION - ROPE
J10RSOS	IGNITION
J10RSOS - FR	22-5_SYSTÈME D'ALLUMAGE
J10RSRD	IGNITION
J10RSRD - FR	22-5_SYSTÈME D'ALLUMAGE
J10RSSA Rope Start, Tiller, 15 IN. shaft 2000	IGNITION - ROPE
J10RSTE	IGNITION
J10RSTE - FR	22-5_SYSTÈME D'ALLUMAGE
J10RSUR	IGNITION
J10RSUR - FR	02-5_SYSTÈME D'ALLUMAGE
J10RVLSIC rope start, tiller, 20 in shaft, wht 2001	IGNITION - ROPE
J10RVLSSS Rope Start, Tiller, 20 IN. shaft, wht 2000	IGNITION - ROPE
J10RVSIC rope start, tiller, 15 in shaft, wht 2001	IGNITION - ROPE
J10RVSSS Rope Start, Tiller, 15 IN. shaft, wht 2000	IGNITION - ROPE
J10SELCCD 1988	IGNITION
J10SELCDB 1986	IGNITION
J10SELCOM 1985	IGNITION
J10SELCRA 1984	MAGNETO
J10SELCCTC 1983	MAGNETO
J10SELCUE 1987	IGNITION
J10SELECC 1998	IGNITION -- ROPE
J10SELEDD 1996	IGNITION - ROPE
J10SELEOE 1995	IGNITION - ROPE
J10SELERB 1994	IGNITION - ROPE
J10SELETM 1993	IGNITION - ROPE
J10SELEUS 1997	IGNITION - ROPE
J10TEEER 1999	IGNITION -- ROPE
J10TEGSSS Electric Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION - ROPE
J10TEGTSIC elec start, tiller, 15 in shaft, wht 2001	IGNITION - ROPE
J10TELEER 1999	IGNITION -- ROPE
J10TELSIM elec start, tiller, 20 in shaft 2001	IGNITION - ROPE
J10TELSSA Electric Start, Tiller, 20 IN. shaft 2000	IGNITION - ROPE
J10TESIM elec start, tiller, 15 in shaft 2001	IGNITION - ROPE

J10TESSA Electric Start, Tiller, 15 IN. shaft 2000	IGNITION - ROPE
J10TVESIM elec start, tiller, 15 in shaft, wht 2001	IGNITION - ROPE
J15ECCS 1988	IGNITION
J15ECDE 1986	IGNITION
J15ECOB 1985	IGNITION
J15ECRM 1984	MAGNETO
J15ECTR 1983	MAGNETO
J15ECUD 1987	IGNITION
J15EECR 1998	IGNITION -- ROPE
J15EEDS 1996	IGNITION - ROPE
J15EEOD 1995	IGNITION - ROPE
J15EEERE 1994	IGNITION - ROPE
J15EETB 1993	IGNITION - ROPE
J15EEUC 1997	IGNITION - ROPE
J15ELCCS 1988	IGNITION
J15ELCDE 1986	IGNITION
J15ELCOB 1985	IGNITION
J15ELCRM 1984	MAGNETO
J15ELCTR 1983	MAGNETO
J15ELCUD 1987	IGNITION
J15ELECR 1998	IGNITION -- ROPE
J15ELEDS 1996	IGNITION - ROPE
J15ELEEA 1999	IGNITION -- ROPE
J15ELEOD 1995	IGNITION - ROPE
J15ELERE 1994	IGNITION - ROPE
J15ELETB 1993	IGNITION - ROPE
J15ELEUC 1997	IGNITION - ROPE
J15ELSIB elec start, remote, 20 in shaft 2001	IGNITION - ROPE
J15ELSSM Electric Start, 20 IN. shaft 2000	IGNITION - ROPE
J15EVLSIC elec start, remote, 20 in shaft, wht 2001	IGNITION - ROPE
J15EVLSSS Electric Start, 20 IN. shaft, wht 2000	IGNITION - ROPE
J15RCCS 1988	IGNITION
J15RCDE 1986	IGNITION
J15RCOB 1985	IGNITION
J15RCRM 1984	MAGNETO

J15RCTA 1983	MAGNETO
J15RCTR 1983	MAGNETO
J15RCUD 1987	IGNITION
J15RECR 1998	IGNITION -- ROPE
J15REDS 1996	IGNITION - ROPE
J15REEA 1999	IGNITION -- ROPE
J15RELECR 1998	IGNITION -- ROPE
J15RELEDS 1996	IGNITION - ROPE
J15RELEOD 1995	IGNITION - ROPE
J15RELERE 1994	IGNITION - ROPE
J15RELETB 1993	IGNITION - ROPE
J15RELEUC 1997	IGNITION - ROPE
J15REOD 1995	IGNITION - ROPE
J15RERE 1994	IGNITION - ROPE
J15RETB 1993	IGNITION - ROPE
J15REUC 1997	IGNITION - ROPE
J15RLCCS 1988	IGNITION
J15RLCDE 1986	IGNITION
J15RLCOB 1985	IGNITION
J15RLCRM 1984	MAGNETO
J15RLCTA 1983	MAGNETO
J15RLCTR 1983	MAGNETO
J15RLCUD 1987	IGNITION
J15RLECR 1998	IGNITION -- ROPE
J15RLEDS 1996	IGNITION - ROPE
J15RLEEA 1999	IGNITION -- ROPE
J15RLEOD 1995	IGNITION - ROPE
J15RELERE 1994	IGNITION - ROPE
J15RELTB 1993	IGNITION - ROPE
J15RLEUC 1997	IGNITION - ROPE
J15RLSDR	IGNITION
J15RLSDR - FR	22-5_SYSTÈME D'ALLUMAGE
J15RLSIB rope start, tiller, 20 in shaft 2001	IGNITION - ROPE
J15RLSOC	IGNITION
J15RLSOC - FR	22-5_SYSTÈME D'ALLUMAGE

J15RLSRS	IGNITION
J15RLSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J15RLSSM Rope Start, Tiller, 20 IN. shaft 2000	IGNITION - ROPE
J15RLSTD	IGNITION
J15RLSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J15RLSUA	IGNITION
J15RLSUA - FR	02-5_SYSTÈME D'ALLUMAGE
J15RSDR	IGNITION
J15RSDR - FR	22-5_SYSTÈME D'ALLUMAGE
J15RSIB rope start, tiller, 15 in shaft 2001	IGNITION - ROPE
J15RSOC	IGNITION
J15RSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J15RSRS	IGNITION
J15RSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J15RSSM Rope Start, Tiller, 15 IN. shaft 2000	IGNITION - ROPE
J15RSTD	IGNITION
J15RSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J15RSUA	IGNITION
J15RSUA - FR	02-5_SYSTÈME D'ALLUMAGE
J15RTSDC	IGNITION
J15RTSDC - FR	22-5_SYSTÈME D'ALLUMAGE
J15RTSOS	IGNITION
J15RTSOS - FR	22-5_SYSTÈME D'ALLUMAGE
J15RTSUR	IGNITION
J15RTSUR - FR	02-5_SYSTÈME D'ALLUMAGE
J15RVLSIC rope start, tiller, 20 in shaft, wht 2001	IGNITION - ROPE
J15RVLSSS Rope Start, Tiller, 20 IN. shaft, wht 2000	IGNITION - ROPE
J15RVSIC rope start, tiller, 15 in shaft, wht 2001	IGNITION - ROPE
J15RVSSS Rope Start, Tiller, 15 IN. shaft, wht 2000	IGNITION - ROPE
J15TEEEA 1999	IGNITION -- ROPE
J15TELEEA 1999	IGNITION -- ROPE
J15TELSIB elec start, tiller, 20 in shaft 2001	IGNITION - ROPE
J15TELSSM Electric Start, Tiller, 20 IN. shaft 2000	IGNITION - ROPE
J15TESIB elec start, tiller, 15 in shaft 2001	IGNITION - ROPE
J15TESSM Electric Start, Tiller, 15 IN. shaft 2000	IGNITION - ROPE

J15TVESIB elec start, tiller, 15 in shaft, wht 2001	IGNITION - ROPE
J15WREES 1999	IGNITION
J15WRLEES 1999	IGNITION
J15WRLSIR commercial, rope start, tiller, 20 in shaft 2001	IGNITION
J15WRLSOB	IGNITION
J15WRLSOB - FR	22-5_SYSTÈME D'ALLUMAGE
J15WRLSRM	IGNITION
J15WRLSRM - FR	22-5_SYSTÈME D'ALLUMAGE
J15WRLSSC Commercial, Rope Start, Tiller, 20 IN shaft 2000	IGNITION
J15WRSIR commercial, rope start, tiller, 15 in shaft 2001	IGNITION
J15WRSOB	IGNITION
J15WRSOB - FR	22-5_SYSTÈME D'ALLUMAGE
J15WRSRM	IGNITION
J15WRSRM - FR	22-5_SYSTÈME D'ALLUMAGE
J15WRSSC Commercial, Rope Start, Tiller, 15 IN shaft 2000	IGNITION
J20CRCCA 1988	IGNITION
J20CRCDC 1986	IGNITION
J20CRCOS 1985	IGNITION
J20CRCUR 1987	IGNITION
J20CRLCCA 1988	IGNITION
J20CRLCDC 1986	IGNITION
J20CRLCOS 1985	IGNITION
J20CRLCUR 1987	IGNITION
J20ECCA 1988	IGNITION
J20ECDC 1986	IGNITION
J20ECOS 1985	IGNITION
J20ECUR 1987	IGNITION
J20ELCCA 1988	IGNITION
J20ELCDC 1986	IGNITION
J20ELCOS 1985	IGNITION
J20ELCUR 1987	IGNITION
J20TECDC 1986	IGNITION
J25ECCM 1988	IGNITION
J25ECDR 1986	IGNITION
J25ECOC 1985	IGNITION

J25ECRS 1984	IGNITION
J25ECTD 1983	MAGNETO
J25ECUA 1987	IGNITION
J25ELCCM 1988	IGNITION
J25ELCDR 1986	IGNITION
J25ELCOC 1985	IGNITION
J25ELCRS 1984	IGNITION
J25ELCTD 1983	MAGNETO
J25ELCUA 1987	IGNITION
J25JRTSSS Jet Drive, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J25RCCA 1988	IGNITION
J25RCDC 1986	IGNITION
J25RCOS 1985	IGNITION
J25RCRD 1984	IGNITION
J25RCTE 1983	MAGNETO
J25RCUR 1987	IGNITION
J25RLCCA 1988	IGNITION
J25RLCDC 1986	IGNITION
J25RLCOS 1985	IGNITION
J25RLCRD 1984	IGNITION
J25RLCTE 1983	MAGNETO
J25RLCUR 1987	IGNITION
J25RSLS 1983	MAGNETO
J25RSS 1983	MAGNETO
J25RWCDC 1986	MAGNETO
J25RWCOS 1985	MAGNETO
J25RWCRD 1984	MAGNETO
J25RWCTE 1983	MAGNETO
J25RWCUR 1987	MAGNETO
J25RWENB 1992	IGNITION
J25RWLCDC 1986	MAGNETO
J25RWLCOS 1985	MAGNETO
J25RWLCRD 1984	MAGNETO
J25RWLCTE 1983	MAGNETO
J25RWLCUR 1987	MAGNETO

J25RWLENB 1992	IGNITION
J25TECCA 1988	IGNITION
J25TECDC 1986	IGNITION
J25TECOS 1985	IGNITION
J25TECRD 1984	IGNITION
J25TECTE 1983	MAGNETO
J25TECUR 1987	IGNITION
J25TELCCA 1988	IGNITION
J25TELCDC 1986	IGNITION
J25TELCOS 1985	IGNITION
J25TELCRD 1984	IGNITION
J25TELCTE 1983	MAGNETO
J25TELCUR 1987	IGNITION
J25WREEN 1999	IGNITION
J25WREES 1999	IGNITION
J25WRLEEN 1999	IGNITION
J25WRLEES 1999	IGNITION
J25WRLSIR commercial, rope start, tiller, 20 in shaft 2001	IGNITION
J25WRLSSC Commercial, Rope Start, 20 IN. shaft 2000	IGNITION
J25WRSIR commercial, rope start, tiller, 15 in shaft 2001	IGNITION
J25WRSSC Commercial, Rope Start, 15 IN. shaft 2000	IGNITION
J28ELCDS 1986	MAGNETO
J28ESLCCR 1988	IGNITION
J28ESLCUC 1987	MAGNETO
J30ECCE 1988	IGNITION
J30ECDM 1986	IGNITION
J30ECOA 1985	IGNITION
J30ECRR 1984	IGNITION
J30ECUB 1987	IGNITION
J30ELCCE 1988	IGNITION
J30ELCDM 1986	IGNITION
J30ELCOA 1985	IGNITION
J30ELCRR 1984	IGNITION
J30ELCUB 1987	IGNITION
J30JREEM 1999	IGNITION SYSTEM

J30JRSIE jet drive, rope start, 15 in shaft 2001	IGNITION SYSTEM
J30JRSSB Jet Drive, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J30RCCE 1988	IGNITION
J30RCDM 1986	IGNITION
J30RCOA 1985	IGNITION
J30RCUB 1987	IGNITION
J30RLCCE 1988	IGNITION
J30RLCDM 1986	IGNITION
J30RLCOA 1985	IGNITION
J30RLCUB 1987	IGNITION
J30TECCE 1988	IGNITION
J30TECDM 1986	IGNITION
J30TECOA 1985	IGNITION
J30TECUB 1987	IGNITION
J30TELCEE 1988	IGNITION
J30TELCDM 1986	IGNITION
J30TELCOA 1985	IGNITION
J30TELCTU 1987	IGNITION
J35AELCDE 1986	IGNITION SYSTEM
J35AELCUD 1987	IGNITION SYSTEM
J35ARLCDE 1986	IGNITION SYSTEM
J35ARLCUD 1987	IGNITION SYSTEM
J35ECRR 1984	IGNITION
J35ECTS 1983	MAGNETO
J35ELCRR 1984	IGNITION
J35ELCTS 1983	MAGNETO
J35RCCE 1988	IGNITION
J35RCDM 1986	IGNITION
J35RCRR 1984	IGNITION
J35RCTS 1983	MAGNETO
J35RCUB 1987	IGNITION
J35RLCCE 1988	IGNITION
J35RLCDM 1986	IGNITION
J35RLCRR 1984	IGNITION
J35RLCTS 1983	MAGNETO

J35RLCUB 1987	IGNITION
J35TELCRR 1984	IGNITION
J35TELCTS 1983	MAGNETO
J40AELCCS 1988	IGNITION SYSTEM
J40ARLCCS 1988	IGNITION SYSTEM
J40ATLCCS 1988	IGNITION SYSTEM
J40ECCS 1988	IGNITION SYSTEM
J40ECDE 1986	IGNITION SYSTEM
J40ECOB 1985	IGNITION SYSTEM
J40ECRM 1984	IGNITION SYSTEM
J40ECUD 1987	IGNITION SYSTEM
J40EEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40EEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40EEERE 1994	IGNITION SYSTEM - 40 ROPE START
J40EEERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40EETB 1993	IGNITION SYSTEM - 40 ROPE START
J40ELCCS 1988	IGNITION SYSTEM
J40ELCDE 1986	IGNITION SYSTEM
J40ELCOB 1985	IGNITION SYSTEM
J40ELCRM 1984	IGNITION SYSTEM
J40ELCUD 1987	IGNITION SYSTEM
J40ELECR 1998	IGNITION SYSTEM -- ROPE START
J40ELEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40ELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40ELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40ELERE 1994	IGNITION SYSTEM - 40 ROPE START
J40ELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
J40ELEUC 1997	IGNITION SYSTEM - ROPE START
J40JRECA 1998	IGNITION SYSTEM
J40JREDC 1996	IGNITION SYSTEM
J40JREOS 1995	IGNITION SYSTEM
J40JREUR 1997	IGNITION SYSTEM

J40PLEEA 1999	IGNITION SYSTEM -- ROPE START
J40PLSIF elec start, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J40PLSSM Elec. Start, TNT, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40RCCS 1988	IGNITION SYSTEM
J40RCDE 1986	IGNITION SYSTEM
J40RCOB 1985	IGNITION SYSTEM
J40RCRM 1984	IGNITION SYSTEM
J40RCUD 1987	IGNITION SYSTEM
J40RECR 1998	IGNITION SYSTEM -- ROPE START
J40REDS 1996	IGNITION SYSTEM - 40 ROPE START
J40REEA 1999	IGNITION SYSTEM -- ROPE START
J40REOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40REOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40RERE 1994	IGNITION SYSTEM - 40 ROPE START
J40RERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40RETB 1993	IGNITION SYSTEM - 40 ROPE START
J40REUC 1997	IGNITION SYSTEM - ROPE START
J40RLCCS 1988	IGNITION SYSTEM
J40RLCDE 1986	IGNITION SYSTEM
J40RLCOB 1985	IGNITION SYSTEM
J40RLCRM 1984	IGNITION SYSTEM
J40RLCUD 1987	IGNITION SYSTEM
J40RLECR 1998	IGNITION SYSTEM -- ROPE START
J40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40RLEEA 1999	IGNITION SYSTEM -- ROPE START
J40RLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40RLEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40RLERE 1994	IGNITION SYSTEM - 40 ROPE START
J40RLERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40RLETB 1993	IGNITION SYSTEM - 40 ROPE START
J40RLEUC 1997	IGNITION SYSTEM - ROPE START
J40RLSIF rope start, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J40RLSNF - FR	22-5_SYSTÈME D'ALLUMAGE

J40RLSNF 20 in. shaft, White, Tiller, Rope, Touch Trim 2002	IGNITION SYSTEM
J40RLSOC	IGNITION SYSTEM
J40RLSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J40RLSRS	IGNITION SYSTEM
J40RLSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J40RLSSM Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40RLSTD	IGNITION SYSTEM
J40RLSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSIF rope start, 15 in shaft 2001	IGNITION SYSTEM - ROPE START
J40RSNF - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSNF 15 in. shaft, White, Tiller, Rope, Touch Trim 2002	IGNITION SYSTEM
J40RSOC	IGNITION SYSTEM
J40RSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSRS	IGNITION SYSTEM
J40RSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J40RSSM Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40RSTD	IGNITION SYSTEM
J40RSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J40TECCS 1988	IGNITION SYSTEM
J40TECDE 1986	IGNITION SYSTEM
J40TECOB 1985	IGNITION SYSTEM
J40TECRM 1984	IGNITION SYSTEM
J40TECUD 1987	IGNITION SYSTEM
J40TEECR 1998	IGNITION SYSTEM -- ROPE START
J40TEEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TEEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40TEERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TEERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TEETB 1993	IGNITION SYSTEM - 40 ROPE START
J40TEEUC 1997	IGNITION SYSTEM - ROPE START
J40TELCCS 1988	IGNITION SYSTEM
J40TELCOB 1986	IGNITION SYSTEM
J40TELCOB 1985	IGNITION SYSTEM

J40TELCRM 1984	IGNITION SYSTEM
J40TELECR 1998	IGNITION SYSTEM -- ROPE START
J40TELEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40TELERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
J40TELEUC 1997	IGNITION SYSTEM - ROPE START
J40TLCCS 1988	IGNITION SYSTEM
J40TLCDE 1986	IGNITION SYSTEM
J40TLCUD 1987	IGNITION SYSTEM
J40TLECR 1998	IGNITION SYSTEM -- ROPE START
J40TELEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40TLERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TLERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
J40TLETF 1993	IGNITION SYSTEM - 40 ROPE START
J40TLEUC 1997	IGNITION SYSTEM - ROPE START
J40TPLEEA 1999	IGNITION SYSTEM -- ROPE START
J40TPLSIF elec start, tiller, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J40TPLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J40TTLCCS 1988	IGNITION SYSTEM
J40TTLECR 1998	IGNITION SYSTEM -- ROPE START
J40TTLEDS 1996	IGNITION SYSTEM - 40 ROPE START
J40TTLEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J40TTLEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J40TTLERE 1994	IGNITION SYSTEM - 40 ROPE START
J40TTLERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TTLETB 1993	IGNITION SYSTEM - 40 ROPE START

J40TTLETF 1993	IGNITION SYSTEM - 40 ROPE START
J40TTLEUC 1997	IGNITION SYSTEM - ROPE START
J40WREES 1999	IGNITION SYSTEM
J40WRLEES 1999	IGNITION SYSTEM
J40WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM
J40WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM
J40WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
J40WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J40WRYEES 1999	IGNITION SYSTEM
J40WRYSIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
J40WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
J45RCCDS 1986	IGNITION SYSTEM
J45RCCUC 1987	IGNITION SYSTEM
J45RCENM 1992	IGNITION SYSTEM - ROPE START
J45RCEOD 1995	IGNITION SYSTEM
J45RCERE 1994	IGNITION SYSTEM
J45RCETB 1993	IGNITION SYSTEM
J45RCLCDS 1986	IGNITION SYSTEM
J45RCLCUC 1987	IGNITION SYSTEM
J45RCLEDS 1996	IGNITION SYSTEM
J45RCLENM 1992	IGNITION SYSTEM - ROPE START
J45RCLEOD 1995	IGNITION SYSTEM
J45RCLERE 1994	IGNITION SYSTEM
J45RCLETB 1993	IGNITION SYSTEM
J45RCLEUC 1997	IGNITION SYSTEM
J45WMLENM 1992	IGNITION SYSTEM - ROPE START
J48ESLCCC 1988	IGNITION SYSTEM
J48ESLCUS 1987	IGNITION SYSTEM
J48ESLEDC 1996	IGNITION SYSTEM
J48ESLEOS 1995	IGNITION SYSTEM
J48ESLERD 1994	IGNITION SYSTEM
J4RDHCCS 1988	MAGNETO
J4RDHCDE 1986	MAGNETO
J4RDHCUD 1987	MAGNETO

J4RDHEOD 1995	MAGNETO
J4RDHERE 1994	MAGNETO
J4RDHLCCS 1988	MAGNETO
J4RDHLCUD 1987	MAGNETO
J4RDHLEOD 1995	MAGNETO
J4RDHLERE 1994	MAGNETO
J50BECCS 1988	IGNITION SYSTEM
J50BECDE 1986	IGNITION SYSTEM
J50BECOB 1985	IGNITION SYSTEM
J50BECRM 1984	IGNITION SYSTEM
J50BECUD 1987	IGNITION SYSTEM
J50BEEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50BEEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J50BEERE 1994	IGNITION SYSTEM - 40 ROPE START
J50BEERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
J50BELCCS 1988	IGNITION SYSTEM
J50BELCDE 1986	IGNITION SYSTEM
J50BELCOB 1985	IGNITION SYSTEM
J50BELCRM 1984	IGNITION SYSTEM
J50BELCUD 1987	IGNITION SYSTEM
J50BELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50BELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J50BELERE 1994	IGNITION SYSTEM - 40 ROPE START
J50BELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
J50ELEER 1999	IGNITION SYSTEM -- ROPE START
J50ELSIF elec start, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J50ELSSA Elec. Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J50ESLECC 1998	IGNITION SYSTEM -- ROPE START
J50ESLEUR 1997	IGNITION SYSTEM - ROPE START
J50JEDS 1996	IGNITION SYSTEM - 40 ROPE START
J50JEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START

J50JEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J50JERE 1994	IGNITION SYSTEM - 40 ROPE START
J50JERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50JETB 1993	IGNITION SYSTEM - 40 ROPE START
J50JEUC 1997	IGNITION SYSTEM - ROPE START
J50PLEEA 1999	IGNITION SYSTEM -- ROPE START
J50PLSIF elec start, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
J50PLSSM Elec. Start, TNT, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM - ROPE START
J50TELCCS 1988	IGNITION SYSTEM
J50TELCEE 1986	IGNITION SYSTEM
J50TELCOB 1985	IGNITION SYSTEM
J50TELCRM 1984	IGNITION SYSTEM
J50TELCUD 1987	IGNITION SYSTEM
J50TELEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50TELEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J50TELERE 1994	IGNITION SYSTEM - 40 ROPE START
J50TELERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50TELETB 1993	IGNITION SYSTEM - 40 ROPE START
J50TLCCS 1988	IGNITION SYSTEM
J50TLCDE 1986	IGNITION SYSTEM
J50TLCOB 1985	IGNITION SYSTEM
J50TLCRM 1984	IGNITION SYSTEM
J50TLCUD 1987	IGNITION SYSTEM
J50TLECR 1998	IGNITION SYSTEM -- ROPE START
J50LEDS 1996	IGNITION SYSTEM - 40 ROPE START
J50LEOD 1995	IGNITION SYSTEM - 25 & 40 ROPE START
J50LEOD 1995	IGNITION SYSTEM - 25 ELECTRIC START AND TL MODELS ONLY
J50LERE 1994	IGNITION SYSTEM - 40 ROPE START
J50LERE 1994	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50LETB 1993	IGNITION SYSTEM - 40 ROPE START
J50LETF 1993	IGNITION SYSTEM - 40 ROPE START
J50LEUC 1997	IGNITION SYSTEM - ROPE START

J50TSLECC 1998	IGNITION SYSTEM -- ROPE START
J50TSLEUS 1997	IGNITION SYSTEM - ROPE START
J55APRL	IGNITION & ELECTRICAL
J55APRL - FR	22-5_SYSTÈME D'ALLUMAGE
J55APRLSOM	IGNITION & ELECTRICAL
J55APRLSOM - FR	22-5_SYSTÈME D'ALLUMAGE
J55APRLSRA	IGNITION & ELECTRICAL
J55APRLSRA - FR	22-5_SYSTÈME D'ALLUMAGE
J55APRLSRG	IGNITION & ELECTRICAL
J55APRLSRG - FR	22-5_SYSTÈME D'ALLUMAGE
J55MLSOR	IGNITION & ELECTRICAL
J55MLSOR - FR	22-5_SYSTÈME D'ALLUMAGE
J55MLSRC	IGNITION & ELECTRICAL
J55MLSRC - FR	22-5_SYSTÈME D'ALLUMAGE
J55MLSRG	IGNITION & ELECTRICAL
J55MLSRG - FR	22-5_SYSTÈME D'ALLUMAGE
J55MRL	IGNITION & ELECTRICAL
J55MRL - FR	22-5_SYSTÈME D'ALLUMAGE
J55RSLC 1997	IGNITION SYSTEM
J55RSLG 1995	IGNITION SYSTEM
J55RSLN 1983	IGNITION SYSTEM
J55RSLN-2 1983	IGNITION SYSTEM
J55RSLW 1996	IGNITION SYSTEM
J55RSN 1983	IGNITION SYSTEM
J55RSN-2 1983	IGNITION SYSTEM
J55RSYN 1983	IGNITION SYSTEM
J55RSYN-2 1983	IGNITION SYSTEM
J55RWLCDC 1986	IGNITION SYSTEM
J55RWLCOS 1985	IGNITION SYSTEM
J55RWLCRD 1984	IGNITION SYSTEM
J55RWLCUC 1987	IGNITION SYSTEM
J55RWLENM 1992	IGNITION SYSTEM - ROPE START
J55RWLERE 1994	IGNITION SYSTEM
J55RWLETB 1993	IGNITION SYSTEM
J55WREES 1999	IGNITION SYSTEM

J55WRLEES 1999	IGNITION SYSTEM
J55WRLSIR commercial, rope start, 20 in shaft 2001	IGNITION SYSTEM
J55WRLSOE	IGNITION SYSTEM
J55WRLSOE - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRLSRB	IGNITION SYSTEM
J55WRLSRB - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRLSRG	IGNITION SYSTEM
J55WRLSRG - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION SYSTEM
J55WRLSTM	IGNITION SYSTEM
J55WRLSTM - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRSIR commercial, rope start, 15 in shaft 2001	IGNITION SYSTEM
J55WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION SYSTEM
J55WRYEES 1999	IGNITION SYSTEM
J55WRYSIR commercial, rope start, 25 in shaft 2001	IGNITION SYSTEM
J55WRYSOB	IGNITION SYSTEM
J55WRYSOB - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRYSRM	IGNITION SYSTEM
J55WRYSRM - FR	22-5_SYSTÈME D'ALLUMAGE
J55WRYSSC Commercial, Rope Start, Tiller, 22.5 IN. shaft 2000	IGNITION SYSTEM
J5DRECR 1998	IGNITION
J5DRLECR 1998	IGNITION
J5RHCTA 1983	MAGNETO-4.5
J5RHCTA 1983	MAGNETO-7.5
J5RHLCTA 1983	MAGNETO-4.5
J5RHLCTA 1983	MAGNETO-7.5
J60ELCOD 1985	IGNITION SYSTEM
J60ELCRE 1984	IGNITION SYSTEM
J60TLCOD 1985	IGNITION SYSTEM
J60TLCRE 1984	IGNITION SYSTEM
J6RCCS 1988	IGNITION
J6RCDE 1986	MAGNETO
J6RCOB 1985	MAGNETO
J6RCRM 1984	MAGNETO - 6/8

J6RCUD 1987	IGNITION
J6RECR 1998	IGNITION
J6REDS 1996	IGNITION
J6REEA 1999	IGNITION
J6REOD 1995	IGNITION
J6RERE 1994	IGNITION
J6RETB 1993	IGNITION
J6REUC 1997	IGNITION
J6RLCCS 1988	IGNITION
J6RLCDE 1986	MAGNETO
J6RLCOB 1985	MAGNETO
J6RLCRM 1984	MAGNETO - 6/8
J6RLCUD 1987	IGNITION
J6RLECR 1998	IGNITION
J6RLEDS 1996	IGNITION
J6RLEEA 1999	IGNITION
J6RLEOD 1995	IGNITION
J6RLERE 1994	IGNITION
J6RLETB 1993	IGNITION
J6RLEUC 1997	IGNITION
J6RLSIB rope start, tiller, 20 in shaft 2001	IGNITION
J6RLSOC	IGNITION
J6RLSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J6RLSRS	IGNITION
J6RLSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J6RLSSM Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J6RLSTD	IGNITION
J6RLSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J6RLVSIB rope start, tiller, 20 in shaft, wht 2001	IGNITION
J6RSIB rope start, tiller, 15 in shaft 2001	IGNITION
J6RSOC	IGNITION
J6RSOC - FR	22-5_SYSTÈME D'ALLUMAGE
J6RSRS	IGNITION
J6RSRS - FR	22-5_SYSTÈME D'ALLUMAGE
J6RSSM Rope Start, Tiller, 15 IN. shaft 2000	IGNITION

J6RSTD	IGNITION
J6RSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J6RVSIB rope start, tiller, 15 in shaft, wht 2001	IGNITION
J6SLCCS 1988	IGNITION
J6SLCDE 1986	MAGNETO
J6SLCOB 1985	MAGNETO
J6SLCRM 1984	MAGNETO - 6/8
J6SLCUD 1987	IGNITION
J6SLEDS 1996	IGNITION
J6SLEOD 1995	IGNITION
J6SLERE 1994	IGNITION
J6SLETB 1993	IGNITION
J8DREEA 1999	IGNITION
J8RCCS 1988	IGNITION
J8RCDE 1986	MAGNETO
J8RCOB 1985	MAGNETO
J8RCRM 1984	MAGNETO - 6/8
J8RCTA 1983	MAGNETO-4.5
J8RCTA 1983	MAGNETO-7.5
J8RCUD 1987	IGNITION
J8RECR 1998	IGNITION
J8REDS 1996	IGNITION
J8REEM 1999	IGNITION
J8REOD 1995	IGNITION
J8RERE 1994	IGNITION
J8RETB 1993	IGNITION
J8REUC 1997	IGNITION
J8RLCCS 1988	IGNITION
J8RLCDE 1986	MAGNETO
J8RLCOB 1985	MAGNETO
J8RLCRM 1984	MAGNETO - 6/8
J8RLCTA 1983	MAGNETO-4.5
J8RLCTA 1983	MAGNETO-7.5
J8RLCUD 1987	IGNITION
J8RLECR 1998	IGNITION

J8RLEDS 1996	IGNITION
J8RLEEM 1999	IGNITION
J8RLEOD 1995	IGNITION
J8RLERE 1994	IGNITION
J8RLETB 1993	IGNITION
J8RLEUC 1997	IGNITION
J8RLSIE rope start, tiller, 20 in shaft 2001	IGNITION
J8RLSOR	IGNITION
J8RLSOR - FR	22-5_SYSTÈME D'ALLUMAGE
J8RLSRC	IGNITION
J8RLSRC - FR	22-5_SYSTÈME D'ALLUMAGE
J8RLSSB Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J8RLSTS	IGNITION
J8RLSTS - FR	22-5_SYSTÈME D'ALLUMAGE
J8RLVSIE rope start, tiller, 20 in shaft, wht 2001	IGNITION
J8RLXSIE rope start, tiller, 25 in shaft, wht 2001	IGNITION
J8RSIE rope start, tiller, 15 in shaft 2001	IGNITION
J8RSOR	IGNITION
J8RSOR - FR	22-5_SYSTÈME D'ALLUMAGE
J8RSRC	IGNITION
J8RSRC - FR	22-5_SYSTÈME D'ALLUMAGE
J8RSSB Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
J8RSTD	IGNITION
J8RSTD - FR	22-5_SYSTÈME D'ALLUMAGE
J8RVSIE rope start, tiller, 15 in shaft, wht 2001	IGNITION
J8RXEEM 1999	IGNITION
J8RXSIE rope start, tiller, 25 in shaft 2001	IGNITION
J8RXSSB Rope Start, Tiller, 25 IN. shaft 2000	IGNITION
J8SRLCCS 1988	IGNITION
J8SRLCDE 1986	MAGNETO
J8SRLCOB 1985	MAGNETO
J8SRLCRM 1984	MAGNETO - 6/8
J8SRLCTA 1983	MAGNETO-4.5
J8SRLCTA 1983	MAGNETO-7.5
J8SRLCUD 1987	IGNITION

J8SRLECA 1998	IGNITION
J8SRLEDS 1996	IGNITION
J8SRLEOD 1995	IGNITION
J8SRLERE 1994	IGNITION
J8SRLETB 1993	IGNITION
J8SRLEUC 1997	IGNITION
J8WREES 1999	IGNITION
J8WRLEES 1999	IGNITION
J8WRLSIR Commercial, rope start, tiller, 20 in shaft 2001	IGNITION
J8WRLSSC Commercial, Rope Start, Tiller, 20 IN. shaft 2000	IGNITION
J8WRSIR Commercial, rope start, tiller, 15 in shaft 2001	IGNITION
J8WRSSC Commercial, Rope Start, Tiller, 15 IN. shaft 2000	IGNITION
M55RWLR 1988	IGNITION SYSTEM
R45RCLR 1988	IGNITION SYSTEM
R45RCR 1988	IGNITION SYSTEM
R55RWLR 1988	IGNITION SYSTEM
RJ50ELSIF elec start, TNT, 20 in shaft 2001	IGNITION SYSTEM - ROPE START
S45RCLR 1988	IGNITION SYSTEM
S45RCR 1988	IGNITION SYSTEM
SE10RPB 1996	IGNITION
SE10RPLB 1996	IGNITION
SE10RPLT 1997	IGNITION
SE10RPLY 1998	IGNITION
SE10RPT 1997	IGNITION
SE10RPY 1998	IGNITION
SE15BAECA 1998	IGNITION -- ROPE
SE15BAEDC 1996	IGNITION - ROPE
SE15BAEEM 1999	IGNITION -- ROPE
SE15BAEUR 1997	IGNITION - ROPE
SE15BASIR rope start, tiller, 15 in shaft, n/a usa 2001	IGNITION - ROPE
SE15BASSB Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION - ROPE
SE15RPC 1998	IGNITION
SE15RPG 1996	IGNITION
SE15RPLC 1998	IGNITION
SE15RPLG 1996	IGNITION

SE15RPLW 1997	IGNITION
SE15RPW 1997	IGNITION
SE40RPB 1997	IGNITION SYSTEM
SE40RPH 1996	IGNITION SYSTEM
SE40RPLB 1997	IGNITION SYSTEM
SE40RPLH 1996	IGNITION SYSTEM
SE40RPLT2 1998	IGNITION SYSTEM
SE40RPT2 1998	IGNITION SYSTEM
SE40RPYB 1997	IGNITION SYSTEM
SE40RPYH 1996	IGNITION SYSTEM
SE40RPTY2 1998	IGNITION SYSTEM
SE40RSLD 1997	IGNITION SYSTEM
SE40RSLR 1998	IGNITION SYSTEM
SE40RSLZ 1996	IGNITION SYSTEM
SE45RSLB 1997	IGNITION SYSTEM
SE45RSLH 1996	IGNITION SYSTEM
SE50TLEDS 1996	IGNITION SYSTEM - 40 ROPE START
SE55RSC 1997	IGNITION SYSTEM
SE55RSLC 1997	IGNITION SYSTEM
SE55RSLM2 1998	IGNITION SYSTEM
SE55RSLW 1996	IGNITION SYSTEM
SE55RSM2 1998	IGNITION SYSTEM
SE55RSW 1996	IGNITION SYSTEM
SE55RSYC 1997	IGNITION SYSTEM
SE55RSYM2 1998	IGNITION SYSTEM
SE55RSYW 1996	IGNITION SYSTEM
SJ10REDD 1996	IGNITION - ROPE
SJ10RLEDD 1996	IGNITION - ROPE
SJ10RPB 1996	IGNITION
SJ10RPLB 1996	IGNITION
SJ10RPLT 1997	IGNITION
SJ10RPLY 1998	IGNITION
SJ10RPT 1997	IGNITION
SJ10RPY 1998	IGNITION
SJ10SELEDD 1996	IGNITION - ROPE

SJ15BAECA 1998	IGNITION -- ROPE
SJ15BAEDC 1996	IGNITION - ROPE
SJ15BAEEM 1999	IGNITION -- ROPE
SJ15BAEUR 1997	IGNITION - ROPE
SJ15REDS 1996	IGNITION - ROPE
SJ15RLEDS 1996	IGNITION - ROPE
SJ15RPC 1998	IGNITION
SJ15RPG 1996	IGNITION
SJ15RPLC 1998	IGNITION
SJ15RPLG 1996	IGNITION
SJ15RPLW 1997	IGNITION
SJ15RPW 1997	IGNITION
SJ15RTEEM 1999	IGNITION -- ROPE
SJ15RTSIR rope start, tiller, 15 in shaft, n/a usa 2001	IGNITION - ROPE
SJ15RTSSB Rope Start, Tiller, 15 IN. shaft, N/A USA 2000	IGNITION - ROPE
SJ40EEDS 1996	IGNITION SYSTEM - 40 ROPE START
SJ40REDS 1996	IGNITION SYSTEM - 40 ROPE START
SJ40RLEDS 1996	IGNITION SYSTEM - 40 ROPE START
SJ40RPB 1997	IGNITION SYSTEM
SJ40RPH 1996	IGNITION SYSTEM
SJ40RPLB 1997	IGNITION SYSTEM
SJ40RPLH 1996	IGNITION SYSTEM
SJ40RPLT2 1998	IGNITION SYSTEM
SJ40RPT2 1998	IGNITION SYSTEM
SJ40RPyB 1997	IGNITION SYSTEM
SJ40RPyH 1996	IGNITION SYSTEM
SJ40RPyT2 1998	IGNITION SYSTEM
SJ40RSLD 1997	IGNITION SYSTEM
SJ40RSLR 1998	IGNITION SYSTEM
SJ40RSLZ 1996	IGNITION SYSTEM
SJ45RSLB 1997	IGNITION SYSTEM
SJ45RSLH 1996	IGNITION SYSTEM
SJ55RSC 1997	IGNITION SYSTEM
SJ55RSLC 1997	IGNITION SYSTEM
SJ55RSLM2 1998	IGNITION SYSTEM

SJ55RSLW 1996	IGNITION SYSTEM
SJ55RSM2 1998	IGNITION SYSTEM
SJ55RSW 1996	IGNITION SYSTEM
SJ55RSYC 1997	IGNITION SYSTEM
SJ55RSYM2 1998	IGNITION SYSTEM
SJ55RSYW 1996	IGNITION SYSTEM
SJ6REDS 1996	IGNITION
SJ6RLEDS 1996	IGNITION
SJ8REDS 1996	IGNITION
SJ8RLEDS 1996	IGNITION
TE10RELETM 1993	IGNITION - ROPE
TE40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
TJ10RELETM 1993	IGNITION - ROPE
TJ40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
U25RWA 1988	MAGNETO
U25RWLA 1988	MAGNETO
VE14RCCS 1988	MAGNETO
VE28ESLCCR 1988	IGNITION
VE40EETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40TLETB 1993	IGNITION SYSTEM - 40 ROPE START
VE40TLETF 1993	IGNITION SYSTEM - 40 ROPE START
VE48ESLCCC 1988	IGNITION SYSTEM
VE50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
VE50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
VE50TLETB 1993	IGNITION SYSTEM - 40 ROPE START
VE50TLETF 1993	IGNITION SYSTEM - 40 ROPE START
VJ14RCCS 1988	MAGNETO
VJ28ESLCCR 1988	IGNITION
VJ40EETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ40ELETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ40TELETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ40TLETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ40TLETF 1993	IGNITION SYSTEM - 40 ROPE START

VJ48ESLCCC 1988	IGNITION SYSTEM
VJ50BEETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ50BELETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ50TLETB 1993	IGNITION SYSTEM - 40 ROPE START
VJ50TLETF 1993	IGNITION SYSTEM - 40 ROPE START
X50ESLECC 1998	IGNITION SYSTEM -- ROPE START