

Where Used: Part Number 0584489

Model Name	Diagram
E20CREND 1992	IGNITION
E20CRLEND 1992	IGNITION
E20EEND 1992	IGNITION
E20ELEND 1992	IGNITION
E25EENS 1992	IGNITION
E25ELENS 1992	IGNITION
E25REND 1992	IGNITION
E25RLEND 1992	IGNITION
E25TEEND 1992	IGNITION
E25TELEND 1992	IGNITION
E28ESLENE 1992	IGNITION
E30EENR 1992	IGNITION
E30ELENR 1992	IGNITION
E30RENR 1992	IGNITION
E30RLENR 1992	IGNITION
E30TEENR 1992	IGNITION
E30TELENR 1992	IGNITION
E35RENR 1992	IGNITION
E35RLENR 1992	IGNITION
E40EENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40EENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40EENJ 1992	IGNITION SYSTEM - ROPE START
E40EENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40EENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40EENM 1992	IGNITION SYSTEM - ROPE START
E40EETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40ELENJ 1992	IGNITION SYSTEM - ROPE START
E40ELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40ELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40ELENM 1992	IGNITION SYSTEM - ROPE START
E40ELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY

E40RENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40RENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40RENM 1992	IGNITION SYSTEM - ROPE START
E40RETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40RLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40RLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40RLENM 1992	IGNITION SYSTEM - ROPE START
E40RLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TEENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40TEENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40TEENJ 1992	IGNITION SYSTEM - ROPE START
E40TEENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40TEENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40TEENM 1992	IGNITION SYSTEM - ROPE START
E40TEETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40TELENJ 1992	IGNITION SYSTEM - ROPE START
E40TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40TELENM 1992	IGNITION SYSTEM - ROPE START
E40TELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40TLENJ 1992	IGNITION SYSTEM - ROPE START
E40TLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40TLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40TLENM 1992	IGNITION SYSTEM - ROPE START
E40TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TTLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E40TTLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E40TTLENM 1992	IGNITION SYSTEM - ROPE START
E40TTLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E40TTLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY

E48ESLETE 1993	IGNITION SYSTEM
E50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50BEENJ 1992	IGNITION SYSTEM - ROPE START
E50BEENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50BEENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50BEENM 1992	IGNITION SYSTEM - ROPE START
E50BEETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50BELENJ 1992	IGNITION SYSTEM - ROPE START
E50BELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50BELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50BELENM 1992	IGNITION SYSTEM - ROPE START
E50BELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50JENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50JENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50JENJ 1992	IGNITION SYSTEM - ROPE START
E50JENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50JENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50JENM 1992	IGNITION SYSTEM - ROPE START
E50JETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50TELENM 1992	IGNITION SYSTEM - ROPE START
E50TELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50TLENJ 1992	IGNITION SYSTEM - ROPE START
E50TLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
E50TLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
E50TLENM 1992	IGNITION SYSTEM - ROPE START
E50TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
E50TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J20CREND 1992	IGNITION

J20CREND 1992	IGNITION
J20EEND 1992	IGNITION
J20ELEND 1992	IGNITION
J25EEENS 1992	IGNITION
J25ELENS 1992	IGNITION
J25REND 1992	IGNITION
J25RLEND 1992	IGNITION
J25TEEND 1992	IGNITION
J25TELEND 1992	IGNITION
J28ESLENE 1992	IGNITION
J30EENR 1992	IGNITION
J30ELENR 1992	IGNITION
J30RENR 1992	IGNITION
J30RLENR 1992	IGNITION
J30TEENR 1992	IGNITION
J30TELENR 1992	IGNITION
J35RENR 1992	IGNITION
J35RLENR 1992	IGNITION
J40EENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40EENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40EENJ 1992	IGNITION SYSTEM - ROPE START
J40EENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40EENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40EENM 1992	IGNITION SYSTEM - ROPE START
J40EETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40ELENJ 1992	IGNITION SYSTEM - ROPE START
J40ELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40ELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40ELENM 1992	IGNITION SYSTEM - ROPE START
J40ELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40RENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40RENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40RENM 1992	IGNITION SYSTEM - ROPE START

J40RETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40RLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40RLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40RLENM 1992	IGNITION SYSTEM - ROPE START
J40RLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TEENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40TEENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40TEENJ 1992	IGNITION SYSTEM - ROPE START
J40TEENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40TEENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40TEENM 1992	IGNITION SYSTEM - ROPE START
J40TEETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40TELENJ 1992	IGNITION SYSTEM - ROPE START
J40TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40TELENM 1992	IGNITION SYSTEM - ROPE START
J40TELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40TLENJ 1992	IGNITION SYSTEM - ROPE START
J40TLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40TLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40TLENM 1992	IGNITION SYSTEM - ROPE START
J40TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TTLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J40TTLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J40TTLENM 1992	IGNITION SYSTEM - ROPE START
J40TTLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J40TTLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J48ESLETE 1993	IGNITION SYSTEM
J50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)

J50BEENJ 1992	IGNITION SYSTEM - ROPE START
J50BEENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50BEENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50BEENM 1992	IGNITION SYSTEM - ROPE START
J50BEETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50BELENJ 1992	IGNITION SYSTEM - ROPE START
J50BELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50BELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50BELENM 1992	IGNITION SYSTEM - ROPE START
J50BELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50JENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50JENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50JENJ 1992	IGNITION SYSTEM - ROPE START
J50JENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50JENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50JENM 1992	IGNITION SYSTEM - ROPE START
J50JETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50TELENM 1992	IGNITION SYSTEM - ROPE START
J50TELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50TLENJ 1992	IGNITION SYSTEM - ROPE START
J50TLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
J50TLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
J50TLENM 1992	IGNITION SYSTEM - ROPE START
J50TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
J50TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
TE20CREND 1992	IGNITION
TE20CRLEND 1992	IGNITION
TE25ELENS 1992	IGNITION
TE40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)

TE40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
TE40ELENJ 1992	IGNITION SYSTEM - ROPE START
TE40ELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
TE40ELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
TE40ELENM 1992	IGNITION SYSTEM - ROPE START
TE40ELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
TE48ESLETE 1993	IGNITION SYSTEM
TJ20CREND 1992	IGNITION
TJ20CRLEND 1992	IGNITION
TJ25ELENS 1992	IGNITION
TJ40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
TJ40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
TJ40ELENJ 1992	IGNITION SYSTEM - ROPE START
TJ40ELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
TJ40ELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
TJ40ELENM 1992	IGNITION SYSTEM - ROPE START
TJ40ELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
TJ48ESLETE 1993	IGNITION SYSTEM
VE25ELENS 1992	IGNITION
VE30EENR 1992	IGNITION
VE30EENR 1992	IGNITION
VE40EENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40EENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40EENJ 1992	IGNITION SYSTEM - ROPE START
VE40EENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40EENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40EENM 1992	IGNITION SYSTEM - ROPE START
VE40EETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VE40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40ELENJ 1992	IGNITION SYSTEM - ROPE START
VE40ELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40ELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40ELENM 1992	IGNITION SYSTEM - ROPE START
VE40ELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY

VE40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40TELENJ 1992	IGNITION SYSTEM - ROPE START
VE40TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40TELENM 1992	IGNITION SYSTEM - ROPE START
VE40TELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VE40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40TLENJ 1992	IGNITION SYSTEM - ROPE START
VE40TLEMN 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE40TLEMN 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE40TLEMN 1992	IGNITION SYSTEM - ROPE START
VE40TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VE40TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VE48ESLETE 1993	IGNITION SYSTEM
VE50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE50BEENJ 1992	IGNITION SYSTEM - ROPE START
VE50BEENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE50BEENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE50BEENM 1992	IGNITION SYSTEM - ROPE START
VE50BEETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VE50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE50BELENJ 1992	IGNITION SYSTEM - ROPE START
VE50BELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE50BELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE50BELENM 1992	IGNITION SYSTEM - ROPE START
VE50BELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VE50TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE50TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE50TELENM 1992	IGNITION SYSTEM - ROPE START
VE50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)

VE50TLENJ 1992	IGNITION SYSTEM - ROPE START
VE50TLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VE50TLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VE50TLENM 1992	IGNITION SYSTEM - ROPE START
VE50TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VE50TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ25ELENS 1992	IGNITION
VJ30EENR 1992	IGNITION
VJ30ELENR 1992	IGNITION
VJ40EENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40EENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ40EENJ 1992	IGNITION SYSTEM - ROPE START
VJ40EENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40EENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ40EENM 1992	IGNITION SYSTEM - ROPE START
VJ40EETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40ELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ40ELENJ 1992	IGNITION SYSTEM - ROPE START
VJ40ELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40ELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ40ELENM 1992	IGNITION SYSTEM - ROPE START
VJ40ELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40TELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ40TELENJ 1992	IGNITION SYSTEM - ROPE START
VJ40TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ40TELENM 1992	IGNITION SYSTEM - ROPE START
VJ40TELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ40TLENJ 1992	IGNITION SYSTEM - ROPE START
VJ40TLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ40TLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)

VJ40TLENM 1992	IGNITION SYSTEM - ROPE START
VJ40TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ40TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ48ESLETE 1993	IGNITION SYSTEM
VJ50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ50BEENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ50BEENJ 1992	IGNITION SYSTEM - ROPE START
VJ50BEENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ50BEENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ50BEENM 1992	IGNITION SYSTEM - ROPE START
VJ50BEETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ50BELENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ50BELENJ 1992	IGNITION SYSTEM - ROPE START
VJ50BELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ50BELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ50BELENM 1992	IGNITION SYSTEM - ROPE START
VJ50BELETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ50TELENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ50TELENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ50TELENM 1992	IGNITION SYSTEM - ROPE START
VJ50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ50TLENJ 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ50TLENJ 1992	IGNITION SYSTEM - ROPE START
VJ50TLENM 1992	IGNITION SYSTEM - ELECTRIC START & TL MODELS ("M" SUFFIX)
VJ50TLENM 1992	IGNITION SYSTEM - ELECTRIC START TE-TTL MDLS ("M" SUFFIX)
VJ50TLENM 1992	IGNITION SYSTEM - ROPE START
VJ50TLETB 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY
VJ50TLETF 1993	IGNITION SYSTEM - ELECTRIC START AND TL MODELS ONLY