

Where Used: Part Number 0583737

Model Name	Diagram
C155WTLM 1988	IGNITION SYSTEM - 35 AMP
C155WTXM 1988	IGNITION SYSTEM - 35 AMP
D25RWA 1988	MAGNETO
D25RWLA 1988	MAGNETO
E100STLCCA 1988	IGNITION SYSTEM
E110MLCCA 1988	IGNITION SYSTEM
E110TLCCA 1988	IGNITION SYSTEM
E110TXCCA 1988	IGNITION SYSTEM
E120TLCCA 1988	IGNITION SYSTEM & STARTER MOTOR
E120TXCCA 1988	IGNITION SYSTEM & STARTER MOTOR
E140CXCCS 1988	IGNITION SYSTEM & STARTER MOTOR
E140TLCCM 1988	IGNITION SYSTEM & STARTER MOTOR
E140TXCCM 1988	IGNITION SYSTEM & STARTER MOTOR
E150STLCCA 1988	IGNITION SYSTEM
E20CRCCA 1988	IGNITION
E20CRLCCA 1988	IGNITION
E20ECCA 1988	IGNITION
E20ELCCA 1988	IGNITION
E25ECCM 1988	IGNITION
E25ELCCM 1988	IGNITION
E25RCCA 1988	IGNITION
E25RLCCA 1988	IGNITION
E25RWK 1989	IGNITION
E25RWLK 1989	IGNITION
E25TECCA 1988	IGNITION
E25TELCCA 1988	IGNITION
E30ECCE 1988	IGNITION
E30ELCCE 1988	IGNITION
E30RCCE 1988	IGNITION
E30RLCCE 1988	IGNITION
E30TECCE 1988	IGNITION
E30TELCCE 1988	IGNITION
E35RCCE 1988	IGNITION

E35RLCCE 1988	IGNITION
E40AELCCS 1988	IGNITION SYSTEM
E40ARLCCS 1988	IGNITION SYSTEM
E40ATLCCS 1988	IGNITION SYSTEM
E40ECCS 1988	IGNITION SYSTEM
E40ELCCS 1988	IGNITION SYSTEM
E40RCCS 1988	IGNITION SYSTEM
E40RLCCS 1988	IGNITION SYSTEM
E40TECCS 1988	IGNITION SYSTEM
E40TELCCS 1988	IGNITION SYSTEM
E40TLCCS 1988	IGNITION SYSTEM
E40TTLCCS 1988	IGNITION SYSTEM
E48ESLCCC 1988	IGNITION SYSTEM
E4RDHCCS 1988	MAGNETO
E4RDHLCCS 1988	MAGNETO
E50BECCS 1988	IGNITION SYSTEM
E50BELCCS 1988	IGNITION SYSTEM
E50TELCCS 1988	IGNITION SYSTEM
E50TLCCS 1988	IGNITION SYSTEM
E60ELCCR 1988	IGNITION SYSTEM
E60TLCCR 1988	IGNITION SYSTEM
E60TTLCCR 1988	IGNITION SYSTEM
E65WMLESM 1990	IGNITION SYSTEM
E65WMLZ 1989	IGNITION SYSTEM
E70ELCCA 1988	IGNITION SYSTEM
E70TLCCA 1988	IGNITION SYSTEM
E75ECCA 1988	IGNITION SYSTEM
E88MSLCCC 1988	IGNITION SYSTEM
E90TLCCA 1988	IGNITION SYSTEM
J100STLCCA 1988	IGNITION SYSTEM
J110MLCCA 1988	IGNITION SYSTEM
J110TLCCA 1988	IGNITION SYSTEM
J110TXCCA 1988	IGNITION SYSTEM
J120TLCCA 1988	IGNITION SYSTEM & STARTER MOTOR
J120TXCCA 1988	IGNITION SYSTEM & STARTER MOTOR

J140CXCCS 1988	IGNITION SYSTEM & STARTER MOTOR
J140TLCCM 1988	IGNITION SYSTEM & STARTER MOTOR
J140TXCCM 1988	IGNITION SYSTEM & STARTER MOTOR
J150STLACA 1988	IGNITION SYSTEM
J150STLCCA 1988	IGNITION SYSTEM
J20CRCCA 1988	IGNITION
J20CRLCCA 1988	IGNITION
J20ECCA 1988	IGNITION
J20ELCCA 1988	IGNITION
J25ECCM 1988	IGNITION
J25ELCCM 1988	IGNITION
J25RCCA 1988	IGNITION
J25RLCCA 1988	IGNITION
J25RWK 1989	IGNITION
J25RWLK 1989	IGNITION
J25TECCA 1988	IGNITION
J25TELCCA 1988	IGNITION
J30ECCE 1988	IGNITION
J30ELCCE 1988	IGNITION
J30RCCE 1988	IGNITION
J30RLCCE 1988	IGNITION
J30TECCE 1988	IGNITION
J30TELCCE 1988	IGNITION
J35RCCE 1988	IGNITION
J35RLCCE 1988	IGNITION
J40AELCCS 1988	IGNITION SYSTEM
J40ARLCCS 1988	IGNITION SYSTEM
J40ATLCCS 1988	IGNITION SYSTEM
J40ECCS 1988	IGNITION SYSTEM
J40ELCCS 1988	IGNITION SYSTEM
J40RCCS 1988	IGNITION SYSTEM
J40RLCCS 1988	IGNITION SYSTEM
J40TECCS 1988	IGNITION SYSTEM
J40TELCCS 1988	IGNITION SYSTEM
J40TLCCS 1988	IGNITION SYSTEM

J40TTLCCS 1988	IGNITION SYSTEM
J48ESLCCC 1988	IGNITION SYSTEM
J4RDHCCS 1988	MAGNETO
J4RDHLCCS 1988	MAGNETO
J50BECCS 1988	IGNITION SYSTEM
J50BELCCS 1988	IGNITION SYSTEM
J50TELCCS 1988	IGNITION SYSTEM
J50TLCCS 1988	IGNITION SYSTEM
J60ELCCR 1988	IGNITION SYSTEM
J60TLCCR 1988	IGNITION SYSTEM
J60TTLCCR 1988	IGNITION SYSTEM
J65WMLESM 1990	IGNITION SYSTEM
J65WMLZ 1989	IGNITION SYSTEM
J70ELCCA 1988	IGNITION SYSTEM
J70TLCCA 1988	IGNITION SYSTEM
J75ECCA 1988	IGNITION SYSTEM
J88MSLCCC 1988	IGNITION SYSTEM
J90TLCCA 1988	IGNITION SYSTEM
U25RWA 1988	MAGNETO
U25RWLA 1988	MAGNETO
VE14RCEC 1989	IGNITION
VE48ESLCCC 1988	IGNITION SYSTEM
VE88MSLCCC 1988	IGNITION SYSTEM
VJ14RCEC 1989	IGNITION
VJ48ESLCCC 1988	IGNITION SYSTEM
VJ88MSLCCC 1988	IGNITION SYSTEM
X155WTLM 1988	IGNITION SYSTEM - 35 AMP
X155WTXM 1988	IGNITION SYSTEM - 35 AMP