**Keel central roller**

Fixed central roller, double tube.

Code	Type	Tube section mm	A mm	B mm	C mm	D mm	Spare roller
02.030.12	small	40x40	340	300	150	180	02.031.08
02.030.14	Large	30x30	330	300	210	245	02.031.09; 02.029.11
02.030.16	Large	40x40	330	300	210	245	02.031.09; 02.029.11

**Keel central roller, fixed version**

Keel central roller, fixed version

Code	Type	Tube section mm	roller mm	Roller bore mm	Spare roller
02.030.01	small	30x30	120x75	14	02.031.08
02.030.03	small	40x40	120x75	14	02.031.08
02.030.05	Large	30x30	200x75	21	02.031.09; 02.029.01
02.030.07	Large	40x40	200x75	21	02.031.09; 02.029.01

**ELLEBI central roller**

With U brackets for mounting.

Code	Type	Spare roller
02.040.75	with bracket	02.031.09; 02.029.11

**Keel central roller**

Small version with adjustable radiate support

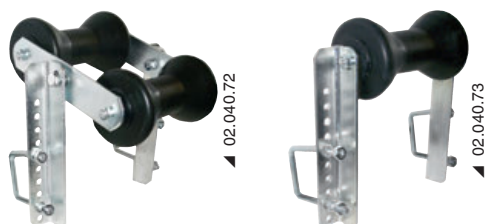
Code	For square tube mm	Spare roller
02.031.14	70x70	02.031.08
02.031.13	80x80	02.031.08
02.040.56	100x100	02.031.08

**Brackets with rear keel roller**

Rear keel roller fitted with U brackets for mounting.

For 50/70-mm centre distances order U-bracket 02.040.85/87

Code	Type	Adjustable brackets mm	Spare roller
02.040.69	Double/swinging	60	02.031.09; 02.029.11
02.040.71	Single	60	02.031.09; 02.029.11

**Central roller**

Extra-large version with U bracket.

 
For 50/70-mm centre distances order U-bracket 02.040.85/87

Code	Type	Adjustable brackets mm	Spare roller
02.040.72	Double / swinging	60	02.029.19
02.040.73	Single	60	02.029.19

U-bracket

For fixed or swinging central roller mounting.

Code	For pipe size mm	A mm	B mm
02.040.84	30	48	116
02.040.85	50	68	80
02.040.86	70	80	105
02.040.87	60	78	90

**Mounting bracket for roller**

Fitted with counter plate for mounting.

Code	Direction	For roller
02.040.78	Right	02.031.16
02.040.79	Left	02.031.16

