New

ROKK wireless SUB watertight charger with integrated invisible charging - 3-coil 15W

IPX6

For indoor and outdoor installation on any non-metal surface (fiberglass, leather, PVC, fabric, wood, carbon fibre, etc.)

SUB is designed to be covered with a material such as leather, fabric, or foam covering for a customised installation.

IPX6 watertight. Compatible with any mobile phone with a non-metal case and 3-mm minimum thickness.

 $\label{eq:Qiwireless} \mbox{Qi\,wireless\,charge\,technology\,(Apple, Samsung, Huawei, etc)}.$

The SUB charger features 3-coil technology that ensures a charging area over 80% larger than previous versions.

This implementation is the best one for mobiles with very powerful camera phones (15 W output power).

Code	Input V	Output W	←→ _{mm}
14.515.25	12/24	15	126x85

SCANSTRUT





Mobile holder with waterproof ROKK Wireless Nano charger - 10 W

IPX6

High-performance wireless phone charger, designed for nautical use. Suitable for all models from $56 \ (2.16")$ to max $106 \ (4.17")$ mm wide.

- 100% waterproof IPX6;
 High degree grip.
- It can be plugged with a single hand.
- can be installed on any flat surface.

Code	Input V	Output W	←→ _{mm}	
			closed	open
14.514.12	12/24	10 (9V, 1.1 A)	80x34x72	130x34x72

SCANSTRUT





Mobile phone holder with waterproof wireless charger ROKK ACTIVE - 10 W

IPX6

High-performance wireless cell phone charger for marine purposes. It fits cell phones 120- (4.7°) to 173-mm (6.8°) long.

- 100% IPX6 watertight.
- High degree grip.
- Anodized aluminium case.
- It can be plugged with a single hand.
- Installation on any flat surface.
- LED charge indicator.

Code	Input V	Output W	←→ _{mm}		Cable cm
			closed	open	Cableciii
14.514.11	12/24	10	74x33x142	74x33x206	50

SCANSTRUT








ROKK waterproof wireless CATCH charger - 10 W

Safely holds & wirelessly charges your phone at the same time. Now you can keep your phone in a safe place onboard, in sight, charged and ready to go. Designed to easily install onto any flat surface. Simply place your phone onto the center of the charging mat and instantly start wirelessly charging. Qi certified.

Simply place your phone at the center of the mat and start wireless charging immediately (Qi certified article).

Code	Input V	Output W	←→ _{mm}
14.515.17	12/24	10	206x118



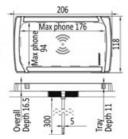



SCANSTRUT

